


# JVC



## MICRO COMPONENT SYSTEM

# UX-Q3S

Consists of CA-UXQ3S and SP-UXQ1S

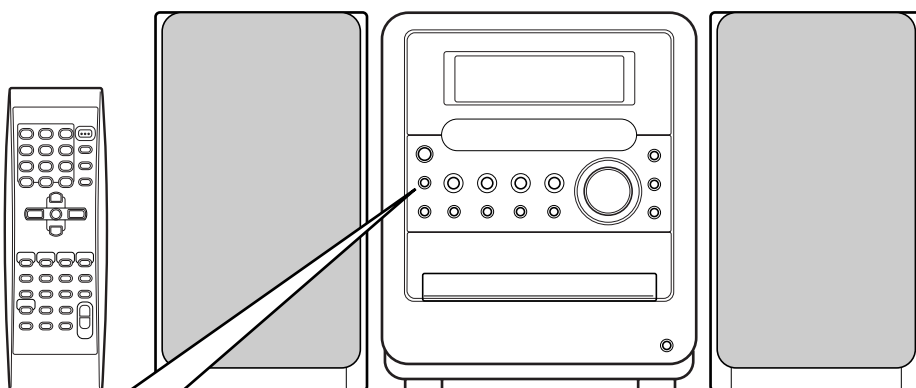


For hiding the demonstration display, refer to page 9.

**MP3**  
PLAYBACK

COMPACT  
**disc**  
DIGITAL AUDIO

## INSTRUCTIONS

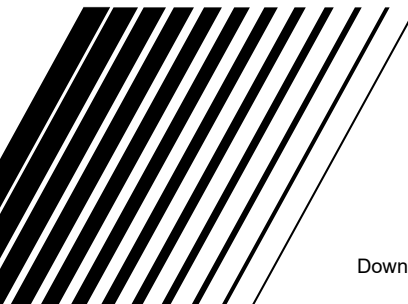

# Warnings, Cautions and Others

## CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

## CAUTION — $\odot/\text{I}$ button!

Disconnect the mains plug to shut the power off completely.

The  $\odot/\text{I}$  button in any position does not disconnect the mains line.

The power can be remote controlled.

## CAUTION

- Do not block the ventilation openings or holes.  
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

## IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

<b>CAUTION</b> : Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	<b>ADVARSEL</b> : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)	<b>VARNING</b> : Synlig och osynlig laserstråling när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)	<b>VARO</b> : Avattaessa ja suojaelukitus ohitettuna tai viallisena olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)
---	--	---	--

### CAUTION — Proper Ventilation

To avoid risk of electric shock and fire and to protect from damage, locate the apparatus as follows:


Top/Front/Back/Sides: No obstructions should be placed in the areas shown by the dimensions below.

Bottom: Place on the level surface. Maintain adequate air path for ventilation by placing on a stand with a height of 10 cm more.

In addition, maintain the best possible air circulation.

Front view

Side view

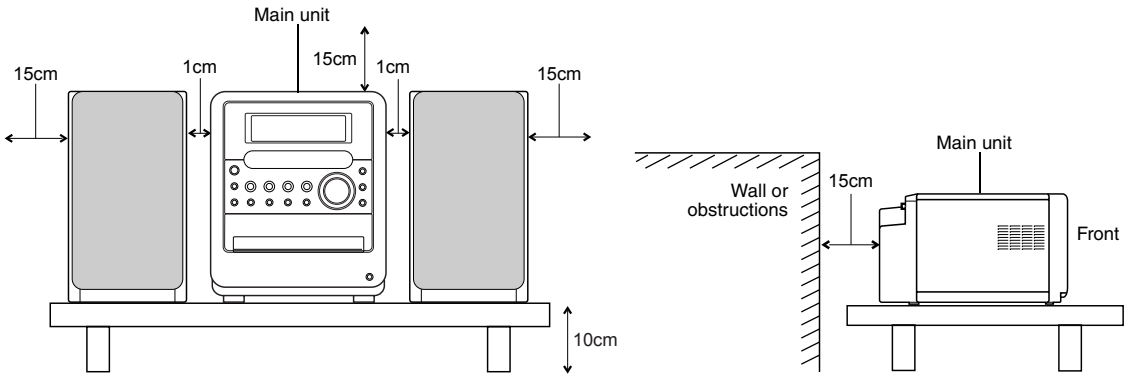

# Table of Contents

---

## Introduction

Notes on Operation .....	2
Special Cautions .....	3
Notes on Handling.....	3
Supplied Accessories.....	3

## Preparation

Part Description .....	4
Remote Control .....	5
Connections.....	6

## Basic Operations

Basic Operations .....	10
Setting the Clock.....	10
Turning On/Off the Main Unit .....	11
Adjusting the Volume .....	11
Temporarily Turning Off the Sound (FADE MUTING).....	11
Emphasizing Heavy Bass Sound (AHB PRO) .....	11
Sound Mode.....	11
Adjusting the Sound Quality.....	11
$\alpha$ Sound .....	12
Changing the Color Patterns for the Display Window and CD Tray .....	12
Auto Standby.....	13

## Listening to Radio Broadcasts

Listening to Radio Broadcasts.....	14
------------------------------------	----

## Listening to CDs

Listening to CDs .....	16
Repeat Playback.....	17
Program Playback.....	17
Random Playback.....	18
Notes on MP3s.....	18

## Listening to Cassette Tapes

Listening to Cassette Tapes.....	19
----------------------------------	----

## Listening to Other Equipment

Listening to Other Equipment.....	20
-----------------------------------	----

## Recording Sound

Recording Sound to Cassette Tapes .....	21
--	----

## Convenient Functions

Using the Timers .....	23
CD Ejection Lock.....	26

## Reference

Handling CDs/Cassette Tapes .....	27
CD Messages.....	28
Troubleshooting.....	28
Specifications .....	Back cover

# Notes on Operation

## Suitable Locations for the Main Unit

To minimize the need for servicing and maintain the high quality of this product, do not place the main unit in the following locations:

- In a position subject to high humidity or considerable dust
- On an uneven or unstable surface
- Near a heat source
- Near a computer, fluorescent light or other electric appliance
- In a small room with insufficient ventilation
- In a position exposed to direct sunlight
- In a position exposed to excessive cold
- In a position exposed to strong vibration
- Near a TV, amplifier, or tuner
- Near a magnetic source

### CAUTION

- The operating temperature of this product is 5°C to 35°C. Use in temperatures outside this range may cause a malfunction or damage the product.

## Condensation

Under the following conditions, you may not be able to operate this product properly due to condensation formed on the lens of the main unit:

- When you have just started an air conditioner to warm your room
- When you have placed the main unit at an area with high humidity
- When you have moved the main unit from a cold place to a warm place

When condensation forms, leave the main unit turned on, wait for approximately 1 or 2 hours, and then operate the main unit.

## Cleaning the Main Unit

When the operation panel becomes dirty, dust it with a soft dry cloth. When the operation panel is very dirty, wipe it with a cloth dampened with a small amount of a neutral detergent, and then wipe it with a soft dry cloth.

### CAUTION

- Do not wipe the operation panel with thinners, benzenes or other chemical agents. Do not spray insecticides onto the operation panel. These may cause discoloration and damage to the surface.




## Listener's Etiquette

When using headphones, keep the volume at a moderate level so as not to over-stimulate your ears.

- When enjoying sound from the speakers, adjust the volume to a suitable level to avoid disturbing your neighbors. Even low-volume sound carries a long way, especially at night. Show consideration to your neighbors by closing windows or using headphones.

## About CDs/CD-Rs/CD-RWs

### Confirm the marks on CDs/CD-Rs/CD-RWs

Use a CD/a CD-R/a CD-RW whose letter-printed surface shows the   or  logo. This product does not play back DVDs or video CDs.

### About CD-Rs/CD-RWs

You can play back a CD-R/a CD-RW only when the disc is finalized.

- You can play back a CD-R/a CD-RW which has been recorded in the audio CD and MP3 formats. However, playback is impossible in some cases due to the disc characteristics, recording condition, scratches or dirt on the disc, or dirt or condensation on the lens.
- Before using a CD-R/a CD-RW, carefully read the cautions regarding the disc.
- This product does not support CD text display of sound files such as MP3s.
- To play back a CD-RW on this product, erase all tracks if the CD-RW was recorded in a format other than the audio and MP3 CD formats. Using the CD-RW without erasing all tracks may result in damage to the speakers or other parts caused by sudden loud volume.

# Special Cautions

## Notes on Handling

### ■ Important cautions

#### Installation of the system


- Select a place which is level, dry and neither too hot nor too cold; between 5°C and 35°C.
- Leave sufficient distance between the system and the TV.
- Do not use the system in a place subject to vibration.

#### Power cord

- Do not handle the power cord with wet hands!
- A small amount of power is always consumed while the power cord is connected to the wall outlet.
- When unplugging the power cord from the wall outlet, always pull on the plug, not the power cord.

#### To prevent malfunctions of the system

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the system.
- Do not use any non-standard shape disc (like a heart, flower or credit card, etc.) available on the market, because it may damage the system.
- Do not use a disc with tape, stickers, or paste on it, because it may damage the system.

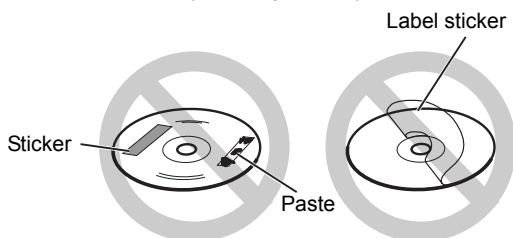

#### Note about copyright laws

Check the copyright laws in your country before recording from CDs. Recording of copyrighted material may infringe copyright laws.

### ■ Safety precautions

#### Avoid moisture, water and dust

Do not place the system in moist or dusty places.

#### Avoid high temperatures

Do not expose the system to direct sunlight and do not place it near a heating device.

#### When you are away

When away on travel or for other reasons for an extended period of time, disconnect the power cord plug from the wall outlet.

#### Do not block the vents

Blocking the vents may damage the system.

#### Care of the cabinet

When cleaning the system, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents including disinfectants. These may cause deformation or discoloring.

#### If water gets inside the system

Turn the system off and disconnect the power cord plug from the wall outlet, then call the store where you made your purchase. Using the system in this condition may cause fire or electrical shock.

### ■ When condensation or water drops adhere to the lens

In any of the following cases, condensation or water drops may adhere to the lens to prevent the system from working properly:

- Immediately after room heating starts
- When the system is installed in a steamy or damp space
- When the system is suddenly moved from a cold place to a warm space

In any of these cases, leave the system turned on for 1 or 2 hours before use.

## Supplied Accessories


Check to be sure you have all of the supplied accessories.

The number in parentheses is the quantity of the pieces supplied. If anything is missing, contact your dealer immediately.

- Remote control (1)
- Batteries (2)
- FM antenna (1)
- AM loop antenna (1)

# Part Description


The numbers refer to the pages in which the parts are explained.

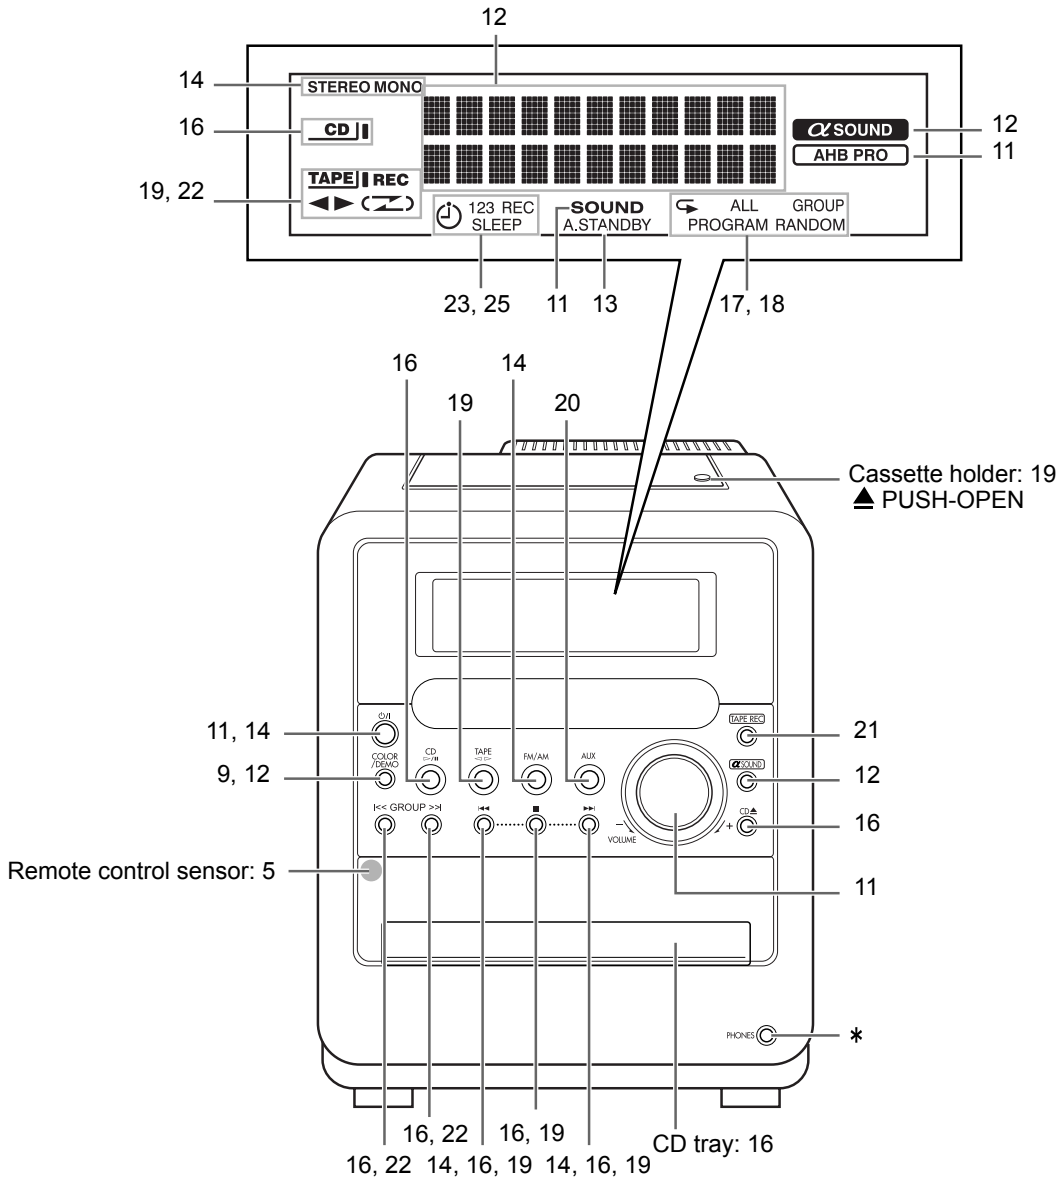




\* This terminal is for connecting a pair of headphones equipped with a stereo mini plug (commercially available). While the headphones are connected, the speakers do not produce any sound.

# Remote Control

The numbers refer to the pages in which the parts are explained.

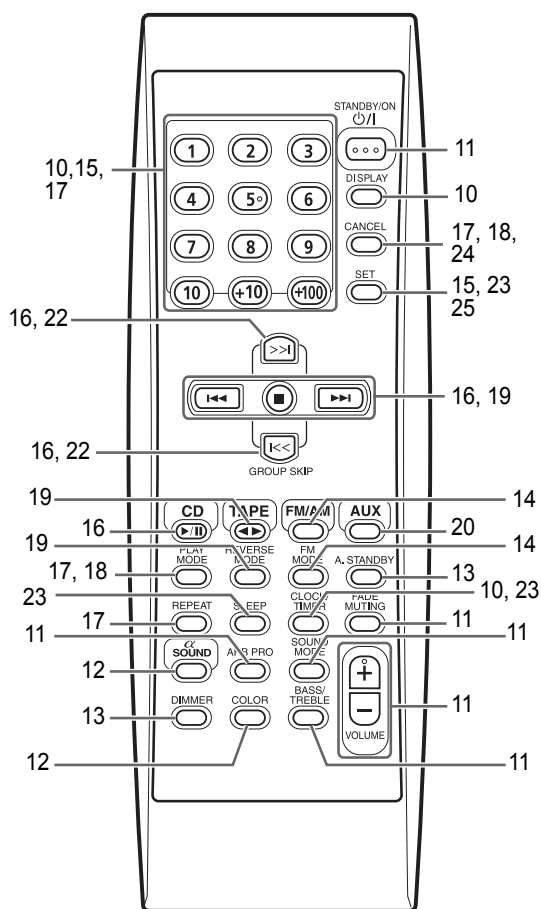

## Inserting Batteries into the Remote Control

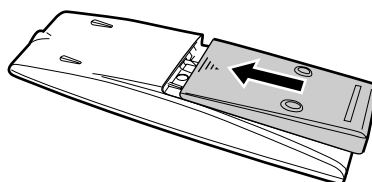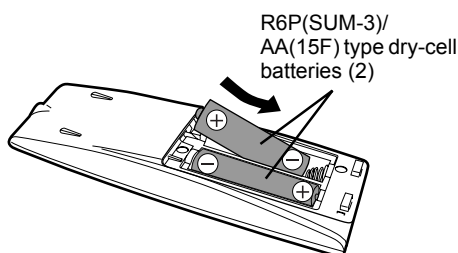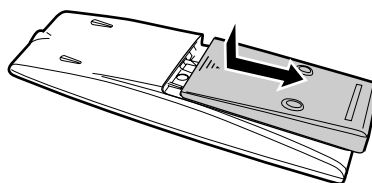

### CAUTION

- Do not use a used battery and a new battery together.
- Do not use different types of batteries at the same time.
- Take out the batteries if the remote control is not to be used for a long time. Otherwise it may cause a leakage.

### Remote control operation


- When operating the remote control, point it at the front panel of the main unit.
- The effective distance between the remote control and the remote control sensor on the main unit is approximately 5 m maximum.
- When the effective distance decreases, replace the batteries.
- Do not drop the remote control or subject it to excessive shock.




## Connecting the Antennas

### Connecting the AM antenna


#### 1 Set up the AM loop antenna (supplied).

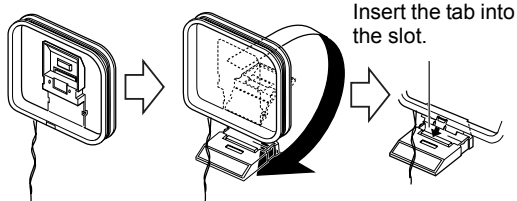

#### 2 Connect the antenna cord.

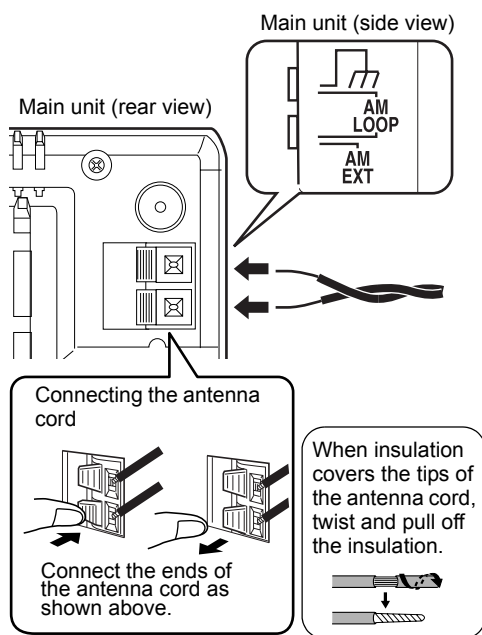

#### ■ When radio reception with the supplied AM loop antenna is poor

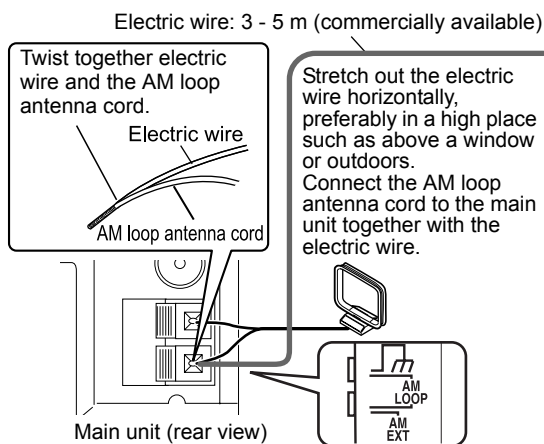


#### 3 Turn the AM loop antenna to find the best position for radio reception.

**Place the AM loop antenna as far from the main unit as possible.**


- Do not place the AM loop antenna on a metallic table or close to a TV, computer, or other electric appliance. Doing so may affect radio reception.

When positioning the antennas, find the best position for reception while listening to an actual radio program (refer to "Listening to Radio Broadcasts" (🔊 page 14)).


### Connecting the FM antenna

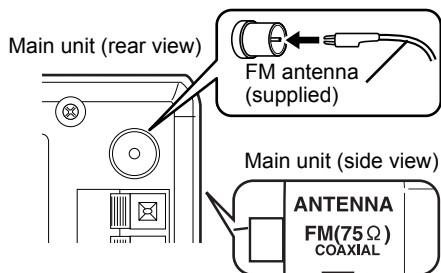

Stretch out the FM antenna to the best position for radio reception, and then fix it with adhesive tape.

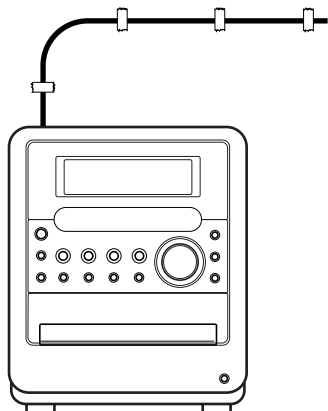

■ When radio reception with the supplied FM antenna is poor, or when using a communal antenna

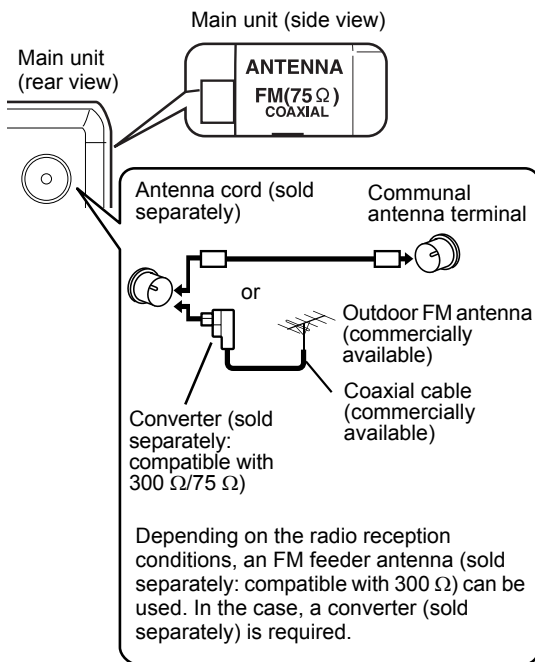


When using an antenna other than those supplied with this product, refer to the operation manuals for the antenna and converter for details of connection.

When positioning the antennas, find the best position for reception while listening to an actual radio program (refer to "Listening to Radio Broadcasts" (👉 page 14)).

## Connecting the Speakers

There is no difference between the left and right speakers.

After connecting the speakers, gently pull on the speaker cords to make sure the cords are firmly connected and do not pull out.

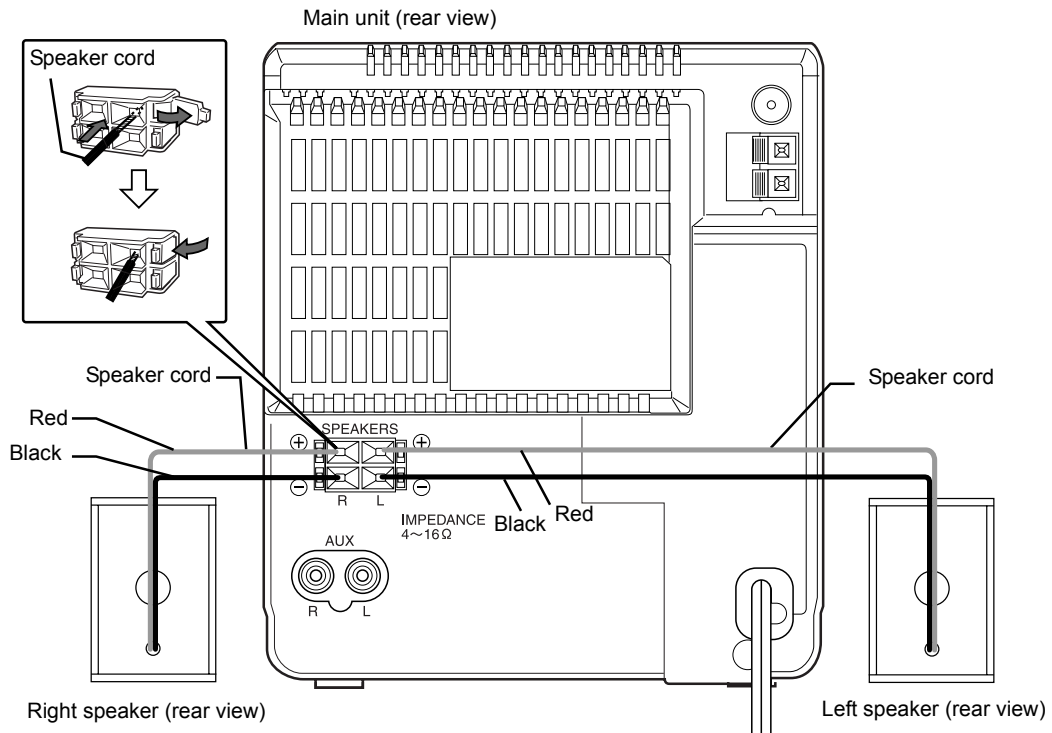


### CAUTION

- Do not short-circuit the  $\oplus$  and  $\ominus$  speaker terminals. Doing so may damage the speakers.
- Do not connect other speakers together with the supplied speakers. The change in impedance may damage the main unit and the speakers.

### NOTE


- Improper speaker cord connection spoils the stereo effect and sound quality.
- The impedance of speakers connected to this product must be within the range  $4 \Omega$  to  $16 \Omega$ .
- Cooling fan is built into the main unit for emitting generated heat. When you turn on the main unit, the internal cooling fan automatically starts rotating. To ensure sufficient cooling, leave a space of more than 1 cm between the main unit and the speakers or other objects.
- The supplied speakers do not conform to magnetically shielded design. Place the speakers enough distance from a TV so that they do not cause color irregularity on the TV.

You can detach the speaker cover.

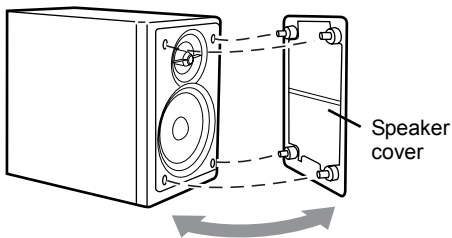

## Connecting Other Equipment


Read this section when connecting other audio equipment to this product.

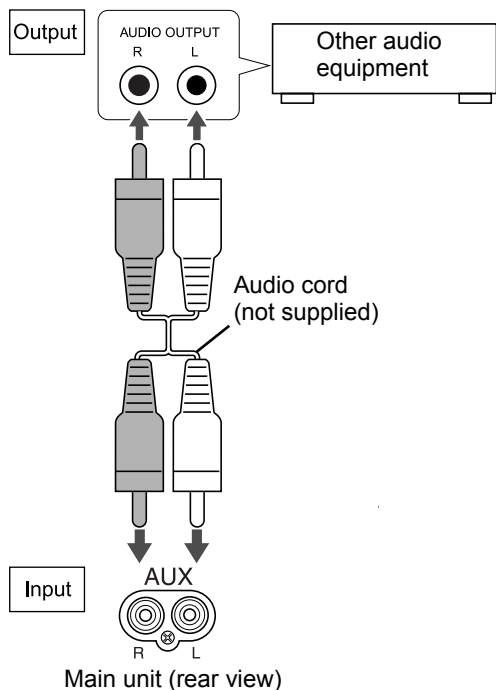

### CAUTION

- Before connecting other equipment, turn off both the main unit and other equipment.


## Connecting the Power Plug

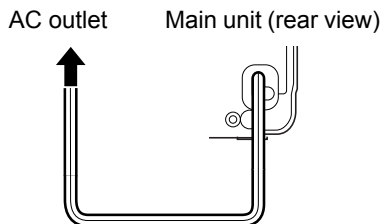


- After making all other necessary connections, connect in the power plug.

## Demonstration display function



When you connect the power plug into the AC outlet, "DEMO START!" appears in the display window and the demonstration display starts.

When you press  on the main unit, "DEMO OFF" appears in the display window and the demonstration display is canceled. Turning on the main unit automatically cancels the demonstration display.

### Resuming the demonstration display

With the power turned off, press  on the main unit.

### Hiding the demonstration display

With the power turned off, hold down  until "DEMO CLEAR" appears. Disconnecting and then reconnecting the power plug does not start the demonstration display. To activate the demonstration display again, hold down  until "DEMO START!" appears.


### NOTE

- If not using this product for a long period, disconnect the power plug from the AC outlet for safety and to save electricity.

# Basic Operations

## About this manual

- This manual explains the operations assuming that you will use the remote control. Some buttons on the main unit are the same as those on the remote control. You can use either button in this case.
- Some diagrams in this manual are simplified or exaggerated for the purpose of explanation.
- You can operate some functions differently from the explanation given in this manual.

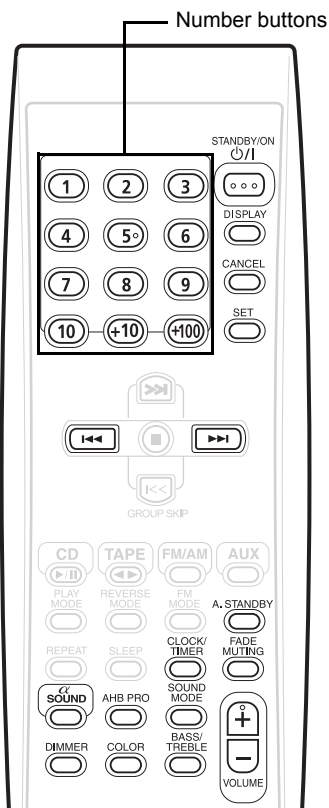

- You can use the number buttons to specify the hour. Refer to "Using the number buttons" shown below.



**3** Press .




- To return to step 2, press .

**4** Set the minute in the same manner as steps 2 and 3.



## Adjusting the clock

Press  four times to display the clock, and then adjust the clock starting from step 2.

## Displaying the clock while using the main unit

Press  repeatedly.

### NOTE

- The time display on the main unit is a 24-hour clock.
- The clock will gain or lose approximately 1 minute per month.
- Set the clock again after you have disconnected the power plug or a power cut has occurred.

## Setting the Clock

You can set the clock while the main unit is turned either on or off.

**Example: To set the clock to 10:10 a.m.**

**1** Press .



**2** Set the hour.



Back Next


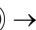

- Holding down the button causes the hour to increment.

### Using the number buttons


**Examples:** 3: 

13:  → 

20:  → 

23:  →  → 

123:  →  →  → 

-  is used when you select an MP3 track.

## Turning On/Off the Main Unit


Press  (or  on the main unit).

- With the power off, pressing either button turns on the main unit.

Remote control:    

Main unit:     

Pressing one of these buttons other than

 changes the sound source. When a

CD or cassette tape has been loaded, playback starts.

### NOTE

- Cooling fan is built into the main unit for emitting generated heat. When you turn on the main unit, the internal cooling fan automatically starts rotating.

## Adjusting the Volume


Press .

### NOTE

- You can also adjust the volume by turning the VOLUME control on the main unit.
- You can adjust the volume within the range 0 to 40.



## Temporarily Turning Off the Sound (FADE MUTING)

Press .

- "FADE MUTING" appears and the volume reduces to "0".
- To return to the previous volume, press  again.

## Emphasizing Heavy Bass Sound (AHB PRO)


Press .

- Each time you press , AHB PRO function toggles between "ON" and "OFF".
- While AHB PRO function is activated,  is displayed in the display window.
- "AHB PRO" stands for "Active Hyper Bass PRO".

## Sound Mode

Press .

- Each time you press , the display toggles as follows.

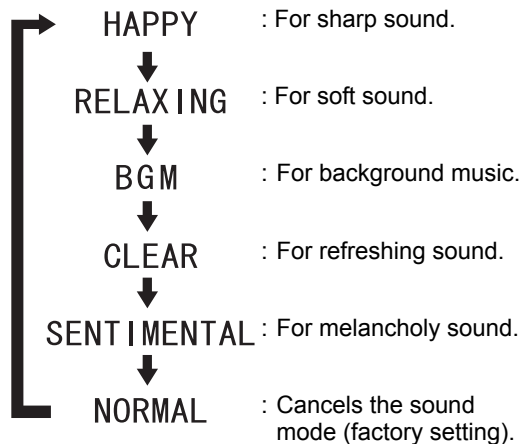

- While the sound mode is set to an item other than "NORMAL", **SOUND** is displayed in the display window.

### NOTE

- This function does not affect recording sound.

### Sound mode

A combination of JVC sound technologies enables you to select the desired sound pattern.

## Adjusting the Sound Quality

1 Press  repeatedly to display "NORMAL".

2 Press  to display "BASS" or "TREBLE".

BASS : Adjusts the bass sound.

TREBLE : Adjusts the treble sound.

3 While "BASS" or "TREBLE" is displayed in the display window, press



to adjust the sound quality.

- You can adjust the sound quality within the range -5 to +5.
- The display returns to the sound source display in a few seconds.


**NOTE**

- While the sound mode is activated, "NO OPERATE" is displayed and you cannot adjust the sound quality (▶▶▶ page 11). Canceling the sound mode returns both the bass and treble sounds to "0".

## α Sound

Press .

- Each time you press , the display toggles as follows.

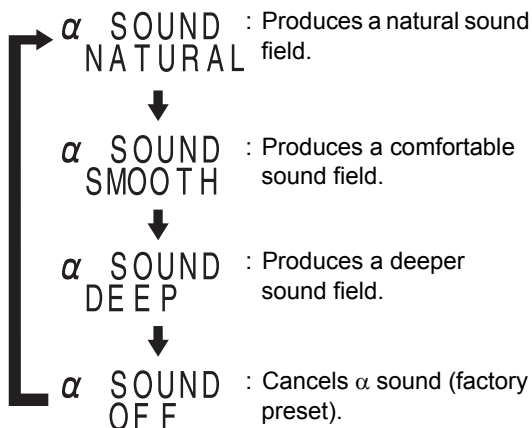

- While α sound is activated, **α SOUND** is displayed in the display window.

**NOTE**

- This function does not affect recording sound.
- While the sound mode is activated, using α sound cancels the sound mode (▶▶▶ page 11). Conversely, while α sound is activated, using the sound mode cancels α sound.

### α Sound


α (alpha) waves are regarded as one type of brain wave that is emitted when a person is relaxed. JVC's α DIMENSION SOUND function is designed to produce natural and comfortable sound that makes you feel relaxed. The natural surround effect is completed by

- 1) modulation which adds fluctuation with the α wave frequency to subtracted waves (left-right indirect sound)
- 2) sound correction for covering the middle range of waves in music signals which naturally tend to dissipate.




## Changing the Color Patterns for the Display Window and CD Tray


Press  (or ) on the main unit.

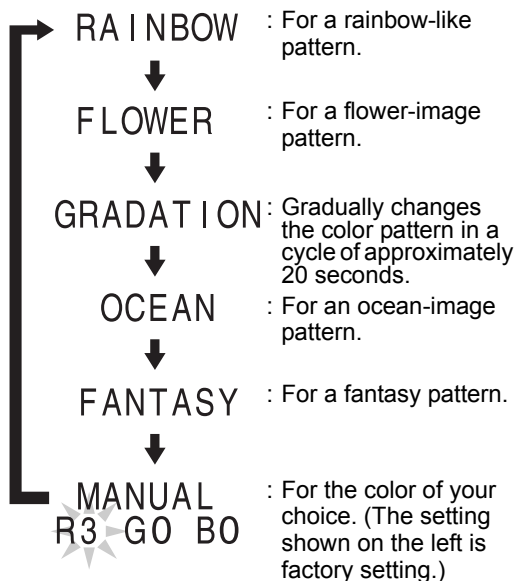- Each time you press , the display toggles as follows.



### Setting your favorite color for the display window and CD tray

- 1 Press  repeatedly to display "MANUAL".
- 2 Press  or  to select a component color.

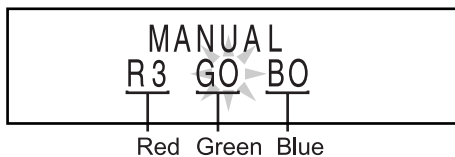

- Numerical value of the selected component color flashes.

(Continued on the next page)

### 3 Press to adjust the intensity of the component color.

- You can adjust the color intensity within the range "0" to "3".
- You cannot set all three component colors (red, green, and blue) to "0" at the same time.


**NOTE**

- You can also adjust the color intensity by turning the VOLUME control on the main unit.
  - After you have adjusted each component color, the display returns to the sound source display in approximately 8 seconds.
  - You cannot set different colors for the display window and CD tray.
  - When you operate a button on the main unit or remote control, the display window and CD tray light in pale blue for approximately 2 seconds.
  - When recording finishes, the color of the display window and CD tray switches to the color set in "MANUAL" to inform you that recording has finished.
- When you operate the main unit after recording finishes, the color pattern for the display window and CD tray returns to the selected pattern.


### Changing the brightness of the display window and CD tray (DIMMER)

Press .

- Each time you press , the display toggles as follows.

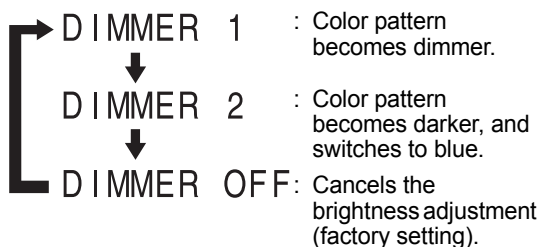

**NOTE**

- Once you press  to change the color pattern, the brightness returns to the factory setting.
- When you turn off the main unit, the brightness also returns to the factory setting.
- You cannot turn off the color pattern.


### Auto Standby

If no sound is produced for 3 or more minutes when the CD or cassette tape is selected as a sound source, the main unit automatically turns off.

- When the CD or cassette tape is selected as a sound source

Press .

"A. STANDBY" stands for "Auto Standby".

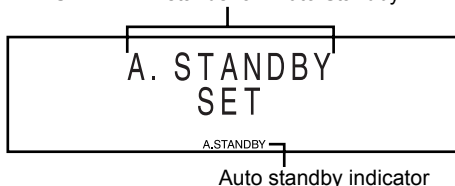

### Auto standby performance

When playback or recording finishes, auto standby starts the countdown (The "A.STANDBY" indicator flashes). When no operation is carried out within 3 minutes, the main unit automatically turns off.

When you start playback or recording within 3 minutes, auto standby starts the countdown again after playback or recording finishes.

When an operation other than playback and recording finishes and no operation is carried out within 3 minutes, the main unit automatically turns off.

"A. STANDBY OFF" starts to flash 20 seconds before the main unit is to turn off.

### Canceling auto standby

Press  once again.




**NOTE**

- Leaving the volume at "0" is not the same as producing no sound, and therefore does not start the auto standby function.



# Listening to Radio Broadcasts


This product can receive FM and AM radio broadcasts.

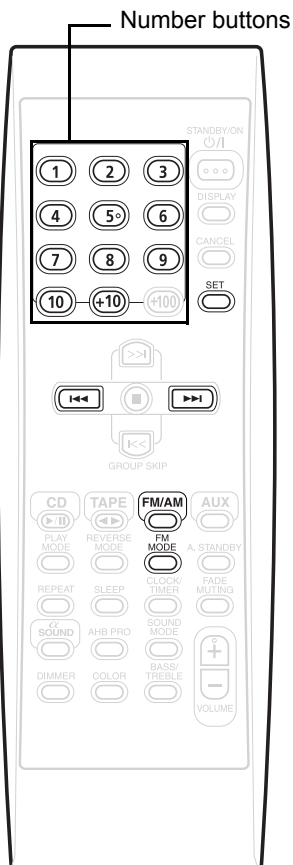

## Selecting a Radio Station

**1** Press to select "FM" or "AM".

**Example:** Display while an FM radio broadcast is received.

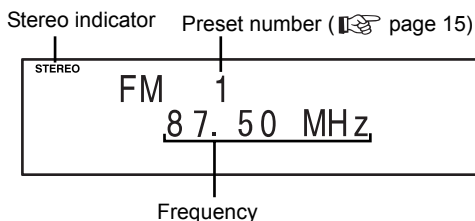

**2** Press or repeatedly to select a radio station (frequency).  
• You can also select a radio station using the automatic tuning.

### Automatic tuning:

Hold down or until the frequency starts changing, and then release the button. When the main unit has received a broadcast, the frequency automatically stops changing. To quit the function while searching for a broadcast, press or .

- When the main unit has received an FM stereo broadcast, "STEREO" lights up.

### NOTE

- If an FM stereo broadcast is difficult to hear because of noise, you may be able to hear more easily by pressing to switch the sound to monaural reception. In this case, "MONO" lights up. To return the sound to stereo reception, press again or select another FM radio station.

## Storing Radio Stations (Preset)

You can store up to 30 FM radio stations and up to 15 AM radio stations.


■ While the broadcast from the radio station you want to preset is being received

**1** Press .

- The preset number flashes for approximately 5 seconds.

**2** While the preset number is flashing, press the number buttons

( -  or ) to select the preset number you want to use.

- Refer to "Using the number buttons" ( page 10).

**3** While the selected number is

flashing, press .

- "STORED" appears and the selected radio station is stored.


### NOTE

- When you store a radio station to a preset number to which another radio station has previously been stored, the newly set radio station replaces the previously stored radio station.

## Tuning In to a Preset Radio Station


■ While an FM or AM broadcast is being received

**Use the number buttons to select the preset number of the radio station to which you want to tune in.**


- Refer to "Using the number buttons" ( page 10).

# Listening to CDs

This product can play back CDs and finalized CD-Rs/CD-RWs (recorded in audio CDs or MP3 format).

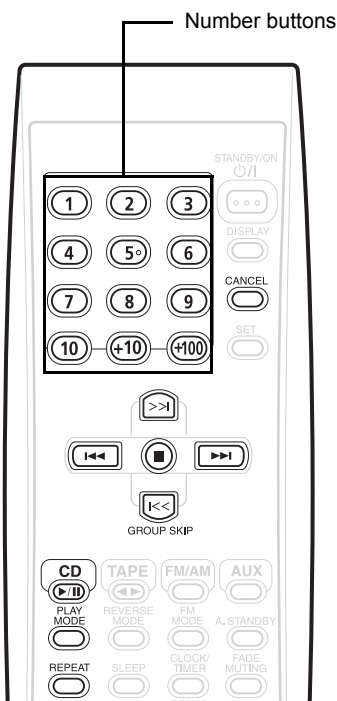

## 2 Place a CD on the CD tray.

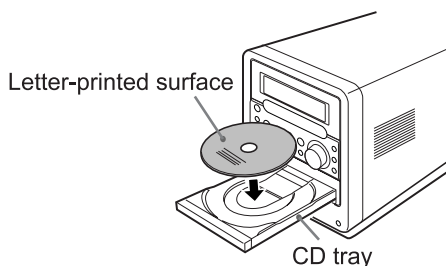


- When you want to listen to an 8 cm CD, place it on the inner hollow of the CD tray.

## 3 Press .


### ■ Display during CD playback

CD indicator  
(The CD indicator lights up while the CD is stopped. The CD indicator flashes while the CD is being played back or paused.)

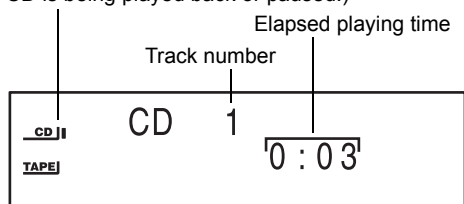


### ■ Display while the CD is stopped

Total number of tracks    Total playing time

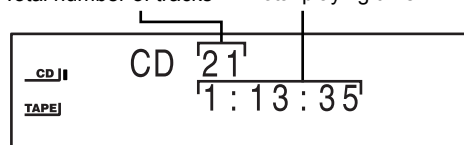

### ■ Display during MP3 disc playback


Group number    Track number

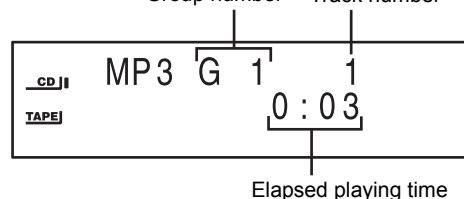

- At first, a track title (file name) is scrolled.
- Tag information (title/artist/album) is scrolled followed by a track title.
- Only alphanumerical characters are displayed properly as a track title or tag information.

### ■ Display while the MP3 disc is stopped

Total number of tracks  
Total number of groups

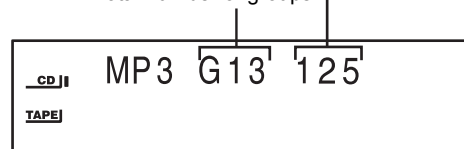

## 1 Press on the main unit.

- The CD tray comes out.

	Operation
Stop	Press .
Pause	Press  during playback. Pressing  again resumes playback.
Skip	: Press the button repeatedly. : : Repeatedly press or hold down the button to skip groups (only for MP3s). : You can also use  on the main unit to skip groups.
Fast forward/ Rewind (Search)	: Hold down the button during playback. : : : GROUP SKIP
Eject	Press  on the main unit.

## Specifying the Track (Direct Track Selection)

Press the number buttons to select the track you want to listen to.

- Refer to "Using the number buttons" (👉 page 10).



## Repeat Playback

This function allows you to repeatedly listen to the same track.

During CD playback, press  repeatedly to select the repeat mode.

- Each time you press , the display toggles as follows.

Example: While "REPEAT ALL" is selected

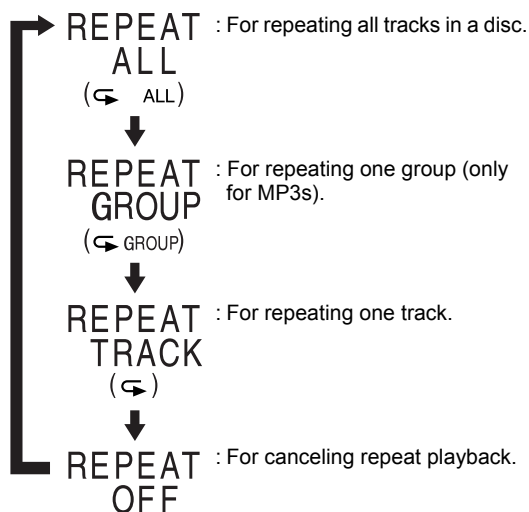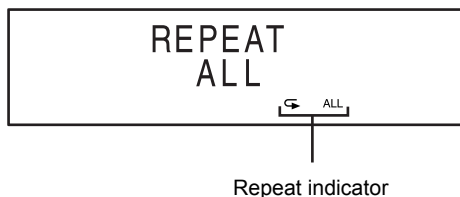




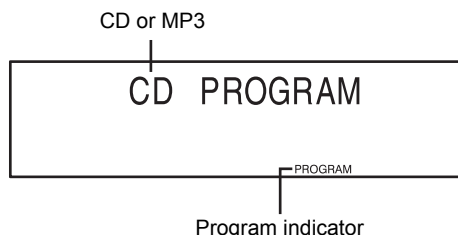
### NOTE

- Ejecting the CD or turning off the main unit also cancels repeat playback.

## Program Playback

This function allows you program up to 50 tracks.


- 1 Press , and then press .
- 2 Press  to select "PROGRAM".




- 3 Press the number buttons to select the track numbers.

- Refer to "Using the number buttons" (👉 page 10).

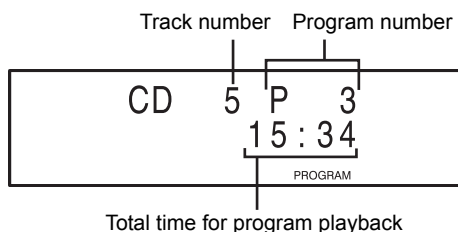

For CDs

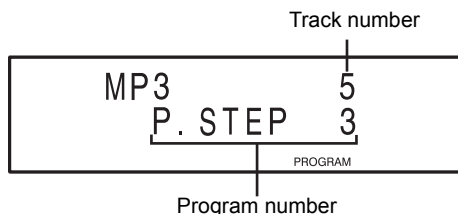

For MP3s






### NOTE

- When you want to erase the program, press  while playback is stopped. Programmed tracks are erased one by one from the last track. Holding down  erases all programmed tracks.
- When you try to program the 51st track, "MEMORY FULL" appears in the display window to indicate that 51 or more tracks cannot be programmed.
- When total time for program playback reaches 1 hour 40 minutes, "--:--" appears.
- When you program tracks from an MP3, the total time is not displayed.

- 4 Press .

## Confirming the programmed track order

While playback is stopped, press  or  repeatedly.

- You can add a track as the last track in the program, or erase the last track. ( step 3 on page 17)

## Canceling the program playback

While playback is stopped, press  repeatedly to display an item other than "PROGRAM".

- This operation does not erase the program.

## Erasing the all programmed tracks

While playback is stopped, hold down






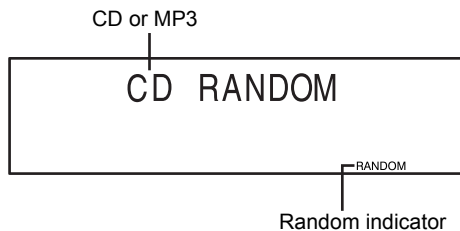
### NOTE

- Ejecting the CD or turning off the main unit also cancels the all programmed tracks. This operation also cancels program playback.

## Random Playback


This function allows you to listen to tracks in random order.

- Press , and then press .
- Press  repeatedly to select "RANDOM".



- Press .

### NOTE

- Pressing  repeatedly does not return playback to the previous track.
- Each track is played back once.

## Canceling the random playback


While playback is stopped, press  repeatedly to display an item other than "RANDOM".

### NOTE

- Ejecting the CD or turning off the main unit also cancels random playback.


## Notes on MP3s

- This product will only recognize sound file (tracks) types with "MP3" or "mp3" as extensions, which can be in any combination of upper or lower case.
- It is recommended that you record MP3 tracks at a 44.1 kHz sampling frequency, using a 128 kbps data transfer rate.
- Some MP3 tracks may not be played back because of their characteristics or recording conditions.
- You can playback the discs containing the tracks in music CD format or MP3 files in ISO 9660 format.
- MP3 discs require a longer readout time than normal discs.

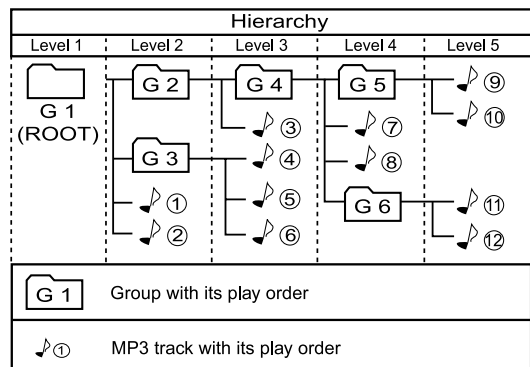

- This product recognizes up to 999 tracks on a disc (or less depending on the recording condition of a disc).

# Listening to Cassette Tapes

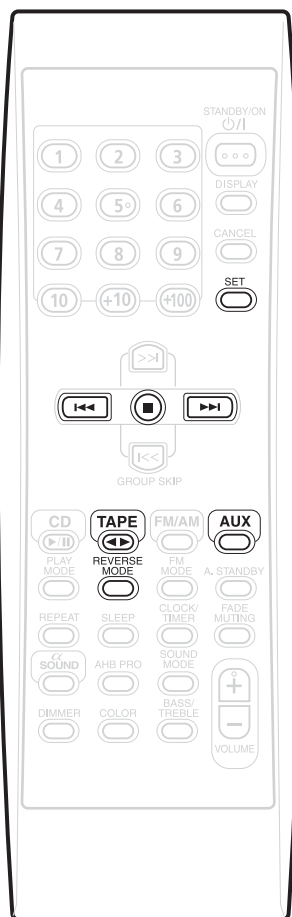

Cassette tape indicator  
(The cassette tape indicator lights up while the cassette tape is stopped. The cassette tape indicator flashes while the cassette tape is being played back.)




Cassette tape playback direction (▶: normal direction/◀: opposite direction)

## CAUTION

- Before using a cassette tape, wind up any slack in the cassette tape. (▶ page 27)
- Do not use long cassette tapes such as C-120 or C-150. Long cassette tapes are thin and stretch easily, and may become tangled in the inner part of the main unit.
- This product is compatible with playback of TYPE I cassette tapes. Playback of TYPE II or TYPE IV cassette tapes is not recommended, because this product does not meet the specifications for these tapes. The main unit does not produce the proper sound from these cassette tape types.

	Operation
Stop	Press
Fast forward/ Rewind	Press  or . When a cassette tape is played back in the normal direction (▶),  is fast forward and  is rewind. When the cassette tape is played back in the opposite direction (◀),  is fast forward and  is rewind.

## 1 Insert a cassette tape.

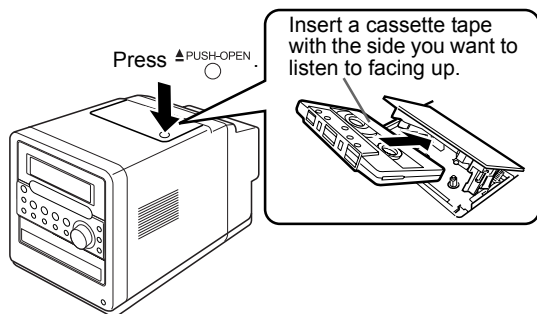

## 2 Press repeatedly to select the reverse mode.

: For one return playback of both sides.

: For repeated playback of both sides (Playback continues until playback is stopped.)

: For one-way playback of either side.

## 3 Press .

- Playback starts.
- When the main unit is turned off, pressing automatically turns on the main unit.
- Each time you press , the cassette tape playback direction changes. The initial playback direction after you have inserted a cassette tape is always the normal direction.
- The cassette tape playback direction indicator facing right ▶ is displayed during normal playback. The indicator facing left ◀ is displayed during reverse playback.

# Listening to Other Equipment

You can listen to sound from other audio equipment connected to the AUX terminals on the rear side of the main unit (👉 page 9).

**1 Press** .



**2 Start other equipment playback.**

- Refer to the operation manual for the connected equipment.

**3 Adjust the volume and make other necessary settings.**


- For adjusting the volume and making other necessary settings, refer to "Basic Operations" (👉 pages 11 - 13).

## Adjusting the Sound Input Level from Other Equipment

You can adjust the sound input level from the connected equipment.

- While the sound source is selected to AUX, you can adjust the sound input level.

**Hold down**  **until the input level appears.**

- Each time you hold down , the display toggles as follows.


**LEVEL 1** For ordinary use. (factory setting)




**LEVEL 2** For increasing the input level from the connected equipment.

# Recording Sound to Cassette Tapes

Main unit

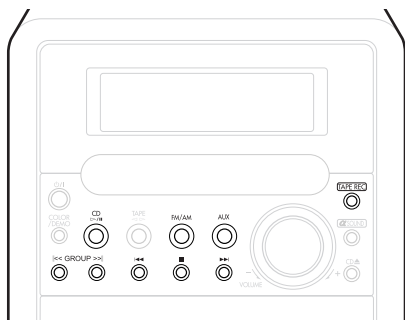

Remote control

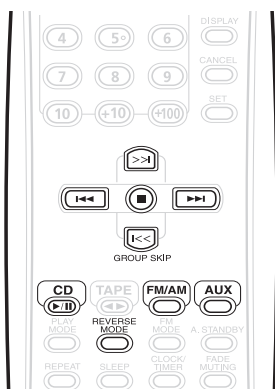

## NOTE

- The sound input level during recording is automatically adjusted.
- When you record tracks from a CD or MP3, a 4-second blank is inserted between tracks in the recording. You can record tracks with no blank time. (▶▶ page 22)


## CAUTION

- It may be unlawful to record or playback copyright material without the consent of the copyright owner.
- Do not use long cassette tapes such as C-120 or C-150. Long cassette tapes are thin and stretch easily, and may become tangled in the inner part of the main unit.
- Since this product is not compatible with TYPE II and TYPE IV cassette tapes, do not use these types of cassette tapes. This product does not meet the specifications for these tapes, so sound is not properly recorded to these types of cassette tapes. You cannot obtain proper playback sound.

## Preventing recorded sound from being erased

- Write protect tags are attached to a cassette tape for preventing the erasing of recorded sound. They enable you to avoid losing important recordings because once you snap off the write protect tags, you cannot record to the cassette tape or erase recorded material.


- When you want to use the cassette tape for recording again, cover the tag holes with adhesive tape.

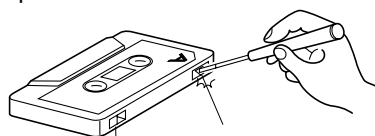

Write protect tag for side B      Write protect tag for side A

## 1 Insert a cassette tape for recording.


- Before inserting the cassette tape, wind the tape past the leader part of the cassette tape.

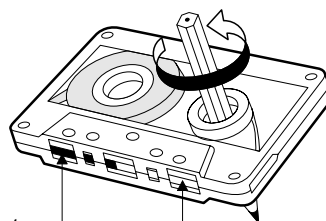




Magnetic tape (recordable part)      Leader tape (unrecordable part)

## 2 Press to select the reverse mode.

- Each time you press , the display toggles as follows.

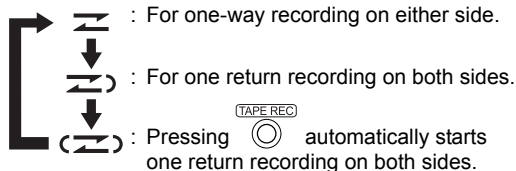

## 3 Select a sound source for recording.

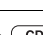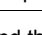Sound source	Operation
CD or MP3	Press  , and then press  . (The CD is stopped.)
Radio broadcast	Select the radio station whose broadcast you want to record (▶▶ page 14).
Sound from other equipment (AUX)	Press  and prepare playback on the other equipment (▶▶ page 20).

## 4 Press on the main unit.



**Example: Display while CD sound is recorded.**




- When all tracks from a CD or MP3 are recorded to the cassette tape or the cassette tape is fully wound, the recording stops automatically.
- When you want to record sound from other equipment, start playback on the connected equipment.
- When recording finishes, the color pattern of the display window and CD tray switches to the color pattern set in "MANUAL" to inform you that recording has finished (pages 12 and 13).

## Quitting Recording

Press .






## Recording Only One Track from a CD or MP3

**Before proceeding to step 4 on page 21, play back the track you want to record.**


- Pressing  in step 4 returns playback to the beginning of the track and only that track is recorded.

## Recording the Second or Subsequent Track to the Last Track from a CD or MP3

**Before proceeding to step 4 on page 21, select the starting track number with  or .**

- Pressing  in step 4 starts this product recording from the selected track to the last track.
- (Only for MP3s) You can also select the starting group number by pressing  or . You can also use   on the main unit to skip groups.

## Program Recording from a CD or MP3

**Before proceeding to step 4 on page 21, program the tracks you want to record ( page 17).**

## Recording with No Blank Time between Tracks

**Before proceeding to step 4 on page 21, pause playback of a CD or MP3.**

## Erasing Recorded Sound from a Cassette Tape


**Select the sound from other equipment (AUX) in step 3 on page 21, and**

**then press .**

- Do not play back any tracks on the connected equipment.

### NOTE

- If the cassette tape reverses direction while a track is being recorded from a CD or MP3, this product starts recording that track again from the beginning onto the reverse side of the cassette tape. However, if 12 or less seconds of that track were recorded onto the first side of the cassette tape, recording to the reverse side of the cassette tape starts from the beginning of the previous track.

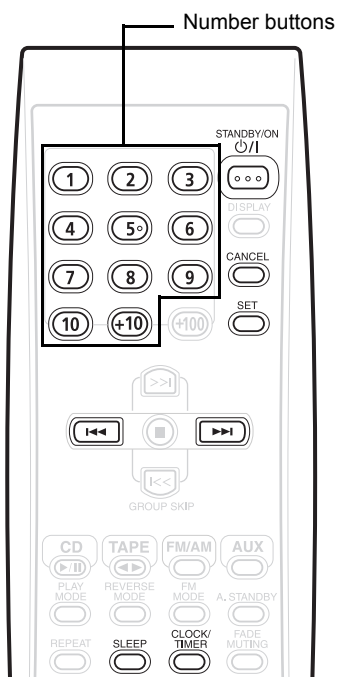


## Sleep Timer


When the specified time passes, the main unit automatically turns off.

Press .

- Each time you press , the time display (in minutes) toggles as follows.

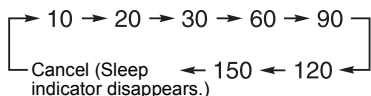

**Example:** To set the sleep timer to 60 minutes

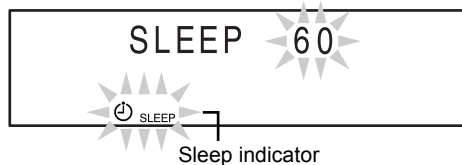

### NOTE

- When you set the sleep timer, the display window automatically dims.
- Before the clock has been set (While "0:00" is flashing), when you press , "CLOCK ADJUST!" appears.

## Changing the sleep timer setting

- Press repeatedly to select the time again.

## Confirming the sleep timer setting (remaining time)

- With the sleep timer activated, press once.

## Recording Timer

You can use the recording timer function to record FM/AM broadcasts or sound from other equipment to a cassette tape.

You can enter up to three timer settings in total for the recording timer and the playback timer (👉 page 25).

### NOTE

- Timer settings remain unchanged until the timer is replaced by new setting.


## 1 Prepare the sound source.

Radio	Preset the radio station whose broadcast you want to record. (👉 page 15)
Other equipment	Follow the operation manual for the equipment.

## 2 Insert a cassette tape. (👉 page 19)

## 3 Press repeatedly to select "TIMER1", "TIMER2" or "TIMER3".


**Example:** When "TIMER1" is selected

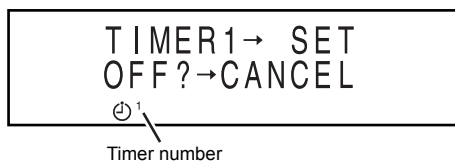

## 4 Press .

## 5 Set the starting time and ending time.

**Example:** To set the recording time from 6:30 a.m. to 6:45 a.m.

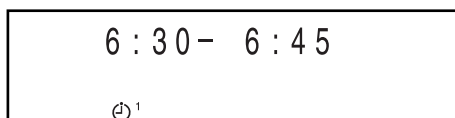

- For setting the clock, refer to "Setting the Clock" (👉 page 10).

Entering the hour → → Entering the minute →

**6 Press** or to select "ONCE" or "EVERYDAY".

ONCE : The recording timer works once.  
 EVERYDAY: The recording timer works every day.

**7 Press** .


**8 Press** or to select "REC TIMER".

• "REC" stands for "Recording".

**9 Press** .

**10 Press** or to select a sound source.

**Example: To record an FM broadcast to a cassette tape**

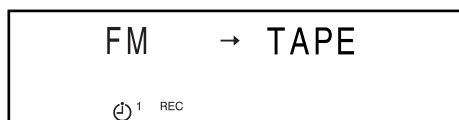

• When you want to record sound from other equipment, you cannot use the recording timer function to start playback on any equipment other than this product.

**■ When you want to record an FM/AM radio broadcast**

• Press , and then press , or the number buttons to select the preset number of the radio station whose broadcast you want to record. Refer to "Using the number buttons" (👉 page 10).

**11 Press** .

• The settings appear in the display window. Confirm the settings.

**12 When the main unit is on, press**

to turn off the main unit.



• While the recording timer is functioning, the volume is set to "0" and no sound is produced from the speakers or headphones.  
 • The recording timer is available only when the main unit is turned off.

**NOTE**

• During operation, you can return to the previous step by pressing . You can quit the recording timer settings by pressing . The settings are not stored.

**Canceling the recording timer**

In step 3 on page 23, select the timer number you want to cancel, and then press . Even when you cancel the recording timer, the setting remains stored.

**Activating the recording timer again**

In step 3 on page 23, select the timer number you want to activate, and then press repeatedly until all of the setting procedure finishes. Then turn off the main unit.

**NOTE**

• When you want to activate two or three recording timers, leave a blank time of 2 or more minutes between the ending time of the first recording timer and the starting time of the second recording timer. If the blank time is less than 2 minutes, the second recording timer does not work.  
 • When the power plug is disconnected or the power is cut, the recording timer settings may be lost. If the settings are lost, set the clock and recording timer again.


## Playback Timer

### 1 Prepare the sound source you want to play back.

CD or MP3	Make sure that a CD is loaded. (☞ page 16)
Cassette tape	Insert a cassette tape. (☞ page 19)
Radio	Preset the radio station whose broadcast you want to listen to. (☞ page 15)
Other equipment	Follow the operation manual for the equipment.

### 2 Press repeatedly to select "TIMER1", "TIMER2" or "TIMER3".


Example: When "TIMER2" is selected

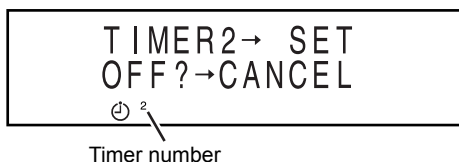



### 3 Press .

### 4 Set the starting time and ending time.

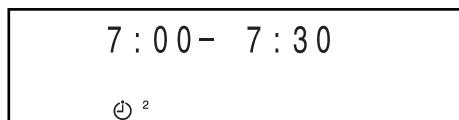Example: When you want to set the playback time from 7:00 a.m. to 7:30 a.m.



• For setting the clock, refer to "Setting the Clock" (☞ page 10).

Entering the hour →  → Entering the minute → 

### 5 Press or to select "ONCE" or "EVERYDAY".

ONCE : The playback timer works once.

EVERYDAY: The playback timer works every day.


### 6 Press .

### 7 Press or to select "PLAY TIMER".

### 8 Press .


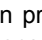

### 9 Press or to select the sound source you want to play back.

Example: When you want to listen to an AM broadcast

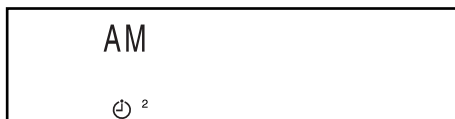




- When you want to listen to sound from other equipment, you cannot use the playback timer function to start playback on any equipment other than this product.
- You cannot use the playback timer function together with program playback, repeat playback or random playback of a CD or MP3.

### ■ When you want to listen to an FM/AM radio broadcast

- (With "FM" or "AM" selected) Press , and then press ,  or the number buttons to select the preset number of the radio station whose broadcast you want to listen to (☞ page 15). Refer to "Using the number buttons" (☞ page 10).

### ■ When you want to play back a CD or MP3

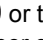- (With "CD" selected) Press , and then press ,  or the number buttons to select the number of the track you want to play back first. Refer to "Using the number buttons" (☞ page 10).

### 10 Press .

### 11 Press or to adjust the playback volume.

### 12 Press .

- The settings appear in the display window.



### 13 When the main unit is turned on,

press  to turn off the main unit.




- The playback timer is available only when the main unit is off.


## NOTE

- During operation, you can return to the previous step by pressing . You can quit the playback timer settings by pressing . The settings are not stored.
- When the playback timer starts, the volume gradually increases to the selected level.

## Canceling the playback timer function


In step 2 on page 25, select the timer number you want to cancel, and then press . Even when you cancel the playback timer, the setting remains stored.

## Activating the playback timer again

In step 2 on page 25, select the timer number you want to activate, and then press  repeatedly until all of the setting procedure finishes. Then turn off the main unit.

## NOTE

- When you want to activate two or three playback timers, leave a blank time of 2 or more minutes between the ending time of the first playback timer and the starting time of the second playback timer. If the blank time is less than 2 minutes, the second playback timer does not work.
- When the power plug is disconnected or the power is cut, the playback timer settings may be lost. If the settings are lost, set the clock and playback timer again.

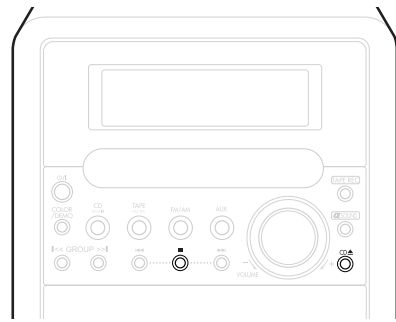



You can prohibit ejection of a CD.

- When the main unit is turned off

While holding down , press  on the main unit.



Even if you press , "LOCKED" appears in the display window and the CD does not come out.

In addition, when you press , while the main unit is turned off, "LOCKED" appears in the display window and the main unit does not turn on.

## Canceling the CD ejection lock

- When the main unit is turned off

Carry out the operation explained above once again.




# Handling CDs/Cassette Tapes

## Handling CDs


- Do not put adhesive tape or stickers, or write on a CD.
- Do not bend a CD.
- Be sure not to use heart/flower shaped CDs or other irregularly shaped CDs. The use of such CDs damages the main unit.

## Cleaning CDs

Signal surface

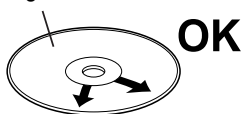

Wipe a CD from the center outward with a soft cloth.

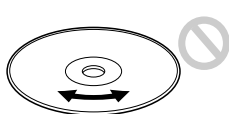


Scratches concentrated on a certain part cause sound dropout.

- Be sure not to use thinners, benzenes, cleaners for analog records, or other chemical agents.


## Handling cassette tapes

- A slack tape may become caught in the inner part of the main unit and damage the main unit. Before using a cassette tape, wind up any slack in the cassette tape as shown on the right. Do not pull out the tape or touch the tape's surface.

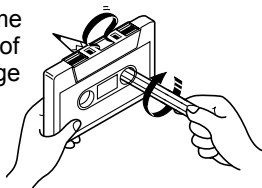

## Cleaning the tape deck head

Clean the head, pinch rollers and capstans approximately every 10 hours of playback time before the volume falls or sound quality deteriorates

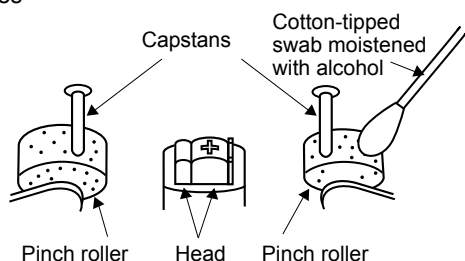

## Cleaning the main unit cabinet

- Gently dust the cabinet surface with a soft dry cloth. When the cabinet is very dirty, dampen the cloth with a neutral detergent diluted with water, wring out the cloth well, and then wipe the cabinet with the dampened cloth followed by a soft dry cloth.
- Do not wipe the cabinet with thinners or benzenes. Wiping it with these agents may cause discoloration of the cabinet or removal of the paint. Do not spray insecticides or other highly volatile agents onto the cabinet. Do not leave pieces of rubber or plastic on the cabinet for a long period.

# CD Messages

CD message	Meaning	Possible solution
CANNOT PLAY	You are trying to play back an unplayable CD or a CD that has many scratches.	Replace the CD.
CD NO DISC	No CD is loaded.	Place a CD on the CD tray.

## Troubleshooting

Check the following points before contacting the JVC service center.

Problem	Possible cause	Possible solution	Reference page
No sound is produced from the speakers.	Improper connection.	Connect all cords properly as in "Connections".	8
	Headphones are connected.	Disconnect the headphone plug.	4
	The MP3 disc is recorded utilizing "packet writing".	This product cannot play back this type of MP3 disc. Replace the disc.	–
The clock display is flashing.	The main unit is turned off because of a power cut. The power plug is disconnected.	Reset the clock.	10
CD playback does not start.	The CD is upside down.	Place the CD on the CD tray with the letter-printed surface facing up.	16
	Moisture has condensed on the lens.	Leave the main unit turned on, wait for approximately 1 or 2 hours, and then operate the main unit.	2
A certain point cannot be played back properly.	The CD is scratched or dirty.	Clean or replace the CD.	27
Certain tracks on an MP3 disc cannot be played back.	These tracks were recorded in a format other than MP3 format.	This product cannot play back this type of MP3 disc. Replace the disc.	–
The volume of cassette tape playback is low.	The head or capstans are dirty.	Clean the head or capstans.	27
You cannot record cassette tape playback.	The cassette tape is write-protected.	Cover the write protect tag holes on the cassette tape with adhesive tape.	21
A radio broadcast cannot be received.	No antenna is connected.	Connect an antenna.	6, 7
A whirring noise is produced.	The main unit is located close to a TV, computer, or other electric appliance.	Place the main unit away from a TV, computer, or other electric appliance.	2
The timer does not function.	You did not set the clock.	Set the clock.	10
	The main unit is turned on.	After setting the timer, turn off the main unit.	24, 25
You cannot operate the remote control.	The remote control batteries are running low.	Replace the batteries with new batteries.	5
Operations are disabled.	The built-in microprocessor may malfunction due to external electrical interference.	Disconnect the power plug, and then connect it back in.	–
When you turn on the main unit, a noise comes out from the rear of the main unit.	The internal cooling fan produces the noise as it rotates.	The noise is not a malfunction. This is to prevent excessive heat.	8, 11

# Specifications

Specifications are subject to change without prior notice.

## ■CD receiver (CA-UXQ3S)

### Amplifier

---

Output power	20 W + 20 W at 4 $\Omega$ (10% THD)
Input terminals <Analogue>	AUX×1, 500 mV/47 k $\Omega$ :LEVEL1 250 mV/47 k $\Omega$ :LEVEL2
Output terminals <Analogue>	Speaker×1, 20 W/4 $\Omega$ Impedance 4 $\Omega$ - 16 $\Omega$ Headphone (×1), 25 mW/32 $\Omega$ Impedance 16 $\Omega$ - 1 k $\Omega$

### Tuner

---

Frequency	FM:87.50 MHz - 108.00 MHz AM:522 kHz - 1 710 kHz
-----------	---

### CD player

---

Playable discs	Audio CDs, MP3
----------------	----------------

### Cassette deck

---

Frequency response	
Normal (type I)	60 Hz - 14 000 Hz
Wow and flutter	0.15% (WRMS)

### General

---

Power requirement	AC 240 V $\sim$ , 50 Hz
Power consumption	55 W (at operation) 1 W (on standby)
Dimensions	165 mm (W) × 200 mm (H) × 355 mm (D)
Mass (approx.)	4.6 kg

## ■Speaker (SP-UXQ1S)

System	2-way bass reflex type
Speakers	Woofers: 10 cm × 1 Tweeter: 4 cm × 1
Power handling	20 W
capacity	
Impedance	4 $\Omega$
Frequency range	56 Hz - 20 kHz
Sound pressure	84 dB/W•m
level	
Dimensions	135 mm (W) × 200.5 mm (H) × 211.5 mm (D)
Mass (approx.)	1.9 kg (1 unit)

## ■Micro component system (UX-Q3S)

### General

---

Dimensions	435 mm (W) × 200.5 mm (H) × 355 mm (D)
Mass (approx.)	8.4 kg

UX-Q3S MICRO COMPONENT SYSTEM

# JVC





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>