

JVC

VIDEO CASSETTE RECORDER

HR-V400/207/200AG

HR-V401/201AS

HR-V200AA

**INSTRUCTIONS**

LPT0808-001B
COPYRIGHT © 2003 VICTOR COMPANY OF JAPAN, LTD.



Printed in China
0803-AH-PJ-BJ

CONTENTS

Buttons, Connectors and Indicators	3
Basic Connections	4
Initial Settings	4
Video Channel Set	4
Auto Set Up	5
Language Setting	5
Clock Setting	5
Playback	6
Basic Playback	6
Playback Features	6
Recording	7
Basic Recording	7
Recording Features	8
Timer Recording	8
Express Timer Programming	8
Checking, cancelling or changing program settings	9
Program overlap warning display	9
Other Functions	10
Checking tape position	10
Changing display information	10
Function settings	10
Editing	11
Information on Multi-System Compatibility	12
Tuner Setting	14
Specifications	16

Safety Precautions

The rating plate and the safety caution are on the rear of the unit.

WARNING: DANGEROUS VOLTAGE INSIDE

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION

- When you are not using the recorder for a long period of time, it is recommended that you disconnect the power cord from the mains outlet.
- Dangerous voltage inside. Refer internal servicing to qualified service personnel. To prevent electric shock or fire hazard, remove the power cord from the mains outlet prior to connecting or disconnecting any signal lead or aerial.
- (For HR-V401AS and HR-V201AS)
Use the conversion plug depending on the type of your AC wall outlet.

ATTENTION

1. This recorder can also receive SECAM colour television signals for recording and playback.
2. Recordings made of SECAM television signals produce monochrome pictures if played back on another video recorder of SECAM standard, or do not produce normal colour pictures if played back on another video recorder of PAL standard.
3. SECAM prerecorded cassettes or recordings made with a SECAM video recorder produce monochrome pictures when played back with this recorder.

POWER SYSTEM:

This set operates on voltage of AC110 V – 240 V~ (Rating), AC90 V– 260 V~ (Operating), 50 Hz / 60 Hz with automatic switching.

Caution on Replaceable lithium battery

The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100°C or incinerate.

Replace battery with CR2032. Panasonic (Matsushita Electric) or Maxell is recommended.

Danger of explosion or Risk of fire if the battery is incorrectly replaced.

- Dispose of used battery promptly.
- Keep away from children.
- Do not disassemble and do not dispose off in fire.

IMPORTANT

- Please read the various precautions on this page before installing or operating the recorder.
- It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable programme and in any literary, dramatic, musical, or artistic work embodied therein.

The STANDBY/ON ϕ /I button does not completely shut off mains power from the unit, but switches operating current on and off. “ ϕ ” shows electrical power standby and “I” shows ON.

Video tapes recorded with this video recorder in the LP (Long Play) or EP (Extended Play) mode cannot be played back on a single-speed video recorder.

- Cassettes marked "VHS" (or "S-VHS") can be used with this video cassette recorder. However, S-VHS recording is not possible with this model.
- (For HR-V400AG and HR-V401AS only)
This model is equipped with SQPB (S-VHS QUASI PLAYBACK) that makes it possible to play back S-VHS recordings in the SP mode with regular VHS resolution.
- HQ VHS is compatible with existing VHS equipment.

When the equipment is installed in a cabinet or a shelf, make sure that it has sufficient space on all sides to allow for ventilation (10 cm or more on both sides, on top and at the rear).

When discarding batteries, environmental problems must be considered and the local rules or laws governing the disposal of these batteries must be followed strictly.

Failure to heed the following precautions may result in damage to the recorder, remote control or video cassette.


1. **DO NOT** place the recorder ...
 - ... in an environment prone to extreme temperatures or humidity.
 - ... in direct sunlight.
 - ... in a dusty environment.
 - ... in an environment where strong magnetic fields are generated.
 - ... on a surface that is unstable or subject to vibration.
2. **DO NOT** block the recorder's ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
3. **DO NOT** place heavy objects on the recorder or remote control.
4. **DO NOT** place anything which might spill on top of the recorder or remote control. (If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)
5. **DO NOT** expose the apparatus to dripping or splashing.
6. **DO NOT** use this equipment in a bathroom or places with water. Also **DO NOT** place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups, etc.) on top of this unit.
7. **DO NOT** place any naked flame sources, such as lighted candles, on the apparatus.
8. **AVOID** violent shocks to the recorder during transport.

MOISTURE CONDENSATION

Moisture in the air will condense on the recorder when you move it from a cold place to a warm place, or under extremely humid conditions—just as water droplets form on the surface of a glass filled with cold liquid. Moisture condensation on the head drum will cause damage to the tape. In conditions where condensation may occur, keep the recorder's power turned on for a few hours to let the moisture dry.

How to use the remote control

Before use, insert the lithium battery — CR2032 — correctly, with the plus(+) side up into the battery compartment. To open it, press the release tab and carefully, pull the compartment out.

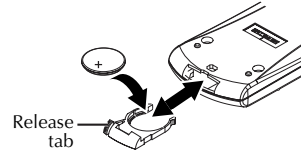

The remote control can operate most of your recorder's functions, as well as basic functions of JVC TVs.

- Point the remote control towards the remote sensor on the target component. The maximum operating distance is about 8 m.
- To operate a JVC TV, use any of the following buttons: **TV** \odot /I, **TV** \ominus , **TV PR +/–** or **TV** \triangle /+/-.

NOTE:

If the remote control does not work properly, remove its battery, wait for a few seconds, replace the battery and then try again.

 
Video heads cleaning

The heads get dirty in the following cases:

- in an environment prone to extreme temperature or humidity
 - in a dusty environment
 - flaw, dirt or mold on video tapes
 - continuous usage for a long time
- Use a dry cleaning cassette — TCL-2 — when:
- Rough, poor picture appears while a tape is played back.
 - The picture is unclear or no picture appears.
 - "USE CLEANING CASSETTE" appears on the screen (only with "O.S.D." set to "ON").

Usable cassettes

- Compact VHS camcorder recordings can be played on this recorder. Simply place the recorded cassette into a VHS Cassette Adapter and it can be used just like any full-sized VHS cassette.
- (For HR-V400AG and HR-V401AS only)
This recorder is equipped with SQPB (S-VHS QUASI PLAYBACK) that lets you watch tapes recorded in the S-VHS format and the SP mode with regular VHS resolution.
* SQPB does not deliver Super VHS resolution.
- This recorder can record on regular VHS and Super VHS cassettes. However, it will record regular VHS signals only.
* S-VHS recording is not possible with this recorder.



ATTENTION

To mobile phone users:



Using a mobile phone in the vicinity of the recorder may cause picture vibration on the TV screen or change the screen to a blue back display.

On placing the recorder:


Some TVs or other appliances generates strong magnetic fields. Do not place such appliance on top of the recorder as it may cause picture disturbance.

Buttons, Connectors and Indicators


Front Panel

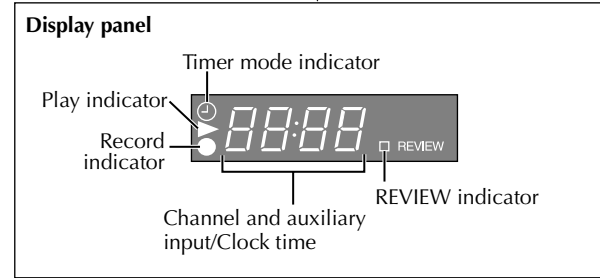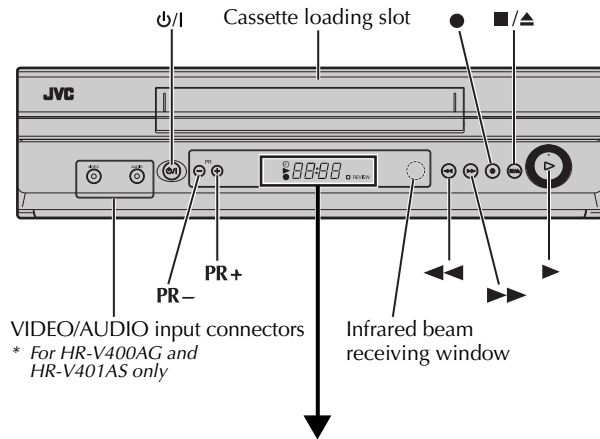

Rear Panel

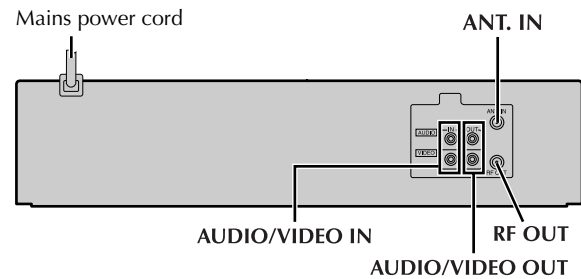


Remote control

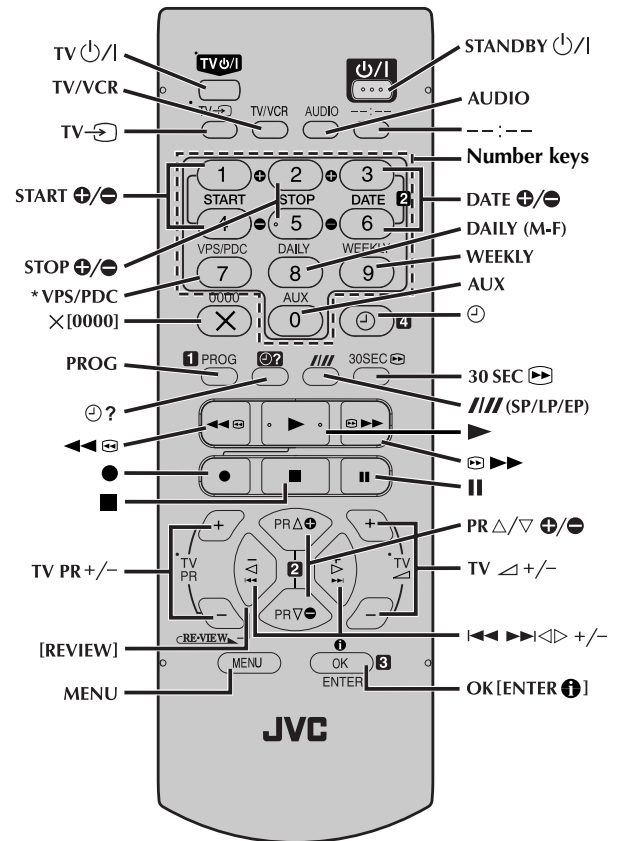

* Not function with this recorder.

On-screen display

If you press **1** (OK) on the remote control when "O.S.D." is set to "ON" (p. 11), you can see the current recorder status on the TV screen. After about 5 seconds, indications other than the time counter disappear. To clear the time counter, press **1** (OK) again. The indications are not recorded even if the recorder is in the recording mode.

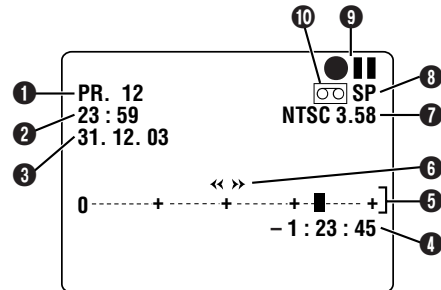

- 1 Channel and auxiliary input
- 2 Clock time
- 3 Current day/month/year
- 4 Time counter
- 5 Tape position
- 6 Tape direction
- 7 Colour system indicator
- 8 Tape speed
- 9 Recorder operation mode
- 10 Cassette mark

Basic Connections


1 Check contents

Make sure the package contains all of the accessories listed in "Specifications" (p. 16).

2 Situate recorder

Place the recorder on a stable, horizontal surface.

3 Connect recorder to TV

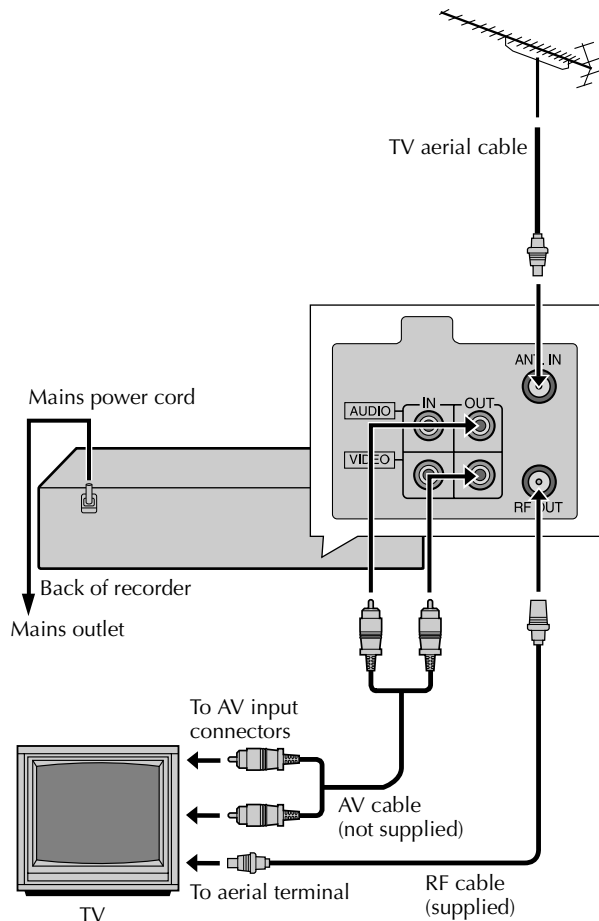

RF Connection

- 1 Disconnect the TV aerial cable from the TV.
- 2 Connect the TV aerial cable to the ANT. IN terminal on the rear of the recorder.
- 3 Connect the supplied RF cable between the RF OUT terminal on the rear of the recorder and the TV's aerial input terminal.

AV Connection

(improves picture quality during tape playback.)

If your TV is equipped with AV input connectors

- 1 Connect the aerial, recorder and TV as shown in the illustration.
 - 2 Connect an AV cable between the AUDIO/VIDEO OUT connectors on the rear of the recorder and the AV input connectors on the TV.
- Even if you are using AV cables to connect your recorder to your TV, you must also connect it using the RF cable. This will ensure that you can record one show while watching another.

4 Connect recorder to mains

Plug the mains power cord into a mains outlet.

 
Initial Settings

Video Channel Set


Video channel (RF output channel) is the channel on which your TV receives picture and sound signals from the video recorder through the RF cable. Before performing the following steps, make sure the recorder's power is off and there is no cassette inserted in the recorder.

If you have connected the video recorder to your TV via the provided RF cable only (RF connection)...

- 1 Hold down **■/▲** on the recorder until the display panel shows the following.



 - 2 Press **PR** **△** or **▽** on the remote control to set appropriate TV system that matches the system of TV being used (refer to the table below).




1:B/G 2:D/K 3:I 4:H

Major Countries/Areas	TV System
New Zealand, Kuwait, U.A.E., Indonesia, Singapore, Thailand, Malaysia, Iran, Saudi Arabia, Egypt, Morocco, Lebanon, Iraq	B/G
China, Mongolia, Russia	D/K
Hong Kong	I
Australia	H

- 3 Set your TV to UHF channel 36.

 - If the two vertical white bars appear clearly on the screen as shown on the right, press **OK** or **▷** and then go to step 4.



- If the two vertical white bars do not appear clearly, press **OK** and then **PR** **△** or **▽** to set the recorder to a vacant channel between 28 and 60 which is not occupied by any local station in your area. (Ex.) If channel 50 is available in your area... Then set your TV to UHF channel 50 and check if the two vertical white bars appear clearly on the screen; if so, go to step 4. If not, re-set the recorder to another vacant channel and try again.

 
- 4 Press **OK** or **▷** to finish video channel set.

If you have connected the video recorder to your TV via both the provided RF cable and an AV cable (AV connection)...

- 1 Hold down **■/▲** on the recorder until the display panel shows the following.



- 2 Press **OK** or **▷**, then press **PR** **▽** until the display panel shows the following. Now the video channel is set to off (-).



- 3 Press **OK** or **▷** to finish video channel set.

If Auto Set Up or Tuner Set has not previously been performed, the Language Select screen appears and Auto Set Up function takes place automatically.

Auto Set Up

The Auto Set Up function simplifies installation by guiding you through the procedures of setting the language, clock and tuner channels — simply follow the on-screen menus that appear.

- Turn on the recorder and the TV, and set your TV to its AV mode or video channel.

1 Select language


Press **PR** Δ/∇ to place the pointer next to your desired language (English, Russian or Arabic), then press **OK** or \triangleright .

- The Clock Set screen appears.

2 Set time

Press **PR** Δ/∇ to set the hour, then press **OK** or \triangleright .

- Press and hold either button to delay or advance the time by 30 minutes.

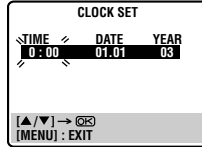

3 Set date

Press **PR** Δ/∇ to set the date, then press **OK** or \triangleright .

- Press and hold either button to change the date by 15 days.

4 Set year

Press **PR** Δ/∇ to set the year, then press **MENU**.

5 Select TV system


Press **PR** Δ/∇ to place the pointer next to the appropriate TV system (refer to the table below).

Major Countries/Areas	TV System
Australia, New Zealand, Kuwait, U.A.E., Indonesia, Singapore, Thailand, Malaysia, Iran, Saudi Arabia, Egypt, Morocco, Lebanon, Iraq	B/G
China, Mongolia, Russia	D/K
Hong Kong	I

6 Start auto channel set

Press **OK** or \triangleright .


- Receivable channels in your area are automatically assigned to the **PR** +/- buttons, and non-receivable channels are skipped.
- When Auto Set Up is completed, the lowest position number will appear on the front display panel. If "SCAN COMPLETED—NO SIGNAL—" is displayed on the screen, make sure that the aerial cable is connected to the recorder properly and press **OK** on the remote control. The recorder will try Auto Set Up again.

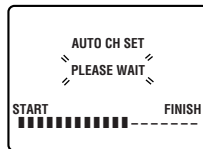

Language Setting

1 Access Main Menu screen, then Initial Set screen

Press **MENU** on the remote control. Press **PR** Δ/∇ to place the pointer next to "INITIAL SET", then press **OK** or \triangleright .

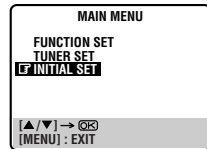


2 Access Language Select screen

Press **PR** Δ/∇ to place the pointer next to "LANGUAGE", then press **OK** or \triangleright .

3 Select language

Press **PR** Δ/∇ to place the pointer next to the language of your choice (English, Russian or Arabic), then press **OK** or \triangleright . Press **MENU** to return to normal screen.

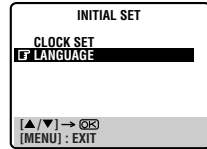


Clock Setting

1 Access Main Menu screen, then Initial Set screen

Press **MENU** on the remote control. Press **PR** Δ/∇ to place the pointer next to "INITIAL SET", then press **OK** or \triangleright .

2 Access Clock Set screen


Press **PR** Δ/∇ to place the pointer next to "CLOCK SET", then press **OK** or \triangleright .

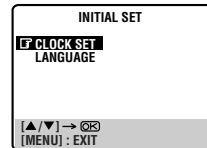

3 Set time, date and year

Press **PR** Δ/∇ until the desired time appears, then press **OK** or \triangleright . Set the date and year in the same way.

- Holding **PR** Δ/∇ changes the time in 30-minute intervals, or changes the date in 15-day intervals.

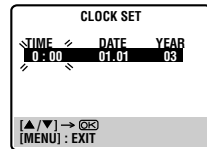

4 Start clock

Press **MENU** and normal screen appears.

NOTE:

If the year digits are automatically cleared, it is possible that you have input February 29th in a non-leap year. Input the correct data.

To make corrections any time during the process


Press **OK** or \triangleright repeatedly until the item you want to change blinks, then press **PR** Δ/∇ .

Playback

Basic Playback

Turn on the TV and select the video channel or AV mode.

1 Load a cassette

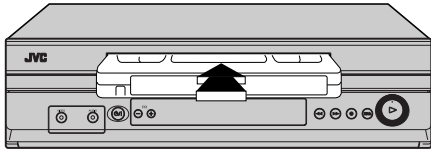

Make sure the window side is up, the rear label side is facing you and the arrow on the front of the cassette is pointing towards the recorder.

- Do not apply too much pressure when inserting.
- The recorder turns on, and the counter on the on-screen display is reset, automatically.
- Select the appropriate colour system with "PAL/MESECAM" and "NTSC" in Function settings (☰ 10).
- If the cassette's record safety tab has been removed, playback begins automatically.

2 Start playback

Press ►.

ATTENTION

In the search, still, slow-motion or frame-by-frame playback mode,

- the picture will be distorted.
- the noise bars will appear.
- there may be a loss of colour

During playback

Stop playback

Press ■ on the remote **OR** Press ■/▲ on the recorder control.

Pause playback and view still picture

Press II.

- Press ► to resume normal playback.
- If there is vertical jitter, press PR Δ/∇ on the remote control or PR +/- on the recorder to correct the picture.

Pause and Frame-by-Frame playback

Press II to pause, then press ◀ or ▶ (or II) repeatedly.

- Press ► to resume normal playback.

Picture Search


Press ◀◀ or ▶▶. Press ◀◀ or ▶▶ again to perform high-speed search.

- Each time you press ◀◀ or ▶▶, the search speed changes between low-speed and high-speed.
- Press ► to resume normal playback.

Variable Speed Search (including slow-motion)

Press ◀ or ▶ repeatedly.

- Press ► to resume normal playback.
- Each time you press ◀ or ▶, the playback speed changes. To decrease the speed during picture search, press the opposite direction button repeatedly.
- During still picture, press and hold ▶ to start forward (or ◀ to start reverse) slow motion playback. When you release the button, still picture resumes. During still picture, holding II for more than 2 seconds also starts forward slow motion playback. If you press II again, still picture resumes.
- During slow motion playback, some noise may appear on the TV screen. Press PR Δ/∇ on the remote control or PR +/- on the recorder to eliminate the noise.

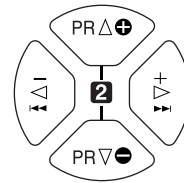

Reverse			Forward		
Reverse search 3 steps	Reverse play	Reverse slow motion 1 step	Slow motion 1 step	Normal play	Forward search 4 steps

When the tape is not running

Rewind/fast-forward

Press ◀◀ or ▶▶.

Eject the cassette

Press ■/▲.

- You can also eject the cassette when the recorder is turned off.

Turn off the recorder

Press ⏻.

Playback Features

Adjusting tracking condition

— tracking adjustment

Automatic tracking adjustment

Whenever you insert a tape and start playback, automatic tracking starts working and continuously analyzes the signal to enable optimum picture quality during playback.

Manual tracking adjustment

If automatic tracking cannot eliminate noises well during playback, follow the procedures below.

1 Press /// (SP/LP/EP) on the remote control during playback to activate manual tracking.

2 Press PR Δ/∇ or PR +/- to eliminate the noises. Press it briefly for a fine adjustment, or press and hold for a coarse adjustment.

- Press /// (SP/LP/EP) again to reactivate automatic tracking.

Automatic operations after rewinding

— Next Function Memory

The Next Function Memory "tells" the recorder what to do after rewinding is completed. Ensure that the recorder is in stop mode.

• For Automatic Playback Start

Press ◀◀, then press ► within 2 seconds.

• For Automatic Power Off

Press ◀◀, then press ⏻ within 2 seconds.

• For Automatic Timer Standby

Press ◀◀, then press ⊕ within 2 seconds.

NOTE:

It is not possible to select the Automatic Timer Standby function if the cassette's record safety tab is removed.

Playing back tape repeatedly (100 times)

– Repeat Play

During playback, press and hold ► for more than 5 seconds. The play indicator (▷) on the display panel starts blinking slowly. To stop playback, press ■ on the remote control or ■/▲ on the recorder.

NOTE:

Pressing ►, ◀◀, ▶▶ or || also cancels repeat playback.


Locating beginning of recordings

– Index Search

Index codes are placed on the tape at the beginning of each recording when recording on this recorder.

1 While the tape is not running, press ◀ or ▶ on the remote control to start search.

2 To access a recording of 2 to 9 index codes away, press ◀ or ▶ repeatedly until the correct number is displayed on the screen (only if "O.S.D." is set to "ON" (☞ 11)). Playback begins automatically when the desired recording is located.

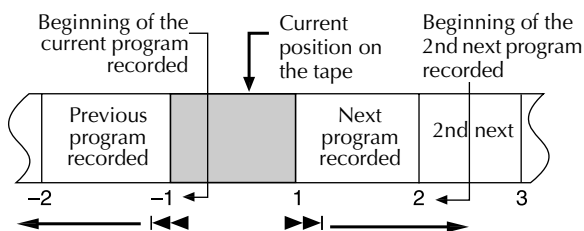

Locating beginning of timer recordings

– Instant Review

After ensuring that the recorder is turned off and that the timer mode is disengaged, press REVIEW on the remote control.

- The recorder turns on, and rewinds to the index code indicating the beginning of the last timer-recorded program, then begins playback automatically.
- You can access a program of 2 to 9 index codes away from the current position on the tape. If, for example, you have 5 programs recorded and you want to watch the third one, press REVIEW three times.
- The Instant Review function will also operate if the recorder is turned on.

Skipping unwanted portions

 
– Skip Search

Press 30 SEC ⏮ on the remote control once to 4 times during playback. Each press initiates a 30-second period of high speed playback (up to 2 minutes). When the specified portion of the tape is skipped, normal playback resumes automatically. To return to normal playback during Skip Search, press ►.

Recording

Accidental erasure prevention

To prevent accidental recording on a recorded cassette, remove its record safety tab. To record on it later, cover the hole with adhesive tape.



Record safety tab

Basic Recording

Turn on the TV and select the video channel or AV mode.

1 Load a cassette

Make sure the record safety tab is intact. If not, cover the hole with adhesive tape before inserting the cassette.

- The recorder turns on, and the counter is reset, automatically.
- Select the appropriate colour system with "PAL/MESECAM" and "NTSC" in Function settings (☞ 10).

2 Select recording channel

Press PR ▲/▼ or the Number keys on the remote control or PR +/- on the recorder.

NOTE:

You can select channel in the stop mode, recording pause mode or during rewind/fast-forward.

3 Set tape speed

Press /// (SP/LP/EP). The current setting for the tape speed appears on the display panel and the screen for about 5 seconds. Press /// (SP/LP/EP) again to change the setting while tape speed is displayed.

4 Start recording

On the recorder, press ●. Or on the remote control, while holding ●, press ►.

NOTE:

If the tape reaches its end during recording, the recording stops and "O" and "▷" blink on the display window. Press ■/▲ on the recorder to eject the cassette or press ◀◀ on the remote control to rewind the tape.

During recording

Pause recording

Press ||.

- Press ► to resume recording.
- You can select channel in the recording pause mode.

Stop recording

Press ■ on the remote control.

OR Press ■/▲ on the recorder.

Recording Features

Specifying recording length

— Instant Timer Recording (ITR)

During recording, press ● on the recorder repeatedly until the recording length you want appears on the display panel. The record indicator (○) on the display panel starts blinking.

- Each time you press the button, recording length increases in 30-minute intervals (up to 6 hours).
- The recorder shuts off after recording is finished.
- To cancel an ITR, press ■ on the remote control or ■/▲ on the recorder.

Watching one program while recording another

Once recording is in progress, all you need to do is to set the channel controls on the TV for the station you wish to view.

- The programme selected with the TV's channel controls appears on the TV screen while the one selected with the **PR** △/▽ on the remote control or **PR** +/- buttons is recorded on the tape.

Recording Resume Function

If there is a power outage during recording (or Instant Timer Recording, or timer recording), the recording will resume automatically when the power is restored to the recorder. (No setting is required for this function.)

NOTE:

If a power outage exceed the recorder's memory backup time, Recording Resume Function does not work.

Timer Recording


Up to 8 timer recording programs can be made using Express timer programming method as far as a year in advance.

NOTES:

- If all the 8 programs have already been set, "PROGRAM FULL" appears on the TV screen.
- After timer recording is completed, the recorder turns off automatically.
- You can program the timer recording while a regular recording is in progress; the menu screens will not be recorded.
- If the tape reaches its end during recording, the recording stops and "⊕", "○" and "▷" on the front display panel blink. Press ⊕ to disengage timer then press ■/▲ on the recorder to eject the cassette or press ⊗ then press ◀ to rewind the tape.

Express Timer Programming

- Remember, the clock must be set before you can program the timer.
- Load a cassette with the record safety tab intact. The recorder turns on, and the counter is reset, automatically.
- Select the appropriate colour system with "PAL/MESECAM" and "NTSC" in Function settings. (☞ 10)

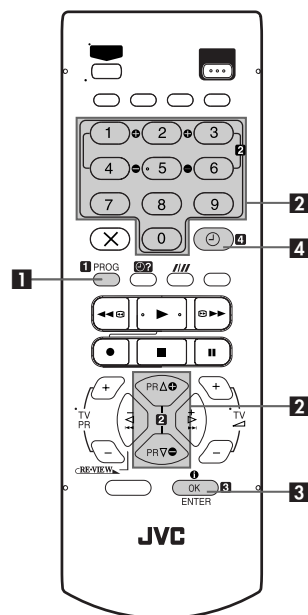

1 Press **PROG** on the remote control to access the Program screen.


2 Press **START** ⊕/⊖ (number keys "1" and/or "4"), **STOP** ⊕/⊖ (number keys "2" and/or "5"), **DATE** ⊕/⊖ (number keys "3" and/or "6") or **PR** ⊕/⊖ repeatedly to enter the start time, stop time, date or channel.

- Press and hold **START** ⊕/⊖ (number keys "1" and/or "4") or **STOP** ⊕/⊖ (number keys "2" and/or "5") to increase the time in 30-minute intervals.
- To set the tape speed, press **///** (SP/LP/EP).
- To timer-record daily (Monday–Friday) or weekly serials, press **DAILY** (number key 8) or **WEEKLY** (number key 9). Pressing the button again makes the "DAILY" or "WEEKLY" display disappear.

3 Press **OK** or **PROG**.

- If "PROGRAM OVERLAPPED" appears, see "Program overlap warning display" (☞ 9).

4 Press ⊖. The recorder turns off automatically and "⊕" is displayed on the display panel.

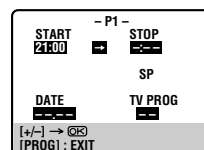

To use the recorder while it is in timer recording standby mode

Press \odot , then press ψ/I . After you use the recorder, press \odot again to put the recorder into timer recording standby mode.

Checking, cancelling or changing program settings

1 Disengage timer

Press \odot , then press ψ/I .

- When “AUTO TIMER” is set to “ON” (☞ 11), you do not have to press \odot .

2 Access Program Check screen

Press $\odot ?$.

- When the weekly serials are programmed, a day of the week appears. When the daily serials are programmed, “DAILY” appears.

PR	START	STOP	CH	DATE
1	8:00	10:00	3	24.04
2	10:00	10:45	2	25.04
3	11:30	13:00	1	25.04
4				
5				
6				
7				
8				

[$\odot ?$]: NEXT

3 Access Program screen

Press $\odot ?$ again. Each time you press $\odot ?$, the next program’s Program screen appears.

START	STOP
8:00	10:00
DATE	TV PROG
24.04	3

[$\odot ?$]: NEXT

4 Cancel or change program setting

To cancel a program, press \times when the Program screen you do not want is shown.

To change a program, press the appropriate button: START \oplus/\ominus (number keys “1” and/or “4”), STOP \oplus/\ominus (number keys “2” and/or “5”), DATE \oplus/\ominus (number keys “3” and/or “6”), PR \oplus/\ominus , DAILY (number key 8), WEEKLY (number key 9) and/or $///$ (SP/LP/EP) when the Program screen on which you want to make changes is shown.

5 Return to normal screen

Press $\odot ?$ repeatedly until no Program screen is shown.

6 Reengage timer recording standby mode

Press \odot . The recorder turns off automatically and “ \odot ” is displayed on the display panel.

- When “AUTO TIMER” is set to “ON” (☞ 11), the timer recording standby mode automatically resumes when you turn off the recorder.

Program overlap warning display

If “PROGRAM OVERLAPPED” appears, you have another program overlapping the program you have just made. The Program Check screen appears and conflicting programs will start blinking.

PR	START	STOP	CH	DATE
1	8:00	10:00	3	24.04
2	10:00	10:45	2	25.04
3	11:30	13:00	1	25.04
4	9:00	10:00	92	DAILY
5				
6				
7				
8				

[Δ/∇]: \rightarrow \odot [PROG]: EXIT

Example:

Program 1 (you have just made) and Program 4 overlap each other.

1 Select program to modify

Press PR Δ/∇ , then press OK or \triangleright .

- You can only select one of the overlapping programs.
- If you do not mind this overlap, press PROG to finish the timer program setting. The program starting earlier or program with the lower program number will be recorded.

PR	START	STOP	CH	DATE
1	8:00	10:00	3	24.04
2	10:00	10:45	2	25.04
3	11:30	13:00	1	25.04
4	9:00	10:00	92	DAILY
5				
6				
7				
8				

[Δ/∇]: \rightarrow \odot [PROG]: EXIT

2 Cancel or change program setting

To cancel a program, press \times when the Program screen you do not want is shown.

To change a program, press the appropriate button: START \oplus/\ominus (number keys “1” and/or “4”), STOP \oplus/\ominus (number keys “2” and/or “5”), DATE \oplus/\ominus (number keys “3” and/or “6”), PR \oplus/\ominus , DAILY (number key 8), WEEKLY (number key 9) and/or $///$ (SP/LP/EP) when the Program screen on which you want to make changes is shown, then press OK or \triangleright .

- If the overlap is not yet solved, the conflicting programs will be shown on the Program check screen. Repeat the above steps again.

START	STOP
8:00	10:00
DATE	TV PROG
25.04	92

[\times]: DELETE [PROG]: EXIT [Δ/∇]: \rightarrow \odot


Other Functions

Checking tape position

When you change the recorder operation mode from the stop mode to fast forward or rewind mode, or when you perform an Index Search or Instant Review, the tape position indicator appears.

The position of "■" in relation to "0" (beginning) or "+" (end) shows you where you are on the tape.

- Set "O.S.D." to "ON" (11).

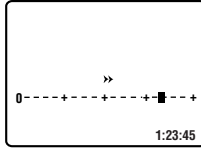

Changing display information

Each time you press **↔**, the display panel shows the channel number and the clock time alternatively.

- You can change display in the stop, recording or during rewind/fast-forward high-speed search.
- When "O.S.D." is set to "ON" (11) and **↔** on the remote control is pressed, time counter will appear on the TV screen. To reset the time counter, press **0000** on the remote control.




Function settings

You can use the other useful function settings on the Function Set screen.

- Turn on the recorder and the TV, and set your TV to its AV mode or video channel.


1 Access Main Menu screen, then Function Set screen

Press **MENU** on the remote control. Press **PR** **△/▽** to place the pointer next to "FUNCTION SET", then press **OK** or **▷**.

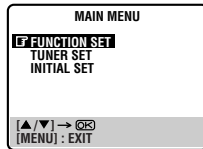

2 Select Function

Press **PR** **△/▽** to place the pointer next to the function you want to set.

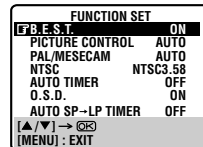

3 Change setting

Press **OK** or **▷**. The default setting is **bold** in the following table. Press **MENU** to return to normal screen.

■ B.E.S.T. — ON / OFF

When B.E.S.T. (Biconditional Equalized Signal Tracking) system is set to "ON", this recorder checks the condition of the tape in use during playback and recording, and compensates to provide the highest-possible pictures. This takes place whenever you play back a tape or start recording after inserting a tape.

NOTE:

The recorder checks the tape condition for about 7 seconds, then starts recording. To make sure you record the desired scene or program completely, perform the following steps:

- 1 Press and hold **II**, and press **●**. After about 7 seconds, the recorder re-enters Record Pause mode.
- 2 Press **▶** to start recording.

■ PICTURE CONTROL — AUTO(NORM) / EDIT / SOFT

This function helps you to adjust the playback picture quality according to your preference.

AUTO (NORM): Normally select this. Picture quality is adjusted automatically. When "B.E.S.T." is "OFF", "NORM" will appear instead of "AUTO".

EDIT: Minimizes picture degradation during editing (recording and playback).

SOFT: Reduces image coarseness when viewing overlaid tapes containing much noise.

NOTE:

Select "EDIT" when you are editing tapes. After you finish editing the tapes, select "AUTO".

■ PAL/MESECAM — AUTO / PAL / MESECAM

Select the appropriate colour system for recording or playback.

AUTO: Usually set to this mode. The appropriate colour system (PAL or MESECAM) will be selected depending on the playback or recording signals.

If the "AUTO" mode does not work properly, select either of the following manual modes.

PAL: To record PAL signals, or playback a PAL tape.

MESECAM: To record SECAM signals, or playback a SECAM or MESECAM tape.

NOTES:

- SECAM signals will always be recorded as MESECAM. Select "AUTO" or "MESECAM" when recording SECAM signals.
- When playing back a SECAM tape, select "AUTO" or "MESECAM". The playback picture will always be monochrome.

■ NTSC — NTSC3.58 / NTSC4.43 / NTSC→PAL

To record NTSC signals or playback a NTSC tape, it will be necessary to select the appropriate mode.

NTSC3.58: To record NTSC signals or playback a NTSC tape.

NTSC4.43: To record NTSC4.43 signals or playback a NTSC4.43 tape.

NTSC→PAL: To playback a NTSC tape on PAL TV.

NOTES:

- The "NTSC→PAL" mode does not work during recording. In this mode, NTSC signals will be recorded as NTSC3.58.
- The Menu screen is distorted during playing back a NTSC tape on PAL TV. Stop playback and access the Menu screen again.
- In the "NTSC4.43" mode, with some TVs, on-screen displays (Program screen, etc.) may roll up or down and there may be a loss of colour. When this happens, select the "NTSC3.58" mode.

■ **AUTO TIMER — ON / OFF**

● **When this function is set to “ON”:**

The timer recording standby mode is automatically engaged when the recorder is turned off. It is temporarily canceled when the recorder is turned on. You do not have to press \odot to engage or disengage the timer recording standby mode.

● **When this function is set to “OFF”:**

You have to press \odot to engage or disengage the timer recording standby mode.

■ **O.S.D. — ON / OFF**

When this function is set to “ON”, various recorder status information (on-screen display) appears on the screen.

NOTE:

When you use this recorder as the source player for editing a tape, be sure to set this function to “OFF”; otherwise, the recorder status information (on-screen display) will be recorded on the edited tape.

■ **AUTO SP→LP TIMER — ON / OFF**

When this function is set to “ON”, the recorder automatically switches to LP mode to allow complete recording if there is not enough tape to record the entire program while timer-recording in SP mode.

For Example, Recording a PAL-broadcast programme of 210 minutes in length onto a 180-minute tape.

Approximately 150 minutes Approximately 60 minutes

SP mode	LP mode
Total 210 minutes	

NOTES:


- If you have programmed the recorder to timer-record 2 or more programs, do not use this function, but change the tape speed manually during timer programming.
- There may be some noise and sound disturbance where the tape speed switches from SP to LP mode on the tape.
- The Auto SP→LP Timer feature is not available during ITR (Instant Timer Recording), and the feature will not work properly with any tapes longer than E-180 or with some tapes of shorter lengths.

Editing

You can use your recorder as the playback or recording deck. You can use a camcorder as the source player and your recorder as the recording deck. Refer also to the other components' instruction manuals for connection and its operations.

1 Make connections

Example: When using this recorder as the source player

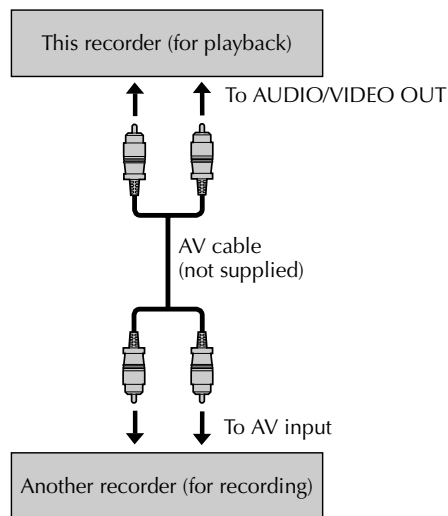

- When using this recorder as the recording deck, connect this recorder's AV input connectors to the AV output connectors on the other recorder. If the source player is monaural, connect the audio output connector on the source player to the left audio input connector on this recorder.

2 Load cassettes

Insert the playback cassette into the source player and the cassette to be recorded on into the recording deck.

3 Select input mode on recording deck

Select the correct external input on the recording deck. Press **AUX** or **PR** Δ/∇ on the remote control or **PR** **+/-** on the recorder. On this recorder (when using this recorder as the recording deck); Select “L-1” — when connecting the other recorder to the AV input connectors on the rear panel.

(For HR-V400AG and HR-V401AS)

Select “F-1” — when connecting the other recorder to the AV input connectors on the front panel.

4 Select edit mode

Set the edit mode to “ON” for the recorders if such a mode is equipped.

- On this recorder, set “PICTURE CONTROL” to “EDIT” (10).

5 Start playback

Press \blacktriangleright on the source player.

6 Start recording


Press \bullet on the recording deck.

Information on Multi-System Compatibility

Off-Air Recording

The built-in multi-system tuner is capable of receiving PAL B/G, I and D/K, and SECAM B/G and D/K broadcasts.

TV system

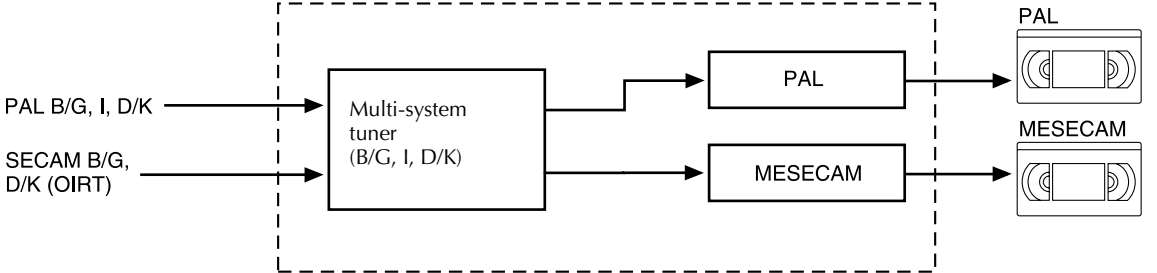


NOTE:
This model does not operate in BRAZIL (PAL-M) or ARGENTINA (PAL-N).

Playback

This recorder can play back all 3 types of recorded tape.

Recorded tape

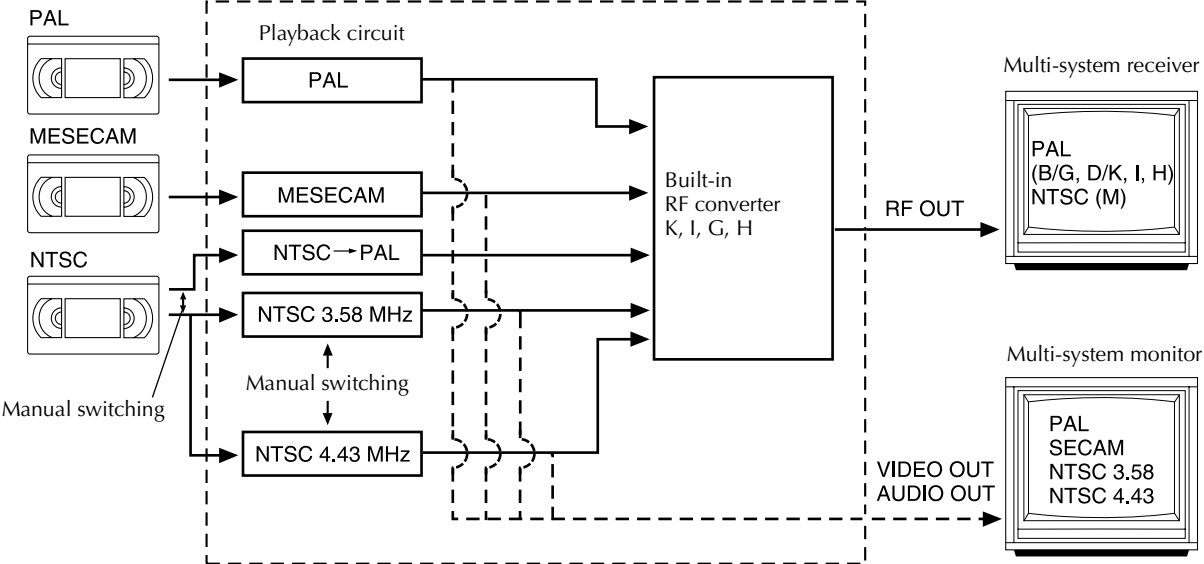


NOTE:
When viewing NTSC tapes on a PAL TV set:

- The picture may shrink vertically with black bars appearing at the top and bottom of the screen. This is not a malfunction on the part of the video recorder nor the TV.
- The picture may roll up or down. This can be corrected using the V-HOLD control found on some TVs. (This cannot be corrected if the TV does not have a V-HOLD control.)
- During search, still, or frame-by-frame playback, the picture will be distorted, and there may be a loss of colour.

ATTENTION:
When this recorder is connected to a multi-system TV, the audio signal may not be heard or may be noisy if the colour system select switch of the TV is adjusted to the AUTO position. In such a case, set the TV's colour system select switch to the appropriate position which corresponds to the TV system you have selected at the TV System Select screen.

Tape-To-Tape Editing

There are 4 different types of recorded tape, depending on the signal recorded.

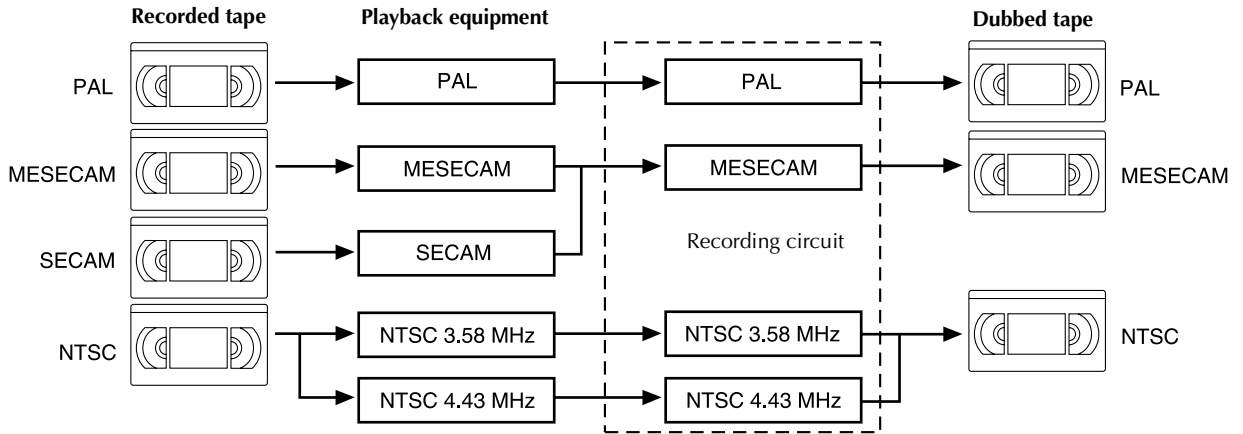

Tuner Setting

IMPORTANT


Perform the following steps only if auto channel set has not been set correctly by Auto Set Up function or if you have moved to a different area or if a new station starts broadcasting in your area.

Your recorder needs to memorise all necessary stations in channel positions in order to record TV programmes. Auto Channel Set automatically assigns all receivable stations in your area so that you can call them up with the **PR +/-** buttons without going through any vacant channels.

Auto Channel Set


1 Access Main Menu screen, then Tuner Set screen

Press **MENU** on the remote control. Press **PR** Δ/∇ to place the pointer next to "TUNER SET", then press **OK** or \triangleright .

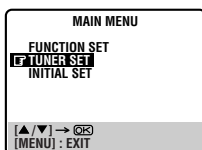


2 Perform Auto Channel Set

Press **PR** Δ/∇ to place the pointer next to "AUTO CH SET", then press **OK** or \triangleright .

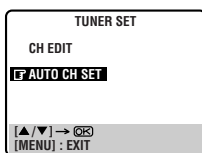


3 Select TV system

Press **PR** Δ/∇ to place the pointer next to the appropriate TV system, then press **OK** or \triangleright .

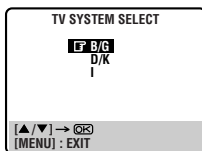

- Auto Channel Set will start.

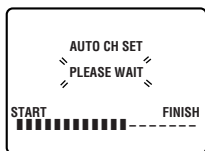

CH	FREQ	SYS	CH	FREQ	SYS
01	150	BG	07	229	BG
02	165	BG	08	237	BG
03	195	BG	09	355	BG
04	205	BG	10	365	BG
05	213	BG	11	374	BG
06	221	BG	12	384	BG

[Δ/∇] → [X]: DELETE
 [Δ/∇] → [OK]: EDIT
 [MENU]: EXIT

Press **MENU** to return to normal screen.

IMPORTANT

- If no sound accompanies the picture or the audio sounds unnatural on some channels that have been stored by Auto Channel Set, the TV system setting for those channels may be incorrect. Select the appropriate TV system for those channels. Refer to "TV System Selection — When you see the picture but the audio can't be heard or sounds unnatural" (☞ 15).
- Since your recorder memorises all detected stations even if the reception condition is poor, some of those stored stations may produce a noisy picture. To delete those stations, refer to "Delete A Channel" (☞ 15).

Manual Channel Set

Store channels that were not stored during Auto Set Up or Auto Channel Set.

1 Access Tuner Set screen

Perform step **1** of "Auto Channel Set".

2 Access channel list



Press **PR** Δ/∇ to place the pointer next to "CH EDIT", then press **OK** or \triangleright .

3 Select position

Press **PR** Δ/∇ to place the pointer next to an open channel position, then press **OK** or \triangleright .

4 Select band

Press **PR** Δ/∇ to place the pointer next to the band of your choice, then press **OK** or \triangleright to initiate Manual Channel Set.

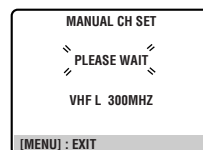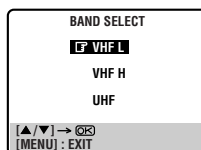

5 Set desired station

The screen to the right appears when a station is detected.

If you do not want to store the detected station...

Press **PR** Δ/∇ to place the pointer next to "CONTINUE", then press **OK** or \triangleright .

Channel search will resume.

If you want to store the detected station...

Press **PR** Δ/∇ to place the pointer next to "STORE", then press **OK** or \triangleright . The Channel List appears again.

- The blueback screen and the TV picture currently being broadcast appear alternately for 8 seconds each.
- If you want to store another channel, repeat steps **3** – **5**.
- When channel search completes for that band, the Band Select screen appears again. To set channels for other bands, select another band and start Manual Channel Set again (☞ step **4** and **5**).



6 Return to normal screen

Press **MENU**.

Delete A Channel

1 Access Tuner Set screen

Perform step **1** of “Auto Channel Set” (☞ 14).

2 Access channel list

Press **PR** Δ/∇ to place the pointer next to “CH EDIT”, then press **OK** or \triangleright .

3 Select channel

Press **PR** Δ/∇ to until the channel you want to delete begins blinking.

CH	FREQ	SYS	CH	FREQ	SYS
01	150	BG	07	229	BG
02	165	BG	08	237	BG
03	195	BG	09	355	BG
04	205	BG	10	365	BG
05	213	BG	11	374	BG
06	221	BG	12	384	BG

[Δ/∇] : [X] : DELETE
[Δ/∇] : [OK] : EDIT
[MENU] : EXIT

4 Delete channel

Press **X**. The channel directly beneath the cancelled one moves up one line.

- Repeat steps **3** and **4** as necessary.

CH	FREQ	SYS	CH	FREQ	SYS
01	150	BG	07	229	BG
02	165	BG	08	237	BG
03	195	BG	09	355	BG
04	205	BG	10	365	BG
05	213	BG	11	374	BG
06	221	BG	12	384	BG

[Δ/∇] : [X] : ADD
[MENU] : EXIT

5 Return to normal screen

Press **MENU**.

Swap Channel Positions

Example: To swap CH03 and CH09.

1 Access Tuner Set screen

Perform step **1** of “Auto Channel Set” (☞ 14).

2 Access channel list

Press **PR** Δ/∇ to place the pointer next to “CH EDIT”, then press **OK** or \triangleright .

3 Select position (e.g. 03)

Press **PR** Δ/∇ until the section of CH “03” begins blinking, then press **OK** or \triangleright .

- Only “03” will blink.

CH	FREQ	SYS	CH	FREQ	SYS
01	150	BG	07	229	BG
02	165	BG	08	237	BG
03	165	BG	09	355	BG
04	205	BG	10	365	BG
05	213	BG	11	374	BG
06	221	BG	12	384	BG

[0 - 9] : INPUT CH
[OK] : FINE TUNING
[MENU] : EXIT

4 Select position (e.g. 09)

Press **Number** keys to input “0” and “9”.

- The two selected channels will be swapped.
- To cancel the channel swapping, press \triangleleft .

CH	FREQ	SYS	CH	FREQ	SYS
01	150	BG	07	229	BG
02	165	BG	08	237	BG
03	355	BG	09	165	BG
04	205	BG	10	365	BG
05	213	BG	11	374	BG
06	221	BG	12	384	BG

[\triangleleft] : CANCEL
[OK] : OK
[MENU] : EXIT

5 Store new positions

Press **OK** or \triangleright .

- Repeat steps **3** – **5** as necessary.

6 Return to normal screen

Press **MENU**.

Fine-Tuning Channels

1 Access Tuner Set screen

Perform step **1** of “Auto Channel Set” (☞ 14).

2 Access channel list

Press **PR** Δ/∇ to place the pointer next to “CH EDIT”, then press **OK** or \triangleright .

3 Select channel to fine-tune

Press **PR** Δ/∇ until the channel you want to tune begins blinking, then press **OK** twice.

- The “FRQ” number for that channel starts blinking.

CH	FREQ	SYS	CH	FREQ	SYS
01	150	BG	07	229	BG
02	165	BG	08	237	BG
03	195	BG	09	355	BG
04	205	BG	10	365	BG
05	213	BG	11	374	BG
06	221	BG	12	384	BG

[Δ/∇] : FINE TUNING
[OK] : SELECT SYSTEM
[MENU] : EXIT

4 Perform tuning

Press **PR** Δ/∇ until the picture becomes clearer, then press **OK** or \triangleright .

- Repeat steps **3** and **4** as necessary.

5 Return to normal screen

Press **MENU**.

TV System Selection — When you see the picture but the audio can't be heard or sounds unnatural

1 Access Tuner Set screen

Perform step **1** of “Auto Channel Set” (☞ 14).

2 Access channel list

Press **PR** Δ/∇ to place the pointer next to “CH EDIT”, then press **OK** or \triangleright .

3 Select channel

Press **PR** Δ/∇ until the channel you want to change its TV system begins blinking, then press **OK** three times.

- The “SYS” display for that channel starts blinking.

CH	FREQ	SYS	CH	FREQ	SYS
01	150	BG	07	229	BG
02	165	BG	08	237	BG
03	195	BG	09	355	BG
04	205	BG	10	365	BG
05	213	BG	11	374	BG
06	221	BG	12	384	BG

[Δ/∇] : SELECT SYSTEM
[OK] : OK
[MENU] : EXIT

4 Select TV system

Press **PR** Δ/∇ to select the appropriate TV system (BG \rightarrow DK \rightarrow I).

- Repeat steps **3** and **4** as necessary.

5 Return to normal screen

Press **MENU**.

Specifications

GENERAL

Power requirement	
Rating	: AC 110 V – 240 V~, 50 Hz/60 Hz
Operating	: AC 90 V – 260 V~, 50 Hz/60 Hz
Power consumption	: 14 W
Temperature	
Operating	: 5°C to 40°C
Storage	: -20°C to 60°C
Operating position	: Horizontal only
Dimensions (W x H x D)	: 360 mm x 94 mm x 265 mm
Weight	: 2.7 kg
Format	: VHS standard
Maximum recording time	
(SP)	: 240 min. with E-240 video cassette (PAL/MESECAM)
	: 160 min. with T-160 video cassette (NTSC)
(LP)	: 480 min. with E-240 video cassette (PAL/MESECAM)
(EP)	: 480 min. with T-160 video cassette (NTSC)

VIDEO/AUDIO

Signal system	: PAL-type colour signal and CCIR monochrome signal, 625 lines 50 fields
	: NTSC colour and EIA monochrome signals, 525 lines/60 fields
Recording system	: HR-V400AG/V401AS DA-4 (Double Azimuth) head helical scan system
	: HR-V207AG/V200AG/V201AS/V200AA Rotary 2 head helical scan system
Signal-to-noise ratio	: 45 dB
Horizontal resolution	: 250 lines (PAL/MESECAM)
	: 220 lines (NTSC)
Frequency range	: 70 Hz to 10,000 Hz
Input/Output	: HR-V400AG/V401AS RCA connectors (IN x 2, OUT x 1)
	: HR-V207AG/V200AG/V201AS/V200AA RCA connectors (IN x 1, OUT x 1)

TUNER/TIMER

TV channel storage capacity	: 99 positions (+AUX position)
Tuning system	: Frequency synthesized tuner
Channel coverage	
VHF	: (Low) 42 MHz – 175 MHz (High)175 MHz – 470 MHz
UHF	: 470 MHz – 870 MHz
Aerial output	: UHF channels (Adjustable E28 – E60)
Memory backup time	: Approx. 10 min.

ACCESSORIES

Provided accessories	: RF cable, Lithium battery CR2032, Infrared remote control unit, Conversion plug*
----------------------	---

*Not provided in certain areas.

Specifications shown are for SP mode unless specified otherwise. E. & O.E. Design and specifications subject to change without notice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>