

jWIN

DIGITAL PHOTO FRAME



Instruction Manual

JP-127

Please read this manual carefully before operating and save it for future reference.

Have a question? Please visit <http://www.jWIN.com>

USER SAFETY GUIDE

Instructions on Environmental Protection

Do not dispose of this product in the usual household garbage at the end of its life cycle; bring it to a collection point for the recycling of electrical and electronic appliances. This symbol on the product means the instructions for use or the packing will inform about the methods for disposal. The materials are recyclable as mentioned in its marking. By recycling, material recycling, or other forms of re-utilization of old appliances, you make an important contribution to protect the environment. Please inquire at your local community administration for the authorized disposal location.



Important Safety Warnings

1. To prevent fire or electric shock, do not expose the unit to rain or moisture.
2. Never attempt to open the cabinet. Always refer servicing to a qualified technician.

FCC regulations state that any change or modification to the equipment, not expressly approved by maker or its authorized parties, could void user's authority to operate this equipment.

USER SAFETY GUIDE

Important Safety Instructions

1. **READ INSTRUCTIONS** - All safety and operating instructions should be read before the appliance is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained in a secure place for future reference.
3. **HEED WARNINGS** - All warnings on the appliance and in the operating instructions should be observed.
4. **FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.
5. **WATER AND MOISTURE** - The appliance should not be used near water. For example: near a bathtub, kitchen sink, laundry tub, and/or swimming pool.
6. **HEAT** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
7. **POWER SOURCES** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
8. **CLEANING** - The appliance should only be cleaned with a dry cloth.
9. **OBJECT AND LIQUID ENTRY** - Care should be taken so that objects do not fall and liquids are not spilled into the device's openings.
10. **CARTS AND STANDS** - The appliance should be used only with a cart or stand that is recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn causing possible injury to the user and/or damage to the unit.



USER SAFETY GUIDE

Important Safety Instructions – Continued

11. **DAMAGE REQUIRING SERVICE** - The appliance should be serviced by qualified service professional when:
 - a. Objects have fallen into, or liquid has been spilled into the appliance's apertures.
 - b. The appliance has been exposed to rain.
 - c. The appliance has been dropped and suffered damage.
 - d. The appliance does not appear to operate normally, or exhibits a change in performance.
12. **SERVICING** - The user should not attempt to service the appliance beyond what is described in the user's operating instructions. All other servicing should be referred to qualified service professional.
13. **LEAD AND MERCURY** - This product may contain lead and/or mercury. Disposal of these materials may be regulated by your local authorities due to environmental considerations. For more detailed disposal or recycling information, please contact your local authorities or the EIA (Electronic Industries Alliance) – <http://www.eiae.org>

Additional Safety Instructions

- When not in use, keep your device in a safe place where it will not be bent or crushed.

USER SAFETY GUIDE

FCC Notice to U.S. Users

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Refer to 47 CFR Sec. 15.19.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Refer to 47 CFR Sec. 15.21.

USER SAFETY GUIDE

Industry Canada Notice to Canadian Users

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device. Refer to IC RSS 210 Sec. 5.11. The term "IC" before the certification or registration number only means that the registration was performed based on a Declaration of Conformity and that Industry Canada technical specifications were met. It does not imply that Industry Canada (IC) approved this equipment. Refer to Self-Marking 6(f) and RSP 100 Sec. 4.

GETTING STARTED

Thank you for purchasing the JP-127. Unpack the unit and make sure all the accessories are put aside so they will not be lost.

Digital photo frame with 7" TFT LCD widescreen

- Displays digital photos on 7" widescreen
- Supports JPEG files
- Reads various memory cards, such as SD, MMC, MS, and MS Pro
- USB 2.0 host
- Supports slideshow with multiple interval times per picture
- No computer or Internet required
- Rotate / Flip pictures horizontally or vertically

 
 
What's Included

- Digital Photo Frame
- AC Adapter
- Detachable Stand
- Instruction Manual
- Warranty Card



GETTING STARTED

Location of Controls

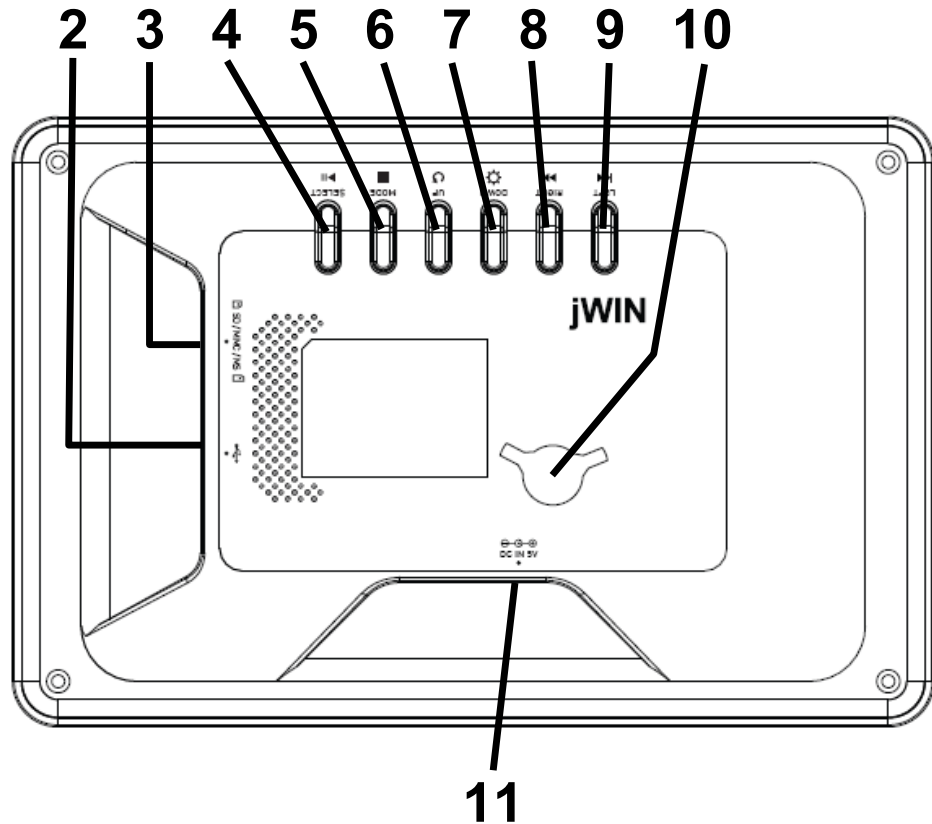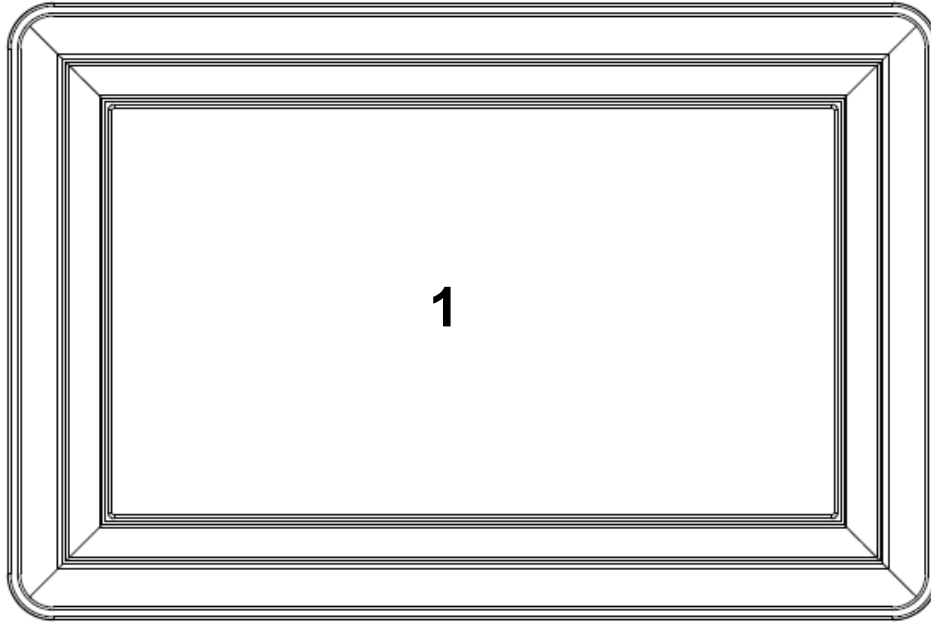


GETTING STARTED

Location of Controls

1. LCD screen
2. USB jack
3. SD/MMC/MS slot
4. PLAY/SEL/Pause/Confirm button
5. STOP/Mode button
6. UP/Rotate button (Rotates images 90°)
7. DOWN/Brightness button (Adjusts brightness level)
8. RIGHT/Next button
9. LEFT/Previous button
10. Stand connection (Stand included)
11. DC IN jack

Attaching the Stand

 1. Push the head of the stand into the connector on the back of the frame.
2. Rotate stand clockwise until it locks in place.
Frame can stand vertically or horizontally.

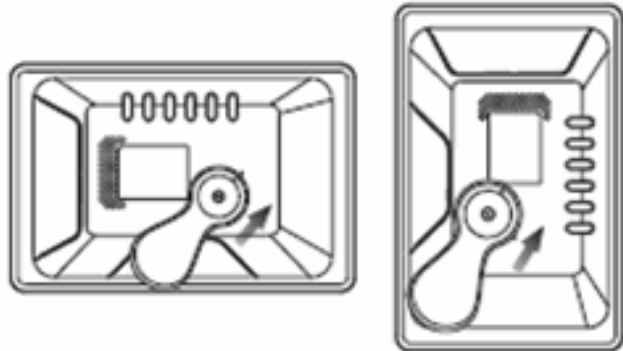

Connecting the Power

Attach the AC power adapter to the DC in jack on the lower back of the photo frame and plug the other end into a standard wall outlet.

 
OPERATIONAL INSTRUCTIONS

Using a Memory Card or USB

1. Insert a memory card (SD/MMC/MS only) into the card slot on the side of the frame. Be certain to line up the card correctly as indicated on the slot.
2. Insert a USB thumb drive into the USB jack on the side of the frame.
3. To remove the memory card pull straight out from the slot.
Note: This photo frame can only display JPEG format. If you wish to display photos from a different digital format, they must first be converted to JPEG in order to play on the JP-127.

Setup menu

1. Press the **LEFT/RIGHT** button and select “Setup” from the Main menu.
2. Press the **PLAY/SEL** button
3. Press the **UP/DOWN/LEFT/RIGHT** buttons to select an item.
4. Press the **PLAY/SEL** button to confirm.



Note: To leave the Setup menu, select “Exit Setup Menu” from the Setup menu or press the **MODE** button again.

OPERATIONAL INSTRUCTIONS

Setup Menu-Photo Setting

Interval Time	5 Sec., 15 Sec., 30 Sec., 1 Min., 5 Min., 30 Min., 1 Hour, 4 Hours, 12 Hours, 1 Day
Transition	No Effect, Random, Cover Up; Cover Down, Uncover Left, Push Right, Wipe Up, Wipe Down
Contrast	-4, -3, -2, -1, 0, +1, +2, +3, +4
OSD Language	English, French, German, Italian, Spanish, Portuguese, Dutch, Polish
Panel	Full Screen, Original(*)
Reset	Confirm (**)
Exit Setup Mode	

* Select "Original" for playing a conventional aspect ratio of images. Black bands appear on left and right screen with a landscape viewing, or top and bottom with a portrait viewing. Select "Full Screen" to play the photos in a full screen size.

** Selecting Reset will restore to the default settings.

OPERATIONAL INSTRUCTIONS

Viewing Photos and Slide Shows

- Displaying pictures bigger than 480 x 234 will take longer to load.
 - When the device is not operative for a few seconds, the screen saver will activate automatically. To stop the screen saver, press any button on the frame.
1. Connect the supplied AC adapter to the DC IN jack.
 2. Press the **LEFT/RIGHT** button to select "Photo" from the Main menu.
 3. Press the **PLAY/SEL** button and the slide show will begin to play.
- Note:** To pause the slide show, press the **PAUSE** button.

Thumbnail Mode

1. Press the **MODE** button to enter Thumbnail mode.
 2. Press the **LEFT/RIGHT** button to select the photo you wish to play.
 3. Press the **PLAY/SEL** button and the slide show will begin to play starting with the photo selected.
- Note:** Press **MODE** button again to return to the Main menu.

Rotating the Images

- Press the **LEFT/RIGHT** button to select the photo you wish to rotate and press the **Rotate** button.
- Notes :** Each press of the **Rotate** button will rotate the photo by 90° clockwise. All rotation effects will be cancelled when returning to the Main menu.

TROUBLESHOOTING GUIDE

No image is shown

- AC adapter may not be properly connected. Check to see that connections are correct and secure on the left side of the unit and in the wall outlet.
- Be sure the unit is turned ON. Slide the **ON/OFF** switch to the **ON** position.
- Files may not be in JPEG format. This unit only supports JPEG files.
- Memory card is not inserted. Insert memory card.
- Memory card may not be supported by this unit. Use only SD, MMC, or MS cards. Use of different may cause damage to the card or to this unit.
- File may not be on memory card. Make sure image is saved to memory card and re-insert card.

Image is distorted

- Some viewing modes slightly distort images. Press **MODE** button to change display.
- Actual image may be distorted. View image on your computer to see if it is a distorted image.

Image is inverted

- Image is upside down or sideways. Press the **LEFT/RIGHT** [**◀▶**] button repeatedly to rotate the image.

SPECIFICATIONS

- LCD Panel
 - Resolution: 480 (RGB) x 234
 - Aspect Ratio: 16:9
 - Diagonal Size: 7"
- Inputs & Outputs
 - Power Adapter (DC) Input Jack
- Memory Card Type
 - SD, MMC, MS, MS Pro (not included)
- Built-In USB port
 - USB 2.0 host
- Power Sources
 - AC Power Adapter
 - Input (AC): 100-240V 60/50Hz
 - Output (DC): 5V 1.0A
- Power Consumption: 3.82W

jWIN

TEL: 516-626-7188

FAX: 516-626-7105

website: www.jWIN.com

© 2007 jWIN Electronics Corp. All rights reserved. No portion of this printed material or product enclosed herewith including design, shape and graphics, may be reproduced or transmitted in any form without the expressed written consent of jWIN Electronics Corp. by any means, electronic or mechanical, including photocopying, recording or use of an information storage and retrieval system. Any unauthorized distribution or reproduction of this printed material or product, or any portion thereof, will be prosecuted to the fullest possible extent of the law.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>