 


jWIN

PORTABLE COMPACT DISC / MP3 PLAYER WITH ANTI-SHOCK 120SEC.

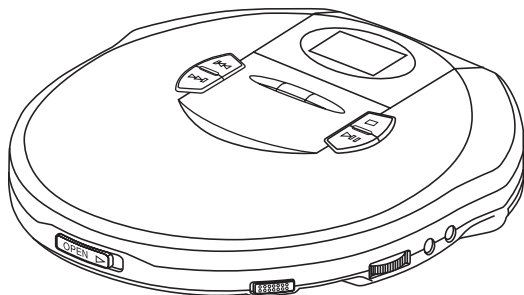 


INSTRUCTION MANUAL

PLEASE READ CAREFULLY BEFORE USING YOUR UNIT

MODEL: JX-CD910

LOCATION OF CONTROLS

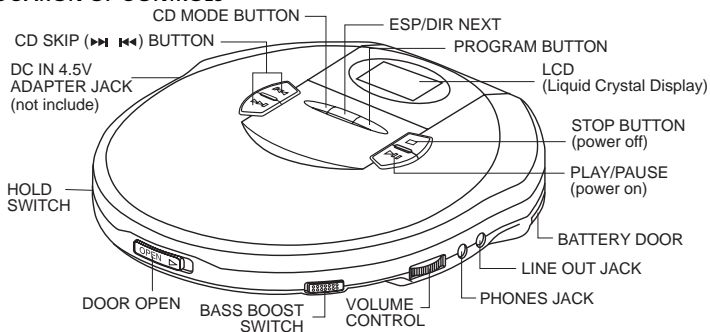

CONTROL OPERATION AND FUNCTION

POWER SUPPLY

Your CD player requires 2 size "AA" alkaline batteries (not included), or use the AC adapter (not included)

AC ADAPTER OPERATION

Plug one end of the AC adapter into the DC 4.5V jack, then plug the other end into AC wall outlet.

PRECAUTIONS ON USING THE AC ADAPTER

Put in correct specs for AC adapter. Please make sure you purchase the correct AC adapter. Use of an incorrect AC adaptor will damage the unit. Don't touch the AC adapter with wet hands. Doing so is dangerous, as this could result in an electric shock.

If the adapter plug is insert into the DC Jack of the Player, the power supply automatically switch to the AC/DC power and the batteries supply will be disconnected.

DC OPERATION

ALKALINE BATTERY INSTALLATION (NOT SUPPLIED)

Insert two AA batteries (not supplied) into the battery compartment on the bottom of the unit. Be sure to observe the proper polarity.

 
CHARGING AND USE OF RECHARGEABLE BATTERIES

This unit can fully recharge the specified rechargeable batteries, in approximately 15 hours. The rechargeable batteries (NOT supplied) should be recharged before they are used for the first time or they have not been used for a long period of time (over 60 days).

1. Open the battery compartment cover and insert two of the recommended rechargeable batteries, matching polarity. (1.2V 650mA).

ALL BATTERIES MUST BE OF RECHARGEABLE NICKEL-CADMIUM TYPE, OTHERWISE THE BATTERIES MAY EXPLODE OR LEAK.

2. Plug in the AC adapter. (not included)
3. Slide the charge switch to CHARGE position to start charging.
USE ONLY THE AC ADAPTER FOR CHARGING.
4. After 15 hours, please unplug the AC adapter and slide the recharge switch to normal position.

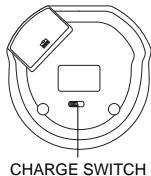


DO NOT CHARGE CONTINUOUSLY FOR 24 HOURS OR MORE. DOING SO CAN CAUSE THE PERFORMANCE OF THE RECHARGEABLE BATTERIES TO DETERIORATE.

NOTE: You may play DISC'S whilst charging the batteries.

If the operating time decreases drastically even when the rechargeable nickel-cadmium batteries are properly recharged, purchase a new set of rechargeable nickel-cadmium batteries. When charging for the first time or after a long time, playing time may be reduced. In this case, charge and discharge the batteries several times.

NOTE ON ALKALINE BATTERIES

1. When replacing the alkaline batteries, use two new batteries of the same type. Do not mix a used battery with a new one or mix different types of batteries.
2. When inserting the batteries, be sure to place the batteries as the sketch shown, mistakenly inserting even one with improper polarity will cause leakage and the unit will not play properly.
3. When not using the unit for an extended period of time, or not using the batteries for a long time, remove them to prevent possible acid leakage or corrosion resulting in damage to your player or personal injury such as skin burns.
4. Bear in mind that battery life expectancy is based upon playing mode. Maximum battery power consumption happens at maximum settings. If sound gets distorted or if the unit fails to switch tracks, your batteries are weak. Replace both batteries, or use AC adaptor. (not included)
5. Never charge, heat, disassemble, or throw batteries into a fire.
6. If the display shows the symbol "  ", this means your batteries are weak, replace them or use the AC adaptor.
7. If the display is blank - no numbers show when power is turned on, the batteries are dead.
Replace them or use the AC adapter.

AUTO POWER ON FUNCTION

The power turns on automatically when the PLAY/PAUSE button is pressed.

AUTO POWER OFF FUNCTION

The power turns off immediately after the disc compartment is opened.

When all the tracks on a disc have been played, or the Stop button is pressed, the power turns off automatically within 60 seconds if no button is pressed.

If you pressed the Stop button twice the power will turn off.

LISTENING WITH HEADPHONES

Connect the plug of the stereo headphone into the headphone jack (marked phones) before use the unit.

CAUTION: *Hearing experts advise against exposure to continuous extended play at loud volume levels while using headphones, possible hearing loss may result. If you experience a ringing in the ears, reduce volume or discontinue use. We want you listening for a life time.*

PLAYING A DISC

Be sure to reduce the volume before plugging in or unplugging the headphones/earphones

1. Plug the cord of headphone/earphone into the PHONES jack.
2. Slide the Door Open button to open the CD door.
3. Hold the disc with the label side up and press it onto the spindle until it "clicks" into place.

- Close the disc compartment, press PLAY/PAUSE button, the disc will begin to spin, the display will indicate "CD 45 sec." then change to "CD MP3" and "MP3" flash in the display, a while later will play the first song and CD will indicate in the display.
- Adjust the volume as desired.
- Set the BASS BOOST function as desired.
- To stop play temporarily, press the PLAY/PAUSE button.
 - The elapsed playing time flashes in the display.
 - Press the PLAY/PAUSE button again to resume.
- In CD mode, if you are using your set in a car or bumpy location, press the ESP/DIR NEXT button.

Note: The ESP/DIR NEXT button has two functions. In CD mode, the button is ESP button and MP3 mode the button is DIR NEXT BUTTON.
- To stop play, press the Stop Button, and the power turns off automatically after a while.

 
Note: In normal disc mode, press the skip button to skip the track. In MP3 mode, press the DIR NEXT button to select the album, then press the skip button to skip the desired track of the album.

PLAYING A MP3

- Insert a MP3 into the disc compartment and close the door.
- Press the Play/Pause Button. "CD 45 sec." will appear in the display and then change to "CD MP3", and "MP3" flash in the display. During playing, the MP3 and ESP will appear the display.
- Press the DIR NEXT button to select the next album.
- Press the Skip button the select the desire songs of this album you want to listen.
- Adjust the volume as desired.
- Set the bass boost function as desired.
- To stop play, press the Stop Button.

TRACK SEARCH


- Press the ►► and ◀◀ button during play to skip to the desired track.
- Press the ►► to skip to the next track on the disc.
- Press the ◀◀ to skip to the beginning of the track currently playing.
- Press the ◀◀ twice or more to skip to previous tracks.



FORWARD/REVERSE SEARCH

Press and hold the skip (►► ◀◀) button during play to scan the disc at high speed. When the desired section of the disc is found, release the button. Normal play will resume.

 - ----forward ◀◀ ----reverse
- If you press and hold the skip button (►►) while playing, it will scan the current playing track forward at high speed.
- If you press and hold the skip button (◀◀) while playing, it will scan the current playing track backwards at high speed.



BASS BOOST

Use the Bass Boost function to increase the bass output when listening with headphones. During bass boost on setting, sometimes, you may hear some distortion, adjust the volume control to a lower level when using the bass boost feature.

PROGRAMMED PLAY

The tracks on the disc can be programmed for play in any order. (Up to 64 tracks can be programmed.)

NOTE: Programming is possible in the STOP mode.

1. Press the PROGRAM button in the STOP MODE. "00P-01" appears in the display.
2. Select the first track to be programmed using **⏮** or **⏭** button.
3. Press the PROGRAM button again to enter the track selected in to the memory.
4. Repeat steps 2 to 3 to Program other tracks till you finish.
5. After programming is finished. Press the PLAY/PAUSE button to start play according to your order.
6. The play stops automatically when all programmed tracks have been played.

Note: In program mode, you can use the repeat and intro play mode. But you can't use random play mode in order to use this function, you have to clear the memory.

In case of MP3 Disc.

All procedure is same as normal Disc.

But if you have directory in your disc you have to select directory and track both.

1. Press the PROGRAM button in the STOP mode.
Then "00 00P-01" appears in the display and first "00 (DIRECTORY NO)" is blinking.
2. Select directory no by using **⏮** or **⏭** button.
3. Press PROGRAM button again then second "00P(TRACK NO)" is blinking.
4. Select TRACK NO. by using **⏮** or **⏭** button.
5. Press PROGRAM button again then first song you wanted is entered in the memory.
6. You can program up to 64 songs with above method.

THE HOLD FUNCTION

It is useful during playing, the function will lock the key on the panel to protect the mistake in the playing.

During playing slide the HOLD switch to "ON" position, the "HOLD" will appear in the display, the key on the panel will be locked, the panel key is disabled.

Slide the HOLD Switch to "OFF" position to stop the function.

THE CD MODE BUTTON

This button can be pressed during play to accomplish many different kinds of play.


In CD playing mode:

- Once for single track repeat. 
- Twice for all tracks repeat.  ALL
- 3 times for INTRO play.
- 4 times for RANDOM (RND) play.
- 5 times for return to normal play.

In MP3 playing mode:

- Once for single track repeat. 
- Twice for all album repeat.  ALBUM
- 3 times for disc repeat.  ALBUM ALL
- 4 times for INTRO play.
- 5 times for RANDOM (RND) play.
- 6 times for return to normal play.


SINGLE TRACK REPEAT

Press the CD Mode button once during play, and the "  " will appear in the display. The current track will be played over and over again until Stop button is pressed.

ALBUM REPEAT

In MP3 playing mode, press the CD mode twice, the "  ALBUM " will appear in the display. the all tracks of the album will play again and again, till you cancel this function.

ALL TRACKS REPEAT/CONTINUOUS PLAY

Press the CD Mode button till "  ALBUM ALL " will appear in the display. The all tracks on disc will be played over and over again until Stop button is pressed.

INTRO PLAY

Plays the first 10 seconds of all tracks once, then stops. This is useful if you do not remember the song titles.

1. Press the CD Mode button till the 'INTRO' appear in the display.
2. The first 10 seconds of the tracks will be played once, then stops.
3. To stop the intro play and start the normal play. Press the CD Mode button twice more or press the stop button.

Note: If you press the button during playing, it will start the intro play after the songs finished.

RANDOM OR SHUFFLE PLAY

Plays all the tracks in random order.

1. Press the PLAY/PAUSE button and wait for a while.
2. Press the CD Mode button till 'RND' appear in the display during playing.
3. The display will show the first track the player select.
4. Press the skip button to skip the next random song.
5. To stop the function, press the CD Mode button once more or press the Stop button.

THE ANTI-SKIP MEMORY FUNCTION

The digital anti-skip function uses semiconductor memory to prevent the sound from skipping when the unit is subjected to shocks and vibration during play.

- In MP3 playing mode, the electronic anti-shock function is always functional while playing and the "ESP" appear in the display.
- In CD mode, when the ESP button is pressed during play. The "ESP" indicator appears in the display and the digital anti-skip function turns on. The digital data equivalent to approximately 45 sec. Music is stored in a read head memory buffer before it is decoded and played. When the unit is subjected to a shock during play, the stored data will be decoded to protect the sound stop or skip. Once the pickup returns, the new data will be read to store in the memory.

 
Note: The ESP/DIR NEXT button has two functions. In CD playing mode, the button is ESP button. In MP3 playing mode, it is DIR NEXT button.

CONNECTING TO HOME STEREO SYSTEMS

The line out jack is made to accept a stereo mini plug (3.5mm). By using a commercially available audio line cable, simply connect the cable's mini plug to line out jack on your player, and the other appropriate end to CD/AUX input(s) of your home stereo system.

NOTE: Always switch the power off before making any connections between the player and any other set.

NOTE: The volume control of the player become inoperable when the line out jack is used. Adjustments are made on your audio system.



CLEANING

CLEANING THE PICKUP LENS

A dirty lens will cause sound skipping. If the lens is very dirty, the player may not work. Open the CD door and clean the lens as follows:

- FINGERPRINTS ON LENS

Use a cotton swab starting in the middle and working to the outside edge, pay attention in doing this operation or the pick up lens could be damaged.

CLEANING THE CABINET

Wipe with a soft cloth. If the cabinet is very dirty, dampen (not dripping wet) the cloth with a weak solution of soap water, and then wipe clean.

HANDLING COMPACT DISCS

1. This unit is designed to play compact discs bearing the identification logo to the right. Discs that do not carry this logo may not conform to the CD standard and may not play properly.
2. Dirty, scratched or warped discs may cause skipping or noise. Pay attention to the following: Handle the disc only by the edges. To keep the disc clean, do not touch the surface of the disc.
3. Discs should be returned to their cases after use to avoid serious scratches that could cause the laser pickup to skip.
4. Do not expose discs to direct sunlight, high humidity, or high temperatures for extended periods. Prolonged exposure to high temperatures can warp the disc.
5. Do not stick or write anything on either side of the compact disc. Sharp writing instruments, or the inks used in some felt-tip pens, may damage the surfaces of the disc.
6. Always place the compact disc to be played in the CD compartment with the label facing upward. CD can be played on only one side.



CLEANING DISCS

1. Fingerprints should be wiped from the surface of the disc with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris, so gently wiping them with cloth should remove most of the particles. Wipe in a straight motion from the inside to the outside of the disc.
2. Never use such chemicals as record cleaning sprays, anti-static sprays, benzene or thinner to clean compact disc. Such chemicals can damage the plastic of the disc.
 - The unit will not play a disc that has been inserted upside down, or discs that do not conform to the Compact Disc standard. Also, the unit might not play discs that are scratched, soiled or carry fingerprints.
 - Both 8cm and 12cm discs can be played in this unit.



TECHNICAL SPECIFICATIONS

CD PLAYER SECTION

Frequency response	20Hz-20KHz
Wow and flutter	below measure limits
Sampling frequency	44.1KHz
D/A converter	1-bit
Error correction method	CIRC
Pick-up	optical 3-beam semiconductor laser (780 nM wavelength)

GENERAL

Power supply DC	3V using two "AA" batteries AC/DC adaptor 220V - 4.5V
Dimensions	138mm(W)x138mm(D)x29.5mm(H)
Weight	212 grams

TROUBLE SHOOTING GUIDE

SYMPTOM	CAUSE	SOLUTION
CD Player will not turn on.	Dead or weak batteries.	Replace both batteries.
	The AC adapter not connected properly.	Check the AC adapter connection at AC outlet and side of set.
Disc will not play.	Disc inserted incorrectly	Re-insert disc with label side facing up.
	Defective or wrong type compact disc.	Try another audio compact disc.
	CD door not closed.	Close lid securely (push down left corner of door)
	Moisture has condensed inside the CD deck.	Take out the CD and leave the CD door open for about an hour to dry the moisture condensation.
No sound from headphones	Headphone plug not inserted properly.	Re-insert headphone plug into the headphone jack (marked phones).
	Headphone plugged into the line out jack.	Plug headphone into the headphone jack (not the line out jack).
	The volume control set to minimum	Increase the volume.
	Weak batteries.	Replace with fresh batteries or use the AC adapter.
	Defective compact disc.	Try another compact disc.
Sound is skipping	The compact disc or lens is dirty.	Clean or replace the compact disc or clean the lens with a camera brush or blower.
	Too much movement of the CD player.	Reduce movement of CD player.
Sound is distorted	Music is too loud.	Decrease the volume control level.
	Weak batteries.	Batteries are getting weak, replace both batteries or use the AC adapter.
	Bass boost is on and music is too loud.	Lower volume control or slide bass boost switch to off.
Tracks do not change or set does not play normally	Batteries are too weak and the battery symbol will show in display	Replace both batteries with fresh alkaline batteries, or use a AC Adapter.
Buttons do not work	Electronic or static error caused circuitry to lock.	Remove batteries and AC adapter. Wait a few seconds and re-insert. Make sure batteries are fresh or adapter has power.
	The HOLD function is on.	Slide the HOLD switch to OFF position.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>