

jWIN

1.5" Color LCD Video MP3 Player with FM Radio



Instruction Manual JX-MP201 (202, 204)

Please read this manual carefully before operating and save it for future reference.

Have a question? Please visit <http://www.jWIN.com>

USER SAFETY GUIDE

INSTRUCTIONS ON ENVIRONMENTAL PROTECTION




Do not dispose of this product in the usual household garbage at the end of its life cycle; bring it to a collection point for the recycling of electrical and electronic appliances. This symbol on the product means the instructions for use or the packing will inform about the methods for disposal. The materials are recyclable as mentioned in its marking. By recycling, material recycling, or other forms of re-utilization of old appliances, you make an important contribution to protect the environment. Please inquire at your local community administration for the authorized disposal location.

Important Safety Instructions

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the appliance is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained in a secure place for future reference.
3. **HEED WARNINGS** - All warnings on the appliance and in the operating instructions should be observed.
4. **FOLLOW INSTRUCTIONS** - All operating and use instructions should be followed.
5. **WATER AND MOISTURE** - The appliance should not be used near water, such as near a bathtub, kitchen sink, laundry tub, and/or swimming pool.

USER SAFETY GUIDE

Important Safety Instructions – Continued

6. **HEAT** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
7. **POWER SOURCES** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
8. **CLEANING** - The appliance should be cleaned with a dry cloth.
9. **OBJECT AND LIQUID ENTRY** - Care should be taken so that objects do not fall and liquids are not spilled into the device's openings.
10. **CARTS AND STANDS** - The appliance should be used only with a cart or stand that is recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn. 
11. **SERVICING** - The user should not attempt to service the appliance beyond that described in the user's operating instructions. All other servicing should be referred to qualified service professional.
12. **DAMAGE REQUIRING SERVICE** - The appliance should be serviced by qualified service professional when:
 - a. The power-supply cord or plug has been damaged.
 - b. Objects have fallen into, or liquid has been spilled into the appliance's apertures.
 - c. The appliance has been exposed to rain.

USER SAFETY GUIDE

Important Safety Instructions – Continued

- d. The appliance has been dropped and suffered damage.
 - e. The appliance does not appear to operate normally, or exhibits a change in performance.
13. **BATTERY USAGE** - To prevent battery leakage, which may result in bodily injury, property damage or damage to the unit, follow these instructions:
14. **LEAD AND MERCURY** - This product may contain lead and/or mercury. Disposal of these materials may be regulated by your local authorities due to environmental considerations. For more detailed disposal or recycling information, please contact your local authorities or the EIA (Electronic Industries Alliance) – <http://www.eiae.org>

FCC Notice (USA)

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

USER SAFETY GUIDE

Do not change or modify this equipment. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important Notes on Hearing

Your hearing is very important to you and to us. Please take care when operating this equipment. We strongly recommend you to follow the guidelines below in order to prevent possible damage to or loss of hearing.

After continuously listening to the loud sounds, hearing will adapt and will give the impression that the volume has been reduced. What seems normal may, in fact, be harmful. To guard against this **BEFORE HEARING ADAPTS**, set the volume at a low level and slowly increase the volume level until sound can be heard comfortably and clearly without distortion. Damage to hearing is accumulative and is irreversible. Any ringing or discomfort in the ears indicates that the volume is too loud. Once a comfortable listening level is established, **DO NOT INCREASE THE VOLUME LEVEL FURTHER.**

In the use of headphones, please take more caution. Hearing experts say that continuous listening to loud music can damage hearing, especially when using headphones.

OPERATING INSTRUCTIONS

Thank you for purchasing the JX-MP201 (202, 204). Unpack the unit and make sure all accessories are put aside so they will not be lost.

1.5" Color LCD Video MP3 Player with FM Radio

- Super-slim, simple and stylish design
- 1.5" color liquid crystal display (LCD)
- Built-in flash memory (1GB / 2GB / 4GB)
- File storage
- Integrated FM stereo radio (87.5-108MHz)
- USB 2.0 for fast file transfer
- Supports MP3, WMA, SMV, BMP, JPEG and TXT files
- Photo viewer
- Portable E-book reader (TXT file support)
- Built-in digital voice / FM radio recorder
- Supports multiple languages
- Supports ID3 tag and lyric display
- 6 preset EQ (Normal, Rock, Pop, Jazz, Classical, Bass)
- Built-in rechargeable 180mAh Li-Ion polymer battery

 
What's Included

- USB Cable
- Stereo Earphones
- Instruction Manual CD
- Quick Start Guide



OPERATING INSTRUCTIONS

Location of Controls

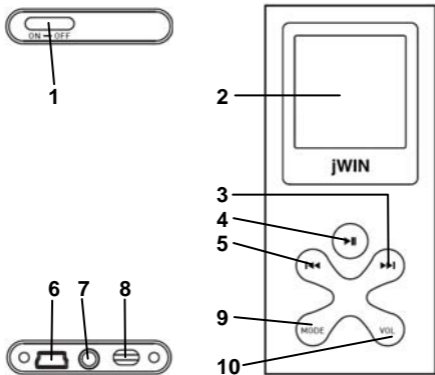

1. Power On/Off Switch	6. Mini USB Jack
2. Color LCD Screen	7. Headphone Jack
3. [▶▶] Button	8. Lanyard Loop
4. [⏏] Button	9. [MODE] button
5. [◀◀] Button	10. [VOL] button

OPERATING INSTRUCTIONS

General Instructions

ON/OFF: POWER ON/OFF;

1. To turn the power on, slide [**Power ON/OFF**] switch to the **ON** position, Short press [**▶||**] to turn on or begin to play the music and pause. Press and hold to power off.
2. Short press [**▶▶**] to skip to next song, page down or browse next picture.
3. While in play pause or playing modes, press [**▶▶**] and hold to fast forward;
4. Short press [**◀◀**] to skip to previous song, turn page upwards and browse previous picture.
5. During play pause or playback, press [**◀◀**] and hold [**◀◀**] to fast backward;
6. Short press [**VOL**] to set up A—B repeat in during music and audio playback. During music and voice, stop or pause, short press [**VOL**] to realize the function of repeat modes shift; During Music playback, press and hold [**VOL**] to activate volume button and press [**▶▶**] or [**◀◀**] to adjust volume level.
7. Short press [**MODE**] to enter into all levels of menus; press and hold for approximately two (2) seconds [**MODE**] to exit.

OPERATING INSTRUCTIONS

Music Playback

1. In the main menu, select music, short press **[MODE]** to enter.
2. Short press **[▶||]** to play the file.
3. Press **[MODE]** to enter into the file list.
4. Press **[▶▶]** or **[◀◀]** to select the required music file to play.
5. Press **[▶||]** to confirm and then begin to play.
6. Press and hold **[MODE]** to exit to main menu.



Video Playback

1. In the main menu, press **[◀◀]** or **[▶▶]** to select VIDEO
2. Press **[MODE]** to enter.
3. Short press **[◀◀]** or **[▶▶]** to select the video file.
4. Short press **[▶||]** to play the file.


The player can play the video files of SMV format, please convert the video files into SMV format through video conversion tools.



OPERATING INSTRUCTIONS

Photo Display

1. In the main menu, press **[◀◀]** or **[▶▶]** to select PHOTO.
2. Press **[MODE]** to enter.
3. Press **[◀◀]** to browse previous page, press **[▶▶]** to browse next page
4. Press **[MODE]** to enter the file list.
 - a. Press **[◀◀]** or **[▶▶]** to select the pictures you need to browse, press **[▶|]** to playback
 - b. Press and hold **[MODE]** to exit the pictures.
5. When entering in Picture browse mode, press **[▶|]** to enter in auto page up/page down

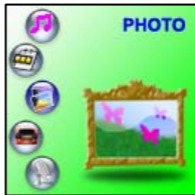 

Listening to the Radio

1. In the main menu, press **[◀◀]** or **[▶▶]** to select FM RADIO
2. Press **[MODE]** to enter
When no broadcast stations are entered, the system will go to auto search and save the stations automatically after the search.
3. While listening to the radio, press **[▶|]** to select "Listen" or "Seek".
4. Press and hold **[VOL]** to record.



OPERATING INSTRUCTIONS

Listening to the Radio-continued

5. Press **[MODE]** to save the recording.
6. Press and hold **[MODE]** to save the radio station in Seek mode.
7. Press **[◀◀]** or **[▶▶]** to select the saved station.
8. Press **[MODE]** to confirm.
9. Press and hold **[MODE]** to delete the radio station in Listen state.
10. Press **[MODE]** to exit to main menu.

Recording

1. In the main menu, press **[◀◀]** or **[▶▶]** to select MicRecord.
2. Press **[MODE]** to enter
3. While recording, short press **[▶||]** to pause the recording.
4. Short press **[▶||]** again to continue the recording.
5. Press **[MODE]** to save and exit the recording mode.



OPERATING INSTRUCTIONS

Recording-continued


Playing the recording

1. In the main menu, press **[◀◀]** or **[▶▶]** to select **VOICE**.
2. Press **[MODE]** to enter.
3. Press to **[◀◀]** or **[▶▶]** to select a file.
4. Press the **[▶|]** to play the file. (The basic operation please refer to the "Music Playback" section of this manual)



E-Book

1. In the main menu, press **[◀◀]** or **[▶▶]** to select E-book.
2. Press **[MODE]** to enter.
3. Press **[◀◀]** or **[▶▶]** to select the required file.
4. Press **[▶|]** to confirm.

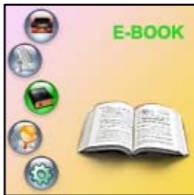 

Bookmark memory

- When browsing E-book, if you exit in a certain paragraph, then the player will recollect the position of last file automatically; when you browse it next time, it will directly begin to browse the paragraph which is exited last time.

Automatic browse

- When entering in E-book browse, press **[▶|]** to enter in auto page up/page down

OPERATING INSTRUCTIONS

Settings

1. In the main menu, press **[◀◀]** or **[▶▶]** to select setup.
2. Press **[MODE]** to enter.
 - **Play mode :**
Normal, Repeat
One, Repeat all,
Shuffle Repeat ,
Preview
 - **EQ:** Normal, Rock, Jazz, Classical, Pop, Bass
 - **Contrast:** Sets the LCD
 - **Display:** 1min, 2min, 5min, always
 - **Power:** Disable, 1min, 2min, 5min, 10min.
 - **Record Setting:** Sets the record rate
 - **Lrc:** Lrc ON Lrc OFF
 - **Languages:** Changes the desired language settings on the player.
 - **About:** Shows the player the information of Version and memory
 - **Exit:** Return to main menu.



OPERATING INSTRUCTIONS

Deleting Files

1. In the main menu, press **[◀◀]** or **[▶▶]** to select Delete.
2. Press **[MODE]** to enter.
 - Select the file you want to delete by pressing **[◀◀]** or **[▶▶]**.
 - Press **[▶|]** to enter Delete File menu to select the file to delete.
 - Press **[▶|]** again to enter Delete submenu.
 - Select "Yes" or "No" by pressing **[◀◀]** or **[▶▶]** key.
 - Press **[▶|]** key to confirm.



You can delete the files (Music, Movie, Photo, E-book)

OPERATING INSTRUCTIONS

Converting video files into SMV format

When playing video files, you need to convert the files into SMV format. AVI, DAT, WMV and other formats of files can be converted into SMV format. The specific procedures are as follows:

- 1) Run the VIDEO CONVERSION TOOL



- 2) Select the video files to be converted.



OPERATING INSTRUCTIONS

Converting into SMV format-continued

- 3) Select FULL SCREEN, press CONVERSION button and begin to convert the files into SMV files. (The size please select 128*128)



USB connection

Connect MP3 to the computer, you can find folder include: FM (save fm record file), VOICE (save mic record file), PHOTO (save bmp/jpg file), EBOOK (save text file), VIDEO (save video file), music file save to root.

TROUBLESHOOTING

- **No power:** Please check if it is power ON
- **No sound from the earphone:** 1. Make sure the volume level is not set to "0". 2. Check if the earphone is properly connected to the player. 3. Check if the music file is corrupted. Try again with other music files.
- **Error message:** "Warning File Format Error": Please try the following: Turn the Power ON/OFF safety switch to OFF. Connect the player to the PC and remove the file that is corrupted or non-standard audio/video file on the player. Disconnect the player from the computer and try again.
- **What is the common file type that is causing the "Warning File Format Error" error?** When any file type is not supported by the player is detected, the error message will occur. If this error occurred on a video file, try to convert the video file by using the SMV Converter and try again.
- **Cannot transfer music:** 1. Check if the USB cable is working properly. 2. Make sure the product drivers has been installed correctly (if require). 3. Check if the computer USB port is working properly. Restart the computer and try again.

SPECIFICATIONS

- Memory: (1GB / 2GB / 4GB), Flash
- Display: 1.5" full color LCD (65k colors)
- Audio frequency: 20 – 20kHz
- Audio Output: 5mW (L) + 5mW (R)
- Supported file format: MP3, WMA, SMV, BMP, JPEG, TXT
- Connectivity
 - 3.5mm stereo headphone jack
 - Mini USB port
- Power Sources
 - Built-in rechargeable Li-Ion polymer battery
- Frequency Range:
 - FM: 87.5MHz – 108MHz
- Unit Dimensions (W x H x D): approx. 1.57" x 3.54" x 0.35" (40mm x 90mm x 9mm)
- Unit Weight: Approx. 0.064 lbs (0.029 kg)

* Features and specifications are subject to change without prior notification. Dimensions and weights are approximate.



TEL: 516-626-7188

FAX: 516-626-7105

website: www.jWIN.com

© 2008 jWIN Electronics Corp. All rights reserved. No portion of this printed material or product enclosed herewith including design, shape and graphics, may be reproduced or transmitted in any form without the prior written consent of jWIN Electronics Corp. by any means, electronic or mechanical, including photocopying, recording or use of an information storage and retrieval system. Any unauthorized distribution or reproduction of this printed material or product, or any portion thereof, will be prosecuted to the fullest possible extent of the law.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>