


# jWIN<sup>®</sup>

## JS-P75 Portable Speaker System Instruction Manual

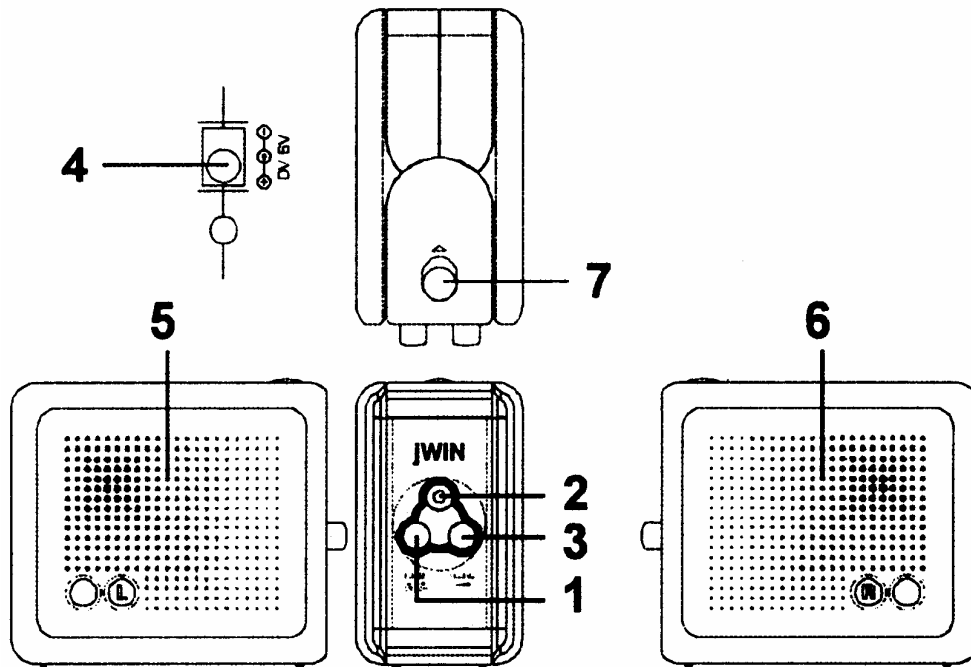

1. POWER ON/OFF BUTTON
2. POWER-ON LED
3. VOLUME CONTROL KNOB
4. DC POWER INPUT JACK  
(on rear and viewable with the unit open)
5. LEFT SPEAKER
6. RIGHT SPEAKER
7. BATTERY DOOR RELEASE

JSP75\_V10M10\_EN\_01112005

## INTRODUCTION

The JS-P75 is a conveniently-packaged portable speaker system suitable for CD players, MP3 players, portable cassette decks, and personal computers. While the unit typically operates with the speakers separated, it can be closed for ease of carrying, and can also be operated while closed, requiring very little desk space (see POWER SOURCE, below).

## POWER SOURCE

The JS-P75 can be powered by either four (4) AAA batteries or by an AC power adapter (purchased separately, see below).

- If an AC power adapter is used (see Using an AC Adapter, below), the unit cannot be operated when in the closed condition.

The numbers in parentheses, below, are used to identify product parts. Refer to the product diagram.

### Installing Batteries

1. Push the BATTERY DOOR RELEASE (7) in the direction indicated by the arrow, and lift the battery compartment cover.
2. Insert 4 AAA size batteries into the compartment, following the polarity markings (+ and -) on the case.
3. Gently close the battery compartment door until it snaps shut.

### Using an AC Adapter

1. Your JS-P75 will accept an AC adapter, as long as it's capable of providing 6 Volts DC with at least 500 milliamps of current (6 VDC @ 500mA). The adapter's DC plug must also fit into the JS-P75's DC POWER INPUT JACK (4), and provide the polarity shown on the unit. AC adapters of this type may be purchased at most consumer electronics stores.
2. Plug the AC adapter's DC plug into the unit's DC POWER INPUT JACK (4), and then plug the AC adapter into a convenient wall outlet.

### Important

- For the JS-P75 to operate on installed batteries, the AC adapter's DC plug must be disconnected from the unit's DC POWER INPUT JACK (4).
- When the unit will not be used for long periods, it's best to remove the optional AC adapter from the wall outlet and the batteries from the JS-P75.

## USING THE SPEAKERS

1. Gently open the unit by separating the LEFT (5) and RIGHT (6) SPEAKERS.
2. Depress the POWER ON/OFF BUTTON (1). The POWER-ON LED (2) will light.
3. Plug the black Audio Plug from the JS-P75 into the Audio Output jack of the chosen audio device (e.g. CD Player, MP3 Player, Cassette Deck, PC) to which you wish to listen. The jack on the audio device must be a standard 3.5mm (1/8") stereo output jack.
4. Play the audio device and adjust the VOLUME CONTROL KNOB (3) on the JS-P75 for the desired listening level.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>