


# KAMBROOK

## Radiant Heaters



# KNOW YOUR RADIANT HEATER

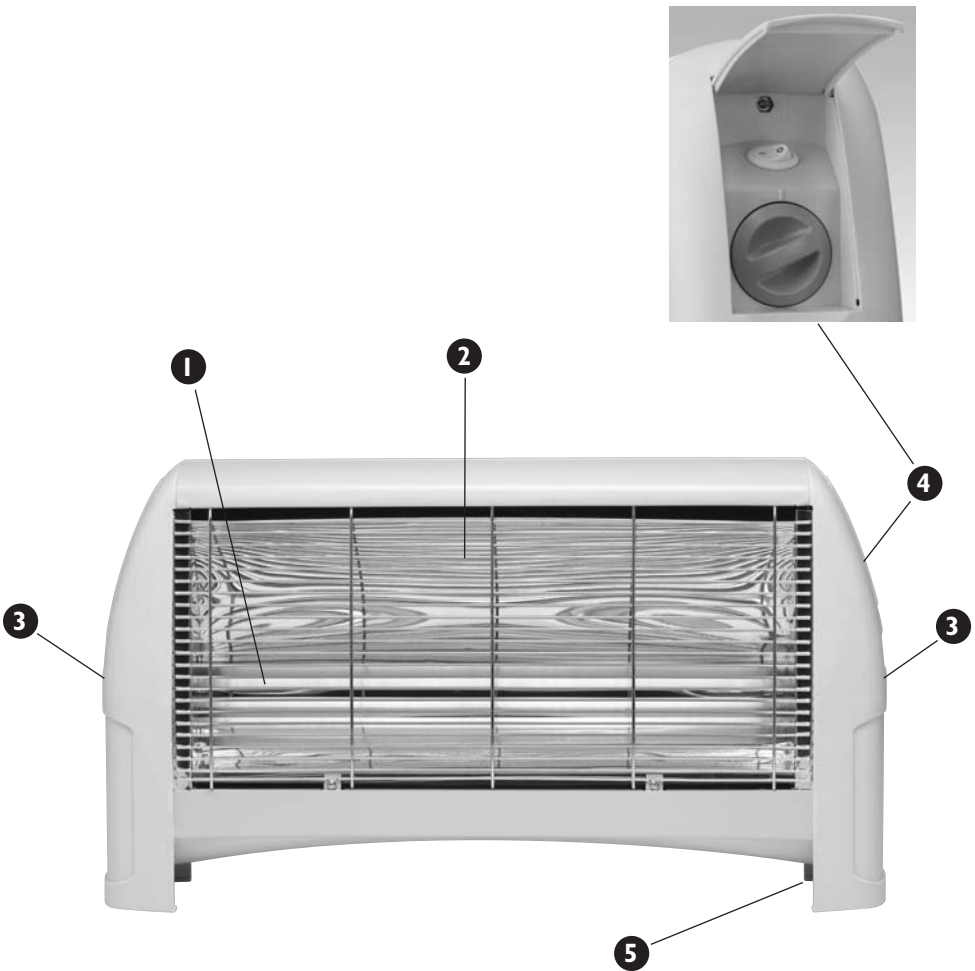

(KRH240 pictured)

1. Heater elements
2. Safety grill
3. Carry Handles
4. Control dial
5. Tip over switch

**BEFORE USING YOUR RADIANT HEATER, PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE.**

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed, including the following:

- Keep combustible materials such as curtains/drapes and other furnishing away from heater.
- The heater must NOT be located immediately below a socket outlet.
- Extreme caution is necessary when this heater is used by or near children or invalids.
- Young children should be supervised to ensure they do not play with the heater.
- Important – this heater is intended for floor use only. Do not mount on ceiling or walls.
- Do not leave heater unattended. Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use.
- Do not operate any heater with a damaged cord or plug, or if heater has been dropped or damaged in any manner. Return heater to your nearest service centre for examination, electrical or mechanical adjustment or repair.
- Do not use outdoors.
- This heater is not intended for use in wet or moist locations such as bathrooms or laundry areas. DO NOT IMMERSE or allow liquids to be spilt on heater.
- Place unit well clear of heat sensitive surfaces and where necessary place on a suitable stable inflammable surface.
- Do not run the cord under carpeting or cover the cord with rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
- To prevent a possible fire, allow ample space around the heater (at least 1.7m at front and 0.5m at the rear, top and sides) and do not block air inlets or outlets in any manner. Check the elements and grill from time to time for accumulated dust.
- To disconnect heater switch the control setting to the OFF position, then switch off at the power outlet prior to removing the plug from its outlet.
- Do not insert or allow foreign objects to pass through the element guard as this may cause an electric shock, fire or damage the heater.
- Do not touch hot metal surfaces.
- Do not allow power cord to contact hot metal surfaces.
- Set the control setting to the OFF position then Unplug and allow heater to cool down before cleaning or storing.
- The heater will not operate unless it is placed on a flat level surface as it is fitted with a tilt switch.
- Do not use the heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Use this heater only as described in this instruction manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury and voids all warranties.
- Always move the heater with the handle provided.
- Do not operate the heater with the cord hanked or wound around any part of the heater or in contact with heated surfaces of the heater.

## HOW TO OPERATE

1. Remove your heater from the packaging, unwind the cord to its full length.
2. Read all the instructions fully before plugging the unit in.
3. Place the heater on a level surface in a stable position. Make certain the heater element control switch is in the OFF position.
4. Remove any element support Guards (ie Foam or paper packing).
5. Plug the power cord in a 240Volt outlet, and switch the power outlet on.
6. The heater control panel is located at the right hand side of the unit, underneath the plastic flap (for safety).
7. To operate the control dial, lift the plastic flap. Use the control dial to switch the heater to the desired setting.

## TEMPERATURE SETTING

### 1. Model Numbers KRH150 & KRH200

KRH150 & KRH200 have 2 temperature settings.

Setting 1 – Turn the control dial to the low setting to heat the lower element only.

Setting 2 – Turn the control dial to the high setting to heat both elements.

### 2. Model Number KRH240

KRH240 has 3 temperature settings

Setting 1 – Turn the control dial to the low setting to heat the lower element only.

Setting 2 – Turn the control dial to the medium setting to heat the bottom and middle elements.

Setting 3 – Turn the control dial to the high setting. This will operate all elements.

*Note: There is a tip over switch on the base. When the heater tips over, it will turn off automatically.*

## CARE AND MAINTENANCE

- Always turn off and switch off at power outlet then unplug the heater before cleaning.
- Use only a clean, dry cloth to clean the external surface of the heater only.
- Do not attempt to remove the front grill of the heater.
- Use a vacuum cleaner regularly to remove dust and fluff from the element and grill.
- If the unit has accumulated dust around the elements and grill that cannot be removed with the use of a vacuum cleaner, have a qualified service agent clean the unit. DO NOT operate the heater in this condition.
- Do not attempt to open the case of the heater at anytime, there are no customer serviceable parts inside.
- When not in use, pack the heater in its original box for best protection and store in a cool, clean and dry location.
- Return the unit to Kambrook or a Authorised repair agent of Kambrook for repair or service.



# KAMBROOK 12 MONTH WARRANTY

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

**For service, spare parts or product information in Australia,** please call KAMBROOK on the Customer Service Line (free call) 1800 800 634.

**For service, spare parts or product information in New Zealand,** please call KAMBROOK New Zealand, Greenmount, Auckland Phone 0800 273 845 Fax 0800 288 513. For spare parts phone 0800 273 845.

If claiming under this guarantee the product must be returned freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of purchase receipt here.

DATE OF PURCHASE \_\_\_\_\_

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER (If applicable) \_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

Please don't return purchase record unless you are making a claim

# KAMBROOK



**Kambrook** 4 Kingston Town Close Oakleigh, Victoria 3166, Australia  
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337  
**Kambrook** New Zealand, Private Bag 94411, Greenmount, Auckland, New Zealand  
Customer Service Line/Spare Parts 0800 273 845 Customer Service Fax 0800 288 513

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>