


KAMBROOK

GET MORE THAN YOU PAY FOR™

1800 watts Ceramic Oscillating Fan Heater



KNOW YOUR KAMBROOK 1800 WATTS CERAMIC OSCILLATING HEATER

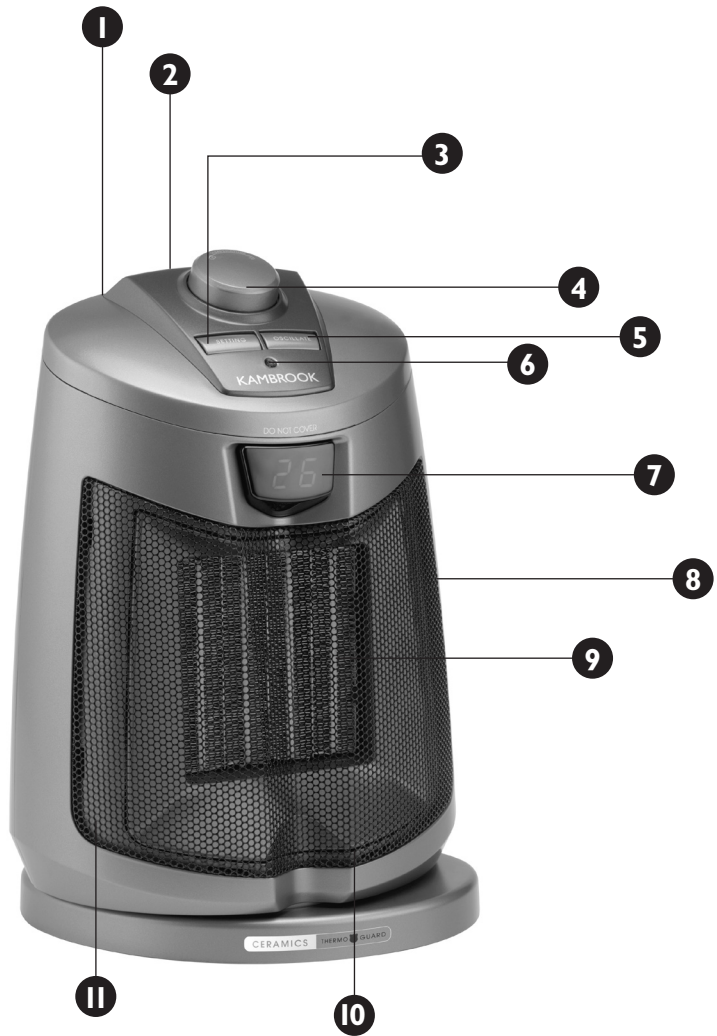

- | | |
|----------------------------|-----------------------------------|
| 1. Carry handle | 7. LED screen |
| 2. Power on/off switch | 8. Safety tip-over cut-out switch |
| 3. 2 heat and fan settings | 9. Ceramic heating elements |
| 4. Thermostat control | 10. 1800 watts |
| 5. Oscillating function | 11. Thermo Guard |
| 6. Power indicator | |

IMPORTANT PRECAUTIONS

Remove and safely discard any packaging material and promotional stickers before using the heater for the first time.

To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of the appliance.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

READ AND KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE BEFORE USING THIS HEATER

 **WARNING: IN ORDER TO AVOID OVERHEATING DO NOT COVER THE HEATER.**

1. Avoid touching heater body while it is on, some parts of the heater are hot. When moving the unit switch off and hold the heater by the handles where provided.
2. Keep combustible materials such as drapes and other furnishings at least 1.7 metres from the front, sides and rear of the heater. Do not use heater to dry your laundry.
3. Extreme caution and supervision is necessary when this heater is used by or near children, invalids or animals.
4. This heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the heater.
6. Important - this heater is intended for floor use only. Do not mount on ceiling or walls.
7. Do not leave heater unattended. Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use.
8. Do not operate heater whilst asleep.
9. Do not operate any heater with a damaged cord or plug, or if heater has been dropped or damaged in any manner. Return heater to your nearest service centre for examination, electrical or mechanical adjustment or repair.
10. Do not use outdoors. This heater is not intended for commercial use, such as construction sites.
11. Do not locate the heater immediately below a socket outlet when in use.
12. Do not use this heater with a programmer, timer or any other device that switches the heater on automatically. Since a fire risk may exist if the heater is covered or positioned incorrectly.
13. This heater is not intended for use in wet or moist locations. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Do not immerse or allow liquids to be spilt on heater.
14. This heater has hot and arcing or sparking parts inside. Do not use in areas where petrol, paints, aerosols, or other inflammable substances are used or stored.
15. Do not operate the heater with the power cord damaged, frayed or split, wound around any part of the heater, or in contact with heated surfaces of the heater.
16. Do not allow materials that have been in contact with oil, petroleum based products or drying fluids to come in contact with the heater.
17. Do not run the cord under carpeting or cover the cord with rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
18. To disconnect heater switch the power on/off switch to OFF, then switch off at the power outlet then remove plug from its outlet.
19. Do not insert or allow foreign objects to pass through the inlet or outlet openings. This may cause an electric shock, fire or damage the heater.
20. To prevent a possible fire or heat damage, allow ample space around the heater (at 1.7m at front and 0.5m at the rear, top and sides) and do not totally or partially block the air inlet or outlets in any manner. Check the openings from time to time for accumulated dust. Ensure long shag carpet does not obstruct airflow under the unit.
21. Do not touch hot metal surfaces.

22. Switch off at the power on/off switch and power outlet, then unplug and allow heater to cool down before cleaning or storing.
23. Use this heater only as described in this instruction manual. Any other use not recommended by the manufacture may cause fire electric shock or injury and voids all warranties.
24. Regularly inspect the supply cord, plug, control settings, air inlets and outlets and main housing for any damage. If found damaged in any way, immediately cease use of the heater and return to Kambrook or an authorised service agent for inspection or repair.
25. The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit. See your electrician for professional advice.

HOW TO OPERATE:

1. Remove your heater from its carton and associated protective wrapping, and unwind the cord to its full length and remove any protective cardboard or foam that may have been used to minimise transportation damage. Place the heater on a firm, level surface in a stable upright position. Visually inspect the air inlet and outlets to ensure no foreign material is blocking these areas. The heater must always be operated with the rear air filter in position.
2. Plug the cord into a 230-240V electrical outlet. Be sure the plug fits tightly as a loose fit will cause overheating and damage the plug. To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit with your heater when you switch the unit on.
3. When the heater is initially plugged in and the power switch is turned on at the rear of the unit there will be a 'beep' and the power indicator will light up. This indicates that the unit is powered. The indicator will remain lit until the power switch on the rear of the unit is switched off.
4. Turn the heater on by pressing the Setting button.
5. Upon turning the heater on, the unit will be in the LOW heat mode (1100 watts), 'LO' and the current room temperature will appear on the LED display.

6. Pressing the Setting button again at this stage will set the heater into the HIGH heat mode (1800 watts), 'HI' and the current room temperature will appear on the LED display.
7. Pressing the Setting button again will set the heater into the AUTO mode (1800 watts). The LED will display the default temperature of 25°C and will flash. This flash indicates you can set the desired temperature via the thermostat knob on the top of the unit.



8. Pressing the Setting button once more will set the heater into the FAN mode, 'FA' and current room temperature will then appear on the LED display. FAN mode is for fan-only operation with no output of heat.
9. Pressing the Setting button again will cause the heater to go back to the LOW heat mode. Continuing to press the Setting button will cycle the unit through LOW, HIGH, AUTO & FAN mode.
10. To turn the heater off, press the Setting button for approximately two to three seconds until you hear a 'beep'. Turn off the power on/off switch and power outlet and remove the plug from the power outlet.

OSCILLATION FUNCTION:

This function will work in any mode. Pressing the Oscillate button (OSC) will allow the heater to oscillate back and forth. To stop the unit oscillating, press the Oscillate button once more.

THERMOSTAT INSTRUCTION:

1. Press the Setting button until the heater is set to the AUTO mode.
2. To adjust the set temperature, rotate the Thermostat dial clockwise to increase the desired temperature and counter-clockwise to decrease the desired temperature.
3. The desired temperature can be set between 15°C and 38°C.
4. When the air temperature reaches 2° above the set temperature the heater will stop heating at once and stop blowing after approximately 15 seconds.
5. When the air temperature drops 1°C below the set temperature the unit will reactivate.

SAFETY FEATURES:

This heater includes an audible alarm to warn that parts of the heater are overheating. If this alarm sounds, immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperature. **DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING.**

Thermo Guard Overheating Safety Device

Your heater is fitted with a safety device that switches off the heater in the event of overheating. Should this heater stop working, turn off the heater and inspect for blockages in air inlet or outlets. Wait at least five minutes for the protection system to reset before attempting to restart the heater.

If the heater fails to operate or the safety device switches off again, return the heater to your nearest service centre for examination or repair.

CARE AND MAINTENANCE

- Always turn off and then unplug the heater before cleaning.
- Use only a clean, dry cloth to clean the external surfaces of the heater only.
- If the heater has collected dust or dirt inside the unit or around the elements, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.
- Do not attempt to open the case of the heater at any time there are no customer serviceable parts inside
- When not in use, pack the heater, preferably in its original box for best protection and store in a cool, clean and dry location.
- Regularly clean the air filter at the rear of the heater.



KAMBROOK 12 MONTH REPLACEMENT WARRANTY

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook guarantee.

Kambrook reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. In the event of Kambrook choosing to replace the appliance, the guarantee will expire at the original date, i.e. 12 months from the original date of purchase.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practises Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line; 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand; 0800 273 845. For spare parts phone 0800 273 845.

If claiming this guarantee the product must be returned freight prepaid.

KAMBROOK 12 MONTH REPLACEMENT WARRANTY

YOUR PURCHASE RECORD (Please complete)

Attach a copy of the purchase receipt here.

DATE OF PURCHASE

MODEL NUMBER

SERIAL NUMBER

PURCHASED FROM

(Please don't return purchase record until you are making a claim)

Register your warranty at www.kambrook.com.au/service.asp



Kambrook - Australia

461 Plummer Street, Port Melbourne, 3207, Australia

Customer Service Line 1300 139 798

Customer Service Fax 1800 621 337

Kambrook - New Zealand

Private Bag 94411, Greenmount, Auckland, New Zealand

Customer Service Line/Spare Parts 09 271 3980

Customer Service Fax 0800 288 513

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>