

KAMBROOK


GET MORE THAN YOU PAY FOR™

Kambrook 461 Plummer Street, Port Melbourne 3207, Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337
Kambrook New Zealand,
Private Bag 94411, Greenmount, Auckland, New Zealand
Customer Service Line/Spare Parts 09 271 3980
Customer Service Fax 0800 288 513

KAMBROOK

GET MORE THAN YOU PAY FOR™

Snugasabug™ Fan Heaters

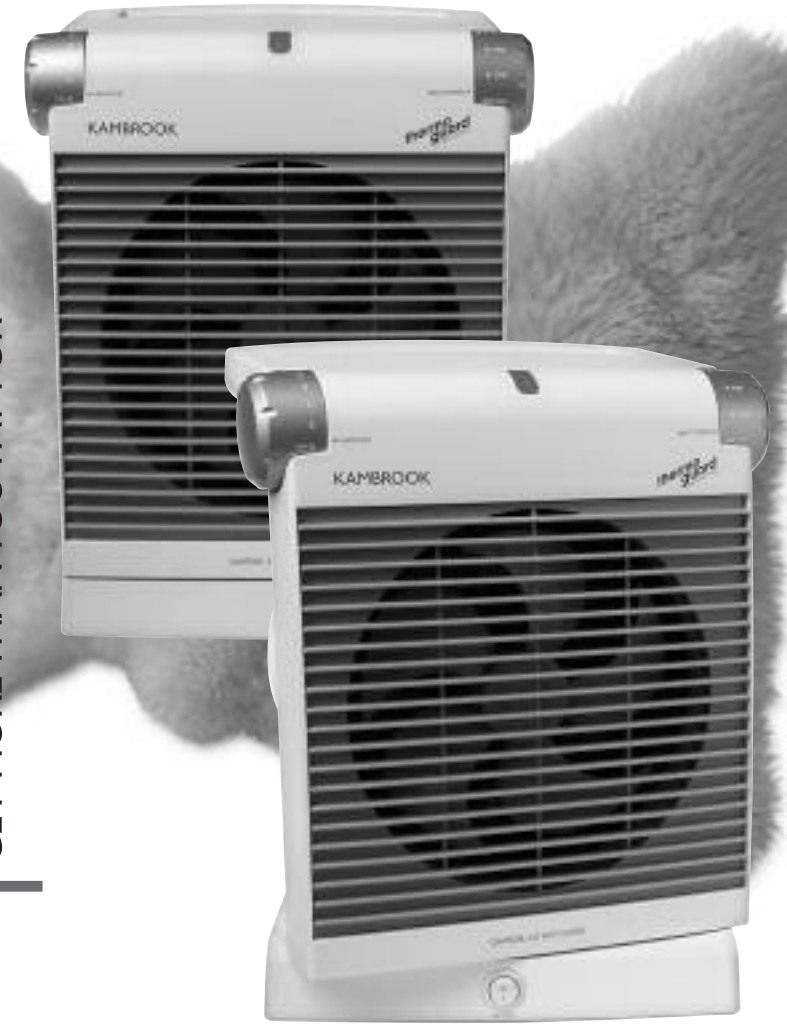

Know your Kambrook Snugasabug Fan Heater



1. Thermostat control
2. 2 heat settings plus fan only
3. Thermo Guard protected
4. On/Off Neon indicator



5. Carry handle
6. Safety tip-over cut-out switch
7. Oscillating function switch (KFH36)

KAMBROOK SAFETY

Congratulations on your choice of another quality Kambrook product. Your Kambrook Snugasabug Fan Heater has been designed and manufactured to high standards of engineering. With proper use and care, you can expect to receive many years of trouble free service. Please read these instructions carefully.

GENERAL CARE AND SAFETY GUIDE

Before using your fan heater, please read the following instructions carefully and retain for future reference.

Important safeguards

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

The heater is hot and consists of sparking parts inside. Do not use in areas where petrol, paints, aerosols or other flammable substances are used or stored.

Do not touch hot surfaces.

Avoid touching heater body while it is switched on as some parts of the heater are very hot. When moving the heater, switch off the unit and unplug at the power outlet and hold the heater by lifting it with the handle provided at the back of the unit.

Keep combustible materials such as drapes and other furnishings at least 1.7 metres from the front, sides and rear of the heater. Do not use the heater to dry your laundry.

⚠ WARNING: Do not cover the heater in order to avoid overheating whilst it is operating.

Do not use outdoors.

This heater is not intended for commercial use, such as construction sites.

Do not locate the heater immediately below a socket outlet when in use.

Do not locate the heater with a programmer, timer or any other device that switches the heater on automatically. Fire risk exists if the heater is covered or positioned incorrectly. This heater is not intended for use in wet or moist locations. Do not use this heater in the immediate surroundings of a bath, a shower, a laundry area or a swimming pool. Do not immerse or allow liquids to be spilt on the heater.

Switch off the unit and then unplug from the power outlet. Allow the heater to cool down before cleaning or storing.

Use this heater only as described in this instruction manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury and voids all warranties.

Do not allow materials that have been in contact with oil, petroleum based products or drying fluids to come in contact with the heater.

Do not operate the heater with the cord wound around any part of the heater, or in contact with heated surfaces of the heater.

Do not run the cord under carpeting or cover the cord with rugs, runners or the like. Arrange the cord away from traffic areas and where it will not be tripped over.

Do not insert or allow foreign objects to pass through the inlet or outlet openings, this may cause an electric shock. Or it may cause fire or damage to the heater.

To prevent possible fire, allow ample space around the heater (at least 1.7 metres at the front and 0.5 metres at the rear, top and sides) and do not block air inlets or outlets in any manner. Check the openings from time to time for accumulated dust.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance.

Important – this heater is intended for floor use only. Do not mount on ceiling or walls.

Do not leave the heater unattended. Always switch off the heater at the controls and at the power outlet when not in use.

Do not operate heater whilst asleep.

Do not operate the heater with a damaged cord or plug, or if the heater has been dropped or damaged in any manner. Return the heater to your nearest service centre for examination, electrical or mechanical adjustment or repair.

Regularly inspect the supply cord, plug, control settings, air inlets and outlets and main housing for any damage. If found damaged in any way, immediately cease use of the heater and return to Kambrook or an authorised service agent for inspection or repair.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

OPERATING INSTRUCTIONS

1. Remove the heater from its carton and associated protective wrapping and unwind the cord to its full length.
2. Place the heater on a firm level surface, in a stable upright position.
3. Visually inspect the air inlet and outlets to ensure no foreign material is blocking these areas.
4. Make sure the right Selector control knob is turned to the 'off' position.
5. Plug the cord into a 230-240V power outlet. To avoid an electrical circuit overload, be sure that no other appliances are plugged into the same circuit with your heater when you switch the unit on.
6. Control your heater with the right selector knob, as follows:

The selector control knob has 4 settings:

'Off' shuts off both heater and fan

- * Turns the fan on and provides cool air only
- (Lo) Provides warm air with half heating power
- (Hi) Provides hot air with maximum 2400 watts of power



Note: There is a tip over switch located on the base of the heater. When the heater tips over, it will turn off automatically.



Thermostat Control

Turn the right selector control to the high (••) temperature setting by turning the knob clockwise.

Turn the left selector control to the highest thermostat setting - 6.

Let the heater run until the desired room temperature is achieved. Then turn the knob clockwise until you hear a click sound. The unit will stop.

At this setting, your heater will automatically cycle on and off to maintain the desired room temperature.



Once the Thermostat is activated you can simply turn the knob clockwise or anti-clockwise in the thermostat function section if you want to change the temperature.

Oscillating function (applicable to the KFH36 only)

Slide the oscillation switch located at the bottom of the unit to 'on' setting. The heater will rotate providing warmth throughout the room.



Thermoguard Overheating Safety device

Your heater is fitted with a safety device that switches off the heater in the event of overheating. Should the heater stop working, turn the heater off and inspect for blockage of air inlet or outlet. Wait at least 5 minutes for the protection system to reset before attempting to restart the heater.

If the heater fails to operate or the safety device switches the heater off again, return heater to your nearest service centre for examination or repair.

Care and Maintenance

Always turn off and unplug the heater before cleaning.

Use a clean dry cloth to clean the external surfaces of the heater only.

If the heater has collected dust or dirt inside the unit or around the element, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.

Do not attempt to open the case of the heater at any time; there are no customer serviceable parts inside.

When not in use, pack the heater in its original box for



Kambrook 12 Month Replacement Warranty

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In the event of KAMBROOK choosing to replace the appliance, the guarantee will expire at the original date, ie. 12 months from the original purchase date.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Private Bag 94411, Greenmount, Auckland Phone 0800 273 845 Fax 0800 288 513. For spare parts phone 0800 273 845.

If claiming under this guarantee the product must be returned freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Please don't return purchase record unless you are making a claim

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>