

KAMBROOK

LITTLE CHEFS



**SNOWY
FLAKES**

Ice Shaver

KIS20

INSTRUCTION BOOKLET

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au

Contents

Kambrook Recommends Safety First	p4
Your Kambrook Slushie Maker	p6
Using Your Kambrook Slushie Maker	p7
Care, Cleaning and Storage	p8
Recipes	p10
Warranty	p12

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Slushie Maker

- Carefully read all instructions before operating the appliance and save for future reference.
- Remove any packaging material and promotional stickers before using the appliance for the first time.
- Do not place the appliance near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water, etc.
- Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
- Handle the Ice chamber with care – remember the blade assembly is very sharp and should be kept out of reach of children.
- Do not use attachments other than those provided with the Slushie Maker.
- Do not attempt to operate the Slushie Maker by any method other than those described in this booklet.
- Do not operate the appliance with a heavy load.
- Do not run the motor without ice in the ice chamber.
- Always ensure the Slushie Maker is switched off at the power outlet and the cord is unplugged from the power outlet. Particularly when not in use, if left unattended and when cleaning or storing.
- Do not use the Slushie Maker on metal surfaces, for example, a sink drain board.
- Do not use ice cubes made from ice cube trays, automatic ice makers, bagged ice etc. Only use the ice made from the freezer containers supplied with this appliance.
- Do not continuously run the motor for more than 6 minutes at a time and rest the appliance for 20 minutes before the next operation.
- To protect against electric shock do not immerse the power cord, plug or motor housing in water or any other liquid.
- Do not move the Slushie Maker whilst in operation.
- Keep the appliance clean. Follow the cleaning instructions provided in this book.

Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or motor base in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Your Kambrook Slushie Maker

- 1. Cool touch housing
- 2. Ice chamber with shaving blade
- 3. Base
- 4. Freezer containers x 4
- 5. One touch ice shave button



Using Your Kambrook Slushie Maker

Before First Use

Remove all packaging material and promotional labels. Wash the ice chamber and base in warm, soapy water, rinse and dry thoroughly. Wipe the motor body with a damp cloth.

Assembling/Operating the Slushie Maker

Place water in the freezer container leaving 1cm from the top to place the lid on. Then place the container in the freezer for 24 hours.

Place the motor body on a flat, dry surface. Ensure the power plug is unplugged from the power outlet.

Place a deep bowl or container onto the base platform to hold shaved ice.

Place the ice chamber into the base by lining up the flat sides and pushing the chamber down.

Once the water in the freezer container has set and formed into ice, remove the freezer container from the freezer.

Remove the block of ice from the freezer container. Place the ice in the ice chamber.

Place the motor body on top of the ice chamber. Plug the cord into a 230V or 240V power outlet and switch on at the power outlet.

Push the top of the motor housing to start shaving. Release the motor housing to stop shaving. When ice shaving is complete, unplug the Slushie Maker and clean. Please see Care, Cleaning and Storage for directions.

NOTE: Please handle the ice chamber carefully as the shaving blade is sharp. Mishandling of the blade may cause injury.

Tips for the Best Use of your Slushie Maker

Do

- Ensure all removable parts have been thoroughly washed and dried before assembly (except motor body).
- Ensure the Slushie Maker is correctly assembled before operating.
- Ensure the Slushie Maker is used on a clean, dry surface.

Don't

- Do not use ice cubes in the ice chamber.
- Do not use the ice chamber to store ice.
- Do not immerse the motor body, cord or power plug in water or any other liquid.
- Do not use harsh abrasives or cleaners.
- Do not place any of the removable parts in the dishwasher.

Care, Cleaning and Storage

Cleaning your Slushie Maker

Ensure the Slushie Maker has been unplugged from the power outlet.

Remove the bowl of shaved ice from the base platform. Remove the motor body by lifting it in an upward position. Do not immerse in water.

Carefully remove the ice chamber by lifting it in an upward position. Some small ice pieces may remain in the ice chamber; simply run the ice chamber under warm water so that all excess ice dissolves. If extra cleaning is necessary, wash with warm soapy water and dry thoroughly with a clean cloth. Do not use harsh abrasives or cleaners. Dry all parts thoroughly.



WARNING: Ice cubes must not be used in the ice chamber. Only use the ice which is formed in the freezer container.

NOTE: Do not place any of the removable parts in the dishwasher.

NOTE: Do not immerse the motor base, cord or power plug in water or any other liquid.

Cleaning the Motor Body

The Motor body can be cleaned with a soft, damp cloth (do not use abrasive agents or cloths which can damage the surface). Dry and polish with a soft, lint-free cloth.

Storage

Before storing, thoroughly wash and dry all removable parts.

Assemble the Slushie Maker and store on the kitchen bench or in an easy to access cupboard.

Store out of reach of children.

Store the appliance upright. Do not store anything on top of the appliance.

Recipes

Recipes

Juicy Treats

Add your favourite juice such as orange, apple, pineapple or tropical to the shaved ice.

Cordial Treats

Add your favourite cordial to shaved ice and enjoy the icy treat. You can also add the cordial to the water before it is frozen to create a coloured snow effect.

Soft Drink Treats

Use soft drinks to enjoy a different delicious icy flavour.

Kambrook 12 Month Replacement Warranty

In Australia, this Kambrook Replacement Warranty does not affect the mandatory statutory rights implied under the Trade Practices Act 1974 and other similar State and Territory legislation relating to the appliance. It applies in addition to the conditions and warranties implied by that legislation.

In New Zealand, this Kambrook Replacement Warranty does not affect your mandatory statutory rights implied under the Consumer Guarantees Act 1993 in relation to the appliance. It applies in addition to the conditions and guarantees implied by that legislation.

This Kambrook Replacement Warranty is valid only in the country of purchase, but other statutory warranties may still apply.

This Warranty card and the purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook Replacement Warranty. Please note that under any applicable statutory warranty you are not required to produce these documents, but may be required to provide a proof of purchase.

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months domestic use from the date of purchase (or 3 months commercial use).

The Kambrook Replacement Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of, misuse or abuse, negligent handling or if the product has been used other than in accordance with the instructions. The Kambrook Replacement Warranty excludes breakables such as glass and ceramic items, consumable items and normal wear and tear.

This Kambrook Replacement Warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. Subject to your statutory rights, in the event of Kambrook choosing to replace the appliance, the Kambrook Replacement Warranty will expire at the original date, i.e. 12 months from the original date of purchase.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on the website at www.kambrook.com.au

Kambrook 12 Month Replacement Warranty

Your Purchase Record (Please Complete)

Attach a copy of the purchase receipt here.

Date Of Purchase _____

Model Number _____

Serial Number _____

Purchased From _____

(Please don't return purchase record until you are making a claim)

Register your warranty at www.kambrook.com.au/service.asp

Kambrook - Australia
Building 2, Port Air Industrial Estate
1A Hale Street
Botany NSW 2019
Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337

Kambrook - New Zealand
Private Bag 94411
Botany, Manukau
Auckland 2141
New Zealand
Customer Service Line/Spare Parts
0800 273 845 or 09 271 3980
Customer Service Fax 0800 288 513

KAMBROOK
THE SMARTER CHOICE

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue A10

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>