

KAMBROOK

THE SMARTER CHOICE



QuikSnaks
Toastie Maker

KSM1TM

Instruction Booklet

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273845 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au or www.kambrook.co.nz

Contents

Kambrook Recommends Safety First	p4
Your QuikSnaks Toastie Maker	p6
Operating Your QuikSnaks Toastie Maker	p7
Care, Cleaning and Storage	p8
Recipes	p10
Warranty	p12

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook QuikSnaks Toastie Maker

- Carefully read all instructions before operating the Kambrook QuikSnaks Toastie Maker for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the Toastie Maker for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not place the Toastie Maker near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Do not use the Toastie Maker on a sink drain board.
- Do not place the Toastie Maker on or near a hot gas or electric burner, or where it could touch a heated oven.
- Position the Toastie Maker at a minimum distance of 20cm away from walls, curtains, cloths and other heat sensitive materials.
- Always operate the Toastie Maker on a stable and heat resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Always ensure the Toastie Maker is properly assembled before use. Follow the instructions provided in this book.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- The lid and the outer surface will be hot when the appliance is operating. Use the handles when lifting and opening the top plate.
- The temperature of accessible surfaces will be high when the appliance is operating and for some time after use.
- Do not place anything on top of the Toastie Maker when the lid is closed, when in use and when stored.
- Always switch the On/Off switch to the off position, switch the Toastie Maker off at the power outlet, then unplug the power cord and cool completely, if appliance is not in use, before cleaning, before attempting to move the appliance, disassembling, assembling and when storing the appliance.
- Keep the Toastie Maker clean. Follow the cleaning instructions provided in this book.

Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or motor base in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Your QuikSnaks Toastie Maker

- 1. Powerful 700 watts for fast toasties
- 2. Locking clip for convenient cooking
- 3. 'POWER' and 'READY' indicator light
- 4. Non-stick easy clean cooking surface
- 5. Easy cut sandwich divider to cut sandwich and seal fillings
- 6. Sturdy non-slip feet
- 7. Cord wrap for convenient storage (not shown)



Operating Your QuikSnaks Toastie Maker

Before First Use

Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.

Check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. Place the Toastie Maker on a flat, level surface with the lid in the closed position.

When using the Toastie Maker for the first time you may notice a fine smoke haze. This is caused by the heating of some of the components. There is no need for concern.

To Use the Toastie Maker

1. Insert the plug into a 230V or 240V power outlet and turn the power on. The red 'POWER' light will illuminate.
2. Allow the Toastie Maker to preheat until the green 'READY' light illuminates.
3. During this time, prepare the sandwich by setting aside four slices of bread and prepare filling.
4. Place two slices of bread on the plates. Place filling on top of bread.
5. Place remaining bread on filling. The green 'READY' light will cycle on and off during the toasting process indicating that the correct temperature is being maintained.
6. Carefully close the lid and clip handles together. Do not force the lid to close.
7. Toasting should take approximately four minutes. Exact toasting time will be a matter of taste. It will also depend on the type of bread and type of filling used.
8. When the sandwich is cooked, remove it with the help of a plastic heat resistant or wooden spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating.
9. To maintain heat, keep the lid closed until you are ready to toast the next sandwich.

NOTE: Always allow the Toastie Maker to pre-heat until the green 'READY' light illuminates.



WARNING: The cooking plates are hot. Do not touch during use or when still hot after use.

Healthy Snacks

Due to the non-stick coated plate design it is not necessary to use any butter or margarine on the outside of your toastie.

Care, Cleaning and Storage

Cleaning

Before cleaning, switch the power off at the power point and then unplug the power cord.

Allow the Toastie Maker to cool slightly. The Toastie Maker is easier to clean when slightly warm.

Always clean your Toastie Maker after each use to prevent a build up of baked-on foods.

Wipe cooking plates with a soft damp cloth to remove food residue. To remove baked-on food residue, squeeze some hot water over the food residue then clean with a non-abrasive, soft scouring pad. Wipe clean and dry thoroughly with a soft clean, cloth.

NOTE: The cooking plates have a non-stick coating. Do not use abrasives or metal utensils to remove food residue as they will scratch and damage the coating.

NOTE: Do not use spray-on non-stick cooking sprays or oils as these may affect the performance of the non-stick surface on the cooking plates.



WARNING: Do not immerse any part of your Kambrook Toastie Maker in water or any other liquid.

Storage

Switch the Toastie Maker off at the power point and unplug the power cord from the power point. Allow to cool completely.

Follow cleaning instructions and ensure appliance is completely dry.

Lock the storage clip along the side arm towards the front handle of the Toastie Maker so that the top and bottom cooking plates are locked together.

Wrap the power cord around the cord storage area underneath the appliance.

Store the Toastie Maker on a flat, dry level surface. Do not place anything on top of the Toastie Maker.

NOTE: For convenience the Toastie Maker may be stored standing upright in the vertical position.

NOTE: The locking storage clips should not be used to clamp down the top plate when sandwiches are in the Toastie Maker.



WARNING: When moving the Toastie Maker, never lift the Toastie Maker by the power cord.

Recipes

Recipes

Toastie Pizzas

- 4 slices bread
- 1 tablespoon tomato paste
- 50g salami
- 1 tablespoon spanish onion, diced
- 1 tablespoon capsicum, diced
- 1 tablespoon mushrooms, chopped
- ½ cup mozzarella cheese

1. Preheat the Toastie Maker until the green 'READY' light illuminates.
2. Spread two pieces of bread with tomato paste and place tomato paste side up into the Toaster Maker.
3. Place the salami, onion, capsicum and mushrooms onto the bread and top with mozzarella cheese.
4. Place the remaining two slices of bread on top and cook for 4 minutes or until golden brown.

Toastie Pies

- 4 slices bread
- 50g minced steak
- ¼ cup finely chopped onion
- 2 teaspoons finely chopped parsley
- 1 tablespoon tomato sauce
- 1 tablespoon water
- ¼ teaspoon mixed herbs
- Salt and pepper, to taste

1. Combine mince and onion in a saucepan. Cook over moderate heat for 4 minutes.
2. Add sauce, water, herbs and season with salt and pepper.
3. Preheat the Toastie Maker until the green 'READY' light illuminates.
4. Place two pieces of bread into the Toastie Maker and top with meat.
5. Place the remaining two slices of bread on top and cook for 4 minutes or until golden brown.

Chicken Parmigiana Toastie

- 4 slices bread
- 1 tablespoon olive oil
- 1 chicken thigh, sliced
- 1 tablespoon tomato paste
- 1 tablespoon ham, diced
- 1 tablespoon parmesan cheese

1. Heat oil in a frypan and cook chicken until golden brown, place onto paper towel to drain.
2. Preheat the Toastie Maker until the green 'READY' light illuminates.
3. Spread two pieces of bread with tomato paste and place tomato paste side up into the Toaster Maker.
4. Top with chicken, ham and parmesan cheese.
5. Place the remaining two slices of bread on top and cook for 4 minutes or until golden brown.

Apple Pie Toastie

- 4 slices bread
- ½ cup apple, peeled, cored and diced
- 1 teaspoon cinnamon
- 1 tablespoon caster sugar
- 2 teaspoons butter

1. Place the apple, cinnamon, sugar and butter into a heatproof bowl and mix well.
2. Heat the mixture in the microwave for 3 minutes, checking and stirring every minute.
3. Preheat the Toastie Maker until the green 'READY' light illuminates.
4. Place two pieces of bread into the Toastie Maker and top with apple filling.
5. Place the remaining two slices of bread on top and cook for 4 minutes or until golden brown.

Chocolate and Blackberry Ricotta Toastie

4 slices bread

40g fresh ricotta

30g dark chocolate, melted

2 tablespoons blackberries

1. Preheat the Toastie Maker until the green 'READY' light illuminates.
2. Place two pieces of bread into the Toastie Maker and top with ricotta, chocolate and blackberries.
3. Place the remaining two slices of bread on top and cook for 4 minutes or until golden brown.

Hazelnut Banana Toastie

4 slices bread

1 tablespoon chocolate hazelnut spread

1 tablespoon honey

1 banana, thinly sliced

1. Preheat the Toastie Maker until the green 'READY' light illuminates.
2. Spread two pieces of bread with chocolate hazelnut spread and place spread side up into the Toaster Maker.
3. Top with honey and slices of banana.
4. Place the remaining two slices of bread on top and cook for 4 minutes or until golden brown.

Kambrook 12 Month Replacement Warranty

In Australia, this Kambrook Replacement Warranty does not affect the mandatory statutory rights implied under the Trade Practices Act 1974 and other similar State and Territory legislation relating to the appliance. It applies in addition to the conditions and warranties implied by that legislation.

In New Zealand, this Kambrook Replacement Warranty does not affect your mandatory statutory rights implied under the Consumer Guarantees Act 1993 in relation to the appliance. It applies in addition to the conditions and guarantees implied by that legislation.

This Kambrook Replacement Warranty is valid only in the country of purchase, but other statutory warranties may still apply.

This Warranty card and the purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook Replacement Warranty. Please note that under any applicable statutory warranty you are not required to produce these documents, but may be required to provide a proof of purchase.

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months domestic use from the date of purchase (or 3 months in a commercial situation).

The Kambrook Replacement Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of, misuse or abuse, negligent handling or if the product has been used other than in accordance with the instructions. The Kambrook Replacement Warranty excludes breakables such as glass and ceramic items, consumable items and normal wear and tear.

This Kambrook Replacement Warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. Subject to your statutory rights, in the event of Kambrook choosing to replace the appliance, the Kambrook Replacement Warranty will expire at the original date, i.e. 12 months from the original date of purchase.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1 300 139 798 (Australia) or 0800 273 845 (New Zealand). Alternatively, visit us on the website at www.kambrook.com.au or www.kambrook.co.nz

Kambrook 12 Month Replacement Warranty

Your Purchase Record (Please Complete)

Attach a copy of the purchase receipt here.

Date Of Purchase _____

Model Number _____

Serial Number _____

Purchased From _____

(Please don't return purchase record until you are making a claim)

Kambrook - Australia
Building 2, Port Air Industrial Estate
1A Hale Street
Botany NSW 2019
Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337
www.kambrook.com.au

Kambrook - New Zealand
Private Bag 94411
Botany, Manukau
Auckland 2163
New Zealand
Customer Service Line/Spare Parts
0800 273 845
Customer Service Fax 0800 288 513
www.kambrook.co.nz

KAMBROOK
THE SMARTER CHOICE

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue A10

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>