

KAMBROOK

GET MORE THAN YOU PAY FOR™

Kambrook 461 Plummer Street, Port Melbourne 3207, Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337
Kambrook New Zealand,
Private Bag 94411, Greenmount, Auckland, New Zealand
Customer Service Line/Spare Parts 09 271 3980
Customer Service Fax 0800 288 513

KAMBROOK

GET MORE THAN YOU PAY FOR™

Essentials Toaster



KAMBROOK SAFETY

Welcome to Kambrook and your new toaster.

At Kambrook we believe that the safe performance is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our appliances.

We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

IMPORTANT SAFEGUARDS FOR YOUR KAMBROOK TOASTER

Carefully read all instructions before operating the toaster and retain them for future reference.

Remove any packaging material and promotional labels before using the toaster for the first time.

Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water.

Do not place the toaster on or near a gas or electric burner or where it could touch as heated oven. Keep appliance clear of walls and other heat sensitive materials such as cloths and curtains. Minimum 200mm distance. When using the toaster provide adequate air space above and on all sides for air circulation.

Always use the toaster on a heat-resistant surface. Do not use on a cloth-covered surface. Do not use on metal surfaces, for example, a sink drain board.

Bread may burn, therefore this toaster should not be used near or below curtains or other combustible material and it should be supervised at all times when in use.

Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening and is not too thick or long that it will jam or wedge the bread carriage.

Never cover the appliance whilst it is plugged into the power outlet or while hot.

Do not place cold toast on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.

To protect against electric shock, do not immerse the power cord, plug or appliance in water or any other liquid.

Do not move the toaster whilst in operation or when hot. Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.

Always switch the power off at the power outlet and then remove the power plug from power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing

Do not operate the toaster without the removable crumb tray in place. The crumb tray should be cleaned regularly.

Do not allow breadcrumbs to accumulate in the bottom of the toaster.

Keep the appliance clean. Follow the cleaning instructions provided in this book

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

Unwind the cord fully before use.

Do not let the power cord hang over the edge of a table, counter or bench tops, touch hot surfaces or become knotted.

This appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance. Do not leave appliance where children can touch hot surfaces.

It is recommended to regularly inspect the appliance. Do not use the appliance if the power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair. Please call 1800 800 634 for service centre details.

The appliance is intended for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats.

Do not use outdoors.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.


NOTE: This Kambrook Toaster is electronically controlled and will not operate or lock into the toast position until the toaster is plugged into a 230/240 volt power point and switched on.

⚠ WARNING: NEVER OPERATE TOASTER ON ITS SIDE.

NEVER ADD ANY FOOD SUBSTANCE OR SPREADS TO THE BREAD, ENGLISH MUFFINS OR CRUMPETS PRIOR TO TOASTING AS THIS CAN LEAD TO ELECTROCUTION OR FIRE.

THIS TOASTER IS FOR TOASTING BREAD, CRUMPETS AND ENGLISH MUFFINS ONLY. PLACING OTHER ITEMS IN THE TOASTER CAN LEAD TO ELECTROCUTION OR FIRE.

FEATURES OF YOUR KAMBROOK TOASTER

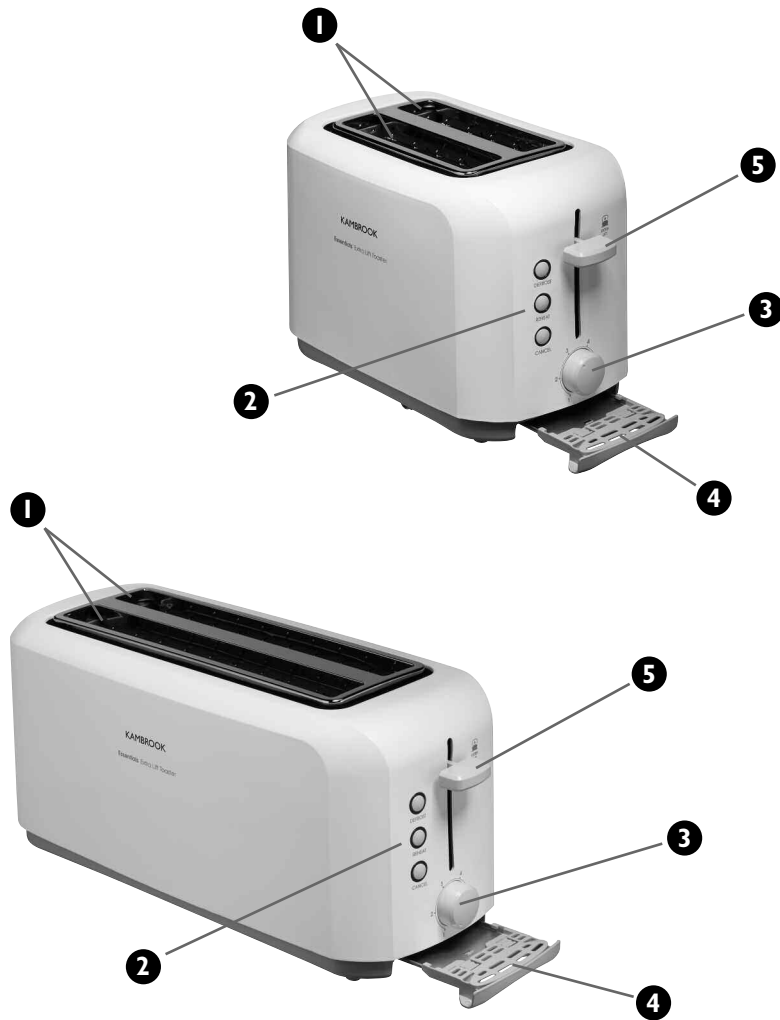

1. Self centring,extra wide and deep toasting slots

2. Defrost, reheat and cancel buttons

3. Electronic browning control

4. Removable crumb tray

5. Extra lift lever

USING YOUR KAMBROOK TOASTER

Before first use, remove any packaging material or promotional labels.

Place toaster on a dry, level surface.

Insert power plug into a 230/240Volt power outlet then turn power on.

Place up to 1 slice of bread or 1 crumpet or half an English muffin only into each of the toasting slots (or 2 slices of bread or 2 crumpets or 2 halves of an English muffin only into each of the toasting slots if you have purchased the 4 slice model)

Select toast browning setting required, using the browning control dial.

The first time the toaster is used, we recommend that this control be set to Setting number 3.

Different types of bread and personal preference may require a different browning setting, for example, raisin toast and white light-textured breads may require a lighter setting, whilst heavier textured rye breads may require a darker setting.

Press the extra lift lever down to the locked position. Toasting cycle will commence immediately.

The toaster turns off when the desired toast colour is achieved and automatically raises the toast out of the toasting slots

NOTE: The toasting process can be stopped at any time by pressing the Cancel button or switching off at the power outlet.

CANCEL BUTTON

The CANCEL button is the lowest of the 3 buttons located on the control panel and illuminates when the carriage control lever is locked down into position and the toasting process begins. Press this button during operation to cancel the toasting process.

TOASTING FROZEN BREAD

To toast frozen bread, place the bread into the bread slots, select the desired browning setting and press the carriage control lever down to lock into position, then press the DEFROST button. The Defrost button is the top button on the control panel and illuminates during the toasting process.

REHEATING TOAST

To reheat, place toast into bread slots, press the carriage control lever down to lock into position, then press the REHEAT button. The Reheat button is the middle button on the control panel and illuminates during the reheating process.

NOTE: The Defrost button and Reheat button can not be selected at the same time.

EXTRA LIFT

Extra lift is ideal for removing smaller items such as crumpets or English muffins. When the toasting process is finished, lift the carriage control lever approximately 20mm above the starting position for easy removal of the toasted bread, crumpets or English muffins.

⚠ WARNING Never attempt to extract jammed toast, English muffins, crumpets or any other item with a knife or any other object, as contact with live elements can cause electrocution.

Never operate the toaster on its side and never add any food substances to the bread, muffins, or crumpets prior to toasting as this can lead to electrocution.

This Kambrook toaster is electronically controlled, and will not lock down in the toasting position until the toaster is plugged into a 230/240V power outlet and switched on.

MAINTAINING YOUR KAMBROOK TOASTER

CLEANING

Always switch the power off at the power outlet and remove the power plug from the power outlet before cleaning the toaster.

To clean any crumbs from the toaster, slide the crumb tray from under the control panel, discard crumbs and wipe the tray clean. Replace the crumb tray into position before using the toaster again. The crumb tray should be cleaned regularly. Do not allow breadcrumbs, crusts, dried fruits, etc. to accumulate in the bottom of the toaster. To clean any additional crumbs, turn the toaster upside down over a sink or bin and shake crumbs free.

Exterior of the toaster can be cleaned with a slightly damp cloth then wiped dry and polished with a soft dry cloth. Never use any abrasive or chemical product to clean the exterior of the toaster.

Do not immerse the appliance or power cord in water or any other liquid.

⚠ WARNING: Do not operate the toaster without the removable crumb tray in place. The crumb tray should be regularly cleaned. Do not allow crumbs to build up in the crumb tray.

STORAGE

Always switch the power off at the power outlet, remove the power plug from the outlet and allow to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on your bench top or in an accessible cupboard. Do not store anything on top of the toaster.

Exterior Cleaning

Exterior of the toaster can be cleaned with a damp cloth and wipe dry.

Never use any abrasive or chemical product to clean the exterior of the toaster.

Clean the crumb tray with dry cloth and return to toaster before using again.

If a damp cloth or water is used to clean the crumb tray, ensure that the tray is thoroughly dried before placing the tray back into position.

To secure the crumb tray again, close the tray on the unit with thumb/ finger in the same groove and slide to the right and release, ensure that it is clipped back into position.



Kambrook 12 Month Replacement Warranty

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of the purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Please don't return purchase record until you are making a claim

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In the event of KAMBROOK choosing to replace the appliance, the guarantee will expire at the original date, ie. 12 months from the original purchase date.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line (free call) 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Private Bag 94411, Greenmount, Auckland Phone 0800 273 845 Fax 0800 288 513. For spare parts phone 0800 273 845.

If claiming under this guarantee the product must be returned freight prepaid.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>