




KM 100 / 100 R KM 100 / 100 R P

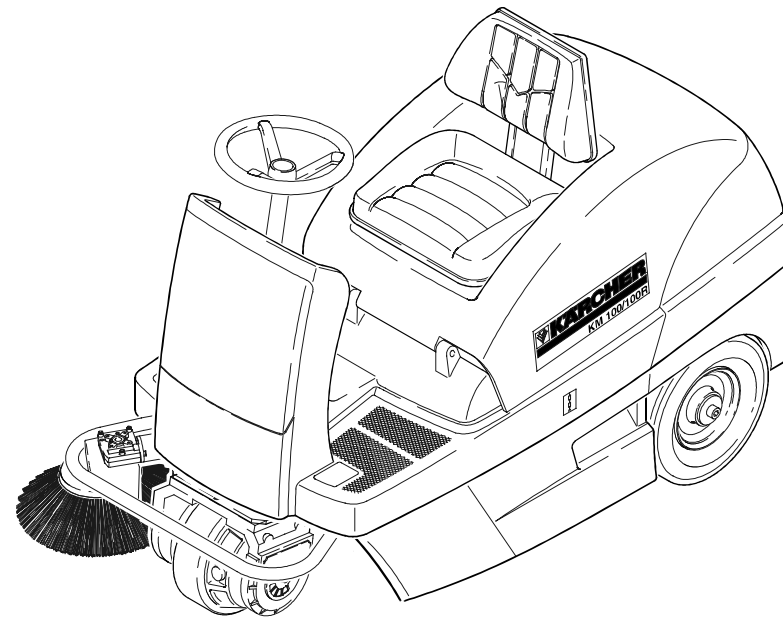

1.280-101
1.280-111

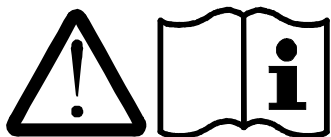

www.kaercher.com

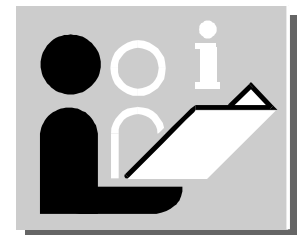

5.960-294 A2008261 05/04

Betriebsanleitung	3
Anhang: Manuelle Filterabreinigung	237
Ersatzteilliste	240

Operating Instructions	18
Appendix: Manual filter cleaning	237
Spare Parts List	240

Notice d'utilisation	33
Annexe : Nettoyage manuel du filtre	237
Liste des pièces de rechange	240

Istruzioni per l'uso	49
Appendice: Pulizia manuale del filtro	237
Elenco pezzi di ricambio	240

Gebruiksaanwijzing	65
Bijlage: Manuele filterreiniging	237
Reserveonderdelenlijst	240

Instrucciones de servicio	80
Anexo: Limpieza manual del filtro	238
Lista de piezas de requesto	240

Manual de instruções	96
Anexo: Limpeza manual do filtro	238
Lista de peças sobresselentes	240

Οδηγίες λειτουργίας	112
Παράρτημα: Καθάρισμα φίλτρου με το χέρι	238
Ανταλλακτικά	240

Driftsvejledning	130
Bilag: Manuel filterrengøring	238
Reservedelsliste	240

Bruksveiledning	145
Tillegg: Manuell filterrensing	238
Reservedels liste	240

Driftinstruktion	159
Bilaga: Manuell filterrensning	239
Reservdelslista	240

Käyttöohje	174
Liite: Suodattimen manuaalinen puhdistus	239
Varaosalista	240

Instrukcja obsługi	189
Załącznik: Ręczne czyszczenie filtra	239
Lista części zamiennych	240

İşletme kılavuzu	205
Ek: Manüel filtre temizleme	239
Yedek parça listesi	240

Cihazın kullanım 10 yıldır.	
Руководство по эксплуатации	220
Приложение: Ручная очистка фильтра	239
Запасные части	240

Contents

For your own safety!	19	Before first operating	21	Decommissioning	25	Fault instructions	30
General notes	19	Open/close unit cover	21	Transport	25	Accessories	31
Safety features	20	Operating sweeping machine without automotive power	21	Transport instructions	25	Technical data	31
Risk of overturning on too high gradients!	20	Unloading instructions	21	Cleaning and maintenance	25	EC conformity declaration	32
Risk of overturning when taking bends rapidly!	20	Before every operation	22	Internal cleaning	25		
Danger of tipping over given an unstable travelling surface!	20	General notes	22	External cleaning	25		
Danger of tipping over given a sideways incline that is too large!	20	Testing and maintenance work	22	Maintenance intervals	25		
For our environment	20	Commissioning	22	Elapsed-time meter	25		
Caution, danger to the environment from used batteries!	20	Adjust driver seat	22	Maintenance by the customer	25		
Endangerung of environment by packaging materials!	20	Switching on the machine	22	Maintenance by the customer service department	26		
Intended use	20	Run machine	22	Maintenance tasks	26		
Function description - sweeping machine	20	Sweeping operation	23	Notes on safety	26		
Control elements	20	Stop machine	23	Battery safety instructions	26		
Machine components	21	Empty the swept material container	24	Charge the battery	26		
		Usage instructions	24	Check and top up the battery's fluid level	27		
		Safety instructions when sweeping	24	Check the tyre air pressure	27		
		Sweeping dry ground	24	Changing wheels	27		
		Sweeping damp or wet ground	24	Checking the vacuum system	27		
		Driving over obstacles	24	Checking traction belt	27		
		Drive system overload warning	24	Checking the sealing cup	28		
		Sweeping system overload warning	24	Replacing side brush	28		
		Battery discharging warning	25	Check the sweep roller	28		
				Replace the sweep roller	28		
				Adjusting and replacing sealing strips	29		
				Replace the dust filter	30		
				Replacing the filter box seal	30		
				Changing fuses	30		

For your own safety!

General notes

It is mandatory to read and observe this prior to using the appliance!

- Notify your sales outlet if during unpacking you detect damage that has occurred in transit.
- Read the operating instructions of your appliance prior to putting it into operation, especially the safety information.
- The warning signs and information labels attached to the unit provide important advice on its safe operation.
- In addition to the instructions in the operating instructions, general safety- and accident prevention-regulations from lawmakers must be followed.

Use

- The unit shall be exclusively used in accordance with the specifications given in these operating instructions.
- Prior to utilization the appliance and its working facilities must be checked regarding their proper condition and that they operate safely. It must not be used if its condition is not faultless.
- The unit is intended for sweeping inside- and outside surfaces.
- No modifications permitted on the machine.

- Never absorb explosive liquids, inflammable gases or undiluted acids and solvents! This includes petrol, paint thinner or fuel oil, which can form explosive fumes due to the swirling suction air, in addition acetone, undiluted acids and solvents, since they corrode the materials used for the appliance.
- Do not sweep up/absorb burning or smouldering objects.

Only if expressly marked as such is this appliance suitable for sucking up health-hazardous dust types.

Observe the safety-related notes given in the operating instructions.

- Suitable only for the surfaces listed in the operating instructions.
- The appliance may be used on only the areas cleared for its use by the factory owner or a person authorized by him.
- Keep clear of the danger area. Its operation in explosion hazardous locations is prohibited.
- The following applies generally: Keep combustible materials away from the machine (danger of explosions-/fire).

Operation

- The rules, regulations and stipulations applying to motor vehicles must always be observed.

- The operator must use the unit in accordance with its intended purpose. She must adapt her mode of operation to the local conditions and when working with the appliance keep a look out for third parties, especially children.
- The appliance may only be used by persons instructed in its handling or who have proved their capability of operating it and who are expressly authorized to use it.
- The unit must not be operated by children and youths.
- To prevent unauthorized utilization of appliances provided with an ignition key the ignition key must be removed.
- The appliance must never be left unattended as long as the motor is running. The operator may not leave the appliance until the motor is turned off, the appliance is safeguarded against unintentional motion, if necessary the parking brake actuated and the ignition key removed.
- On slopes the angle of inclination to the side and in the direction of motion must not exceed the value given in the operating instructions.

Transport

- The motor must be turned off when the appliance is transported.
- Secure the machine with guy belts, ropes or chains.
- Immobilise the machine at the wheels with chocks.

Maintenance

- The unit must be switched off and, if necessary, the ignition key removed prior to cleaning it, performing maintenance work on it, replacing parts or resetting it to a different operation.
- For battery-run appliances the battery plug must be pulled out of the socket prior to work on the electrical equipment, i.e. the battery is to be disconnected.
- Repairs may only be carried out by approved customer service centres or by technical personnel trained in this field which are familiar with all relevant safety regulations.
- Industrially used appliances in changing locations are subject to the safety inspection according to VDE 0701.
- Use only the main brushes/side brushes fitted in the unit or specified in the operating instructions. Using other main brushes/side brushes can be detrimental to safety.
- The unit may not be cleaned with a hose- or a high pressure water jet (danger of short circuits or other damages).

Accessories and spare parts

- Only accessories and spare parts cleared by the manufacturer may be used. Genuine accessories and spare parts guarantee that the unit can be operated safely and trouble-free.

Riding appliances

- Riding appliances are not approved for public highways. Please ask your retailer for the conversion kit for street-worthiness.
- Giving companions lifts is not permissible.
- Riding appliances may be set in motion only from the seat.

Battery driven appliances

- Warranty is valid only when you use the batteries and charging units recommended by Kärcher.
- It is mandatory to comply with the battery manufacturer's operating instructions. Heed the statutory recommendations on handling batteries.
- Never leave a battery in a run down condition but recharge it as soon as possible.
- Keep the batteries always clean and dry to prevent leaking currents. Protect it from contamination, for example, by metallic dust.
- When mounting the batteries in the KM 100/100 R make absolutely sure you also install the battery terminal fuse. (see maintenance work, chapter on replacing fuses)
- Do not place tools or similar objects on the battery. Hazard of short circuits and explosion.
- Do not under any circumstances work with an open flame, create sparks or smoke near a battery or in a battery recharging room. Explosion hazard.
- Do not touch hot parts, for example, the driving engine (hazard of burns).

- Take care when handling accumulator acid. Heed the relevant safety regulations!
- Used batteries are to be disposed of in an environmentally friendly way, according to EC-guideline 91/157 EWG.

Safety features

Safety features are provided for the protection of the operator, and it is forbidden to disconnect them or circumvent their operation.

EMERGENCY STOP pushbutton

- For an instant stop of all operations.
- To unlatch it turn it slightly to the left or the right and then release it.

Seat contact switch

- If the machine is left during operation, the engine switches off via the seat contact switch.

Risk of overturning on too high gradients!



Danger!

The machine could topple over when driving and turning on slopes.

- Drive only on slopes up to 18 % in the travelling direction.
- At right angles to direction of travel only negotiate gradients up to a maximum of 15 %.

Risk of overturning when taking bends rapidly!



Danger!

The machine can topple-over when driving fast around curves.

- Drive slowly in curves.

Danger of tipping over given an unstable travelling surface!



Danger!

The machine can tip over given an unstable travelling surface.

- Move the machine exclusively on a solid travelling surface.

Danger of tipping over given a sideways incline that is too large!



Danger!

The machine can tip over given an incline of more than 15 %.

For our environment

Caution, danger to the environment from used batteries!



Do not dispose of exhausted batteries as ordinary household garbage.

- Ensure environmentally compatible disposal.

Endangerung of environment by packaging materials!




Domestic rubbish is not the proper place for used packaging materials.

- Make sure that they are ecologically recycled.

Intended use

- This sweeper is intended for sweeping inside- and outside surfaces.
- It is not intended for use on public traffic routes.
- It is not suitable for health-hazardous dusts.

Function description - sweeping machine

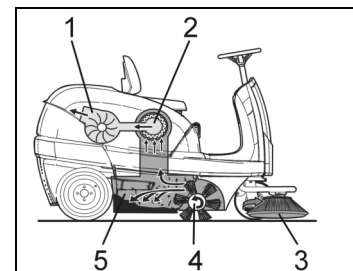


The KM 100/100 R sweeper operates according to the throw-over principle.

- The side brush (3) cleans corners and edges of the sweeping surface and transports the dirt in the path of the main brush.
- The rotating main brush (4) transports the dirt directly into the debris container (5).
- The dust swirled up in the container is separated by way of the dust filter (2) and the filtered, clean air removed by the suction turbine (1).

Control elements




1. Steering wheel
2. Raising/lowering coarse-dirt flap pedal
3. Forward driving/reversing drive pedal

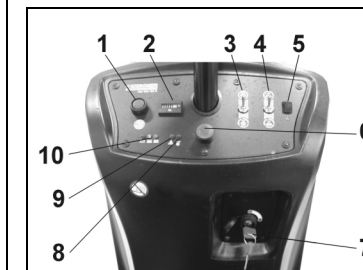

1. Horn
2. Elapsed-time meter
3. Raising/lowering main brush
4. Raise/lower side brush
5. Filter de-duster
6. EMERGENCY-STOP switch
7. Key-operated switch
8. Drive system overload warning
9. Main brush overload warning
10. Battery charge indicator

Machine components

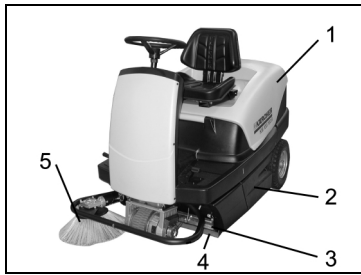

- 1. Unit cover
- 2. Debris container (bilateral)
- 3. Coarse-dirt flap
- 4. Roller
- 5. Side brush

Before first operating

The sweeper has an electric drive. The machine can be pushed only if the trigger is pulled away from the wheel. (See chapter: Moving the sweeper without its own drive)

Open/close unit cover



- Open unit cover
- Swivel unit cover upwards at the provided handle grip



When opened the unit cover is secured by a stay bar.



- Pull stay bar out of the bracket




- Insert the stay bar into the adapter at the suction turbine
- To close the unit cover pull the stay bar out of the holder and engage it in the bracket in the unit cover

Operating sweeping machine without automotive power



Danger!
Prior to manually releasing the parking brake the sweeper is to be secured against movement. After the parking brake is released the sweeper coasts unbraked.

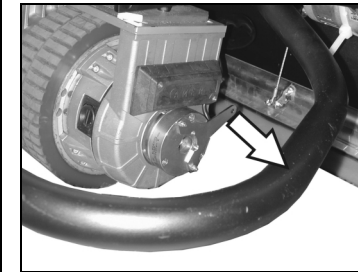

- Pull the brake lever away from the wheel and hold it tight in this position
- The function of the parking brake is thus out of action and the sweeper can be pushed

Unloading instructions



Warning!
Generally it is not permitted for the parking brake to be released when loading the machine.

- The machine was secured on a pallet with stretch belts or ropes for safe transport. Proceed as follows when unloading:
 - Cut the plastic packing tape and remove the film.
 - Remove the blocks for securing the wheels and drive the machine off the pallet using a suitable ramp.



Warning!
Do not use a fork lifter for unloading; the machine can be damaged by it.

Before every operation

General notes

- Stand sweeper on a flat surface
- Turn off key switch (position "0")

Testing and maintenance work

- Check charge condition of battery *
- Check side brushes *
- Check main brush *
- Empty the swept material container
- Check tyre inflation pressure *


* See maintenance work chapter for instructions

Commissioning

Adjust driver seat




- Open unit cover, engage stay bar

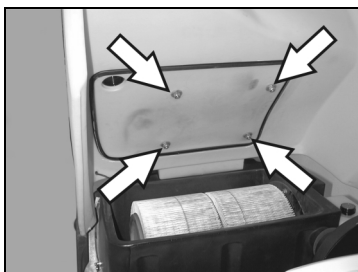


- Slightly loosen wing nuts of seat runners
- Push the seat into the appropriate position
- Retighten wing nuts

Note:

There is a further adjustment possibility if the adjusting range is insufficient

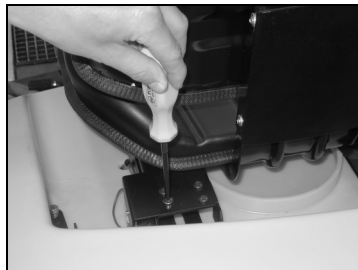

- Unscrew the 4 screws at the seat contact switch plate
- Remove the plate
- Turn the seat forward

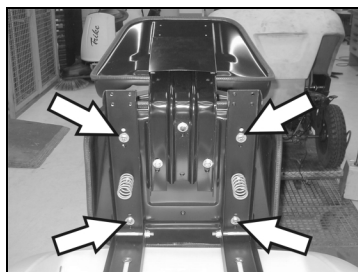

- Unscrew 4 screws of seat mounting
- Shift seat and refasten with screws
- Remount seat contact switch plate

Switching on the machine

- Sit on the driver seat
- Do NOT actuate the drive pedal!

Note:

The machine is equipped with a seat contact switch. The machine is switched off and the parking brake is automatically applied when the driver leaves his seat.



- The main brush and side brush switches are in their upper position



- Turn the key switch to position "I"

Run machine



Danger


Do not stand up when driving – danger of falling.

Prior to start of the machine



- The main brush and side brush switches are in their upper position

- Switching on the machine

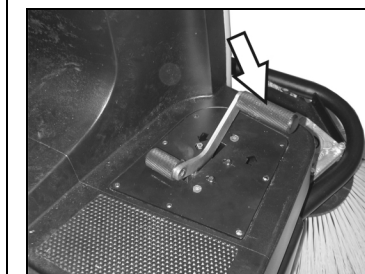

Drive forwards

- Slowly press the driving pedal

Sweeping operation




Warning!

In order to avoid damaging the floor do not operate the sweeper while it is stationary. When stopped the sweeping system continues running for approx. four more seconds.



Danger

Do not stand up when driving – danger of falling.

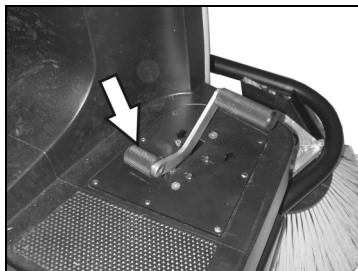

Drive backwards

- Slowly press the driving pedal

Note:

Driving behaviour

- The driving speed can be varied continuously with the driving pedals.
- Slightly release drive pedal if power decrease is registered uphill.

Braking

- Ease pressure on drive pedal, the sweeper brakes automatically and stops.



Warning!

If while the drive pedal is actuated the seat contact switch or the key switch are turned on the drive system will be turned off and the side brush, the main brush, the blower fan as well as the LEDs will be turned on. (Service operation)

Remedy:

- Release pedal



- Lower main brush



— Sweeping with the main brush



Warning!

It is possible for debris to be thrown forwards when the coarse-dirt flap is raised.

A hazard for bystanders.



Raise coarse-dirt flap

- Press pedal forwards and keep it depressed
- To lower it, lift foot off pedal



— Sweeping with raised coarse-dirt flap

Note:

An optimal cleaning effect can be achieved only when the coarse-dirt flap is completely lowered



- Lower side brushes (for sweeping in border areas)




— Sweeping with side brushes

Notes:

- When they are lowered the main and the side brushes automatically start turning
- Adding the function of the side brush is possible only if the main brush is operative

Stop machine

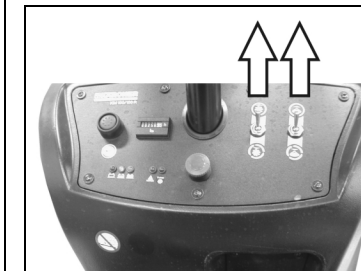

- Raise the side and the main brush



- Turn key switch to "0" and remove key

Note:


The dust filter is automatically dedusted for approx. 15 s after shutting down of the machine. Do not open the unit cover while this is going on.

Note:

The machine is provided with an automatic parking brake, which is activated when the engine is stopped and the driver leaves his seat.

Empty the swept material container

- Wait until automatic filter dedusting is completed and the dust has settled before opening the debris container and emptying it.

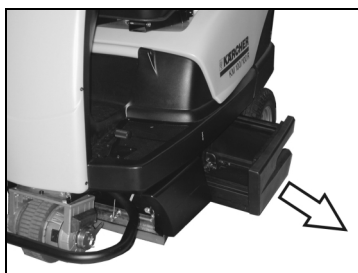

- Pull out debris container
- Empty the swept material container
- Slide in and lock the debris container
- Then perform the same operations on the opposite debris container

Usage instructions

Safety instructions when sweeping




Warning!

- Never sweep up packing straps, wires or the like as this could damage the sweeping mechanism.
- When the coarse-dirt flap is open, the main brush can hurl stones or stone chips forwards. Make sure that nobody, no animals or objects are endangered.

Notes:


- For optimum cleaning effect, match the driving speed to suit the actual conditions.
- During operation the debris container should be emptied at regular intervals.
- Lower only the main brush when sweeping large floor surfaces.
- Also lower the side brush when cleaning inner surface edges.

Sweeping dry ground

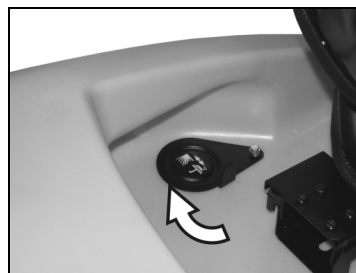

- Close the bypass cover on left behind the seat

Sweeping damp or wet ground

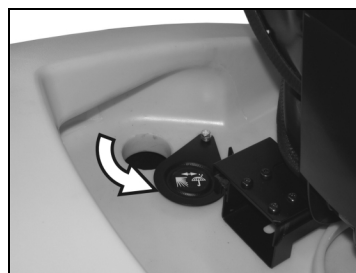

- Open the bypass cover on left behind the seat
- This protects the filter from damp

Driving over obstacles

Fixed obstacles of up to 50 mm in height

- Slowly and carefully drive over them in the forward direction.

Fixed obstacles over 50 mm in height

- May be driven-over only with a suitable ramp.

Drive system overload warning

To prevent damage to the drive system the sweeper is provided with an overload warning and a shut-off.



- The overload warning flashes if the overload of the drive system reaches a critical stage. The overload can be sustained for 1 min. , after which the sweeper is switched off by the control.
- The control switches the sweeper off immediately if the drive system's overload exceeds the overload limit.

Resetting

- Stop machine
- Turn the key switch to position "0"
- Turn the key switch to position "I"

Sweeping system overload warning

In order to avoid damage to its sweeping system the sweeper is provided with an overload warning and a shut-off.



- If the load on the sweeping system reaches the overload limit the overload warning lights up and the control switches the sweeping system off after 4 s.

Resetting

- Switch off sweeping system
- Turn the key switch to position "0"
- Turn the key switch to position "I"

Battery discharging warning

Green

Battery is charged

Yellow

Battery is almost dead

- Stop sweeping and charge battery

Red

Battery flat

— Sweeping system switched off by control

- Charge the battery see chapter on "Maintenance"

Flashing red

— Discharge limit reached
— 3 more min. driving possible, then the sweeper turns itself off

- Then the sweeper cannot be restarted any more, the battery must be recharged for at least 3 hours

Decommissioning

Please heed the following if sweeper is not to be used for a lengthy period:

- Stand sweeper on a flat surface
- Turn key switch to "0" and remove key
- Safeguard the sweeping machine from rolling away
- Clean inside and outside of sweeper
- Turn off the machine on a protected and dry place
- Charge the battery and recharge it at intervals of approx. every two months

Transport

Transport instructions

- Turn key switch to "0" and remove key
- Secure the machine with wedges on the wheels
- Secure the machine with stretch belts or ropes



Fastening areas

Notes:

Observe markings for fastening areas on base frame! (chain symbols)

For loading or unloading the machine may be operated on slopes of only up to a max. of 18 %

Cleaning and maintenance

- Stand sweeper on a flat surface
- Turn key switch to "0" and remove key

Internal cleaning



Danger!

Wear dust mask!

Wear safety goggles!

- Open unit cover, engage stay bar
- Clean with a rag

Note:

The filter cartridge can be cleaned with water.

Prior to re-inserting it the filter must be completely dried.

External cleaning

Clean with a damp cloth previously soaked in mild suds

Note:

Do not use any aggressive cleaning agents!

Maintenance intervals

Elapsed-time meter



Elapsed-time meter indicates maintenance interval times.

Maintenance by the customer

Daily maintenance

- Check the tyre air pressure
- Check roller and side brush for wear and trapped straps
- Check the function of all operating controls

Maintenance weekly

- Checking the battery acid level
- Check freedom of movement of Bowden cables and moving parts
- Check setting and wear of sealing strips in sweeping area
- Checking the vacuum system

Maintenance every 100 operating hours

- Check operation of seat contact switch
- Check tightness, wear and operation of drive belts (V-belts and round belts)

Maintenance according to degree of wear

- Replace sealing strips
- Replacing the sweep roller
- Replacing the side broom

See maintenance tasks chapter for description

Note:

All service and maintenance work must be performed by qualified and skilled personnel.

A Kärcher specialist dealer can be consulted whenever support is necessary.

Maintenance by the customer service department

Maintenance after 8 operating hours
First inspection

Maintenance after 20 operating hours

Maintenance every 100 operating hours

Maintenance every 300 operating hours

Maintenance every 500 operating hours

Maintenance every 1000 operating hours

Maintenance every 1500 operating hours

Note:
To safeguard warranty rights, during the warranty period all service and maintenance work must be performed by an authorised Kärcher after sales service.


Maintenance tasks


Notes on safety

 **Warning!**


- Preparations*
- Stand sweeper on a flat surface
 - Turn key switch to "0" and remove key

Battery safety instructions

 **Danger!**
Always heed safety precautions for handling batteries!
Comply with the battery manufacturer's service manual
Work on batteries is permitted only after instruction by trained personnel

 **Danger!**


- Wear safety goggles and protective clothing
- Observe regulations for the prevention of accidents as well as DIN VDE 0510, VDE 0105 T.1

 **Danger!**
Risk of fire and explosion!


- Smoking prohibited
- No naked flames, glowing embers or sparks in the vicinity of batteries
- Do not place any objects or tools on the battery because voltage is always present between the battery poles
- Areas in which batteries are charged must be well ventilated, as highly explosive gas forms during charging

Danger of acid burns!


- Rinse out or rinse off splashes of acid in the eye or on the skin with copious quantities of clean water
- Then consult a doctor immediately
- Wash contaminated clothing with water

 **PB**


- Old batteries with this symbol are reusable commodities and must therefore be returned for recycling
- Old batteries which are not returned for recycling must be disposed of as special waste, thereby observing all statutory regulations

 **Danger!**
Have the battery installed only by a Kärcher service mechanic and in compliance with the battery manufacturer's specifications

Charge the battery

 **Danger!**
The unit cover must remain open while the battery is charged.
Explosion hazard!


KM 100/100 R:

 **Danger!**

- Always heed safety precautions for handling batteries!
- Charge the battery with an appropriate charger recommended by Kärcher (manufacture no.: 6.654-107)
- Strictly comply with the specifications of the battery charger's and the battery's manufacturers

KM 100/100 R P:

- Open unit cover, engage stay bar
- Insert power plug

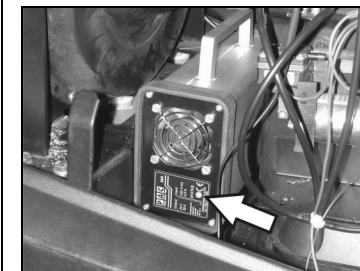

Charging condition indicator

Yellow
Battery is charging

Green
Battery is charged

Red
Fault, inform Kärcher's after-sales service


Check and top up the battery's fluid level



Warning!

- Regularly check the fluid level of acid-filled batteries.

- Open all cell plugs

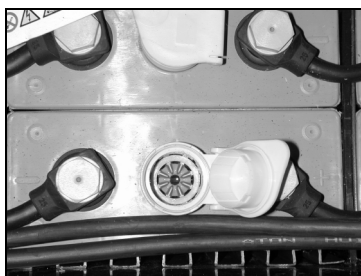

- If the fluid level is too low fill up cells with distilled water up to mark

- Close cell plugs
- Charge the battery

Check the tyre air pressure



- The air pressure in the rear tyres must be set to 6 bar.

Changing wheels



Danger!

Preparations

- Stand sweeper on a flat surface
- Turn off key switch and remove the key
- Wear warning clothing when performing repair work on public streets where it is dangerous because of moving traffic .
- Check that the ground is stable
- Protect the machine additionally from moving with a wheel chock

Recommended express assistance:

- Check the tyre tread for imbedded objects
- Remove the objects
- Use a suitable, commercially available tyre repair agent

Notes:

*Comply with the recommendations of the respective manufacturers
Continuing the journey is possible if the recommendations of the product manufacturer are observed
Change the tyre or the wheel as soon as possible*

- Unscrew wheel bolt
- Place the jack in position



Jack fixing point (rear wheels)


- Lift the machine with the jack
- Remove wheel bolt
- Slide the wheel off
- Position the spare wheel
- Screw in wheel bolt
- Lower the machine with the jack
- Tighten wheel bolt

Note:


Use an appropriate, commercially available jack and a chock

Checking the vacuum system


- Adding a sweeping system is with the aid of a vacuum system.
- If the side brush or the main brush cannot be lowered check the vacuum canisters for proper connection of the hose lines, if applicable re-connect the hose concerned.
- The vacuum system is leaky if the side brush or the main brush still cannot be lowered. In this case after-sales service must be contacted.

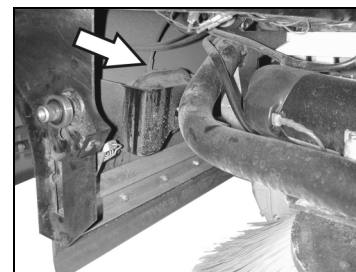

Hose connection to vacuum canister of side brush lowering

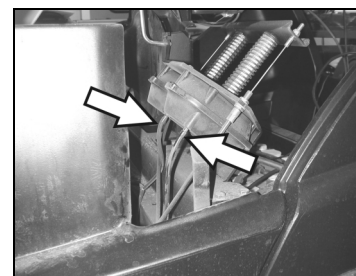

Hose connections to vacuum canister for lowering main brush

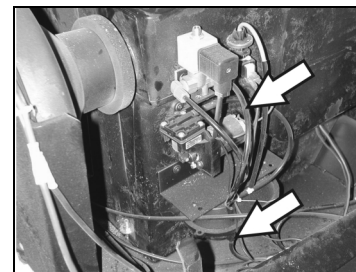


Hose connections to vacuum pump and to vacuum canister (storage)

Note:


*The vacuum pump operates only if vacuum is built-up in the system.
Consult after-sales service if the pump operates continuously.*

Checking traction belt

- The traction belts must be regularly checked for wear and damage.

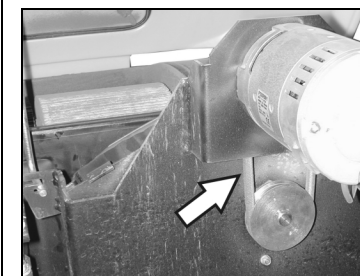


Traction belt for suction turbine

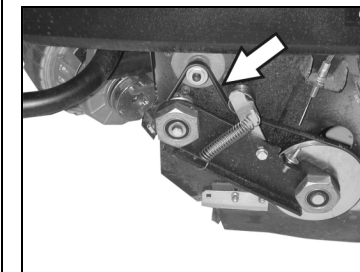

Traction belt for main brush

Checking the sealing cup

- The sealing cup must be regularly checked for a proper fit.

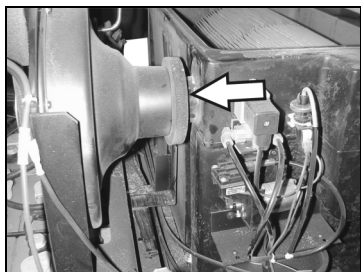

Sealing cup at the suction turbine


Check the sweep roller

- Stand sweeper on a flat surface
- Raise the sweep roller
- Turn key switch to "0" and remove key
- Secure the machine against rolling away using a wedge
- Remove the debris container from both sides of the unit



- Remove tapes and string from the sweep roller


Replacing side brush

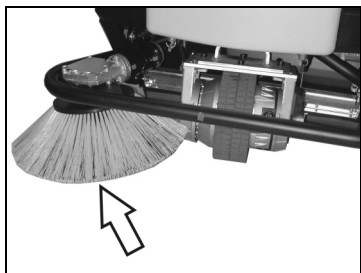


- Unscrew fastening screws (3 pieces) at the underside
- Slip side brush on carrier and screw it tight

Replace the sweep roller

- Replacing it is necessary when the sweeping effect visibly deteriorates due to wear of the bristles.
- Stand sweeper on a flat surface
- Raise the sweep roller
- Turn key switch to "0" and remove key
- Secure the machine against rolling away using a wedge
- Remove the debris container from both sides of the unit

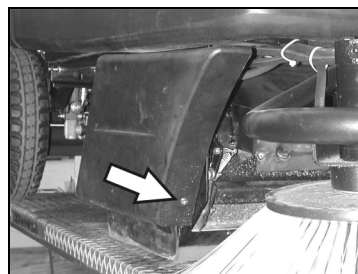


- Unscrew front screw of right side panellint

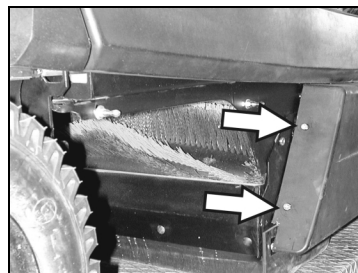


- Unscrew rear screws of right side panelling

Replace the sweep roller


- Replacing it is necessary when the sweeping effect visibly deteriorates due to wear of the bristles.
- Stand sweeper on a flat surface
- Raise the sweep roller
- Turn key switch to "0" and remove key
- Secure the machine against rolling away using a wedge
- Remove the debris container from both sides of the unit

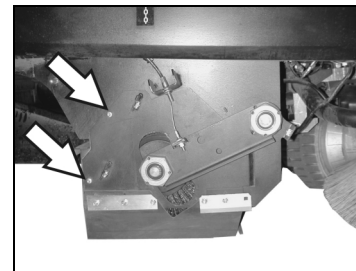


- Unscrew screws

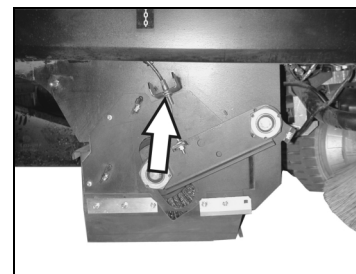


- Loosen fastening screw of the bowden cable and unhitch the cable

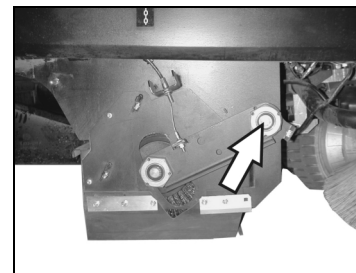

- Unscrew the screw at the fulcrum of the main brush rocker arm

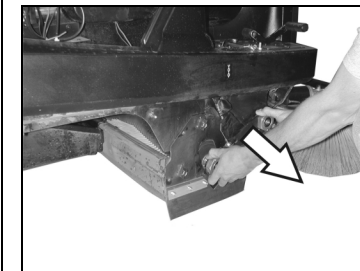

- Pull off the main brush rocker arm

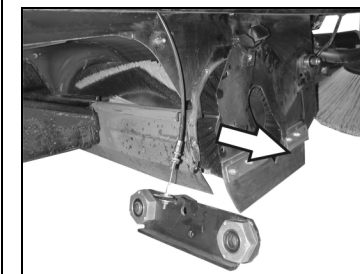

- Lift off cover and remove main brush



- Slide the new main brush into the main brush box and slip it onto the drive peg

Notes:


- Pay attention to the position of the bristle set when installing the new main brush!
- The bowden cable is to be adjusted so that the main brush is raised approx. 10 mm from the floor.
- Follow the instructions in reverse to mount the main brush rocker arm
- Screw on side panelling
- Insert the swept material container

Adjusting and replacing sealing strips

- Stand sweeper on a flat surface
- Raise the sweep roller
- Turn key switch to "0" and remove key
- Secure the machine against rolling away using a wedge
- Remove the debris container from both sides of the unit
- Screw off side panelling on both sides




- Unscrew front screw of side panelling

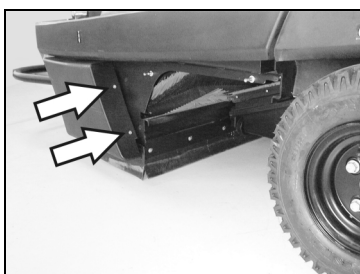


- Unscrew rear screws of side panelling

Front sealing strip

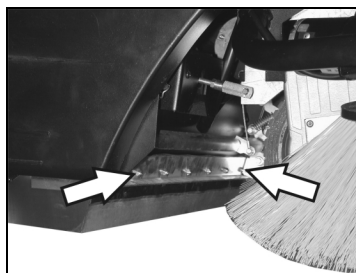


- Slightly loosen fastening nut at the front sealing strip, unscrew it to replace it
- Screw on new sealing strip but do not yet tighten nuts

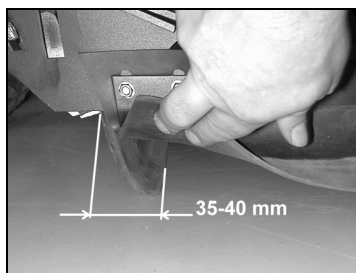


- Align the sealing strip
- Set the sealing strip's clearance to the floor so that it bends backwards with a lag of 35 - 40 mm
- Tighten nuts

Rear sealing strip

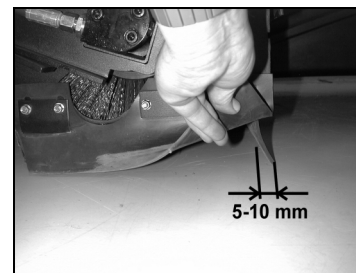


- The floor clearance of the sealing strip is set so that it bends backward with a lag of 5 - 10 mm
- Replace if worn
- Dismantle the sweeping drum

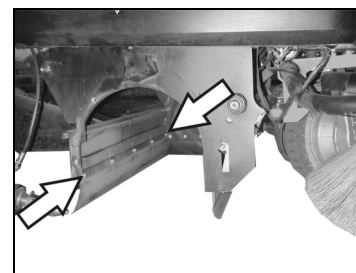

- Unscrew fastening nuts of the rear sealing strip
- Screw on new sealing strip

Side sealing strips

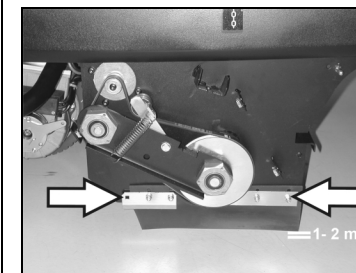

- Slightly loosen fastening nuts of the side sealing strip, unscrew them to replace it
- Screw on new sealing strip but do not yet tighten nuts
- In order to set the clearance to the floor slide in the 1 - 2 mm spacer
- Align the sealing strip
- Tighten nuts
- Screw on side panelling
- Insert the swept material container


Replace the dust filter



- Empty the debris container prior to beginning work on replacing the dust filter
- Wear a dust protection mask when working on the filter system
- Observe the safety precautions for handling fine dust



- Open unit cover, engage stay bar

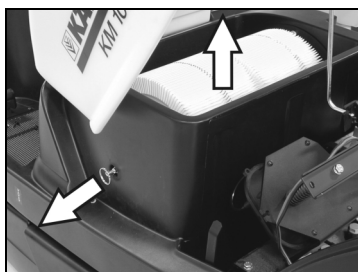

- Pull out the handle of the filter bracket and engage it
- Take out filter cartridge
- Insert the new filter



- On the drive side, engage the carrier into the holes
- Re-engage the handle of filter dedusting


Note:
Make sure when mounting the new filter that the lamella are not damaged

Replacing the filter box seal




Remove filter box seal from the groove in the unit cover and insert the new seal

Changing fuses

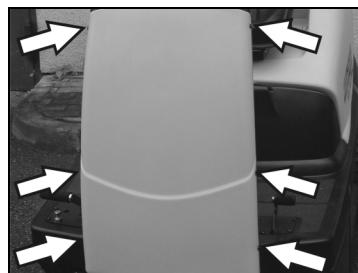


- Unscrew the screws at both sides of the covering

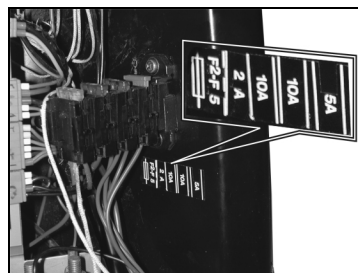

- Replacing blown fuses
- Refasten front covering

Note:
— Use only fuses with the same current rating

Battery terminal fuse

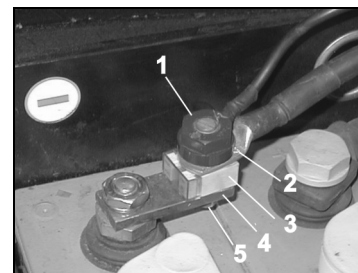

- Replace defective fuses

- 1 Nut
- 2 Battery charging cable
- 3 Terminal fuse
- 4 Bridge
- 5 Screw

Note:
It is strongly recommended to have this work performed by a Kärcher after-sales service station or an authorised specialist.

Fault instructions

Machine does not move

- Sit on the driver seat
- Disable the EMERGENCY-STOP
- Switch ON key switch
- Charge the battery
- Check fuses
- Notify the Kärcher service station

The sweeper moves only slowly

- Check position of the parking brake
- Notify the Kärcher service station

Machine not sweeping properly

- Main brush and side brush are worn, if applicable replace them
- Main brush does not turn, check traction belt
- Check the operation of the coarse-dirt flap
- Check sealing strips for wear, adjust or replace them as required
- Check the seal on the vacuum system
- Notify the Kärcher service station

Machine making dust

- Empty debris container
- Check drive belts for the suction turbine
- Check sealing cup at the suction turbine
- Check filter cartridge, clean or replace it
- Check filter box seal
- Check sealing strips for wear, adjust or replace them as required
- Notify the Kärcher service station

Side brush does not turn

- Check the fuse
- Notify the Kärcher service station

Poor sweeping around the edges

- Replacing the side broom
- Notify the Kärcher service station

Activation of side brush or main brush does not function

- Check the seal on the vacuum system
- By-pass cover open
- Notify the Kärcher service station

Accessories

Side brush	6.905-986
Provided with standard bristles for indoor and outdoor surfaces.	
Soft side broom	6.906-133
For fine dust on indoor surfaces, resistant to moisture.	
Hard side broom	6.906-065
For cleaning hard to remove dirt from outdoor surfaces.	
Standard main brush	6.906-375
Wearproof and wetproof. Universal bristles for indoor and outdoor cleaning.	
Main brush soft	6.906-533
With natural bristles specially for sweeping fine dust on smooth indoor floors. Not moisture-resistant, not for abrasive surfaces.	
Main brush hard	6.906-532
For removing stubborn external dirt, damp-proof.	
Filter cartridge	6.414-532
Battery set	6.654-112
Battery charger	6.654-143

Technical data**Unit data**

Length x width x height	2006 x 1005 x 1343 mm
Empty weight	300 kg
Permissible total weight	660 kg
Empty dead weight	470 kg
Driving/sweeping speed	5,5 km/h
Climbing ability max.	18 %
Main brush diameter	285 mm
Main brush width	710 mm
Side brush diameter	450 mm
Area performance with 2 side brushes	7150 m ² /h
Working width without side brush	710 mm
with side brush	1000 mm
Volume of debris container	100 litres
Protection class	drip-proof IPX 3
Motors	
Traction motor:	
Type	wheel-hub motor in front wheel
Design	direct-current permanent-magnet motor for forward driving and reversing
Voltage	24 V
Rated current	37 A
Rated power	750 W
Protection class	IP44
Speed	infinitely variable

Fan and main brush motor:	
Type	direct-current permanent magnet motor
Model	B14
Voltage	24 V
Rated current	35 A
Rated power	600 W
Protection class	IP20
r.p.m.	3500 1/min

Side brush motor:	
Type	direct-current permanent magnet motor
Design	Gear motor (bevel gear)
Voltage	24 V
Rated current	5 A
Rated power	100 W
Protection class	IP44
r.p.m.	70 1/min

Battery

Type	24V 4 PzS 240 I
Capacity	240 Ah
Charging time of a completely flat battery	10...15 h
Operating time following repeated charging	approx. 2,5 h

Battery charger:

Mains voltage	230 V, 50 Hz
Output voltage	24 V
Output current, max.	30 A

Fuses

Master fuse	150 A
Side brush motor	30 A
Filter drive motor	10 A
Control	5 A
Vacuum pump	2 A

Tyres

Large-size, rear	4.00-8.00
Air pressure - rear	6 bar

Brake

Service brake	electronic
Parking brake	disk brake electrically actuated (with spring)

Filter and suction system

Fine dust filter surface	6,0 m ²
Filter's application class for non-health hazardous dusts	U
Rated vacuum of suction system	12 mbar
Rated volumetric flow of suction system	50 l/s

Ambient conditions

Temperature	-5 - +40° C
Atmospheric humidity, non-dew developing	20 - 90 %

Vibrations of unit**(ISO 5349 and ISO 2631-1)**

Upper limbs	1,79 m/s ²
Whole-body seat	0,85 m/s ²
Total body feet	0,85 m/s ²

Noise emission

Sound pressure level (EN 60704-1)	75 dB(A)
Guaranteed sound power level (2000/14/EC)	93 dB(A)

EC conformity declaration

We hereby declare that the machine specified below as the marketed design, the machine specified below complies with the relevant fundamental safety and health requirements of the EC directives listed below.

Modification of the machine without our approval invalidates this declaration.

Product: Ride-on vacuum sweeper

Type: 1.280-xxx

Relevant EC directives

EC machine directive (98/37/EC)

EC low voltage directive (73/23/EEC) amended by 93/68/EEC

EC directive on electromagnetic compatibility (89/336/EEC) amended by 91/263/EEC, 92/31/EEC, 93/68/EEC
EC guideline on noise emissions (2000/14/EU)

Applied harmonised standards

DIN EN 60 335-1

DIN EN 60 335-2 - 29

DIN EN 60 335-2 - 72

DIN EN 55 014-1: 2000+A1: 2001

DIN EN 55 014-2: 1997

DIN EN 61 000-3-2: 2000

DIN EN 61 000-3-3: 1995+A1: 2001

Applied national standards

Applied conformity valuation method

Appendix V

Measured sound power level:
91 dB(A)

Guaranteed sound power level:
93 dB(A)

Internal measures ensure that the in series produced units always comply with the requirements of current EC directives and applied standards. The signatories act for and in authority of management.

5.957-695 (01/02)

Alfred Kärcher Limited Partnership.
Registered office: Winnenden.
Registration court: Waiblingen, HRA 169.
Personally liable partner. Kärcher Reinigungstechnik GmbH.
Registered office Winnenden, 2404 Waiblingen Company Register, HRB

Managing directors:
Dr. Bernhard Graf, Hartmut Jenner,
Georg Metz

Alfred Kärcher GmbH & Co. KG
Cleaning Systems
Alfred-Kärcher-Strasse 28-40
P.O.Box 160
D-71349 Winnenden
Phone: ++49 7195 14-0
Fax :++49 7195 14-2212



(Reiser Jenner)

DE

Manuelle Filterabreinigung

Beim Kehren großer Flächen regelmäßig Staubfilter abreinigen.



- Taste Filterabreinigung kurz drücken. Der Staubfilter wird ca. 15 Sekunden lang abgereinigt. In dieser Zeit die Gerätehaube nicht öffnen.

EN

Manual filter cleaning

Clean the dust filter regularly when sweeping large surfaces.



- Press filter cleaning switch briefly. The dust filter is cleaned for approx. 15 seconds. Do not open the unit cover during this period.

FR

Nettoyage manuel du filtre

Lors du balayage de surfaces importantes, nettoyer régulièrement le filtre antipoussière.



- Appuyer brièvement sur la touche nettoyage du filtre. Le filtre antipoussière est nettoyé pendant env. 15 secondes. Ne pas ouvrir le capot de l'appareil pendant ce temps.

IT

Pulizia manuale del filtro

Durante la spazzatura di superfici grandi pulire regolarmente il filtro antipolvere.



- Premere brevemente il tasto per pulizia filtro. Il filtro antipolvere viene pulito per ca. 15 secondi. Durante questo tempo, non aprire il cofano dell'apparecchio.

NL

Manuele filterreiniging

Bij het vegen van grotere oppervlakken regelmatig stoffilter reinigen.



- Toets filterreiniging kort indrukken. Het stoffilter wordt ca. 15 seconden lang schoongemaakt. In deze tijd de apparaatkap niet openen.

ES

Limpieza manual del filtro

Al barrer superficies grandes limpie el filtro de polvo a intervalos regulares.



- Apriete brevemente el pulsador para la limpieza del filtro. El filtro de polvo se limpia durante unos 15 segundos. No abra la capota de los equipos durante la limpieza.

PT

Limpeza manual do filtro

Ao varrer grandes superfícies, limpar regularmente o filtro de poeira.



- Premir a tecla de limpeza do filtro durante um curto espaço de tempo. O filtro de poeira é limpo durante aprox. 15 segundos. Durante este período não abrir a tampa do aparelho.

EL

Καθάρισμα φίλτρου με το χέρι

Κατά το σκούπισμα μεγάλων επιφανειών να καθαρίζετε τακτικά το φίλτρο σκόνης.



- Πατήστε για λίγο το πλήκτρο καθαρισμού φίλτρου. Το φίλτρο σκόνης καθαρίζεται για περ. 15 δευτερόλεπτα. Κατά το διάστημα αυτό μην ανοίγετε το καπάκι της συσκευής.

DK

Manuel filterrengøring

Ved fejning af store arealer skal man regelmæssigt rengøre støvfiltret.



- Tryk kort på tasten Filterrengøring. Støvfiltret rengøres i ca. 15 sekunder. Undlad at åbne apparatets skærm i løbet af denne tid.

NO

Manuell filterrensing

Rens støvfilteret med jevne mellomrom når du feier store arealer.



- Trykk kort på tasten for filterrensing. Støvfilteret renses i ca. 15 sekunder. Ikke åpne maskindekslet i løpet av denne tiden.

SV

Manuell filterrensning

Vid sopning av stora ytor ska dammfiltret rensas regelbundet.



- Tryck på knappen för filterrensning kort. Dammfiltret rensas i ca 15 sekunder. Öppna inte maskinhuvens under denna tid.

FI

Suodattimen manuaalinen puhdistus

Puhdistusta pölysuodatin säännöllisesti suurilla alueilla lakaistessasi.



- Paina lyhyelti suodattimenpuhdistuspainiketta. Pölysuodattimen puhdistus kestää n. 15 sekuntia. Älä avaa tällä aikana laitteen kantta.

PL

Ręczne czyszczenie filtra

Przy zmiataniu dużych powierzchni należy regularnie czyścić filtr pyłu.



- Krótko nacisnąć przycisk czyszczenia filtra. Filtr pyłu jest czyszczony przez ok. 15 sekund. W tym czasie nie otwierać pokrywy urządzenia.

TR

Manüel filtre temizleme

Büyük alanların süpürülerek temizlenmesinde muntazam aralıklar ile toz filtresi temizlenmelidir.



- Filtre temizleme tuşuna kısaca basılmalıdır. Toz filtresi yaklaşık 15 saniye boyunca temizlenir. Bu süre içinde cihaz kapağı açılmamalıdır.


RU

Ручная чистка фильтра

При уборке больших площадей следует проводить регулярную чистку фильтра от пыли.



- Кратковременно нажать кнопку очистки фильтра. Фильтр от пыли очищается ок. 15 секунд. В это время кожух аппарата открывать нельзя.

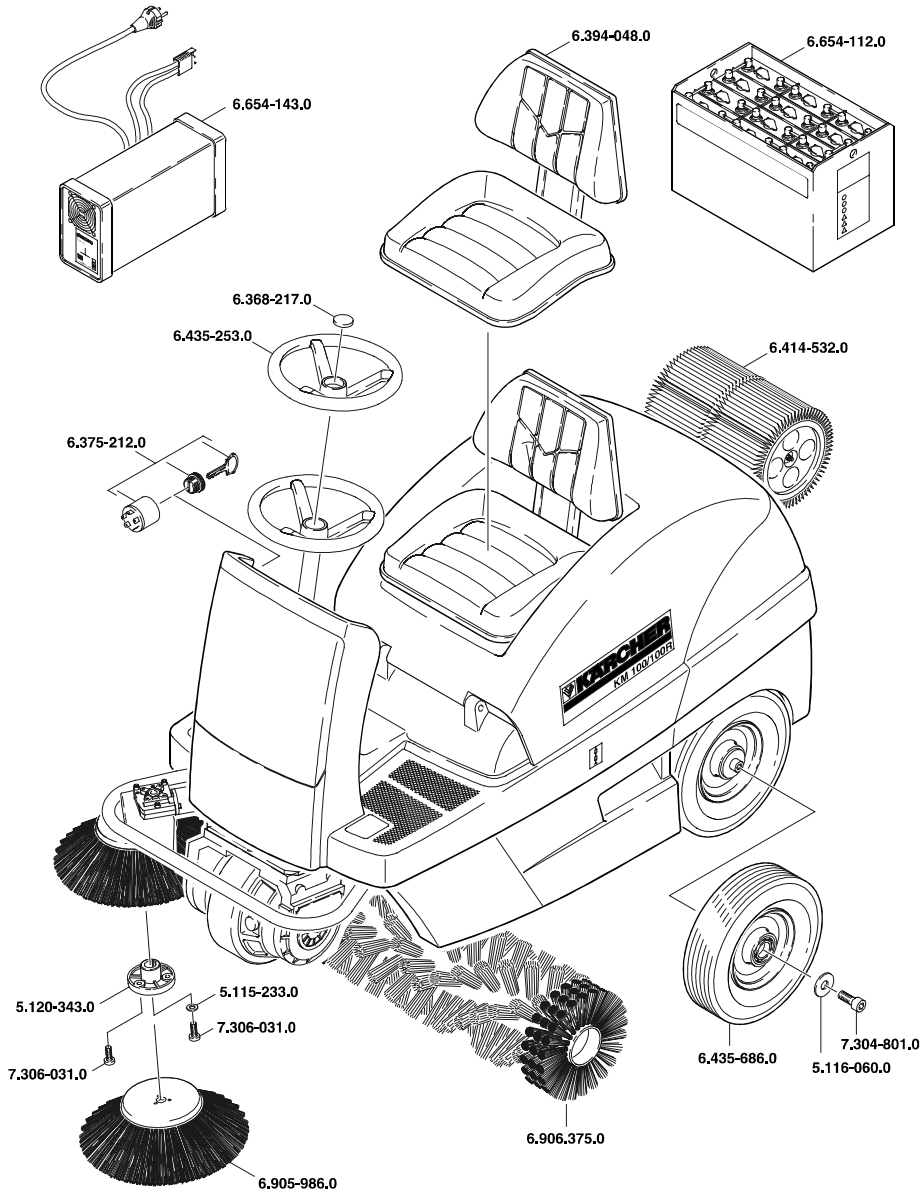

08.2002

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>