



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for KENMORE 665-7436. You'll find the answers to all your questions on the KENMORE 665-7436 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENMORE 665-7436
User guide KENMORE 665-7436
Operating instructions KENMORE 665-7436
Instructions for use KENMORE 665-7436
Instruction manual KENMORE 665-7436



ULTRA WASH® Dishwasher
Use & Care Guide

Lave-vaisselle ULTRA WASH®
Guide d'utilisation et d'entretien

Models/Modèles 665.7436*
* = color number, numéro de couleur



ENGLISH FRANÇAIS

8558367

Sears Canada Inc., Toronto, Ontario, Canada M5B 2B8

www.sears.ca



[Your user manual](#)
[KENMORE 665-7436](#)

Manual abstract:

" These words mean: You can be killed or seriously injured if you don't immediately follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. When using the dishwasher, follow basic precautions, including the following: m Do not operate the dishwasher unless all enclosure panels are properly in place. Do not tamper with controls. Use the dishwasher only for its intended function. â· Use only detergents or rinse agents recommended for use in a dishwasher, and keep them out of the reach of children. = When loading items to be washed: 1) Locate sharp items so that they are not likely to damage the door seal; and 2) Load sharp knives with the handles up to reduce the risk of cut-type injuries. M Do not wash plastic items unless they are marked "dishwasher safe" or the equivalent. Do not touch the heating element during or immediately after use.

M To reduce the risk of injury, do not allow children to play in or on the dishwasher. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using the dishwasher turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time. â· Remove the door or lid to the washing compartment when removing an old dishwasher from service or discarding it. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. The dishwasher is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt whether the dishwasher is properly grounded. Do not modify the plug provided with the dishwasher; if it will not fit the outlet, have a proper outlet installed by a qualified electrician. For a permanently connected dishwasher: The dishwasher must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the dishwasher. Install where dishwasher is protected from the elements. Protect against freezing to avoid possible rupture of fill valve. Such ruptures are not covered by the warranty. see "Storing" in the "Dishwasher Care" section for winter storage information. Install and level dishwasher on a floor that will hold the weight, and in an area suitable for its size and use. Remove all shipping plugs from hoses and connectors as the cap on the drain outlet) before installing.

Lower spray arm E Waterintet opening (in tub wall) The ULTRA WASH _ Soil Removal System gives you sparkling clean dishes, while using less energy and time. A heavy-duty grinder that acts as a food disposer to grind and dispose of large food particles, An ULTRA WASH Â®sensor to monitor soil level and adjust the cycles as needed. An Automatic Temperature Control (ATC) that ensures the proper water temperature for the selected wash cycle, and soil level of the load. You can also press START/RESUME to repeat the same cycle and options as the previous cycle. IMPORTANT: The Start/Resume light will begin flashing if the door is opened during a cycle. Power interruptions during a cycle may also cause the Start/Resume light to flash. Before using your dishwasher, remove all packaging materials. read this entire Use and Care Guide. You will find important safety information and useful operating tips. When the door is firmly closed, it latches automatically.

Remove leftover food, bones, toothpicks and other hard items from the dishes. To conserve water, energy and save time, it is not necessary to rinse dishes before putting them into the dishwasher. Be sure to fill the dispenser before you use your new dishwasher..



[Your user manual](#)
[KENMORE 665-7436](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>