REAR MONITOR MOUNTING KIT

SK-701RM


KENWOOD

INSTALLATION MANUAL

C PRINTED in the USA

PK-0089

PARTS LIST

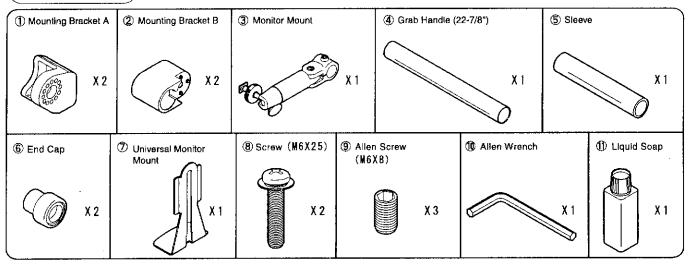

⚠ CAUTION

- 'To ensure safe installation of the mounting kit, adjust either the front seat or the mounting kit to prevent contact with front seat occupants.
- · To minimize the risk of improper installation and potential injuries, Kenwood recommends that the Installation of this unit be performed by a professional
- Screws must be tightened with the indicated torque (%1)
- This product must be used only as a monitor mount.
- · Maximum weight for the Grab Handle is 22 lb. Do not hang from it or subject it to unnecessary weight.
- *Installation must be performed according to this installation manual. Kenwood is not responsible for injuries arising from installations not performed strictly in accordance with the procedures in this manual.
- •This product is designed to be used with a monitor that is no larger than 8.3 x 5.3 x 1.6 in, weighing 1.25 lb or less. (8-inch wide monitor)
- · For rear seat installation only. The monitor must not be visible to the driver.


※1) What is torque?

The force required to tighten something is called torque. An adult using a normal screw driver (handle dia.30mm) exerts a force approx 0.72 ~ 1.45 ft.lb. Use a torque meter to measure torque during the installation.

BEFORE YOU BEGIN

FITTING EXAMPLE

The example figure shows an installation in the rear left side of a vehicle.

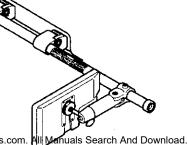

Download from Www.Somanuals.com.




- ⚠ If you can't remove the assist grip screw by using the above mentioned tools, please ask your local
- ⚠ To prevent damage to the car or product, use the proper tools. Ensure sufficient torque is exerted to tighten the screws.

REGULAR INSPECTION


To ensure continued safe operation, inspect the mount according to the following schedule. If any mounting screws have loosened, tighten them to the proper torque level (see other side for details).

liem	Inspect every month, or immediately after driving on a rough road	Inspect every 6 months	Inspect every year	Remarks
Monitor looseness	0	0	0	Refer to Step 5
Holder contact looseness	0	0	0	Refer to Step 3
Pipe contact looseness		0	0	Refer to Step 5
Vehicle mounting area looseness			Ο	Refer to Step 1

imes 2) It is especially important to inspect the mount after driving off-road or on mountain roads.

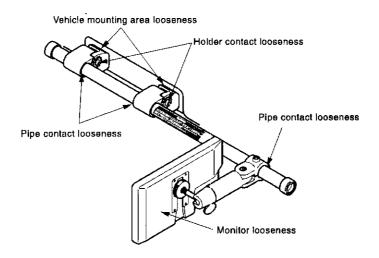


REMOVING THE ASSIST GRIP

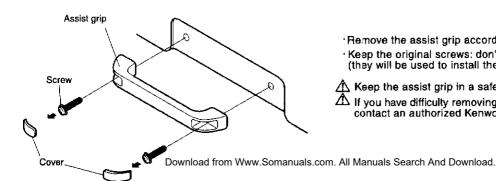



- Remove the assist grip according to the illustration at the left.
- · Keep the original screws: don't discard them (they will be used to install the monitor mount).
- 🗥 Keep the assist grip in a safe place.
- A If you have difficulty removing the assist grip, contact an authorized Kenwood dealer.

SK-701RM INSTALLATION GUIDE

1 Attach Mounting Brackets A using the original assist grip screws. (Torque: 1.45 ~ 1.81 ft.lb.) Use a torque meter to measure proper torque.

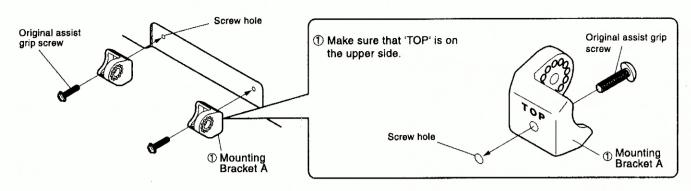

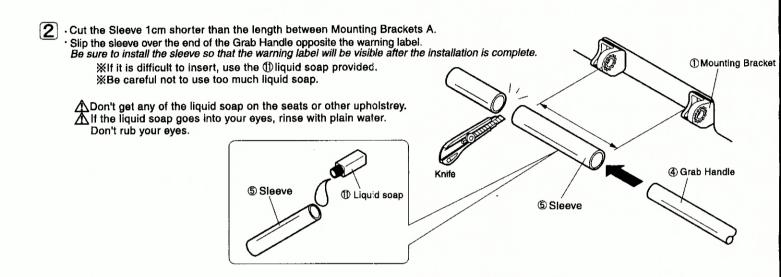


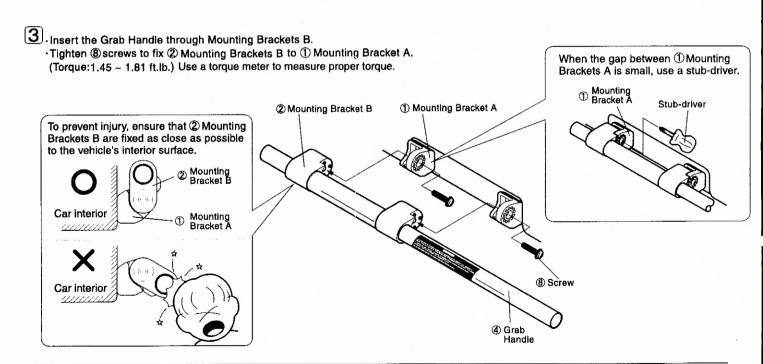

KENWOOD

www.kenwoodusa.com 1-800-KENWOOD

Copyright 2002 Kenwood USA Corp. All rights reserved

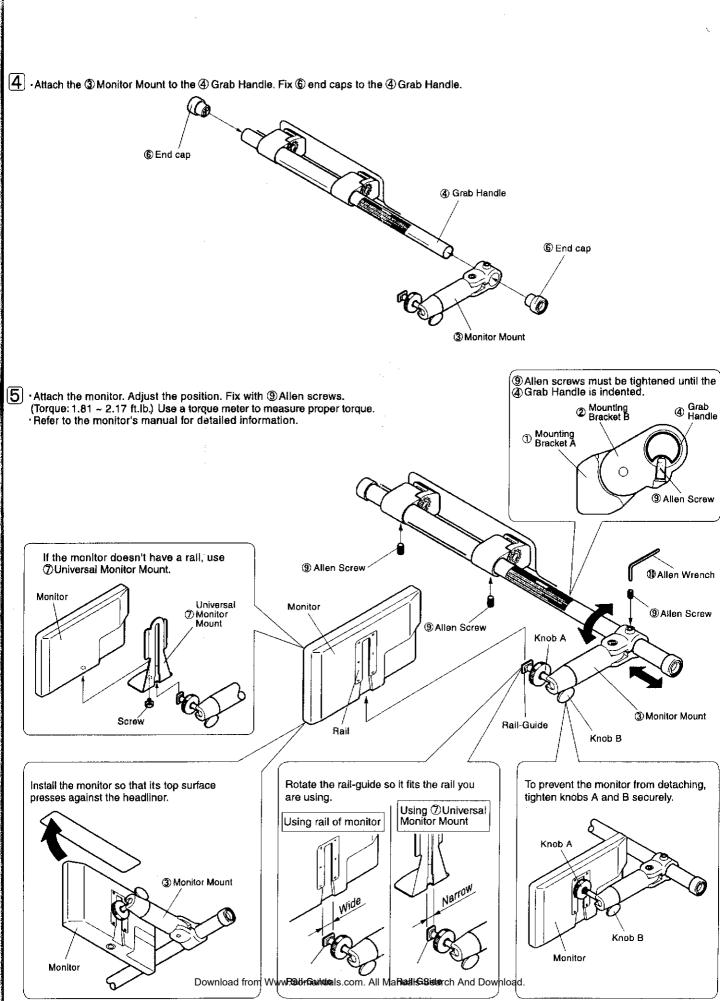

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com