

KitchenAid®

BLIKOPENER

GIDS VOOR HET BESTE RESULTAAT

CAN OPENER

GUIDE TO EXPERT RESULTS

OUVRE-BOÎTE

GUIDE DU CONNAISSEUR

DOSENÖFFNER

ANLEITUNG FÜR PROFI-ERGNISSE

APRISCATOLE

GUIDA PER OTTENERE RISULTATI PROFESSIONALI

ABRELATAS

GUÍA PARA CONSEGUIR RESULTADOS PROFESIONALES

KONSERVÖPPNARE

GUIDE FÖR BÄSTA RESULTAT

BOKSÅPNER

VEILEDNING FOR PROFESJONELLE RESULTATER

PURKINAVAAJA

OPAS PARHAISIIN TULOSSIIN

DÅSEÅBNER

SÅDAN FÅR DU DE BEDSTE RESULTATER

ABRE-LATAS

GUIA PARA RESULTADOS PROFISSIONAIS

DÓSAOPNARI

LEIÐBEININGAR UM RÉTTA NOTKUN

ΑΝΟΙΧΤΗΡΙ ΚΟΝΣΕΡΒΑΣ

ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ ΓΙΑ ΤΕΛΕΙΑ ΑΠΟΤΕΛΕΣΜΑΤΑ

English



Model 5CO

Can Opener

Designed exclusively for use with all
KitchenAid® Household Stand Mixers.

Table of Contents

Important Safeguards	1
Attaching Your Can Opener	2
Using Your Can Opener	2
Household KitchenAid® Stand Mixer Attachment Warranty	3
Service Centers.....	3
Customer Service	3

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put mixer in water or other liquid.
3. The appliance is not intended for use by young children or infirm persons without supervision.
4. Unplug mixer from outlet when not in use, before putting on or taking off parts and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate the mixer with a damaged cord or plug or after the mixer malfunctions, or is dropped or damaged in any manner. Return the mixer to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock or injury.
8. Do not use the mixer outdoors.
9. Do not let the cord hang over the edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. Check can opener for presence of foreign objects before using.
12. This product is designed for household use only.


SAVE THESE INSTRUCTIONS

Attaching Your Can Opener

To Attach:

Before attaching the Can Opener, turn off and unplug the stand mixer.

1. Depending on which type of hub you have, either flip-up the hinged cover or loosen the attachment knob (A) by turning it counterclockwise and remove attachment hub cover.
2. Insert the attachment shaft housing (B) into the attachment hub (C), making certain that the power shaft fits into the square hub socket. Rotate the attachment back and forth if necessary. When the attachment is in proper position, the pin on the attachment housing will fit into the notch on the hub rim.
3. Tighten attachment knob until attachment is completely secured to mixer.

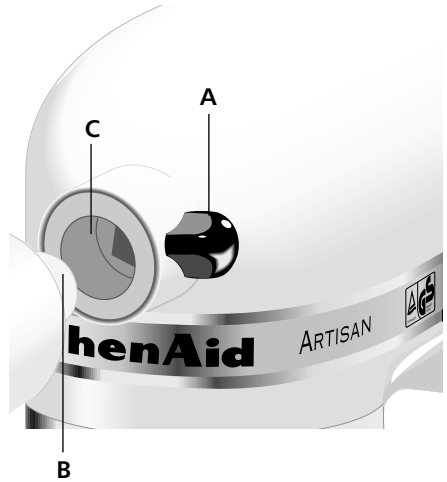

Using Your Can Opener

To Use:

1. Lift the handle (A) and rotate it to the right side.
2. Hold the can in a vertical position with the lid edge underneath and in back of the round knife and then rotate handle to left.
3. Turn to Speed 2. The top of the can will be cut and held from the contents of the can by the magnet.
4. Turn Speed Control to "O" (OFF). Hold can and rotate handle to the right side to release the can.



Household KitchenAid® Stand Mixer Attachment Warranty

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
Europe, Australia & New Zealand: Two Year Full Warranty from date of purchase.	Replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center.	A. Repairs when Can Opener is used for operations other than normal household food preparation. B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

Service Centers

All service should be handled locally by an Authorized KitchenAid Service Center. Contact the dealer from whom the unit was purchased to obtain the name of the nearest Authorized KitchenAid Service Center.

In the U.K.:

Call: 0845 6011 287

In Ireland:

M.X. ELECTRIC
Service Department
25 Alymer Crescent
Kilcock, CO.KILDARE

Call: 1 679 2398/87 2581574

Fax: 1 628 4368

In Australia:

Call: 1800 990 990

In New Zealand:

Call: 0800 881 200

Customer Service

In U.K. & Ireland: Tollfree number 00800 38104026

Address: KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

www.KitchenAid.com



FOR THE WAY IT'S MADE.®

® Registered Trademark of KitchenAid, U.S.A.

™ Trademark of KitchenAid, U.S.A.

The shape of the stand mixer is a trademark of KitchenAid, U.S.A.

© 2006. All rights reserved.

Specifications subject to change without notice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>