

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models: KDRS807SSS01


(Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10118264	Installation Instructions
	W10118263	Use & Care Guide
	W10112147	Tech Sheet
	9757680	Anti-Tip Instructions
		Safe Cooking Tips
	3191638	English
	9759133	French
	9763467	Guide Easy Set
2	W10110471	Burner Box
3	9761784	Bracket, Mounting
4	W10106380	Cooktop
5	3196537	Screw
6	9757807	Thermostat
7	3400843	Screw
8	W10108030	Bracket, Spark Module
9	9763445	Bracket, Burner
10	8301084	Shield, Heat
11	8522426	Module, Spark
12	9761555CB	Grate, Burner (RH)
13	9761556CB	Grate, Burner (LH)
14	3368921	Screw
15	W10109770	Backsplash
16	9759944	Thermostat
17	9763483BL	Gasket, Backsplash
18	9761557CB	Grate, Insert
19		Cap, Burner
	9761563CB	12.5K (RR)
	8284669	6K (RF, LR)
20	9761749BL	Glass, Backsplash
21	3196160	Screw
22	9762768	Clip, Retainer(3)
23	9761755	Cover, Cooktop Rear
24	9763436	Cover, Top Rear
25		Head, Burner
	8286182	Large (RR)
	8286181	Small (LR,RF)
26	W10109920	Gasket
27	9761577	Panel, Backsplash
28		Trim, Cooktop
	W10110684	Right
	W10110679	Left

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: KDRS807SSS01
(Stainless)

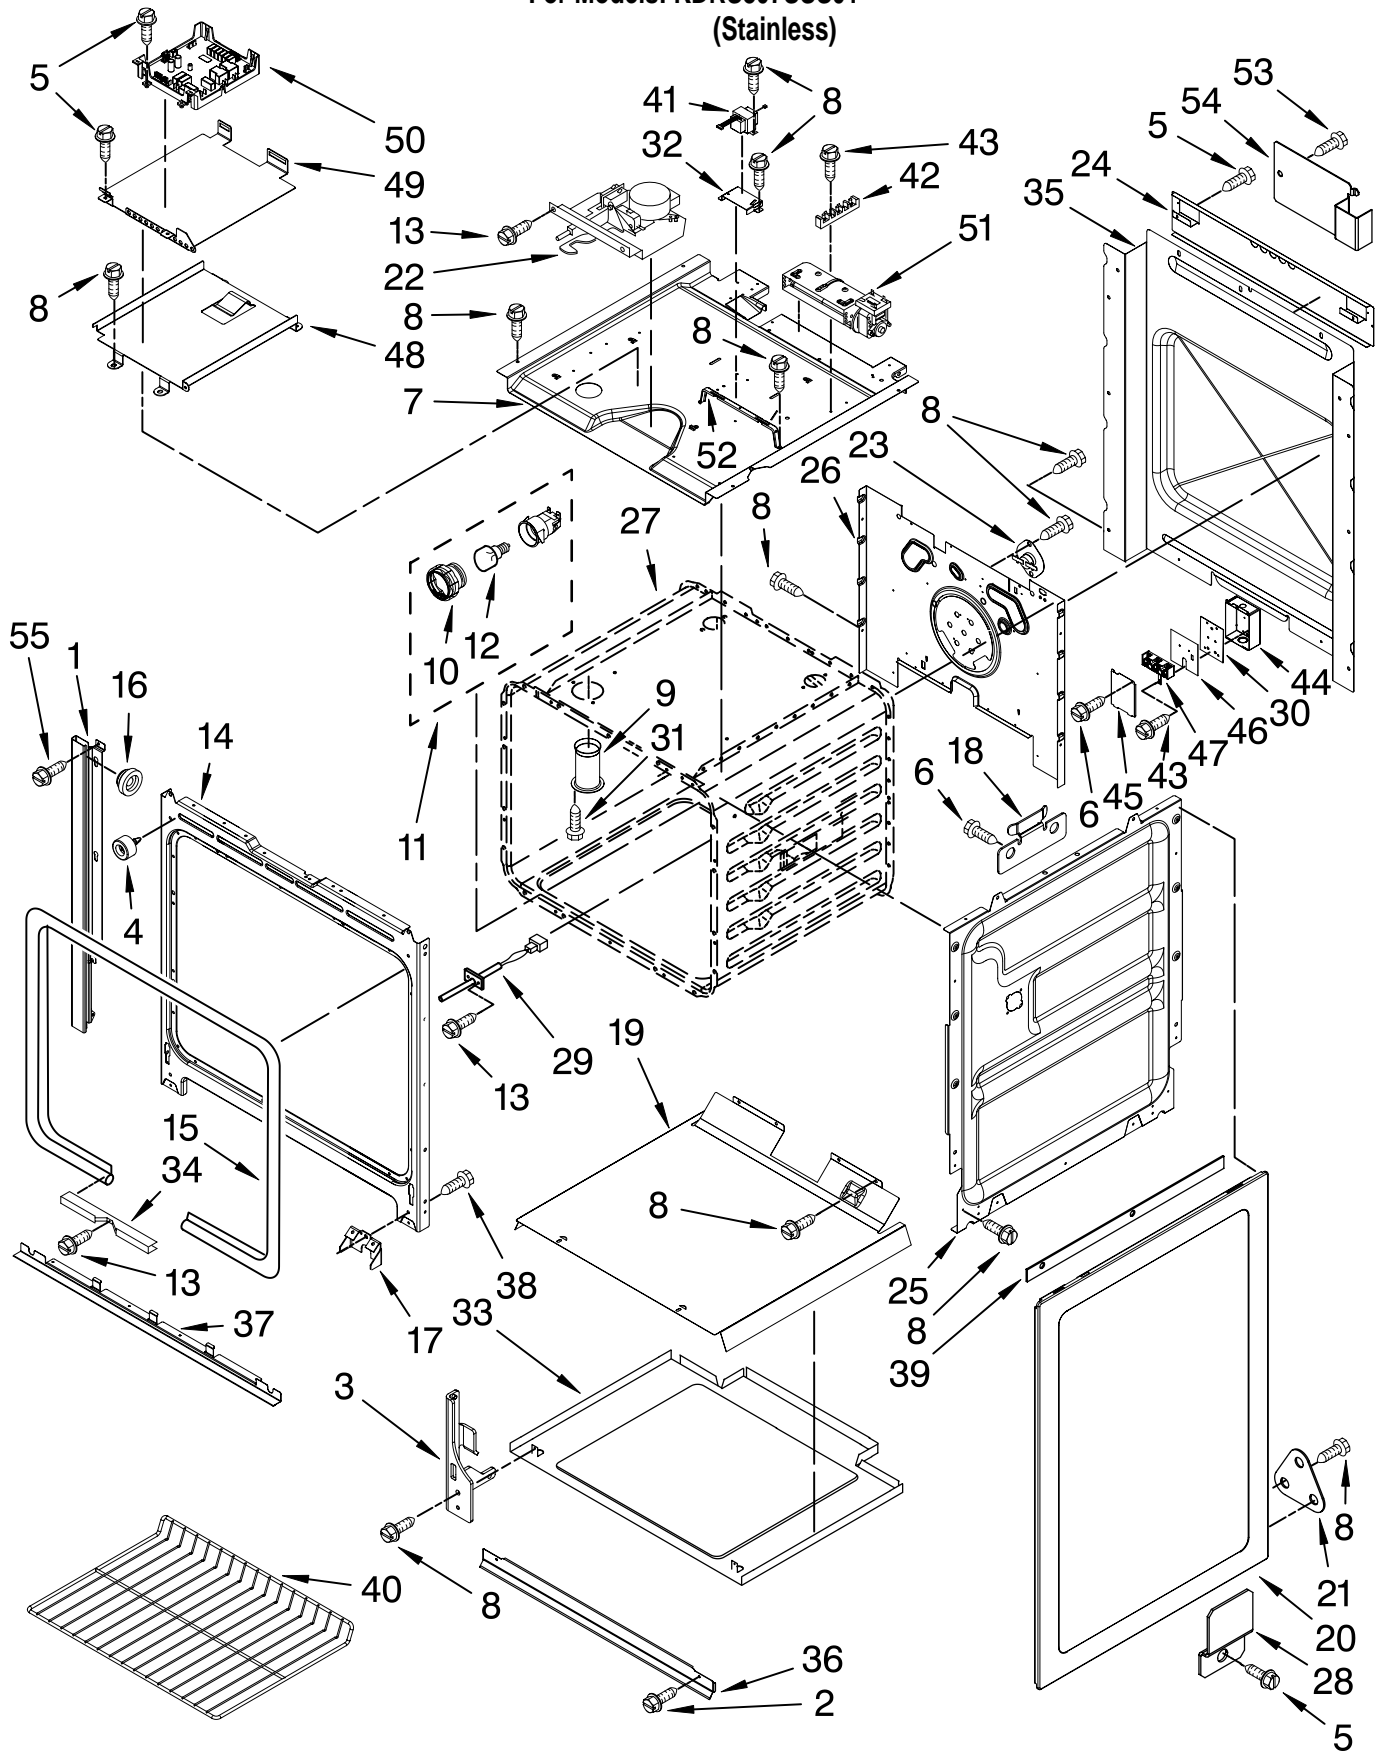

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: KDRS807SSS01
(Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Side
	W10109560	Right
	W10109510	Left
2	3400832	Screw
3		Hinge Receiver
	4455606	Right
	4455605	Left
4	W10105790	Bumper, Door (2)
5	3196537	Screw
6	3196160	Screw
7	8303099	Top Chassis
8	4449809	Screw
9	4452158	Tube, Vent
10	W10067870	Lens, Light (2)
11	W10009930	Oven Light, Assembly (2)
12	4452166	Bulb, Light (2)
13	4449154	Screw
14	W10130368	Frame, Front
15	W10074200	Gasket, Door
16	4448444	Grommet, Mounting Rail
17	4452152	Bracket, Mounting
18	9757685	Guide, Side Panel
19	4451478	Support, Insulation
20		Body, Side
	9760723PB	Black

Illus. No.	Part No.	DESCRIPTION
21	9757461	Bracket, Side Panel
22	9760888	Latch, Motorized
23	9759242	Thermostat
24	9757811	Brace, Side Panel
25	4455641	Side, Chassis
26	9759761	Back, Chassis
27		Liner, Oven (Not Serviceable)
28	9759890	Clip, Side Panel
29	4455636	Sensor
30	9759884	Insulation
31	3196176	Screw
32	9757829	Bracket, Transformer
33	9759713	Base, Chassis
34	4448933	Retainer, Gasket
35	9758583	Cover, Back
36	9756481SS	Vent, Bottom Upper
37	W10104870	Vent, Bottom Lower
38	4449743	Screw
39	9759722	Insulation, Side Trim
40	4448717	Rack, Oven
41	9760212	Control, Transformer

Illus. No.	Part No.	DESCRIPTION
42	4449868	Block, Terminal
43	3400080	Screw
44	9757404	Box, Terminal
45	9757405	Cover, Terminal Box
46	9759721	Insulator, Terminal Box
47	9761958	Block, Terminal
48	9756454	Bracket, Appliance Manager
49	W10083460	Slide, GOC
50	9761801	Appliance Manager
51	9759320	Blower
52	9756821	Support, Wiring
53	3196537	Screw
54	9759945	Stand Off-Rear
55	3400805	Screw

**FOLLOWING PARTS
NOT ILLUSTRATED**


INSULATION

- 9756817 Insulation, Wrap
- 9756470 Insulation, Back

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: KDRS807SSS01
(Stainless)

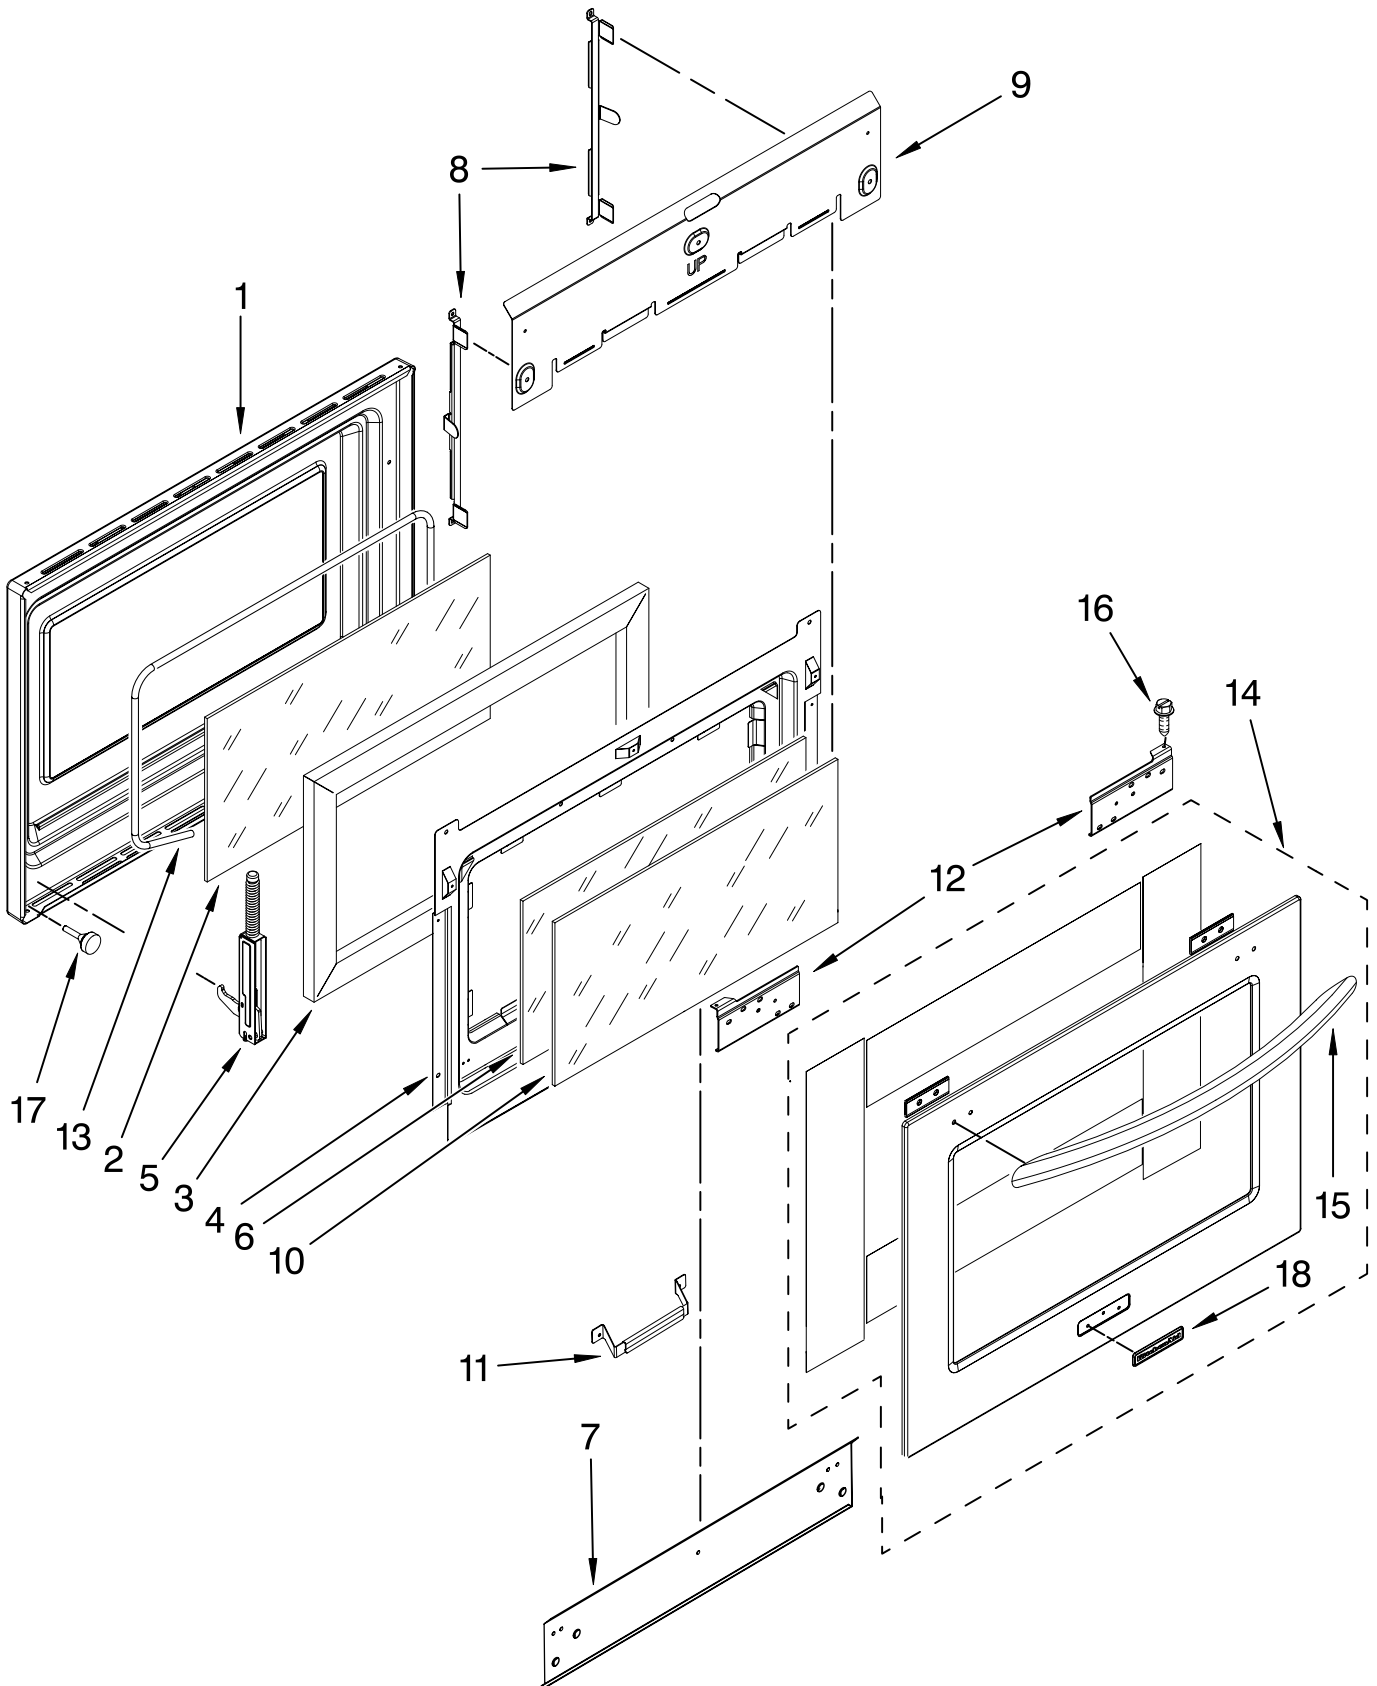

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: KDRS807SSS01
(Stainless)


Illus. No.	Part No.	DESCRIPTION
1	9759413	Panel, Door
2	9757706	Glass, Inner
3	4451722	Insulation, Door
4	4457132	Retainer, Glass
5		Hinge, Oven Door
	9760579	Right
	9760580	Left
6	9759225	Glass, Inner
7	4457114	Shield, Heat Bottom
8	9759229	Bracket, Glass Side
9	4457103	Shield, Heat Top
10	9759225	Glass, Inner Door
11	9759230	Bracket, Central
12		Bracket, Handle
	9763497	Right
	9763496	Left
13	8522415	Seal, Window
14	W10131121	Assembly, Door Kit
15	8303774SS	Handle, Door
16	3196184	Screw
17	4448520	Bumper, Door (3)
18	8304603SS	Badge

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER PARTS

For Models: KDRS807SSS01

(Stainless)

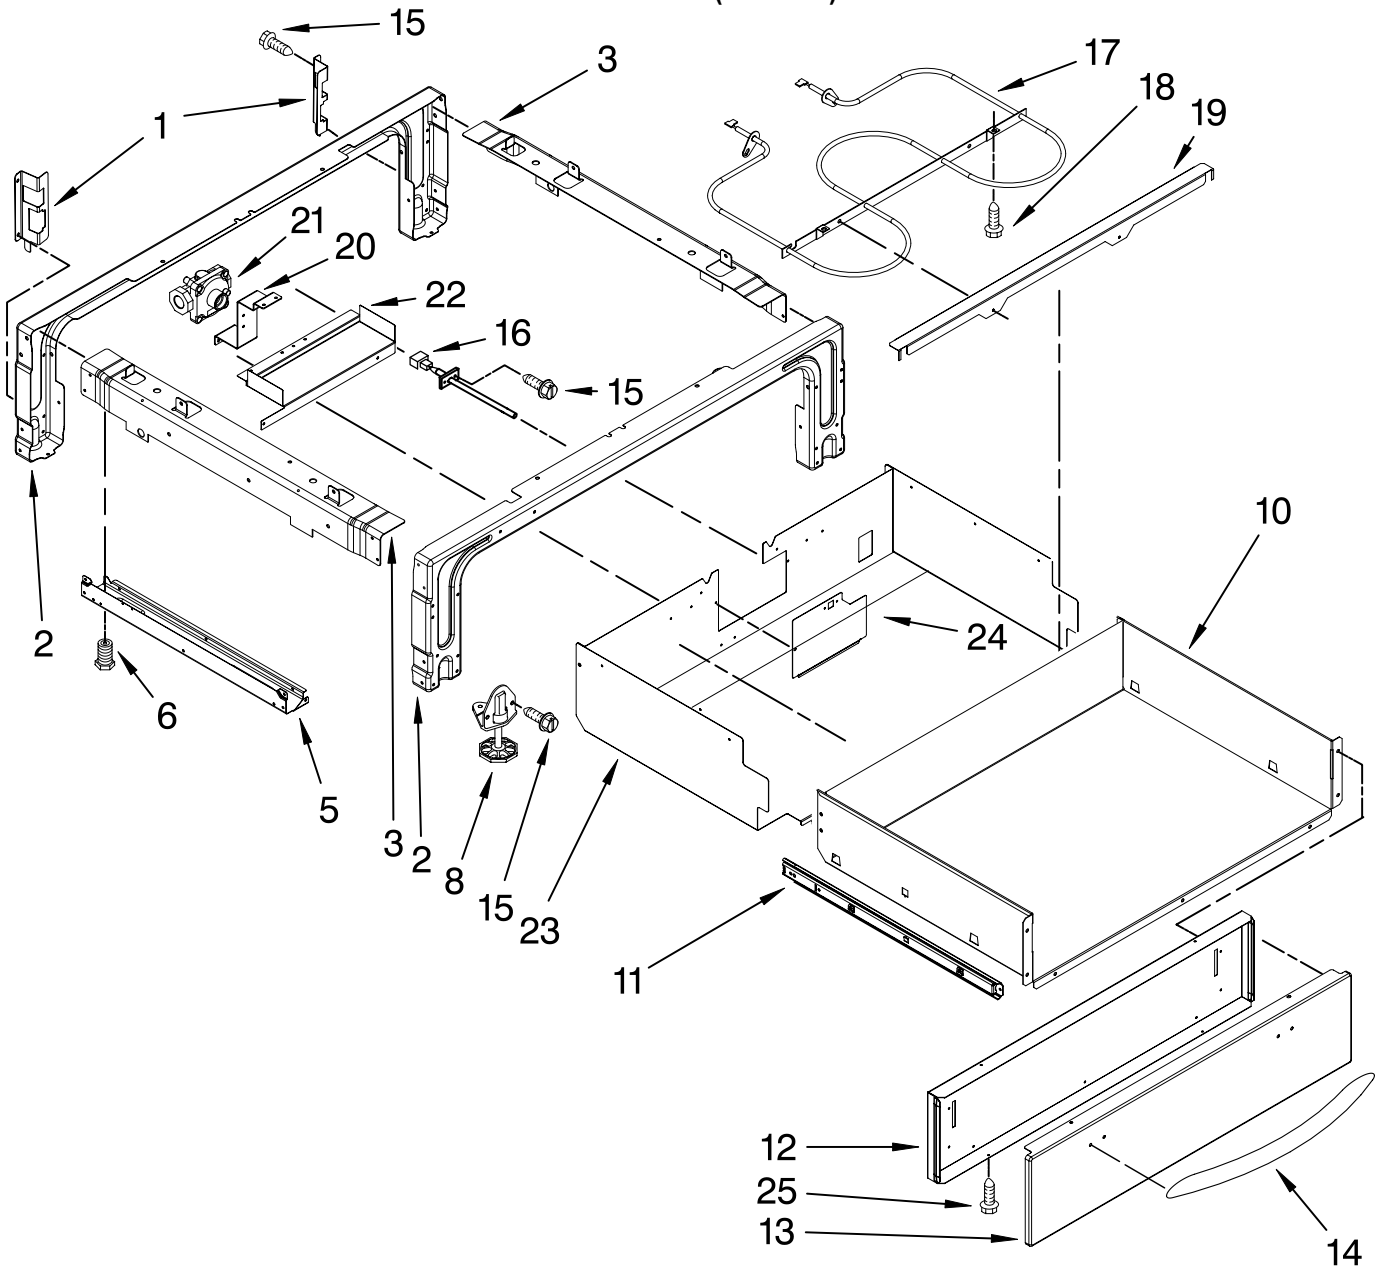

Illus. No.	Part No.	DESCRIPTION
1		Support, Drawer Rail
	9757687	Right
	9757686	Left
2	9763501BL	Support, Front & Rear
3		Brace, Drawer
	4453720	Right
	4453721	Left
5		Side, Base
	9759953	Right
	9759954	Left


Illus. No.	Part No.	DESCRIPTION
6	W10058460	Foot
8	3196037	Foot Assembly
10	9757805	Drawer
11		Guide, Roller
		Includes Roller
	W10019810	Right
	W10019800	Left
12	9763456	Panel, Drawer
13	9761747SS	Front, Drawer
14	9761573SS	Handle, Drawer
15	3196537	Screw

Illus. No.	Part No.	DESCRIPTION
16	8274149	Thermistor
17	9760775	Element, Warming
18	4449809	Screw
19	9758676	Support, Element
20	9763491	Bracket, Regulator
21	W10108850	Regulator
22	W10045140	Cover, Terminal
23	9761796	Enclosure, Warming Drawer
24	W10118828	Cover, Access
25	3400805	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: KDRS807SSS01
(Stainless)

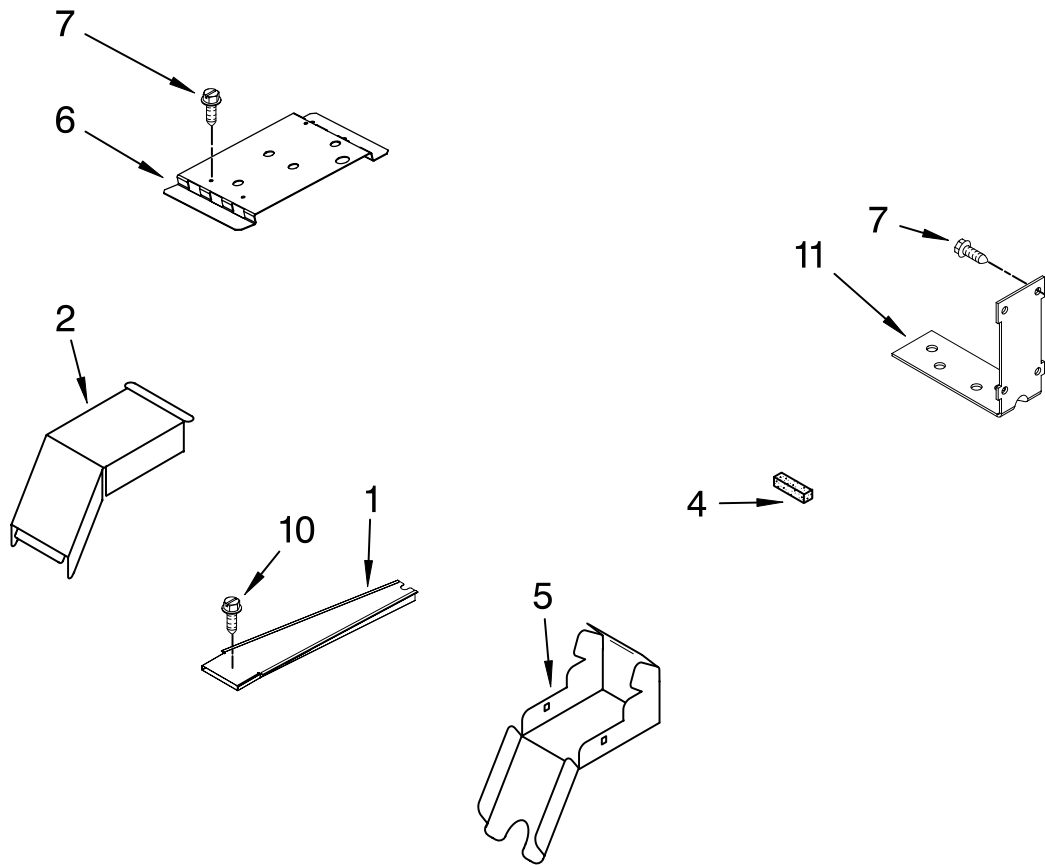


Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent Top
4	4451758	Block, Foam
5	4455177	Elbow, Vent Bottom
6	9759938	Bracket, Terminal Box
7	4449809	Screw
10	4449040	Screw
11	4455352	Bracket, Blower

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: KDRS807SSS01

(Stainless)

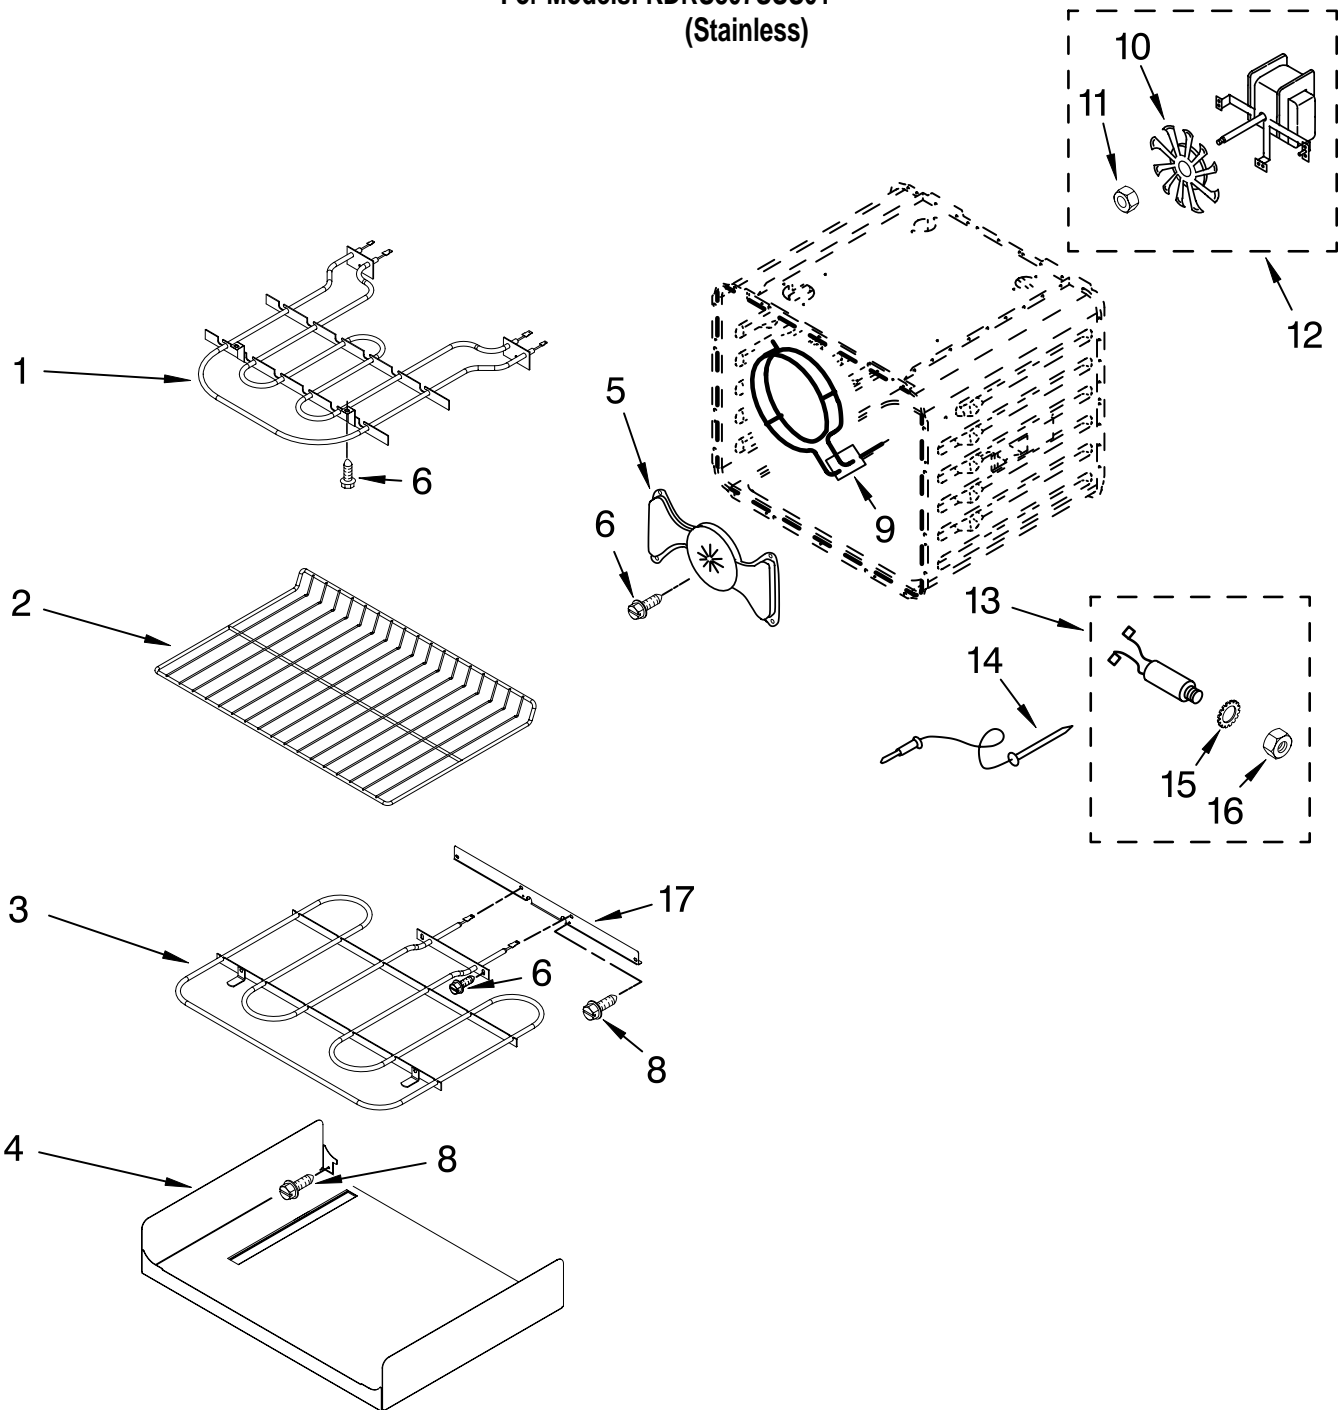

Illus. No.	Part No.	DESCRIPTION
1	9760774	Element, Broil
2	4448717	Rack, Oven
3	9760768	Element, Bake
4	4455037	Tray, Bake Hidden
5	9756690	Cover, Fan
6	4449154	Screw


Illus. No.	Part No.	DESCRIPTION
8	4449809	Screw
9	9760769	Element, Convection
10	4452226	Blade, Fan
11	4452227	Nut

Illus. No.	Part No.	DESCRIPTION
12	4451583	Motor, Convection
13	9755543	Jack, Meat Probe
14	9755542	Probe, Meat
15	9755547	Lock Washer
16	9755546	Hex Nut
17	4450039	Cover, Bake Tray

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP BURNER PARTS

For Models: KDRS807SSS01
(Stainless)

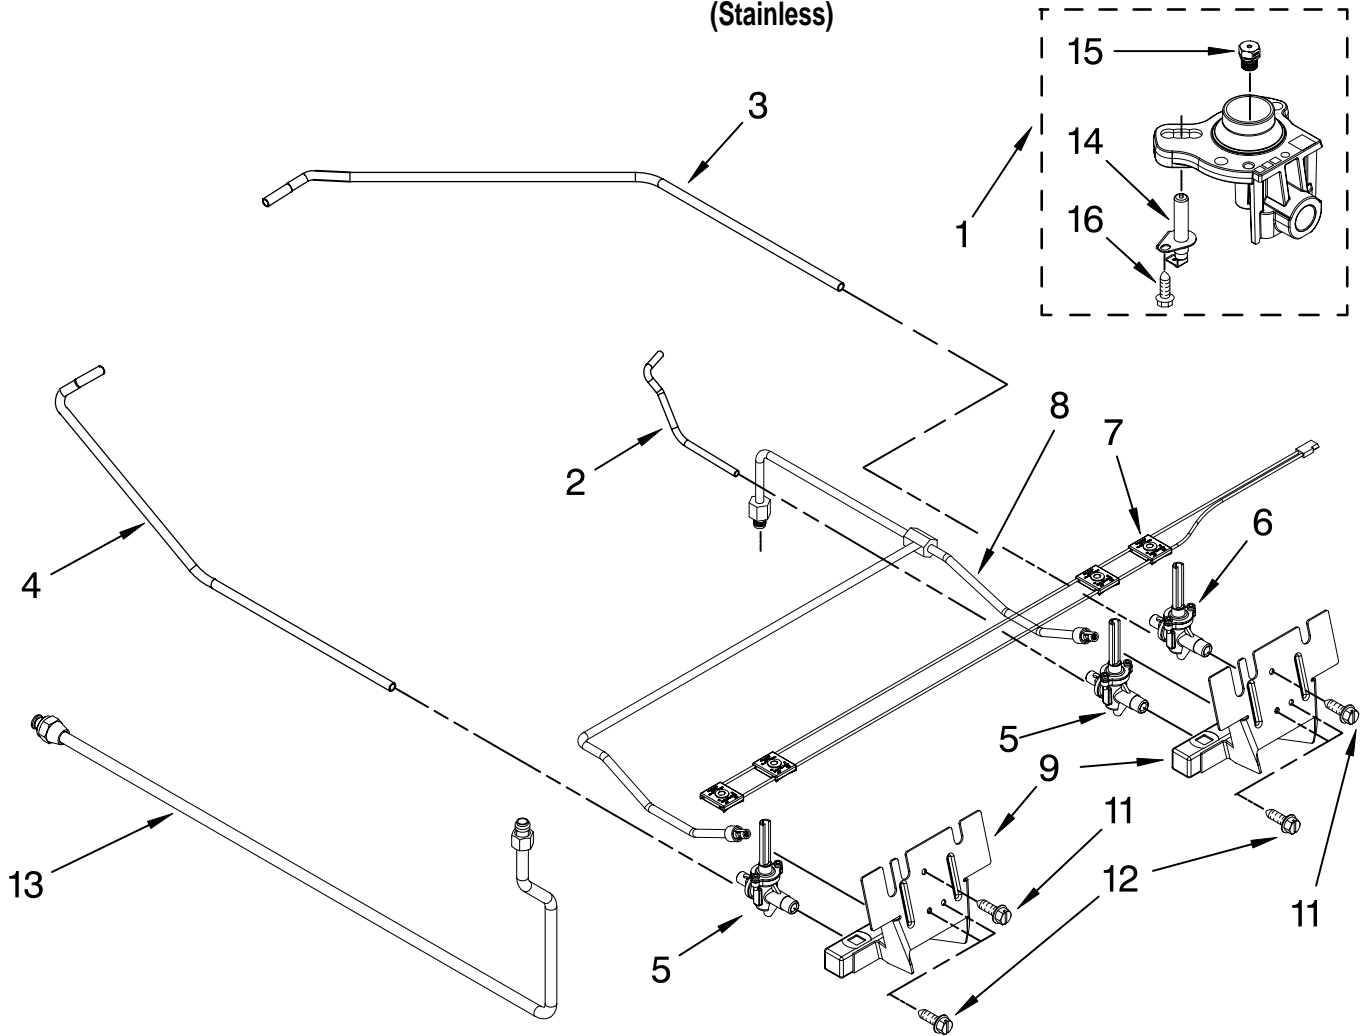

Illus. No.	Part No.	DESCRIPTION
1		Burner Base Includes Orifice
	W10128455	RR
	W10128446	RF, LR
2	9761069	Tubing, Burner(RF)
3	9761070	Tubing, Burner(RR)
4	9761068	Tubing, Burner(LR)
5	4456816	Valve, Burner Small (2)


Illus. No.	Part No.	DESCRIPTION
6	4456817	Valve, Burner Large
7	9756824	Spark Switch & Harness Assembly
8	9761752	Tube, Manifold
9		Manifold
	9761641	TCB
	9761642	Cooktop
11	3196537	Screw

Illus. No.	Part No.	DESCRIPTION
12	8523704	Bolt, Valve (4)
13	W10108840	Tubing DF to Regulator
14	W10110378	Igniter, Orifice Holder
15		Orifice
	9762938	RR
	9762937	LR, RF
16	8273062	Screw


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TRIPLE CROWN BURNER

For Models: KDRS807SSS01
(Stainless)

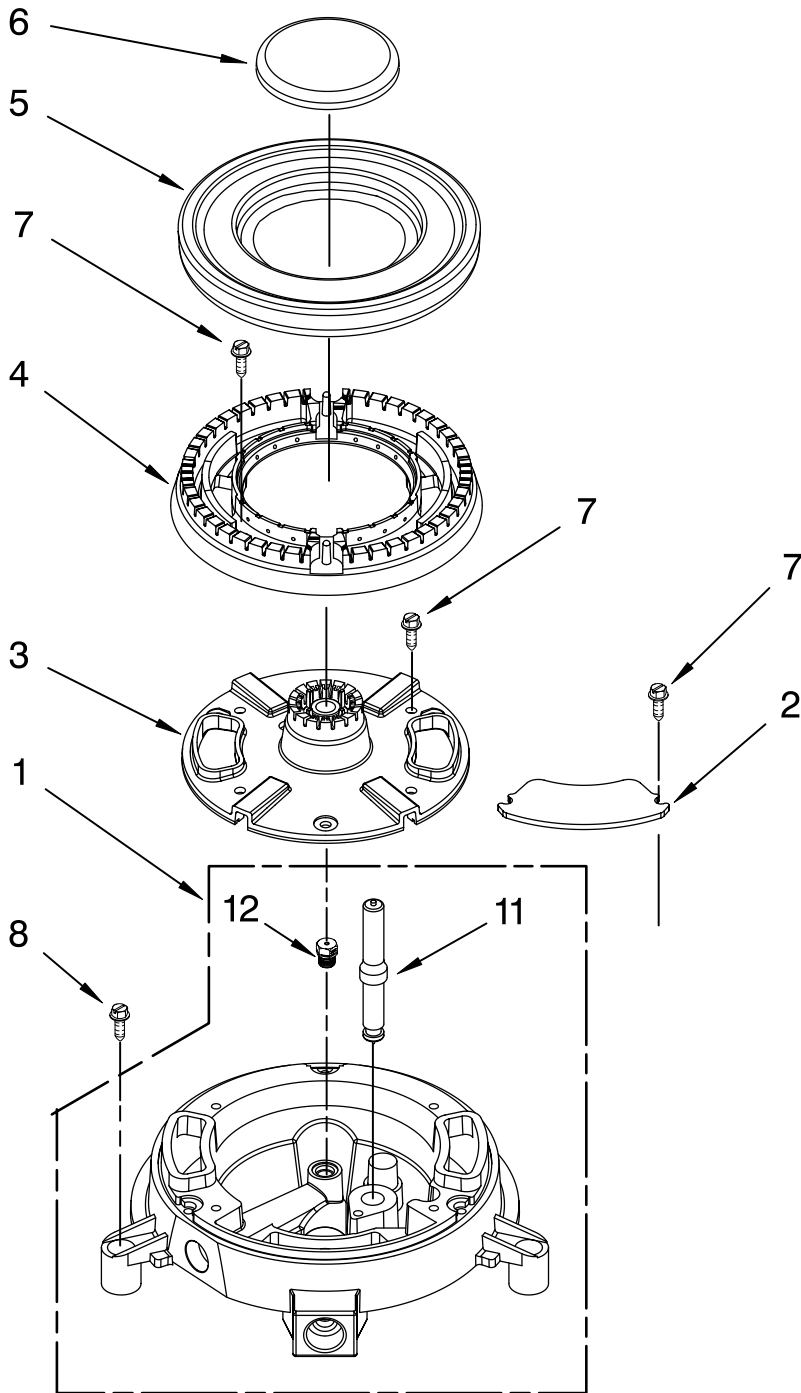


Illus. No.	Part No.	DESCRIPTION
1	9761639	Burner Assembly Triple Crown Burner
2	8285250	Plate, Closure
3	8285255	Internal Head, Triple Crown Burner
4	8285256	External Head, Triple Crown Burner
5	8285258	Cap, Burner External
6	9758829CB	Cap, Burner Internal
7	3400702	Screw
8	3400843	Screw
9	9760519	Valve, TCB
10		Tube, TCB Gas
	9761072	Outer
	9761071	Inner
11	9763494	Igniter
12		Orifice
	9762443	Internal
	9762442	External

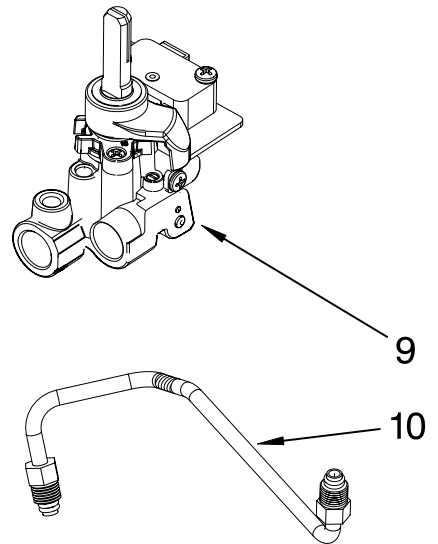

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KDRS807SSS01
(Stainless)

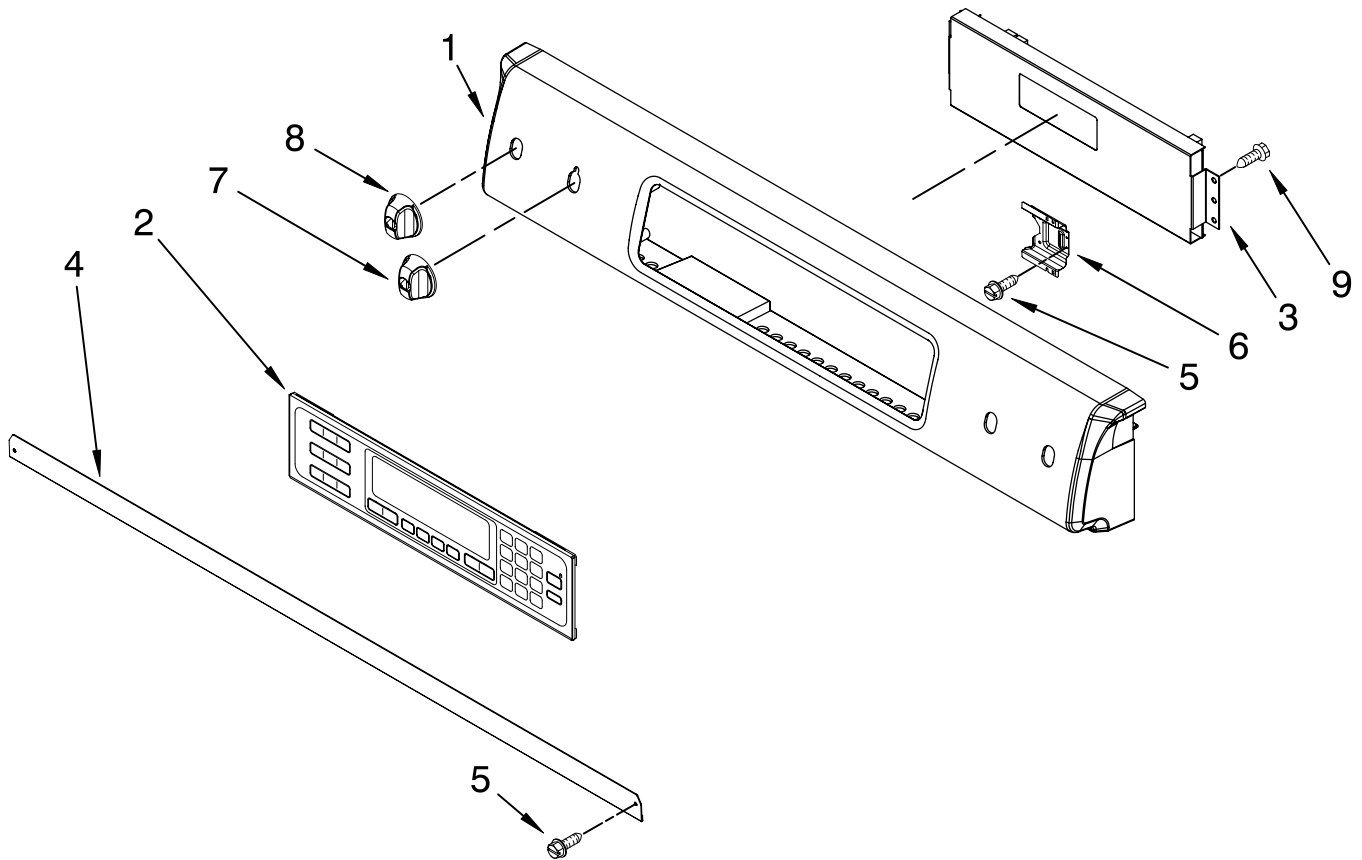

Illus. No.	Part No.	DESCRIPTION
1	W10110722	Control Panel
2	9761566	Switch, Membrane
3	9761799	Control, Interface
4	W10105370	Shield, Console
5	3196537	Screw
6	9761745	Bracket, Touchsensor
7	W10114682	Knob (LF)
8	W10114692	Knob (LR, RF, RR)
9	9780271	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: KDRS807SSS01

(Stainless)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
261869 Cord Brown
72032 Black

PAINT, SPRAY

350930 White
261900 Citrine White
830864 Black

ADHESIVE

591014 Adhesive
Loctite (1/3 oz.)
482338 Sealer, Silastic
(3 oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

SPLICING WIRES--25FT.

LENGTH

242828 Wire (12 Ga.
150 c Black)
242820 Wire (14 Ga.
150 c Black)
242821 Wire (14 Ga.
150 c Blue)
242822 Wire (14 Ga.
150 c Brown)
242830 Wire (14 Ga.
200 c Brown)
242823 Wire (14 Ga.
150 c Green)
242824 Wire (14 Ga.
150 c Orange)
242829 Wire (12 Ga.
150 c Red)
242825 Wire (14 Ga.
150 c Red)
242831 Wire (14 Ga.
200 c Red)
242826 Wire (14 Ga.
150 c White)
242827 Wire (14 Ga.
150 c Yellow)
242832 Wire (14 Ga.
200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

WIRING HARNESS PARTS

W10110729 Harness, Wire
Main
W10118725 Harness, Switch
Electric
9756921 Harness, TCB
9762921 Harness,
Communication
9763481 Harness, Ground
Strap
9762781 Harness, Wire
Connector Cable
9759715 Conduit, Slide In
313660 Clip, Ground Wire
4448664 Clamp, Conduit
4449809 Screw
112432 Nut
4452222 Spacer, Harness
3400015 Screw, Ground

Miscellaneous

4455352 Bracket, Blower
9757426 Orifice Kit
9782676 Anti-Tip
Assembly
9757427 Kit, Orifice

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>