


Notebook DC auto/air charger User Guide

I. Introduction

Thank you for purchasing the Universal Auto/Air Adapter. This adapter now makes it safe and easy to power and recharge your NOTEbook computer from any standard 12 Volt DC cigarette lighter while traveling by car, boat, RV. It also works in planes that have been equipped with in-flight, in-seat power receptacles. Check with your airline to determine availability.

II. Contents

Included with this User's Guide, Auto/Air Adapter, PowerTips, in-flight Connector and in-car Connector.

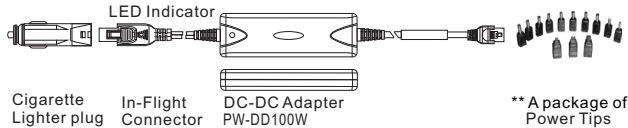

III. PowerTip Selection.

Locate your device in attached compatibility chart and select the corresponding PowerTip for your device.

WARNING: Choose the correct PowerTip for your device. Choosing the incorrect PowerTip may damage your computer or cause it to malfunction.

After selecting the correct PowerTip for your device follow the instructions below for proper operation.

1. Connect the correct PowerTip to the DC-DC Adapter (PW-DD100W).
2. Plug the PowerTip into your device.

NOTE: If the PowerTips you need is not included, and/or you would like to purchase additional PowerTips, please contact our Customer Service.

IV. Operation Instructions

In-Car/Boat/RV

1. Remove the vehicle's cigarette lighter and insert the Auto/Air Adapter's cigarette lighter plug into the socket.
2. Turn-on your vehicle's ignition.

NOTE: Power to the cigarette lighter in some vehicles is always on and may not require the ignition to be turned on.

The LED on the adapter will illuminate green. This indicates that power is available. If the LED does not illuminate, check all connections.

If the LED on the adapter does not illuminate, first check to see if the plug is properly inserted.

NOTE: The vehicle may also need to be running in order to get power. If you continue to not see the indicator light working, you may need to check the vehicle's cigarette lighter fuse and/or the in-car cigarette adapter fuse. Refer to your vehicle manual for further direction on how to properly check a car fuse.

NOTE: The fuse from the in-car cigarette adapter can be easily removed by unscrewing the black round disc located at the tip of the adapter and removing the fuse. Replace the fuse with one of the exact same specifications at any local hardware or mechanic store.

If you still have difficulty obtaining power after performing the above operations, please contact our customer service team for a replacement unit.

3. Take the Auto/Air Adapter with your computer PowerTip together to plug into the power socket on your NOTEbook computer.
4. Turn-on your computer to begin working or to begin charging your battery.

CAUTION: It is not recommended to have the Auto/Air Adapter plugged into your computer when starting the engine. The power may be interrupted and this will cause your system to be reset.

CAUTION: Avoid touching the Auto/Air Adapter during use, as it may get warm. This is normal. Avoid placing the adapter in direct sunlight or next to heat-sensitive materials.

In-Flight/Airline

NOTE: Although most airlines use the in-flight connector for in-flight use, some airlines such as American use the cigarette adapter. In this case follow the operation instructions for in-car directions of the previous section.

1. To uncover the in-flight connector, first remove the in-car connection. To remove, push down on the black button located above the green LED indicator. As you push down on the tab, pull the cigarette plug apart to reveal the in-flight connector.

On most airlines, the seat socket where the in-flight adapter is to be inserted is located in the arm of your seat, in the same location you use to plug-in headphones, or under the seat. Please ask the flight attendant for assistance locating this socket.

2. Insert the in-flight connector plug into the seat socket. The LED on the in-flight connector will illuminate green, indicating that power is available. If the LED on the adapter does not illuminate, check to see if the plug is properly inserted. You may also check with a flight attendant to make sure the power is on in the aircraft.
3. Take Auto/Air Adapter with your computer PowerTip together to plug into the power socket on your NOTEbook computer.
4. Turn-on your computer to begin working or to begin charging your battery. Simply leave the Auto/Air Adapter plugged in without turning on your computer to charge your battery.

NOTE: Use the Auto/Air Adapter only with NOTEbook batteries that meet and / or exceed the original manufacturer's specifications.

NOTE: If your original NOTEbook computer internal battery is drained of power, please use our PW- AD75W, PW-DD72W or PW- AD100W, PW-DD100W PW-KC1HW to charge your NOTEbook computer for at least 20 minutes before turning it on. The make and model of your NOTEbook computer will determine the charge time required.

V. Safety Features:

- Over current shutdown protection
- Internal protection fuse
- Internal thermal-fail cutoff
- Short circuit protection

VI. Certifications:

- Ctick
- CE

VII. Specifications:

- Input Voltages 11~16Vdc
- Output Voltages 16~24Vdc
- Output Current 4A~4.5A
- Output Power 100W/h at 24V

VIII. Warranty

Manufacture warrants this product for one-year from date of purchase to the original purchaser that this product is free from defects in material and workmanship. If, after inspection, you discover any defects in material or workmanship, manufacture will have the option to repair, or replace the defective manufacture product free of charge. This one-year warranty does not cover damages from normal wear and tear or from accidental damage, misuse, improper care, alterations and damage caused in transportation by a common carrier or airline.

Under no condition is manufacture responsible for the following: normal wear and tear; loss or damage to a computer; loss or damage to peripherals; loss or damage to programs; loss or damage to files, records or data; loss or damage to income.

There are no other warranties expressed or implied, including, but not limited to, the implied warranties of merchantability & the fitness for a particular purpose beyond the terms of this one-year warranty. The one-year warranty offered by manufacture herein may not be modified by any oral representations made by any employee, agent or representative of manufacture. This one-year warranty gives you, the original purchaser; specific legal rights and you may have other rights, which vary, from state to state.

Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. Manufacture shall not be liable for any incidental or consequential damages for breach of any expressed or implied warranty on this product, except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty, if you need to have your product repaired or replaced under the conditions of this one-year.

Manufacture shall in no event be liable to the original purchaser for the following: direct, or indirect, special, or consequential damages to equipment; to programs; to data; to negligence; to commercial loss; to lost profits; to expenses, directly, or indirectly arising from the use of a product, either separately or in combination with any other product or equipment. Regardless of the legal theory asserted. Including warranty or strict liability, from any causes.

WARNING: USE BY, OR BEING VISIBLE TO, THE OPERATOR OF AN AUTOMOBILE COULD RESULT IN INATTENTION AND RESULTING ACCIDENTS AND SERIOUS INJURY, AS WELL AS BEING IN VIOLATION OF THE LAWS OF SEVERAL STATES. ALSO SEVERAL STATES PROHIBIT THE USE OF ANY AUDIO-VISUAL EQUIPMENT IN THE FRONT SEAT OF AN AUTOMOBILE. SEVERAL STATES ALSO PROHIBIT THE OPERATION OF AN AUTOMOBILE WHILE WEARING HEADPHONES.

PW-DD100W Compatibility tip list

MAKE	TIP	SERIES	
Acer	1	Aspire	1410, 1640, 1650, 1680, 1690, 1960, 2000, 2010, 2020, 3000, 3030, 3500, 3600, 3610, 3613, 5000, 5024, 5030, 5510, 5920, 9100, 1414WLCI, 1414WLCI, 1414WLCI, 1642WLM, 1681LCI, 1681WLCI, 1681WLM, 1683WLM, 1684WLM, 1685WLM, 2001LCI, 2002LCI, 2003LM, 2012WLCI, 2012WLM, 2025WLM, 3002LC, 3002LCI, 3002LM, 3002WLCI, 3002WLM, 3003WCI, 3003WLCI, 3003WLM, 3022WLM, 3502LCI, 3502NLCI, 3502WLCI, 3503LCI, 3503WLCI, 3602NWXMI, 3603NWXMI, 3603WXC, 3603WCI, 3608NWXCI, 3608WXC, 3608WLM, 3614WLM, 3623NWXMI, 3623WLCI, 3623WLM, 3623WXC, 3623WCI, 3623WLM, 3623WXC, 3624WXC, 3624WLM, 5002LM, 5002LM, 5002WLM, 5004WLM, 5512WLM, 5514WXM, AS1690LCI, AS1690LCI, AS1690WLCI, AS1690WLM, AS1691WLCI, AS1691WLM, AS1692WLM, AS1694WLM, ZL6
Acer	1	Tablet	TMC100T1, TMC104TCI, TMC110TCI
Acer	1	TI & AcerNOTE	330, 330T, 350C, 350E, 350P, 350PC, 361, 3680, 368D, 370C, 374, 500, 509, 585C, 950, 950C
Acer	1	TI Extensa	710, 711, 700Series, 700T, 710DX, 710T, 710TE, 712 Series, 712TE
Acer	1	TI Extensa	2300, 3000
Acer	1	Travelmate	201, 202, 210, 211, 212, 213, 220, 222, 223, 225, 230, 233, 234, 260, 261, 270, 272, 273, 275, 280, 281, 283, 290, 310, 311, 312, 313, 314, 320, 330, 332, 333, 343, 347, 350, 351, 352, 353, 354, 360, 361, 364, 365, 370, 510, 512, 513, 514, 515, 516, 517, 540, 600, 602, 603, 604, 610, 611, 612, 613, 614, 620, 621, 623, 630, 632, 633, 660, 720, 722, 723, 730, 732, 734, 735, 736, 737, 738, 739, 740, 741, 744, 2301LC, 2301LCI, 2301WLCI, 2301XC, 2303LC, 2303LCI, 2303WLCI, 2304LCI, 2304WLCI, 2400, 2410, 3000, 3002WCI, 3210, 3213WXC, 3213WXM, 3220, 3220WXC, 3220WXM, 3222WXC, 3222WXM, 3230, 4000, 4000LC, 4000WLCI, 4001LCI, 4001WLCI, 4001WLM, 4002WLM, 4020, 4050, 4052LCI, 4060, 4100, 4100LCI, 4100LM, 4150, 4500, 4501WLM, 6000, 6003LM, 8000, 8002LC, 8003LM, 8006LM, 8100, 8104WLM, 200 Series, 200DX, 200T, 201T, 202T, 210 Series, 210T, 210TER, 210TXF, 211T, 212T, 212TE, 212TXV, 213TX, 213TXV, 222 Series, 222X Series, 223X, 223XC, 223XV, 225 Series, 225X, 225XC, 225XV, 2301LC, 2301LCI, 2301WLCI, 2301XC, 2303LC, 2303LCI, 2303WLCI, 2304LCI, 230XC, 230XV, 230XV-PRO, 233 LC, 233 Lci, 233LC, 233X, 233XV, 233XV, 234 Series, 234LCI, 261 Series, 261X, 261XC, 261XV Series, 270XV, 272LC, 272X, 272XV, 272XV, 273X, 273XV, 275 Series, 275LC, 281XC, 281XV, 283 Series, 283LC, 283LCI, 283XV, 283XV, 290 Series, 290LC, 290LCI, 290LM, 290XC, 290XCI, 290XI, 290XMI, 290XVI, 291LCI, 291LCI-G, 291LM-G, 291LM, 291XCI, 291XCH, 292
Acer	3	TI & AcerNOTE	350, 352, 355, 356, 300 Series, 358 Series, 361 Series, 370 Series, LiteNOTE373, Light350, Light350C, Light350P, Light350PC, Light356, Light358, Light370, Light371, Light372, Light373, Light374, Light380, Light382
Acer	3	TI Extensa	350, 360, 365, 366, 367, 390, 500, 501, 502, 503, 605, 610, 615, 650, 670, 355 Series, 366C, 367D, 367T, 368 Series, 368D, 391C, 391T, 392C, 392T, 393C, 393T, 394T, 395T, 500DX, 501DX, 501T, 502DX, 502T, 503T, 505 Series, 505DX, 550 Series, 600 Series
Acer	3	Travelmate	340, 341, 342, 345, 505, 506, 507, 520, 521, 524, 1600, 1800, 2300, 2350, 340 Series, 505DX, 506DX, 506T, 507DX, 507T, 508 Series, 508T, 520T, 521TE, 521TEV, 521TXV, 524TE, 524TXV, 525TE, 525TX, 525TXV, 527TXV, 528TE, 529TX, 529TXV, 529TXV
Acer	4	TI Extensa	
Acer	5	Aspire	1300, 1306, 1350, 1351LC, 1351XC, 1352LC, 1352XC, 1353LC, 1353LCI, 1353LM, 1353XC, 1355LC, 1355LCI, 1355LM, 1356LC, 1356LCI, 1356LM, 1400, 2001WLCI
Acer	5	Ferrari	4002, 4004, 5000
Acer	11	Aspire	3660, 3661WLM, 3680 series, 3682WXC, 5600 series, 5601AWLM, 5602WLM, 5610 series, 5612AWLM, 5620 series, 5621AWLM, 5622WLM, 5670series, 5672AWLM, 5672WLM, 5673WLM, 5674WLM, 5675WLM, 7000 series, 7003WSM, 7100 series, 7103WSM, 7104WSM, 7110 series, 7111WSM, 7112WSM, 9300series, 9301AWSM, 9302WSM, 9303WSM, 9400 series, 9402 WSM, 9404 WSM, 9410 AWSM, 9411 AWSM, 9412 WSM
Acer	11	Travelmate	4220AWLM, 4222 LMI, 4222 WLM, 4670series, 4672 Lmi, 4672 WLM, 4674 WLM, 5100 series, 5110 series, 5600 series, 5602 WSM, 5604 WSM, 5610 WSM, 5612 WSM, 5614 WSM, 5620 series, 5623 WSM
Accom	5		C110ET1, L500C/GA, FT600A, Patriot 8000, Patriot 8800
Act	3		MB486SL
Act	5		P-86T
Advent	11		T240, DVD7365
AIM	5		LT386SX, Green 759
AJP	3		5400PC, 6120N
AJP	4		5100C
Alcam	5		Designer 400
Alcam	7		LX601, N600MT2, N600MT3, XL-663
Alienware	5		Area-51 M5500, Santis M3200
Alimia	11		IC390, L7200, Maestro P79R
Ambra	3		Maestro P79T, Maestro T, Virage 3CD, BMN2805, NB7D
AMII	5		FT8T20, TF8780
Amrel	3		386SXL25, 486DX/33, 486SLC, 486SX/25, MLT386SXE
AMIS tech	3	Travel Pro	2500, MP-975A, Rodeo 3500CXNT, Rodeo 3500CXNT, Rodeo 3500LCXNT, Travel Pro Series
Apple	5	Series	Rodeo 1000CT, Rodeo 1000CX, Rodeo 1010CT, Rodeo 1010CX, Rodeo 1010CXNT, Rodeo 7000, Rodeo 7030ECX, Rodeo 7620, Rodeo 7630ECXNT, Rodeo 7640XL, TravelPro 180, TravelPro 1900
Apple	83		Book 1400, iBook 2400, iBook 3400, PowerBooks G3
Apple	84		Titanium G4
Arm	3		Green735, S758, TS80CD
Arm	4		S300C
Arm	5		Green 795, 1100, ArmNOTE N30W, Green 759, TS302, TS30W, TS759
Arm	6		TS5027MX
Aspen	5		TS975, 6200D
AST	3		910N, 925N, 950N, Ascentia 800N, P series
AST	6	Advantage	Exp 212, Exp 486DX4/100, Exp XL
AST	7	Ascentia	A Series, J series, M Series
ASUS	1		M6000, M6800C, M6C
ASUS	3		AK6, L3D, M6VA, W1300VC
ASUS	5	NAPA	W2J
ASUS	5	Sonoma	W1Vc, W2Vc



PW-DD100W Compatibility tip list

ASUS	5		Z4C4PDR, A2L, A2000H Series, A2000S Series, A2426PDU, A2428PDU, A6G, A6JA, A6Jc, A6K, A6Ne, A6U, A6V, A6Va, A6Vc, A6F, A6H, A6J, A6T, L2B, L2E, L3C, L4E, L4H, L4R, L4000 Series, L4420CDV, L4422CDV, M2400N Centrino Series, M2, M2400, M2C, M2N, M2NE, M3, M3NP, M5A, M5Ac, M5N Centrino Series, M6, M6BC4PDV WXGA, M6C6, M6BN, M6N, M6Ne, M6V, M9 Series, M9V, USA, U5F, V1J, Vx1, W1G6a, W1Gc, W1N, W3A, W3J, W3V, W3Z, W5A, W5F, W5G00AE, W7E, W7L, Z32, Z33, Z91, Z91G, Z91N, Z91N, Z91L, Z92U, Z92Vc	
ASUS	11		A1 series, A2000, A3000, A3 series, A3Ac, A3E, A3F, A3G, A3H, A3L, A3N, A3Vp, A7 series, ATD, A7 Jc, A7V, A7 VC, F7 Series, F7000, Grandio F7400, L1 Series, L7 Series, L7000, L7000C, L7200, L8 Series, L8400, M1 Series, M5, M5200N, M5N, M8 Series, S1 Series, S1N, S200, S200N, S300N, S5, S5200N, S5N, S8 Series, T9 Series, V6J, V6V, V6VA, W1, W1V, W2V, W6A, W6F, Z61A, Z63A, Z71AAV, Z91E, Z93E	
AT&T	6		Globalyst 200S, Safari 3152	
AT&T	8	Globalyst	130, 520	
AT&T	8	Safari		3140
Atasi	5		900, 1100, 1200	
Austin	3		Edga CD, Edga XP, NB7A, NB7D, XP	
Avertec	5		3200, 5100, 5500, 6235, 6240, 1020-ED1, 1050-EB1, 3120V, 3150H, 3150HD, 3150HS, 3150HW, 3150P, 3220H, 3220H1, 3220HS, 3250H1, 3250HS, 3250HX, 3250PX, 3255P1, 3270-EE1, 3270-EH1, 3320-EH1, 3320-EH1, 3360-EG1, 3360-EH1, 3500T60, 3500T80, 3715-ED1, 3715-EH1, 4115-EE1, 4155-EH1, 4265-EH1, 5110H, 5110HX, 5110P, 6100-EH1, 6200-H60, 6210-HX80, 6210-X60, 7470-EH1, AV Series	
BenQ	5	Joybook	3000M-T28, 3000M-XXX, 8000 Series	
BenQ	11	Joybook	5000, 5100, 5120, 6000, 7000, 5100N, 5100U, A82, S2200N, S22E, S53, S53W, S72	
Bondwell	3		5400D	
Bondwell	8			498
BSI	5		6200D	
CANNON	3		200, 200LS	
CANNON	5	Innova	300 series, 400 series	
CardStar	7		486DX	
Carreira	3		Explorer	
Chaplet	5		L4000R, 1100, iLufa 800, iLufa 820	
Chaplet	8		iLufa 580, iLufa 780, iLufa580x	
Chem USA	3	ChemBook	5400, 9750, 9780, 9950, 5400PT, 9780M2	
Chem USA	5	ChemBook	1100, 2200, 3015, 5200, 9400, 6200D	
Chem USA	11	ChemBook	7200, 7300, 7400, 8200, 8400, 3300N	
Chicony	3		388, Ara, MBP, MP-968, MP-975A, NB-7D	
Chicony	5			6200
Clevo	4		3100, 3100C, 5100, 5100C, 5100D, 5100S, 5500, M5500, M5500S	
Commodore	5		98, 86CE, Model 862, Multimedia Model98, Featlon 6000, P100	
Commax	3	Smartbook	V-Pro, V-Pro 5200PT, V-Star Pro	
Commax	4	Smartbook	V-Star	
COMPAL	5		6200D, NB8600, N30B2, N30W, N32NC, TS30H, TS30I2, TS30I3, TS30T, TS30T3, TS30W	
Compaq	1	Tablet PC	TC1000, TC1100	
Compaq	2	Armada	100, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 1100, 1120, 1125, 1130, 4100, 4120, 4130, 4131, 4220	
Compaq	2	LTE	5000, 5150, 5200, 5250, 5300, 5380, 5400, 5480, 6000	
Compaq	5	Business NOTEBOOK	N1050V, NX9005, NX9010	
Compaq	5	Evo	N105, N115, N160, N180	
Compaq	5	Presario	700, 800, 801, 802, 803, 850, 1020, 1030, 1060, 1065, 1070, 1075, 1080, 1200, 1201, 1202, 1203, 1205, 1207, 1210, 1211, 1212, 1213, 1214, 1215, 1216, 1217, 1219, 1220, 1232, 1234, 1235, 1236, 1237, 1238, 1240, 1242, 1244, 1245, 1247, 1250, 1255, 1256, 1257, 1260, 1262, 1266, 1267, 1270, 1272, 1273, 1274, 1275, 1277, 1278, 1279, 1400, 1450, 1500, 1610, 1611, 1622, 1625, 1628, 1645, 1655, 1670, 1680, 1681, 1682, 1685, 1687, 1690, 1692, 1693, 1694, 1810, 1825, 1830, 2101, 2102, 2103, 2105, 2106, 2107, 2108, 2109, 2110, 2112, 2113, 2114, 2115, 2116, 2120, 2123, 2125, 2126, 2127, 2130, 2132, 2133, 2134, 2135, 2136, 2138, 2140, 2141, 2143, 2144, 2145, 2150, 2161, 2162, 2170, 2175, 2176, 2180, 2186, 2188, 2190, 2195, 2199, 2500, 2500AP, 2500LA, 2501, 2505, 2505AP, 2510, 2510AP, 2510EA, 2510LA, 2511EA, 2511EA, 2512EA, 2515AP, 2515EA, 2516EA, 2517, 2519, 2520AP, 2520EA, 2521EA, 2525, 2525AP, 2525CA, 2525EA, 2525US, 2526EA, 2526US, 2528CL, 2528, 2529CL, 2530AP, 2535, 2535AP, 2535US, 2538CL, 2540, 2540AP, 2545, 2545AP, 2545US, 2550, 2550AP, 2555, 2555AP, 2555US, 2560, 2560AP, 2561, 2565AP, 2568, 2570, 2570US, 2575, 2580, 2580US, 2585, 2585US, 2590, 2590US, 2594, 2594US, 2596, 2596US, 2597, 2597US, 2598, 2598US, 2700, 2701, 2702, 2710, 2711, 2712, 2715, 2716, 2720, 3005, 3015, 3017, 3019, 3020, 3080, 12XL Series, 14XL Series, 1516us, 1600 Series, 1600i, 16XL, 1700 Series, 17XL265, 17XL275, 17XL360, 17XL362, 17XL365, 17XL375, 17XL460, 17XL465, 17XL475, 17XL570	
Compaq	5		NX9005, NX9008, NX9010	
Compaq	11	Armada	110, 110s, 600 Series, E500, E500S, E700, EVO N400C, M Series, M300, M700, V300 Series	
Compaq	11	Business NOTEBOOK	NX4800, NX6120, NX7000, NX7010, NX7100, NX8000 SERIES, NX8220, NX9020, NX9030, NX9040	
Compaq	11	Evo	N110, N150, N200, N400C, N410C, N600c, N610C, N610v, NE20C, N800C, N800v, N800W	
Compaq	11	Presario	305, 411AP1, 900, 3000, 3000v, 2200 Series, 2800 Series, 2900 Series, A Series, A520D-A518D, B100, B1000, B1800, B1800CTO, B1800TU, B1801, B1801TU, B1802, B1802TU, B1803, B1803TU, B1804, B1804TU, B1805, B1805TU, B1806, B1806TU, B1807, B1807TU, B1808, B1808TU, B1809, B1809TU, B1810, B1810TU, B1811, B1811TU, B1812, B1812TU, B1813, B1813TU, B1814, B1814TU, B1815, B1815TU, B1816, B1816TU, B1817, B1817TU, B1818, B1818TU, B1819, B1819TU, B1820, B1820TU, B1821, B1821TU, B1822, B1822TU, B1823, B1823TU, B1824, B1824TU, B1825, B1825TU, B1826, B1826TU, B1827, B1827TU, B1828, B1828TU, B1829, B1829TU, B1830, B1830TU, B1831, B1831TU, B1832, B1832TU, B1833, B1833TU, B1834, B1834TU, B1835, B1835TU, B1836, B1836TU, B1837, B1837TU, B1838, B1838TU, B2000, B2001, B2001AP, B2002, B2003, B2003AP, B2005, B2005AL, B2005AP, B2006, B2006AL, B2007, B2007AL, B2008, B2008AL, B2009, B2009AP, B2010, B2010AL, B2011, B2011AP, B2012, B2012AP, B2013, B2013AP, B2015, B2015AP, B2017, B2017AL, B2018, B2018AL, B2019, B2019AP, B2020, B2020AP, B2021, B2021AL, B2022, B2022AL, B2023, B2023AL, B2024, B2024AP, B2025, B2025AP, B2026, B2026AL, B2027AL, B2028, B2028AL, B2028AP, B2029, B2029AP, B2030, B2030AP, B2031, B2031AP, B2032, B2032AP, B2033, B2033AL, B2034, B2034AL, B2035, B2035AP, B2036, B2036AP, B2037, B2037AP, B2038, B2039, B2039AP, B2040, B2040AL, B2618TX, B2800, B2800C	
Compaq	11	Prosignia	170, 190, 300, 305	
Compaq	11		NC Series, NX Series, NX5000, Prosignia 170, Prosignia 190	
Compaq	29	Armada	1500, 1505, 1510, 1520, 1505DM, 1510DM, 1520D, 1520DM, 1530D, 1530DM, 1535DM, 1540DM, 1550DM, 1550DM, 1560DM, 1571DM, 1573DM, 1580DM, 1580DMT, 1585DM, 1590DM, 1590DMT, 1592DMT, 1598DMT	

PW-DD100W Compatibility tip list

Compaq	29	Evo	N1000 , N1000c , N1000v, N1005V, N1010V, N1015, N1015V, N1020V, N1050
Compaq	29	Presario	901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 912EA, 914, 915, 916, 917, 918, 919, 920AP, 920CA, 920EA, 920LA, 921, 922, 923, 925, 930, 935, 940, 943, 945, 950, 955, 1501, 1502, 1503, 1504, 1505, 1506, 1507, 1508, 1509, 1510, 1511, 1512, 1513, 1514, 1515, 1516, 1520, 1522, 1523, 1525, 1527, 1528, 1530, 1531, 1532, 1533, 1536, 1538, 1540, 1545, 1550, 1555, 1565, 1568, 1570, 1572, 1580, 2200, 2200LA, 2201, 2201AS, 2201US, 2202, 2202AL, 2202AS, 2203AL, 2203AP, 2203AS, 2203US, 2204AL, 2204AP, 2204AS, 2205LA, 2206AL, 2206AP, 2206AS, 2207AL, 2207AP, 2207AS, 2208AP, 2208AS, 2209AP, 2209CL, 2210AP, 2210CA, 2210US, 2211AP, 2212AP, 2213AP, 2214AP, 2215AP, 2216AP, 2217AP, 2218AP, 2218RS, 2219AP, 2220AP, 2221AP, 2222AP, 2223AP, 2223US, 2224AP, 2225AP, 2226AP, 2226CL, 2227AP, 2227US, 2228AP, 2228AP, 2230AP, 2231AP, 2231US, 2232AP, 2232US, 2233AP, 2234AP, 2235AP, 2236AP, 2236CL, 2237AP, 2238AP, 2239AP, 2240AP, 2241AP, 2242AP, 2243AP, 2244AP, 2245AP, 2246AP, 2248AP, 2249AP, 2250AP, 2251AP, 2252AP, 2253AP, 2254AP, 2255AP, 2256AP, 2258AP, 2259AP, 2260AP, 2261AP, 2262AP, 2263AP, 2264AP, 2265AP, 2266AP, 2267AP, 2268AP, 2269AP, 2269AS, 2270AP, 2270AS, 2271AS, 2272AS, 2273AS, 2800, 2800AP, 2800NP, 2800T, 2800TC, 2801EA, 2801TC, 2802AP, 2802EA, 2802SP, 2802TC, 2804EA, 2804SC, 2805AP, 2805US, 2806AP, 2806CL, 2806EA, 2807AP, 2807EA, 2808AP, 2808EA, 2809AP, 2809AP, 2809FR, 2810AP, 2810AU, 2
Compaq	29		EVO N800C, EVO N610C, EVO N620C, EVO N800C, EVO N800V, EVO N800W, N800 series, NC4000, NC4010, NC6000, NC6120, NC6140, NC6220, NC6230, NC8000, NC8430, NW8000, NW8440, NX6115, NX6125
Compaq	129	PC	510, 530
Compaq	129	Tablet PC	TC4400
Compaq	129		NC2400, NC4400, NC6300, NC6320, NC6400, NX6110, NX6310, NX6315, NX6325, NX7000, NX7300, NX7400
CTX	5		6200T, 98, CD, EZ Book Series, FC Series, Megapro 486
Databyte	3		6120, NOTEbook
DEC	4		HINOTE Series (excluding HINOTE VP700)
DEC	5		HINOTE VP700
DEC	6		PC320P
DEC	8		HPCP-12
Dell	5	Inspiron	1000, 1200, 1300, 2200, 3000, 3200, 3500, 7000, 100L, 110L, 120L, B120, B130
Dell	5	Latitude	4500MC Series
Dell	7	Latitude	XP 100CX, XP 4100C, XP 4100D, XP 4100T, XP 450C, XP 450X, XP 475D, XP 475X
Dell	12	Latitude	LT
Dell	38	Inspiron	1150, 1420, 1501, 1520, 1521, 1510, 1516, 6000, 6000D, 6400, 8500, 8600, 9100, 9200, 9300, 9400, 300m, 300M, 500M, 505M, 510M, 600M, 630M, 640M, 6710M, 700M, 710M, E1405, E1415, E1505, E1705
Dell	38	Latitude	100L, D Series, D400, D410, D420, D430, D500, D505, D510, D520, D531, D531N, D600, D610, D620, D630, D630N, D631, D631N, D800, D810, D820, D830, D830N, D-Family NOTEbooks, D Series Docking Stations, L100, X300, XPS M1210, XPS M140, XPS M2010
Dell	38	Precision	M20, M60, M700, XPS M1210, XPS M170, XPS M1710, XPS GEN 2
Dell	38	Vostro	1000, 1400, 1500
Dell	67	Inspiron	2000, 2100, L400, L600, L800
Dell	67	Latitude	L400, LS Series
Dell	68	Inspiron	1100, 2500, 2800, 2850, 3650, 3700, 3800, 4000, 4100, 4150, 5000, 5100, 7500, 8000, 8100, 8200, 4100 Series, 5000E, M50, X200
Dell	68	Latitude	C Series, C400, C500, C510, C540, C600, C610, C640, C800, C810 Series, C840, CP, CPl, Cpi 300ST, Cpi 300XT, Cpi 368XT, Cpi A400XT, CPl, CPx, CS, CS/CSx Series, H500GT, LM, LSH 400ST, M40 Workstation, X200
Dell	68	Precision	M50
Dellcomp Allista	5		6200D
DFI	3		7210, 6210, 7210T
DigBook	5		6600 SERIES, 1100 Wizard
Digital	4	HINOTE	433, CS400 series, cs433, CS450, CS475, CT400, CT450, CT475
Digital	5	HINOTE	700VP SERIES, ERA-1000
DPS	3		Traveller 1000
DTK	4		
DUAL	5		Multimedia 86, Top 5A, AIO-6200, ERA 1000, VDA9950
Dynasty	5		DunaNOTE50
ECS	5		A500, A530, A635K, A553, A907CB, EX-Tablet EZ30, G713, G733
ECS	74		A928, A980
ECS	75		A901-A907
E-Machine	4		Endavor TK-300
E-Machine	5	Action NOTE	800, 866, 880, 890, 895, 900, 910
E-Machine	5		E Slate Series
Empower	3	ENP	ENP313, ENP314, ENP601, ENP701
EPS	3	Apex Series	L-133, L-166, L-200 MMX, SC-200
EPS	3		Ara, MP Series, P120
EPS	5		P75, Pentium 120
Epson	4	ActionNOTE	
Epson	5	ActionNOTE	800, 910C
Ergo	3		Green 755
Escom	5		P100
Escom	8		SubNOTEbook DX2/66
Eurocom	4		3100-B, 5100-S
Eurocom	5		6100-T, 7200-T4
Everex	3		StepNOTE, StepNOTE 4500, StepNOTE MX



PW-DD100W
Compatibility tip list

Featron	5		ExpressNOTE586, StepNOTE 3500, StepNOTE Plus, Vale Voyager II, FT8000E, FT8850, FT9900
FEB	8		PC325P
Fic	5	A Series	420, 430, 440, 450
Formula	4		5300C
Fosa	3		5400PT
Fosa	5		6200D
Fujitsu	1	Amilo	M M1420, M M7400, PRO V2000D
Fujitsu	3	Celcus	Mobile H
Fujitsu	3	Lifebook	C2010, C2110, C2111, C2210, C2220, C2230, C2310, C3010, E2010, E4010, E4010D, E6624, E6634, E6644, E6654, E6664, E8010D
Fujitsu	3		A1010, C1020, S7010, S7010D
Fujitsu	5	Amilo	D series, M-7800, Pro V Series
Fujitsu	5	Lifebook	A1010, C2240, E7000, E7010, E7110, T4220
Fujitsu	6	200 Series	270Dx, 280Dx
Fujitsu	6	400 Series	420Dx, 435Dx
Fujitsu	6	600 Series	531T, 535T, 555Tx, 565Tx, 585Tx
Fujitsu	6	600 Series	635T, 635Tx, 655Tx, 656Tx, 675Tx, 690Tx
Fujitsu	6	700 Series	735Dx, 755Tx, 756Dx, 785Tx, 770Tx, 790Tx
Fujitsu	6	900 Series	370Dx, 985Tx, 990Tx2, i4100 Series, P2040, P2110
Fujitsu	6	A Series	A4170
Fujitsu	6	Amilo	Milan, Monte Carlo, Montego, PenCentra 130, PenCentra 200, Point 1600, Point 510, Stylistic
Fujitsu	6	B Series	B112, B149, B2130, B2131, B2160, B2175
Fujitsu	6	C Series	C2010, C25, C340, C350, C352, C380, C4000 Series, C4120, C4235, C5000 Series, C5130, C5235, C6000 Series, C6320, C6330, C6525, C6535, C6547, C6556, C657, C7651
Fujitsu	6	E Series	E330, E340, E342, E350, E351, E360, E362, E370, E380, E5140, E5320, E5520, E6150, E6330, E6540, E6541, E6550, E6554, E6555, E6556, E6557, E6570, E6571, E6575, E6595
Fujitsu	6	FMV-BIBLO	FLX2H, LOOX Series, M Series, N Series, R Series
Fujitsu	6	L Series	L440, L470
Fujitsu	6	Lifebook	E Series
Fujitsu	6	S Series	S4510, S452, S4542, S5582, S6010
Fujitsu	6	Stylistic	All Models
Fujitsu	6	Tablet	LT C-500, ST41xxA/P, ST501xA/P
Fujitsu	6		A4170, B Series, C Series, L440, L470, P Series, S Series
Fujitsu	35	Amilo	D7830
Future Tech	3		FutureMate 5400
Future Tech	5		6200D
Gateway	3	Solo	1150, 1400, 1450, 2200 Series, 2550 Series, 450L, 5100 Series, 600L
Gateway	5	SOLO	1200, 1400, 1450, 2500, 5300, 9100, 9500, 9550, 1100 Series, 2150 Series, 2300 Series, 3018GZ, 3100 Series, 3150 Series, 400SD4, 400VTX, 450R0G, 450SX4, 5150 Series, 600YG2, 600YGR, 9300 Series, M305, M500, MX Series, NX Series, S Series, Solo Pro 8300
Gateway	5		3000 Series, 400 Series, 4000 Series, 6000 Series, 8000 Series, CX Series, CX200, CX200S, CX200X, CX210, CX210S, CX210X, CX2808, CX2610, CX2615, CX2618, CX2619, CX2620, CX2620h, CX2720, CX2724, CX2724h, CX2726, CX2728, M Series, MX Series, NX Series, S Series
Gateway	111	SOLO	200ARC, 200ARE, 200X
Generic	3		MP-975A
Gericom	1	Masterpice	2440 XL, 2540XL
Gericom	3	Hummer	26640XL(only for charging)
Gericom	5		M6-T
Gigatech	4		MNB6500
Grid	6		1700, 386NX
Grid	8		1650, 1660, 1680
Hermes Plus	3		Green735, 6120
Hewlett Packard	3	Omnibook	300, 425, 430, 500, 510, 530, 900, 2000, 2103, 2105, 3101, 4000, 4101, 4103, 4105, 4150, 5000, 5500, 5700, 6000, 6100, 7103, 2100 Series, 3000 Series, 3100 Series, 4100 Series, 6000 Series, 600c, 600ct, 7100 Series, 7150 Series, 900b, N3000, VT Series, v6200, XE Series, XE1 Series, XE2 Series, XE3 Series, xe4100, xe4200, xe4400, xe4500, XT Series, XT276, xt1000, xt1500, xt6050, xt6200, z1000
Hewlett Packard	5	Pavilion	2105, 3101, 3101, 4101, 4101, 4103, 4103, 4105, 4105, 5135, 5140, 5150, 5159, 5159, 9000, AD7000, B3270, N3100 Series, N3110, N3150, N3190, N3200 Series, N3210, N3215, N3220, N3250, N3290, N3295, N3300 Series, N3310, N3330, N3350, N3370, N3390, N3400, N3410, N3438, N3478, N3490, N5000, N5100, N5124, N5125, N5130, N5159, N5170, N5190, N5195, N5210, N5221, N5240, N5241, N5250, N5261, N5270, N5271, N5290, N5295, N5310, N5311, N5340, N5341, N5350, N5350, N5351, N5371, N5381, N5390, N5402, N5412, N5416, N5420, N5421, N5422, N5425, N5430, N5435, N5440, N5441, N5442, N5445, N5450, N5451, N5452, N5454, N5455, N5456, N5481, N5482, N5484, N5490, N5491, N5495, N6190, N6195, N6395, N6396, N6397, N6398, N6399, N6400, N6401, N6402, N6403, N6404, N6490, XE4000 Series, XF Series, xf125, xf145, xf235, xf235, xf315, xf325, xf328, xf335, X4 Series, xt136, xt156, xt176, xt176, xt215, xt216, xt226, xt355, xt365, xt445, xt445, xt535, xt545, xt555, xt575, xt675, xt115, xt118, xt125, xt128, xt155, xt178, xt183, xt188, xt236, xt276, xt345, XT345, xt375, xt395, xt412, xt43450V, xt512, XT3300, XT3366, XT3368W, xt537, xt5370V, xt545, xt54777M, xt555, xt565, xt575, xt585, xt595, xt105, xt133, xt148, xt163, xt168, xt185, xt275, xt295, xt335, xt355, XZ355, XZ375, ZD70XX Series, ZE, ZE1000, ze1000, ZE1110, ze1110, ze1115, ze1145, ze1201, ze1202, ze1210, ze1210, ze1230, ze1250, ze1260, ZE4000, ze4000, ZE4100, ze4101, ze4102, ze4103, ze4105, ze4111, ze4115, ze4120, z230
Hewlett Packard	11	BUSINESS NOTEBOOK	Z32300
Hewlett Packard	11	Pavilion	Business Tablet TC4200, DVseries, L2000 Series, Special Edition Series, ZE1000A, ZE2000 Series, ZE2000T, ZE2000Z, ZE2010AP, ZE2011AP, ZE2018AP, ZE2020CA, ZE2020, ZE2300, ZE4900, ZT Series, zt3000, ZT3010US, ZT3001US, ZT3100, ZT3200, ZT3300, ZT3400, ZT4000

Download from www.Somanuals.com. All Manuals.com. All Manuals Search And Download.

PW-DD100W
Compatibility tip list

Hewlett Packard	11	Special Edition	L2000, L2100, L2200, L2300	
Hewlett Packard	11		500, 510, 520, 530	
Hewlett Packard	29	Pavilion	DV1000 SERIES, DV10M4P(PF354PA), DV1005AP(PF355PA), DV1007AP, DV1008AP, DV1010CA, DV1011AP, DV1012AP(PD111PA), DV1030AP(PN810PA), DV1040CA, DV1100, DV1101AP(P825PA), DV1102AP(P826PA), DV1122AP(PV253PA), DV1128AP(PV295PA), DV1135AP, DV1200, DV1240CA, DV1300, DV1400, DV1500, DV1600, DV1603TN, DV1700, dv2000, dv2100, dv2200, DV4000 SERIES, DV4003AP(PV294PA), DV4012AP(PV320PA), DV4017AP, DV4021EA, DV4030CA, DV4032EA, DV4040CA, DV4045EA, DV4070EA, DV4100, DV4114AP, DV4200, DV4300, DV5000, DV5100, DV5200, dv6000, dv6100, dv6400, dv6400 CTO, dv6500, DV8000, DV8100, DV8200, DV8300, dv9400, dv9408, dv9408, dv9408CA, dv9408NR, DV9410, dv9410us, dv9410ca, dv9413, dv9413CL, dv9417, dv9417CL, DV9420, DV9420US, DV9428, DV9428CA, DV9428NR, DV9429, DV9429US, DV9438, DV9438CA, DV9443, DV9443CA, dv9500, GA354UA, GA355UA, GA356UA, GA358UA, GA359UA, GA361UA, GL880UA, GL885UA, GL888UA, GL889UA, GL890UA, GL891UA, RX950AV	
Hewlett Packard	30	Pavilion	1500 Series, NC6000 Series	
Hewlett Packard	129	Pavilion	NC2400, NC6400, NX6310, NX6315, NX6325, NX7400, NC4400, NC6320, NX6110, NX7300	
Hitachi	4	Flora Prius	210, 220N	
Hitachi	4	Vision Book	133, Plus 4000, Plus 4140	
HITACHI	5	Vision Book	C Series, E Series, Elite, MX Series, Plus, Pro	
HITACHI	7	Flora Prius	20L	
IBM	3	"T" Series	1411, 1472, i1410(2611-xxx), i1411(2611-xxx), i1412(2611-xxx), i1434(2611-xxx), i1435(2611-xxx), i1436(2611-xxx), i1450(2611-xxx), i1451(2611-xxx), i1452(2611-xxx), i1470(2611-xxx), i1471(2611-xxx), i1472(2611-xxx), i1500(2611-xxx)	
IBM	3	ThinkPad	310D, 310E, 310ED, Series 1400-2611	
IBM	4	"T" Series	701, 770, 1200, 1210, 1230, 1250, 1260, 1300, 1320, 1330, 1420, 1460, 1460 (2621-xxx), i1418, i1420 (2621-xxx), i1421, i1441, i1442, i1460, i1480 (2621-xxx), i1482, i1500 (2621-xxx), i1720, i1721, i172x-2627	
IBM	4	A Series	240, 290, 365, 380, 385, 390, 560, 570, 600, 2647, A20, A20m, A21, A21e, A21p, A22e, A22m, A30-2652, A31, A31p, T20, T21, X20, X21	
IBM	4	R Series	R30-2656, R32-2658, R40e-2684	
IBM	4	T Series	T20, T30-2366, T40-2373, T42-2373	
IBM	4	ThinkPad	1400, 1400-2621, 1400-2651, 1500, 1500-2621, 1500-2651, 240, 240-1161, 240-1171, 240-2609, 240-2666, 240-2667, 310, 310D, 310-2600, 340CSE, 340E-2610, 345-2610, 345C, 345CS, 365-2625, 365E, 365ED, 365X, 365XD, 370C, 380-2635, 380D-2635, 380E-2635, 380XD-2635, 380Z-2635, 385-2635, 385D-2635, 385ED-2635, 385XD, 385XD-2635, 390, 390-2624, 390-2626, 390E, 535, 550, 560-2640, 560x-2640, 570, 570-2643, 570-2644, 570E-2644, 570M-2644, 600, 600-2645, 600-2646, 701, 765-9546, 765-9547, 770, 770-2648, 770-9548, 770-9549, 360c, 360cd, 560z, A20, A20E, A20M, A20P, A21, A21E, A21M, A21p, A22E, A22M, A22p, A30E, A30M, A30p, A31E, A31M, A31p, E530, R30, R31, R32, R40, R40e, R50, R50e, R50p, R51, R52, T20, T21, T22, T23, T30, T40, T40p, T41, T41p, T42, T42p, T43, T43p, X20, X21, X22, X23, X24, X2660, X2661, X2662, X30, X31, X40, X41, X42	
IBM	4	Workpad	Z50-2608	
IBM	4	X Series	X20, X21, X21 2622, X22, X30, X31, X32, X40, X40-2371, X40-2372, X40-2382, X40-2386, X41 Tablet 1866	
IBM	8	ThinkPad	500, 350 Series, 510 Series, 730T	
IBM	126	Lenovo	3000, C100, C200, N100, N200, V100, Z61E, Z60m, Z61M, Z60i	
IBM	126	ThinkPad	R60, R61, T60, Z60, T60p, T61, X60, X61, Z60M, Z60T, Z61M, Z61T	
IPC	5		87, 910T, C Series, Legend 60, 6200AT, TS30H, TS30T, 1100, MP-975A	
ITRONIX	3		Radiance, GoBook Series	
JAN	8		PC320	
JETBOOK	5		Jetbook Series	
Kapok	3			5200
Kapok	4		3100, 5100S, 5300C, 5100S, 5300C	
KDS	5		8100, 8300, 6400, 7200, 7600, 7800, Valiant Series	
Kwi	3		8650XL, Ara, MP975A, MP-968, MP-975, OpenNOTE Series	
KTX	7			1000
LEO	5		98, ERA 1000, Z Series, 9800, DesigNOTE 8800, Green 400	
LG	11		L555, M1, T1, S1, LW series, LW20, LW25, LW40	
Maximus	3		MediaNOTE 735	
Medion	5		550, 600, 810, 800, 862, 620 Series, R20T, MM96, P86, Green 759, Series Computer, MD 90777, MD 9326	
Megalmage	6		MegaBook 770, MegaBook 880	
Megalmage	7		Apollo, MegaBook 911CD	
MetroBook	111		LT, VL	
Micon	5		6200D	
Micro Express	3		NP8000	
Micro International	5		NP8500, NP952DX4, 6200, 6200D	
Micro Quest	3			6120
MicroFlex	5		P79, FlexNOTE	
Micron	2		Milena Transport Series	
Micron	5	Trek	2, LT, NX	
Midwest Micro	5		Trek Transport II, 6200D, TS30Si, TS30ST	
MITAC	3		7321, 7521, 3025D, 3025F, 3025F/SXL, 386/16, 6020T, 7521P, 7521T, MNOTE 7521	
MITAC	5	MINOTE	7170, 7321, 8170, 8375, 8500, 8575, 7068T, 7521C, 7521T, 8000 Series, M762, P4	

PW-DD100W
Compatibility tip list

MITAC	8			
MPC	5		At Book Series, M700, TouchNOTE 700	4023
MPC(formerly MicronPC)	5	TransPrt	V1000, V2000, X1000	
MPC(formerly MicronPC)	111	TransPrt	GX, GX+, GX2, GX3, Lt, Vx, XT, XT2, ZX, T1000, T2000, T2200, T2300	
Multimedia NOTEbook	5		5000 Series, 86, 98, 982, 8620, 6200AT	
NEC	8		3140, 3141	
NEC	2		120T Series	
NEC	5	LaVie	C PC- Series, F Series, G Series, J Series, L Series, M Series, Pocket Gear, Pro Series, Ready Series, RX LR5000/BD, T Series	
NEC	5	LaVie C	LC5000/4D, LC7000/4D, LC7000/6D, LC9000/4D Series, LC9000/7D, LC9500/4D Series, PC-LC3001A, PC-LC3002D, PC-LC5001D, PC-LC5002D, PC-LC5003D, PC-LC5004D, PC-LC5005D, PC-LC5003DW, PC-LC7001D, PC-LC7003D, PC-LC7004D, PC-LC7005D, PC-LC9001D, PC-LC9002D, PC-LC9003E, PC-LC9004D, PC-LC9005D, PC-LC9503E, PC-LC9504E	
NEC	5	LaVie F	F Series, LF550/4D, PC-LC7507D, PC-LF550/4D, PC-LF550/5D	
NEC	5	Versa	330T, 340T, 360T Series, IGO Series, L Series, L320, M Series, M400, P Series, Pro-J Series, Pro-VY Series, Ready 220T, S800, T400, Versa 2400 , Versa 2500 , Versa 2500CD, Versa 2505, Versa 2530, Versa 4000 Series, Versa 5000 Series, Versa C Series, Versa C Series, Versa E Series, Versa F Series, Versa NOTE Sxi, Versa NOTE VX, Versa VX, Vxi	
Nimantics	5		6200T, Orion 10XL, Orion HS166M, P79, SL86	
Northgate	3		5400T	
Northgate	5		NB86	
NOTEbook Computer	3		486, 386SX, 5200PT, P79T	
NOTEbook Computer	4		3100, 5100S, 5300C	
Outbound	5		Multimedia 86, NP8100, NP8320, Echos Series, Xtreme, 386SX, LT386SX, 2000, 2030, 2030A	
Packard Bell	5	EasyNOTE	KS305	
Panasonic	4	Toughbook	CF0+1, CF17+, CF18, CF19, CF25, CF25+, CF27+, CF28, CF28, CF29, CF30, CF34+, CF35+, CF37, CF37+, CF50, CF51, CF73, CF74, CF-R1, CF-R2, CF-R3, CF-T1, CF-T2, CF-T4, CF-W4, CF-W4G, CF-W4H, CF-W4J, CF-Y2, CF-Y4, CF-Y5, CF-Y7, T4, W2, W4, Y4, Y23	
Panasonic	4		CF-Y2, CF-Y5, CF-W4	
Panasonic	6	Toughbook	35, 170, 370, 380, CF270, CF270, CF33+, CF370, CF380, CF41, CF45+, CF47+, CF48, CF81+, CF62+, CF63, CF71+, CF72+, CF-M34, CF-V25, CF-V41	
Panasonic	7	Toughbook	CF-V21, CF-V21P	
Patriot	5		800, 8000, 8890, 9000, 860C, C86, FT6000A	
Prostar	3		F76000, MP938SL, 5200PT, 5200T	
Prostar	4		5100, 5100C	
Prostar	5		N30W, TS30, P series, 86, 7200	
SAGER	3		5200, 5200D, 5200PT, 5200T	
SAGER	4		5100C, NP33501, NP3360V	
SAGER	5		1511L, H Series, I Series, N30W, T Series, W Series, 86, 98, 862, 3500, 5150, 6200, 7200, 8549, 8700, 6200D, 8600 Series, D20, Fentum 86, Model 87, NB8600, NB8700, NP8100, NP8300, NP8320, NP8500, NP8550, NP8600, NP8620, NP8623, NP8680, NP8700	
SAMSUNG	6	Sens	700, 800	
SAMSUNG	7		810, 525 Series, Pro sens 500	
SAMSUNG	8		NOTEmaster	
SAMSUNG	111	Aquila	X05, X10	
SAMSUNG	111	Corona	P30	
SAMSUNG	111	GT series	GT8600, GT6330, GT6330XT, GT6360, GT6360XT, GT6400, GT9400XV, GT7000, GT7700, GT8000, GT8100, GT8600, GT8600XT, GT8650, GT8650XT, GT8700, GT8700XT, GT8750, GT8750XT, GT8750XV, GT8800, GT8800XT, GT8800XV, GT8850, GT8850XT, GT8850XTD, GT8900, GT8900DXV, GT8900XTR, GT8910, GT8910KXV, GT9000, GT9000 PRO	
SAMSUNG	111	M series	M40, M40 plus	
SAMSUNG	111	P series	P27, P28, P28G, P29, P30, P35, P40	
SAMSUNG	111	Q series	Q1, Q10, Q20, Q25, Q30, Q30 plus, Q35	
SAMSUNG	111	R series	R45, R50	
SAMSUNG	111	Sens	630, 820	
SAMSUNG	111	Sens Pro	880, 850	
SAMSUNG	111	VM series	VM6000, VM6300, VM6300T, VM7000, VM7550, VM7550CT, VM7600, VM7600CT, VM7650, VM7650CT, VM7650CTD, VM7700, VM7700XTD, VM8000, VM8080, VM8080CT, VM8090, VM8090CT, VM8090CTD, VM8095, VM8095CX, VM8100, VM8100CX, VM8100CTD, VM8110XTC, VM8100XTD	
SAMSUNG	111	X series	X05, X06, X1, X10, X10 plus, X11, X15, X15 plus, X30	
SAMSUNG	111		GS6000, SN6000	
Sceptre	5	SoundX	S, S5200T, S5500T	
Sceptre	5		N30W, NB30B2, TS30H, TS30W	
Sharp	5	PC	3000 series, 8000 Series, 9000 Series, PC9340T	
Sharp	12	Actius	A110, A150, A250, A280, A290	
Sharp	131	Actius	MM10, MM20, MM20P	
Smart-Tec	5		NX6000, NX6600	

PW-DD100W
Compatibility tip list

Toshiba	76	Satellite	A20, A20-S207, A20-S208, A20-S259, A20-S2591, A25 , A25-S207, A25-S208, A25-S279, A25-S2791, A25-S2792, A25-S307, A25-S3072, A25-S308, A40, A40-S161, A40-S1611, A40-S161B, A40-S200 Small Business, A40-S2001, A40-S270, A40-S2701, A40-S270SB, A45, A45-S120, A45-S1201, A45-S1202, A45-S1211, A45-S12111, A45-S130, A45-S1301, A45-S150, A45-S1501, A45-S151, A45-S1511, A45-S250, A45-S2501, A45-S2502 Series, P100-ST9xxx, P105-S921, P105-S9xxx, P105-S9722
Toshiba	76	Satellite Pro	A40
Toshiba	85	Dynabook	G8, G8 series, P7, P7, P8, P8 Series, T6 Series, V8 Series
Toshiba	85	Dynabook Satellite	2210, 2250, 2270, 3000, 3010, 3020, 3300, 3330, 3380, 3410, 3430, 3480, 4260, 4320, 4340, 4360, 4380, 4600, 6000
Toshiba	85	Libretto	50, 70, 100, 110
Toshiba	85	Libretto FF	1050, 1100
Toshiba	85	Libretto SS	1000, 1010
Toshiba	85		3010, 3015, 3020, 3025, 3110, 3120, 3440, 3480, 3490CDT, 3490CT
TRIGEM	11	DREAMBOOK	A SERIES, F SERIES, T SERIES, U SERIES, X SERIES
TROGON	3		758, E 22N, E 23, Green 735, MP975A
TROGON	5		E 3, Green 759, Green 795, T.22, TG-795 Series
Twinhead	3	SlimNOTE	5, 9, 575, 5100 Series, 550S, 6000 Series, 800 Series, 8000 Series, 9000 Series, 9T
Twinhead	3		9TE, Marco Polo, Power Slim 601TZ, S Body
Twinhead	5	Figaro	600, 300TG, 500TG, 500TZ, 602TZ, GX2, P88, P88T, P88TE, SlimNOTE VXE
Twinhead	5	SlimNOTE	910CV, 9133TV, 9133TZ, 9159TZ, 9166TZ, VX, VXE, VXE3
Wedge Technologies	5		318T, ActionBook 300C, ActionBook 530T, 6200D
Winbook	1		XII, XL, XL2, XL3
Winbook	3	Winbook	FX, XP5 Pro
Winbook	5		J Series (all models), J4 Series, JI, N, Si, Si Series, S2, X Series, X1, X2, X4, XL, XP, XP, XP5, Z Series, ZL
Windrower	3		6020
Windrower	4		5100C
Windrower	5		N30W
Windrower	11		7400

- Updated tip list can be found at <http://www.lasercos.com.au/downloads/power/tiplist2.xls>

Disclaimer

Some late model Dell Notebooks cannot be charged with this charger. While some Dell notebook models may operate (Power up) from this charger the battery may not charge.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>