

Disney: ELECTRONICS

User's Guide AM/FM RADIO

DR1000-C



For additional set-up or operating assistance, please visit our website at www.memorexelectronics.com or contact customer service at 1-877-DISNYCE (1-877-347-6923).

 
Please keep all packaging material for at least 90 days in case you need to return this product to your place of purchase or Memcorp.

For parts and accessories, contact Fox International at 1-800-321-6993.

Distributed by Memcorp Inc., Weston Fl
Disney Elements © Disney 2003.

QUICK REFERENCE

The Quick Reference is given to provide basic operation of the unit. Please completely read the user's guide to take advantage of all the features this unit has to offer.

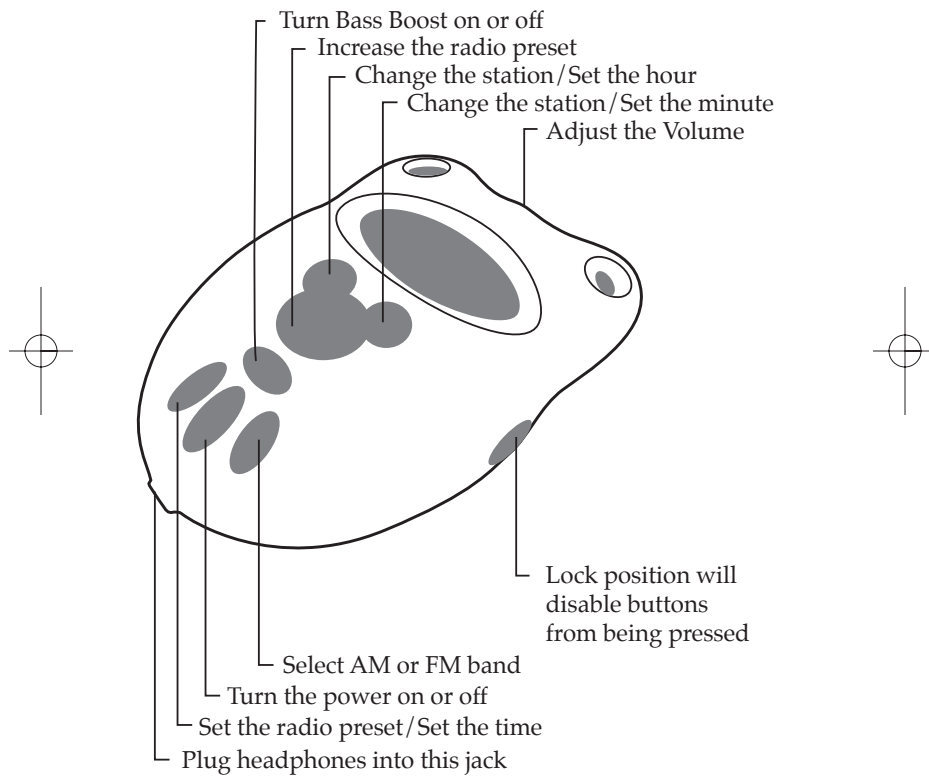

SAFETY PRECAUTIONS



DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:

 
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

- Place the unit on a stable surface.
- Avoid placing the unit in locations described below:
 - Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
 - On top of other stereo equipment that radiates too much heat.
 - Places lacking ventilation or dusty places.
 - Places subject to constant vibration.
 - Humid or moist places.

LOCATION OF CONTROLS

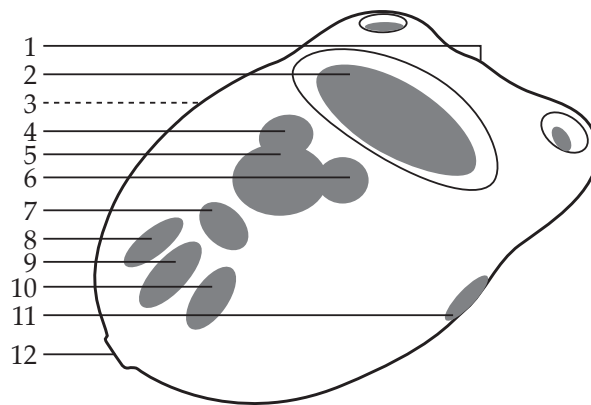

1. Volume Control
2. Display
3. Battery Compartment (Rear of Unit)
4. Tuning Down/Hour Button
5. Preset Button
6. Tuning Up/Minute Button
7. Bass Boost Button
8. Preset/Clock Set Button
9. Power Button
10. AM/FM Band Button
11. Hold Switch
12. Headphone Jack

INSTALLATION

To Install/Remove the Belt Clip

 
To install, place belt clip into hole in the rear of the unit and slide up until it locks in place.

To remove, press in the top part of the belt clip and slide downward.

Battery Installation

Batteries need to be replaced when stations are difficult to tune in. Make sure the Belt Clip is removed first.

1. Open the battery compartment door on the rear of the unit by inserting a small screwdriver, paper clip or similar item into the tab while gently pushing to remove. (see figure below).
2. Insert two (2) "AAA" batteries (not included) according to the polarity diagram. Alkaline batteries are recommended for longer playing time.

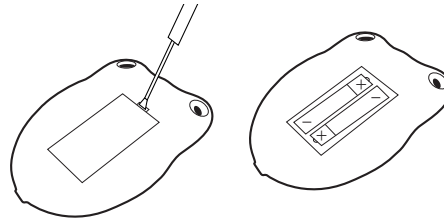

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated next to the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

INSTALLATION (CONTINUED)

TO USE THE NECK STRAP

Follow the instructions below to use the hand strap:

1. Insert the neck strap through the hole and shown in figures 1 and 2 for each strap.

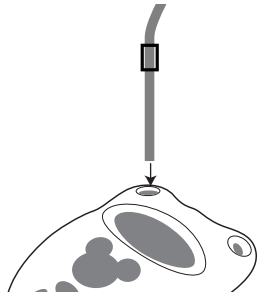 


Figure 1

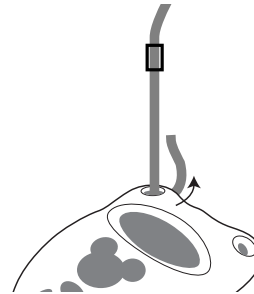 


Figure 2

2. Loop the strap through the buckle as shown in figures 3 and 4.

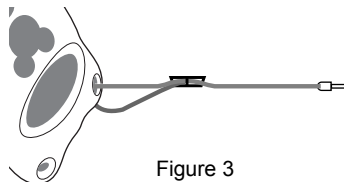 


Figure 3

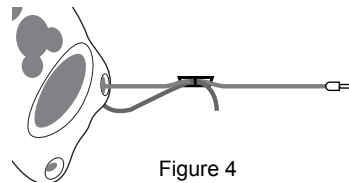 


Figure 4

3. Put around neck and insert A into B until as snap is heard, as shown in figure 5. To remove neck strap, simply pull the A from B.

 


Figure 5

OPERATION

Headphones

Insert the supplied headphones into the Headphones jack.


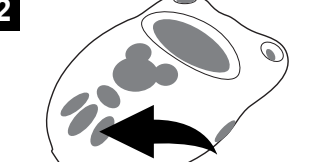 
Use your common sense when using headphones:

- **Hearing Safety:** Do not play your unit at high volume. Hearing experts advise against continuous extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.
- **Traffic Safety:** Do not use while operating a motor vehicle. It may create a traffic hazard and it is illegal in many areas. You should use extreme caution or temporarily discontinue use in potentially hazardous situations. Even if your headset is an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you can't hear what's around you.

Bass Boost Button


Press to turn bass boost on, which will enhance the overall bass sound.

TO LISTEN TO THE RADIO


	
<p>Press the Power button ❶ to turn the unit on. Set the Volume control ❷ to minimum and plug the headphone into the Headphone jack.</p>	<p>Press the AM/FM Band button to select a band (AM or FM).</p>

CONTINUED ON THE NEXT PAGE

 OPERATION (CONTINUED)

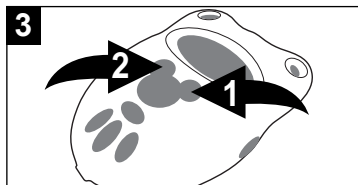


 3
Tune a station by pressing the Tuning Up/Minute **1** or Down/Hour **2** button. Press and hold for approx 1 second, then release the Up/Minute **1** or Down/Hour **2** button and the unit will scan and stop on the next strong station.

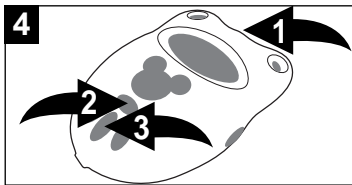

4
Adjust the Volume control **1** and Bass Boost button **2** as desired. To turn the radio off, press the Power button **3**.

 SETTING RADIO PRESETS (5 FOR EACH BAND)

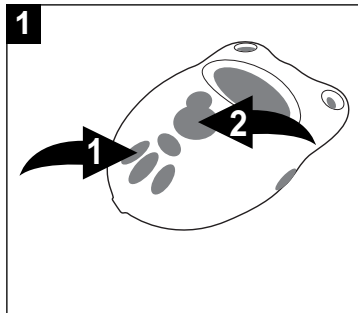

1
Tune a station as described in the previous section, then press the Preset/Clock Set button **1** once; the Preset number will blink. Press the Preset button **2** repeatedly to select a radio preset number, then press the Preset/Clock Set button **1** again to confirm and the radio preset will be set.

 
ANTENNAS

AM – This unit has a built-in ferrite bar antenna, which provides adequate reception in most areas. If reception is weak, turn the unit to improve reception.


FM – The headphones act as an antenna for FM. Extend the headphone wire for best FM reception.

OPERATION (CONTINUED)

TO RECALL RADIO PRESETS HOLD SWITCH

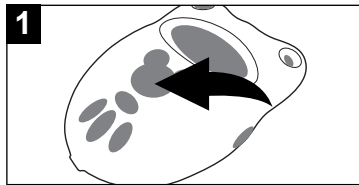


 1
To recall a Radio Preset, press the Preset button repeatedly until the desired Radio Preset appears in the display.

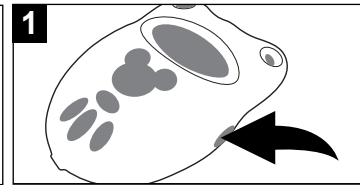


1
To avoid any buttons being pressed, slide the Hold switch to the Lock position (the Lock indicator will appear in the display) and no buttons will operate. To unlock, slide back to the Unlock position.

 TO SET OR RESET THE TIME

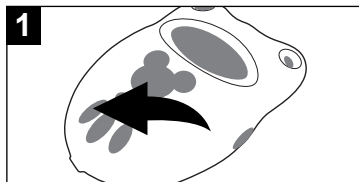

 1
With the unit off, press the Preset/Clock Set button once and the display will blink.

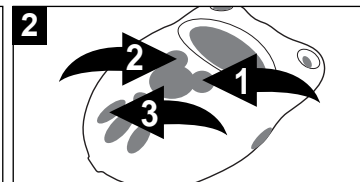

2
Press the Tuning Up/Minute **1** button repeatedly to set the minute. Press the Tuning Down/Hour **2** button repeatedly to set the hour. Make sure the PM indicator is lit if you are setting to PM, and make sure it is not lit if setting to AM. Wait 10 seconds, or press the Preset/Clock Set button **3** again and the time will be set.

TROUBLESHOOTING GUIDE

Should this unit exhibit a problem, check the following before seeking service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
GENERAL		
Power does not come on.	Batteries connected improperly, not connected or dead.	Check the batteries and replace if necessary.
RADIO		
No sound.	Power button was not pressed.	Press the Power button to turn the unit on.
	Volume control at minimum position.	Increase the volume.
	Headphone plug not inserted correctly.	Make sure headphone plug is fully inserted.
Noise or sound distorted on AM or FM.	AM - Interference from traffic.	Turn the radio for better AM reception.
	FM - Headphone wire is not extended.	Extend Headphone wire.
CLOCK		
Flashing time.	Batteries connected improperly, not connected or dead.	Check the batteries and replace if necessary.
	Clock not set.	Set the clock.

SPECIFICATIONS

Power Supply.....Two (2) AAA size batteries
Power Output.....20mW
Frequency Range (FM).....87.5 to 108MHz
Frequency Range (AM).....520 to 1710KHz

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE,
PLEASE VISIT OUR WEBSITE AT
WWW.MEMOREXELECTRONICS.COM
OR CONTACT CUSTOMER SERVICE AT 1-877-DISNYCE
(1-877-347-6923).

PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST
90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT
TO YOUR PLACE OF PURCHASE OR MEMOREX.

FOR PARTS AND ACCESSORIES, CONTACT FOX
INTERNATIONAL AT 1-800-321-6993.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>