 




**MB211**

**User's Guide**

*Armband AM/FM Radio  
with Alarm Clock*

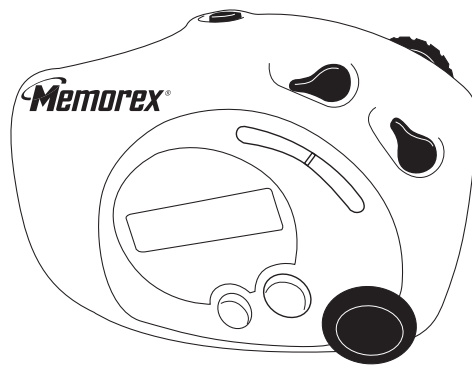

**Before operating this product,  
please read these instructions completely.**

Thank you for purchasing this Memorex audio system.

The serial number of your unit can be found on a label on the rear of the cabinet. We suggest that you record the serial number in the space provided below in case this information is ever needed at a future date.

**PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR TO MEMOREX.**

 
Model Number: MB211

Serial Number: \_\_\_\_\_

## BATTERY INSTALLATION

### BATTERY INSTALLATION:

Open the battery compartment by sliding it downward and lifting it up. **To prevent the possibility of losing the cover, it cannot be removed.** Insert two (2) "AAA" size batteries (not included) following the polarity diagram. Slide the battery compartment back in place.

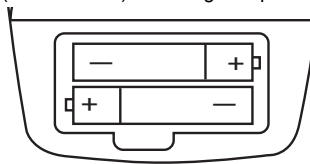

### BATTERY PRECAUTIONS

 
Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries, as indicated on the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline, Carbon-zinc and Rechargeable) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

### IMPORTANT NOTE WHEN CHANGING BATTERIES:

Make sure to change the batteries within 30 seconds, otherwise the time and memory may be lost.


## LOCATION OF CONTROLS

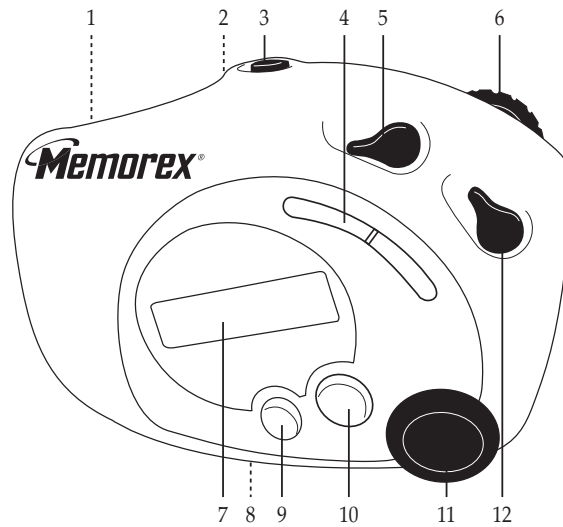


- |  |  |
|--|--|
| 1. Battery Compartment (Rear of Unit)  | 8. Armband Release Button (Rear of Unit) |
| 2. Armband Strap Holder (Rear of Unit) | 9. SET Button                            |
| 3. Earbud Jack                         | 10. MODE Button                          |
| 4. AM/FM Dial Scale and Pointer        | 11. TUNING Control                       |
| 5. Function (OFF/FM/AM) Switch         | 12. BASS (ON/OFF) Switch                 |
| 6. VOLUME Control                      |  |
| 7. Time Display                        |  |

## INSTALLATION

 
### TO USE THE ARM STRAP

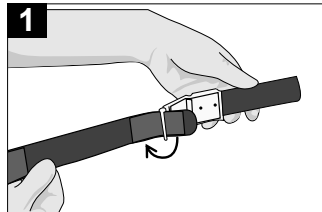

 
1 Insert the belt strap into the belt clip, then fold the belt strap and fasten the velcro.

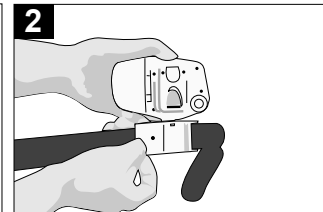

 2 Insert the belt clip into the main unit, then push the belt clip until it locks in place at the end of the belt clip holder.

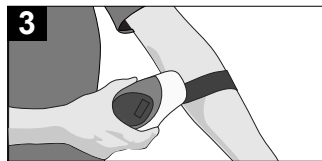

 3 Straighten the other side of the belt, then put the belt around your arm (it will rope your arm itself). Fasten the velcro so the unit is secure.

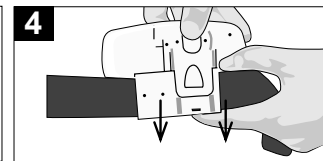

**TO REMOVE THE BELT CLIP:**  
Press and hold the Belt Clip release button, then push the belt clip out to remove it from the unit.


### EARBUDS:

 Included with this unit are earbuds. Make sure the VOLUME control is at minimum and insert the earbud plug into the earbud jack on the top of the unit. Place the earbuds into your left and right ears, corresponding to the "L" and "R" mark on each earbud.


**NOTE:** You must have the earbuds plugged in to hear the alarm sound.

## OPERATION

### TO LISTEN TO THE RADIO

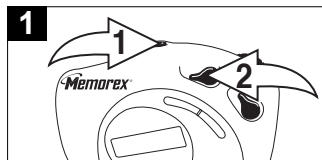

 
Insert the earbuds into the Earbud jack ❶ and slide the Function switch ❷ to select AM or FM.

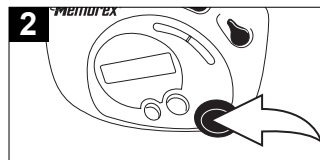

Rotate the TUNING control to tune a station.



 Adjust the VOLUME control ❶ and BASS switch ❷ as desired.

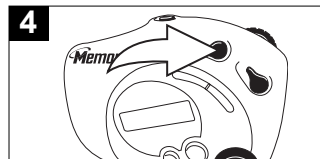


When done listening, slide the Function switch to the OFF position.

### Antennas

 FM: Extend the earbud wire for best reception.

AM: Turn the unit for better AM reception.


### BASS BOOST

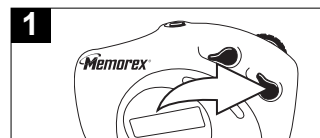


To emphasize the bass, slide the BASS switch to the ON position. Slide to the OFF position to turn the bass feature off.

## OPERATION (CONTINUED)


### TO SET OR RESET THE ACTUAL TIME AND DATE

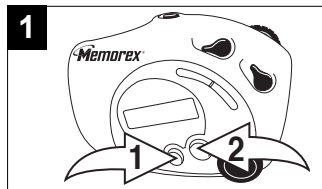


Press the SET button **1** four times; the month will appear. Repeatedly press the MODE button **2** until the desired month appears.

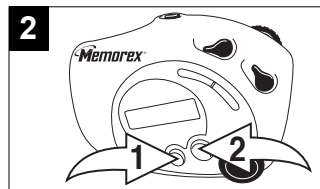

Press the SET button **1** again; the day will appear. Repeatedly press the MODE button **2** until the desired day appears.

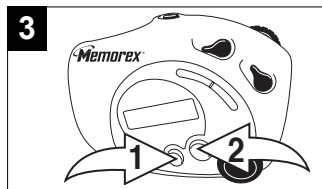


Press the SET button **1** again; the hours will appear. Repeatedly press the MODE button **2** until the desired hour appears. Make sure to set the correct AM/PM or 24 hour time setting.

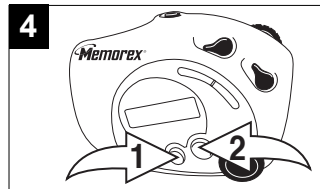


Press the SET button **1** again; the minutes will appear. Repeatedly press the MODE button **2** until the desired minute appears. Press the SET button **1** then the MODE button **2** and the time will be set.

## OPERATION (CONTINUED)

### TO SET OR RESET THE ALARM TIME

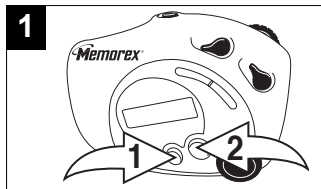


Press the SET button **1** twice; the alarm hour will blink. Repeatedly press the MODE button **2** until the desired alarm hour appears. Make sure to set the correct AM/PM or 24 hour time setting.

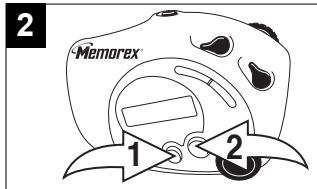

Press the SET button **1** again; the alarm minutes will blink. Repeatedly press the MODE button **2** until the desired alarm minute appears. Press the SET button **1** again and the alarm time will be set.

### TO TURN THE ALARM ON

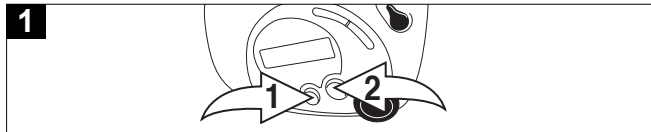 


Set the alarm time as previously instructed. Press the SET button **1** once; the alarm time will blink. Press the MODE button **2** once to activate the alarm; the alarm indicator ("A") will appear. Press the MODE button **2** a second time to activate the alarm and the Hourly Beep feature (explained on next page); the Alarm indicator ("A") and Beep indicator ("B") will appear. Press the SET button **1** three times to return to the Time display. When the actual time matches the selected preset alarm time, the alarm (beep sound) automatically turns on. To shut off the alarm, see TO SHUT THE ALARM OFF section on the next page.

#### NOTES:

- You must have the earbuds plugged in and be listening to the radio to hear the alarm sound.
- The alarm will be a beeping sound; you cannot set the unit to wake to the radio sound.
- The alarm will sound for 30 seconds when it reaches the alarm time.


## OPERATION (CONTINUED)

### TO SHUT THE ALARM OFF

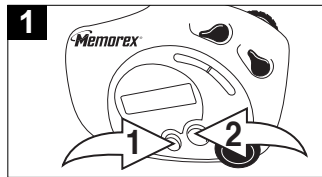


To shut the alarm off, when the alarm is sounding, press the SET button **1** once and the alarm time will be reset for the next day. To turn off the alarm and not set it for the next day, press the SET button **1** again, then press the MODE button **2** until the Alarm indicator ("⏰") disappears to deactivate the alarm. Press the SET button **1** until the current time appears in the display.

### SNOOZE

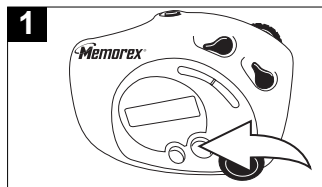

The alarm can be temporarily turned off manually by pressing the MODE button when the alarm is sounding; the Alarm indicator ("⏰") will blink in the display. The alarm will turn back on automatically five minutes later.

### TO SET THE HOURLY BEEP

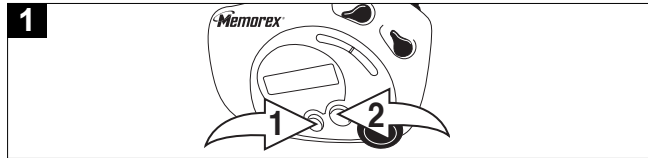 

When this feature is activated, a beep will be heard every hour, when listening to the radio. Press the SET button **1** once; the alarm time will blink. Press the MODE button **2** twice to activate the alarm and the Hourly Beep feature; the Alarm indicator ("⏰") and Beep indicator ("🔔") will appear. Press the MODE button **2** a third time to activate the Hourly Beep feature only; the Beep indicator ("🔔") will appear. Press the SET button **1** three times to return to the Time display.

**NOTE:** You must have the earbuds plugged in and be listening to the radio to hear the alarm sound.



## TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
<b>RADIO</b>		
No sound.	The earbuds are not connected.	Plug in the earbuds.
	VOLUME control at minimum position.	Increase the VOLUME control.
Noise or sound distorted on AM or FM.	AM: Interference from traffic.	Turn the radio for better AM reception.
	FM: Earbud wire is not extended.	Extend Earbud wire.
<b>CLOCK</b>		
Time is not set.	Battery connected improperly, not connected or dead.	Check the battery and/or replace battery.
	Clock is not set.	Set the clock.
Alarm does not sound.	Clock is not set.	Set the clock.
	Alarm time is not set.	Set alarm time.

 
 
**FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT:**

**[WWW.MEMOREXELECTRONICS.COM](http://WWW.MEMOREXELECTRONICS.COM)**

**OR CONTACT CUSTOMER SERVICE AT 1-800-919-3647.**


**PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR TO MEMOREX.**

**FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993.**



Memcorp, Inc.  
Weston, FL  
Printed in Hong Kong

 Visit our website at [www.memorexelectronics.com](http://www.memorexelectronics.com)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>