



### Essentials

**Location of the Spare Tire and Jack**  
The full size spare tire is located in your trunk, in the area below the rear window. The jack can be found in a bag under or behind the spare tire.

**Fuses**  
If electrical components in your vehicle are not working, a fuse may have blown. Blown fuses are identified by a broken wire within the fuse. To learn about changing fuses, please consult your Owner's Guide.

**Fuel Pump Shut-Off Switch**  
If you're involved in a collision, your engine may crank but not start. That means the fuel shut-off switch may have been activated. You'll find the switch on the left side of the trunk behind the left rear taillight and the trunk liner. For information on resetting, please see your Owner's Guide.

**Unleaded Fuel Recommendations**  
Use "Premium" unleaded gasoline with an (R+M)/2 octane rating of 91.

**Tire Pressure**  
Adjust the tire pressure to the recommended specifications found on the certification label and inside the fuel door. When checking pressure, use an accurate tire pressure gauge. Check tire pressure when the tires are cold, after the vehicle has been parked for at least one hour or has been driven less than 3 miles. **Warning:** Improperly inflated tires can affect vehicle handling and can fail suddenly, possibly resulting in loss of vehicle control.

**Tire Rotation**  
Since Marauder's rear tires are larger than the front tires, rotations must be specific to each axle. In other words, the front tires are interchangeable only with the front tires and the rear tires are interchangeable only with the rear tires.

**Roadside Assistance**  
During your vehicle's 3-year/36,000-mile limited warranty period, every new Mercury vehicle includes the assurance and support of a 24-hour emergency Roadside Assistance program. Roadside Assistance includes such services as fuel delivery, flat tire changes, jump starts, and help when you are locked out of your vehicle.

Please complete your Roadside Assistance Identification Card and keep it in your wallet for quick reference. This card can be found in your glove compartment, in your Mercury Owner's Guide portfolio.

### Additional Features

**Power Windows**  
Press the bottom portion of the switch to lower, the upper portion to raise. To use the driver's window express down feature, press the bottom portion and release quickly; the window will open fully. Depress again to stop window operation. The window lock feature allows only the driver to operate the power windows. Press the left side of the window lock to prevent passengers from lowering power windows; press the right side to restore use of the controls.

**Adjustable Pedals**  
Your accelerator and brake pedals can be adjusted within 2.5" of original placement to provide you with an extra measure of driving confidence. Stop your vehicle, put the gearshift lever in P (Park) and press the rocker control to adjust the pedals toward you or away from you; adjust until you find the position that offers the greatest comfort and control.

**Hood Release**  
The hood release handle is located below the instrument panel. Pull the handle toward you to release. From the front of your vehicle, release the auxiliary latch under the front center of the hood and lift until the lift cylinders hold it open.

**Trunk Release / Fuel Door**  
Your trunk release is located on the trim panel of the driver's door; press the control to open the trunk. To open your fuel door, press the fuel door control (located directly behind the trunk release).

**Electronic Compass**  
Located in the overhead console, this compass may be affected when you drive near large buildings, bridges, power lines and powerful broadcast antenna. To make compass adjustments, please see your Owner's Guide.

**Power Seats**  
The power seat controls are located in the trim panel of each front door. Press the top of the control to recline the seat back forward or backward. Slide the lower control to move the seat forward or backward. Press either end of the same control to move the seat cushion up or down. The lumbar controls are located on the inboard side of the front seat cushion.

**Remote Entry System**  
The remote entry system allows you to lock or unlock all vehicle doors without a key.

**Unlocking the Doors**  
Press this control to unlock the driver's door. The interior and exterior lamps will illuminate with the ignition OFF. Press the control a second time within three seconds to unlock all doors.

**Locking the Doors**  
Press this control to lock all doors. The horn will chirp and the parking lamps and tail lamps will flash to confirm the control was pressed.

**Opening the Trunk**  
Press this control once to open the trunk.

**Sounding the Panic Alarm**  
The panic feature operates with the key in the OFF position. Press this control to activate the alarm. To deactivate the alarm, press the control again, or turn the ignition to ACC or ON.

**Exterior Mirrors**  
**Power Side View Mirrors**  
To adjust these mirrors, select the left arrow to adjust the left mirror, the right arrow to adjust the right mirror. Move the control in the direction you'd like to adjust the mirror. Return to the center position to lock the mirrors in place.

**Heated Mirrors**  
These mirrors warm up to remove ice, mist and fog when the rear window defrost is activated; attempting to remove ice from these mirrors by hand can damage the glass.

**Fold-Away Mirrors**  
Pull the side mirrors in carefully when driving through a narrow space, like an automatic car wash.

**Aluminum Wheel Care**  
Marauder's polished, forged aluminum wheel rims are coated with a clear coat finish. To maintain their shine, clean them with Detail Wash, which is available from your Mercury dealer.

### Automatic Temperature Control System



**A** Simply press AUTOMATIC and use the temperature controls to select the temperature you prefer. This system will then heat or cool to achieve that temperature, determining fan speed and airflow location.

**B** Press OFF to end Auto operation.

**C** Press the blue button for cooler air.

**D** Press OUTSIDE TEMP to display the outside temperature.

**E** Choosing the MAX A/C manual override control will distribute recirculated air through the instrument panel registers. MAX A/C is noisier than normal A/C, but more economical and efficient.

**F** Choosing the NORM A/C manual override control will distribute outside air through the instrument panel registers. It will only function if the outside temperature is above 43 degrees F. Normal A/C is more quiet than MAX A/C, but not as economical or efficient. NORM A/C should be used to defog windows.

**G** Press the VENT manual override control to distribute the outside air through the instrument panel registers.


**H** Press the FLOOR manual override control to distribute air through the floor ducts.

**I** Press the FLR•DEF (defrost) manual override control to distribute outside air through the windshield defroster ducts, the floor ducts and the side window demisters.

**J** Press DEF (defrost) to distribute air through the windshield defroster ducts and side window demisters. The A/C compressor will operate automatically to clear ice and fog from the windshield.

**K** Fan speed will remain in automatic operation unless the fan speed thumbwheel is turned or the steering wheel fan speed control is pressed.

**L** Press the red button for warmer air.

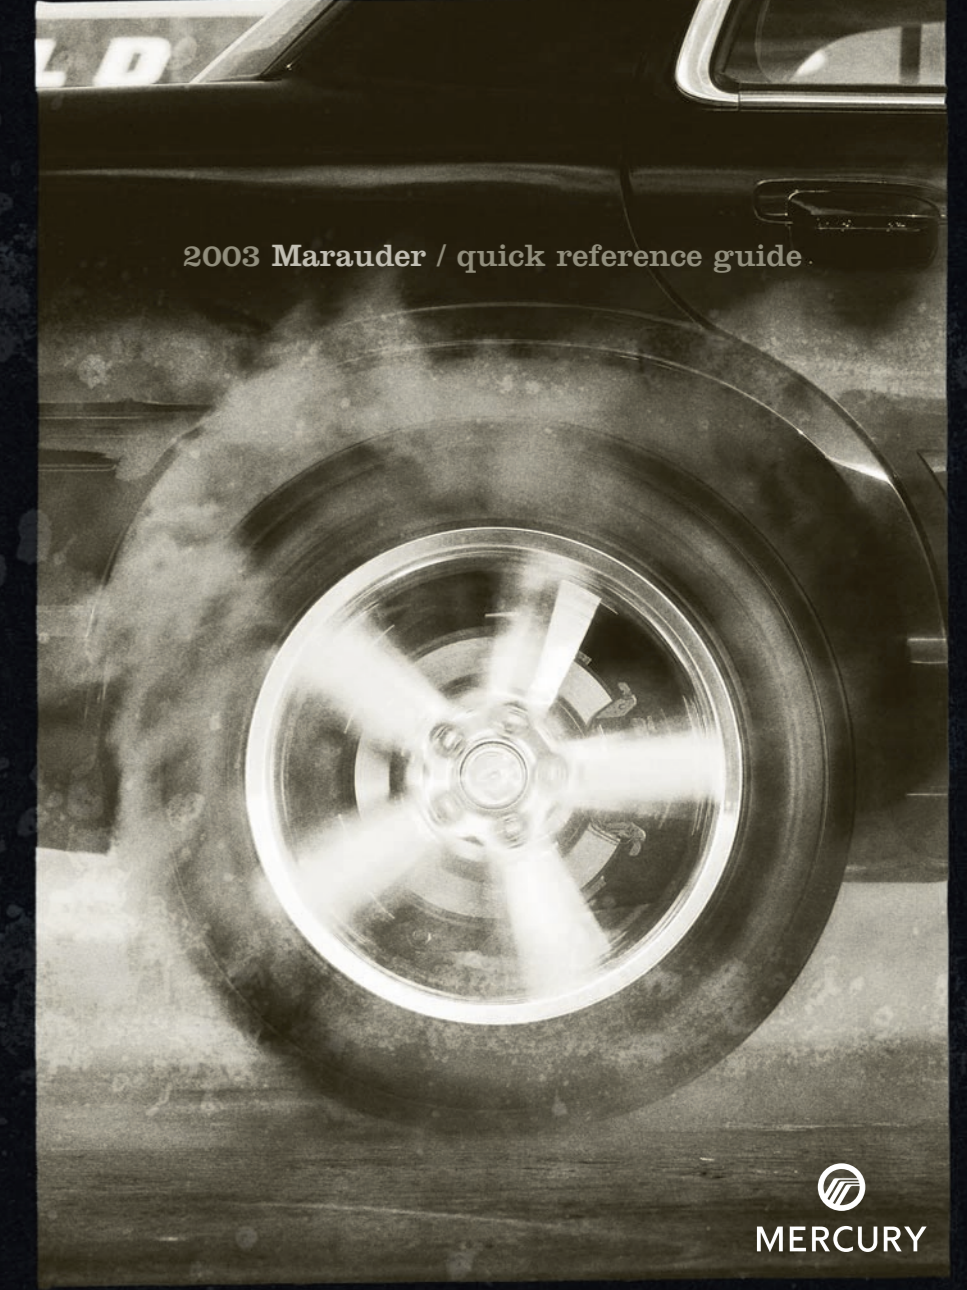

2003 Marauder / quick reference guide.

To return to automatic control, press AUTOMATIC.

See your Owner's Guide for more information on climate control.



**Ford Motor Company**  
Customer Relationship Center  
16800 Executive Plaza Drive  
P.O. Box 6248  
Dearborn, MI 48121  
1-800-392-3673 (FORD)  
(TDD for the hearing impaired: 1-800-232-5952)

All information contained in this Mercury Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Mercury dealer is the best source for the most current information.

For detailed operating and safety information, please consult your Owner's Guide.





**Big, powerful and aggressive** – the Mercury Marauder was designed for the individual who doesn't follow the crowd.

It was created for the enthusiast who demands the performance of an **exhilarating** all-aluminum 4.6L DOHC 32-valve V8, someone who knows how to handle 302 horses and 318 ft. lbs. of torque, someone who can appreciate the satin aluminum instrument cluster and racing-style instrumentation, someone who refuses to sacrifice five-passenger luxury, comfort and convenience. **Someone who wants it all.**

**"It was designed for someone like you."**

Congratulations on your choice. There's a lot to learn about your new Marauder. Since we understand you're anxious to enjoy your vehicle first-hand, we've provided you with this handy quick reference. It will briefly guide you through the basics of your vehicle's most-used features. When you have more time, we ask that you see your Owner's Guide for detailed information.



- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12

**1 Headlamp Controls**

**Headlamps:** The first position clockwise will illuminate the parking lamps; the second position will illuminate the headlamps. **Autolamps:** Turn the control counterclockwise to have the light-sensitive system automatically control your headlamps. **Foglamps:** Pull the headlamp control toward you to turn them on. (Foglamps can be used with the headlamp control in the parking lamp, low beam or autolamp positions.) **Dimmer:** To adjust the brightness of your instrument panel, rotate the dimmer control to the left or right.




**2 Windshield Wiper/Washer Controls**

Rotate the windshield wiper control upward or downward to determine your desired interval, in low or high-speed position. The bars of varying length control your intermittent wipers. When in intermittent position, rotate the control upward for fast intervals, downward for slow intervals. Push the end of the stalk to activate the washer. For a longer wash cycle, push and hold.



**3 Turn Signal and High Beams Controls**

Push the stalk down to activate your left turn signal, up to activate the right turn signal. To use your high beams, push the turn signal stalk forward; pull toward you to deactivate.

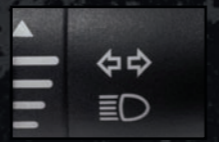

**4 Speed Control**

To engage your speed control, make sure you're traveling at or above 30 mph and press ON. To set a speed press SET ACCEL. To set a higher speed, press and hold SET ACCEL; release when you've reached the desired speed. To set a decreased speed, press and hold COAST; release when you've slowed to the desired speed. To return to a previously set speed, press RESUME (you must be traveling above 30 mph). To disengage, depress the brake pedal or press OFF.



**5 Check Engine Warning Light**

This light will inform you if there is a problem with your engine. It's normal for the light to illuminate briefly when you start your engine. If the light stays on or blinks, there could be a problem. Have your vehicle serviced as soon as possible.



**6 Anti-Lock Brakes**

"ABS" provides enhanced security by detecting wheel lockup in hard braking situations. The light will illuminate momentarily when you start your engine; however if it fails to illuminate, stays on or continues to flash, see your dealership's service department immediately.



**7 Clock Controls**

Your vehicle is equipped with a separate instrument panel mounted clock. Press H to set the hour, M to set the minutes.



**8 Steering Wheel Radio & Climate Controls**

**Radio Control Features:** Press VOL up or down to adjust the volume. Press MODE to select AM, FM1, FM2, TAPE or CD. In radio mode, press NEXT to select a preset station from memory. In tape or CD mode, press NEXT to listen to the next selection or track. **Climate Control Features:** Press TEMP up or down to adjust the temperature, press FAN up or down to adjust fan speed.



**9 Rear Window Defroster**

Push to clear the rear window of thin ice and fog. The defroster turns off automatically after 10 minutes, or when the ignition is turned off.



**10 Overdrive/Drive**

**Overdrive:** The normal driving position for the best fuel economy is Overdrive with this automatic transmission. It will increase your fuel economy when cruising at a constant speed for an extended period of time. **Drive:** On the other hand, Drive provides more engine braking than Overdrive and is useful when driving with a heavy load, towing a trailer up or down steep hills, or any time you want additional engine braking. To activate Drive, press the control switch on the gearshift lever with the gearshift in the Drive position. Your transmission will operate in gears one through three. To return to Overdrive, press the transmission control switch. The O/D OFF indicator will no longer be illuminated.



**11 Voltmeter Gauge**

This gauge measures your vehicle's battery charging voltage. If it consistently indicates less than 13.0 volts or more than 15.0 volts during normal operation, have your vehicle's electrical system checked.



**12 Engine Oil Pressure Gauge**

This gauge indicates your Marauder's oil pressure levels. If the indicator drops below the normal operating range or the minimum low pressure when your engine is running, shut off the engine and check the oil level. Add oil if necessary. Don't operate your vehicle with the oil level below normal ranges (40-60 psi) or your engine may be severely damaged.



**Audiophile System**  
Premium AM/FM Stereo/Cassette/Single CD Audio System/Subwoofer with Internal Amplifier



- A Volume / power control**  
Press the control to turn the audio system on or off. Turn the control to raise or lower the volume.
- B To choose Tape or CD**  
With a tape already in place, choose TAPE to begin tape play while in radio or CD mode. With a CD already in place, choose CD to begin CD play while in radio or tape mode. The first track of the CD will begin playing.
- C Seek Function**  
The SEEK function control works in radio, tape and CD modes. In radio mode, press the left arrow to find the next listenable station down the frequency band, the right arrow to find the next listenable station up the frequency band. In tape or CD mode, press the left arrow for the previous selection or track, the right arrow for the next selection or track.
- D AM/FM Selection**  
The AM/FM select control works in radio, tape and CD modes. In radio mode, use this control to switch between AM, FM1 or FM2 memory preset stations. In tape or CD mode, use this control to stop and begin playing the radio.
- E Tune Adjust**  
To move to the next frequency down the radio band, press the left arrow. To move through all the frequencies quickly, press and hold the left arrow. Press the right arrow to move up the band to the next station; hold the arrow to move quickly through the other stations.
- F Bass + Treble Control**  
Press BASS or TREB; press the left SEL arrow to decrease the level of BASS or TREB, the right SEL arrow to increase the level.
- G Scan Function**  
The SCAN function works in radio, tape or CD modes. Press SCAN to hear a brief sampling of all listenable stations in radio mode, or to sample all selections in tape or CD modes. Press scan again to stop at the desired selection.
- H Balance + Fade**  
Press BAL and use the left SEL arrow to shift the sound to the left speakers, the right SEL arrow to shift sound to the right speakers. Press FADE and the right SEL arrow to shift sound to the front speakers, the left SEL arrow to shift sound to the rear.
- I Radio Station Memory Preset**  
These controls can be used to select up to six preset AM stations and twelve FM stations (six in FM1 and six in FM2). Choose the frequency band with the AM/FM select control; select a station – press and hold the memory preset control until the sound returns. Your selection will be held in the memory.
- J Fast Forward + Rewind**  
To fast-forward a CD or tape, press FF; to rewind, press REW.
- K Eject**  
Press EJ to stop and eject a tape or CD.

For more detailed information on the functions of this audio system, please see your Owner's Guide.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>