

### **INSTALLATION INSTRUCTIONS FOR PART 99-8208**

# Applications TOYOTA Sienna 2004-2010

99-8208




- DIN Head Unit Provisions with Pocket
- ISO DIN Head Unit Provision with Pocket



A) Radio Housing • B) ISO Brackets • C) Trim Plate



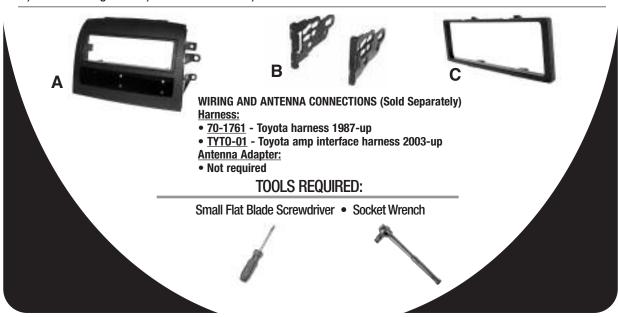



© COPYRIGHT 2004-2010 METRA ELECTRONICS CORPORATION

# TABLE OF CONTENTS

• Dash Disassembly	
- 2004-2010 Toyota Sienna	· 1
• Kit Assembly	
- DIN Head Unit Provision with Pocket	2
- ISO DIN Head Unit Provision with Pocket	3
• Final Assembly	4
• Notes	· 5



### KNOWLEDGE IS POWER Enhance your installation and fabrication skills


Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



### **2004-2010 TOYOTA SIENNA**

- **1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove panels from left and right side of radio. **Figure A**
- **3** Unclip and remove panel or speaker cover above radio. **Figure B**
- **4** Remove (4) 10MM bolts from radio to remove. **Figure C**



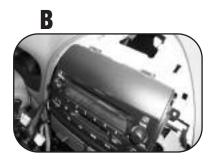



### **DIN Head Unit Provision with Pocket**





- 1 Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down.
- 2 Slide the after-market head unit into the cage until secure.



### **ISO DIN HEAD UNIT PROVISIONS**

- Mount the ISO Brackets to the head unit with the screw supplied with the unit.
- 2 Slide the head unit into the radio opening until the side clips engage.
- **3** Snap the trim plate into the radio Housing.

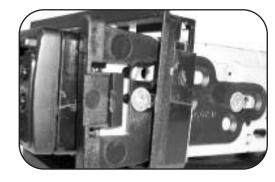

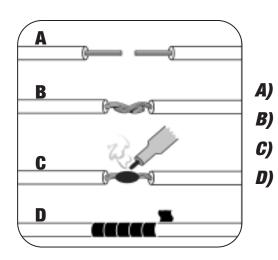

- Strip wire ends back 1/2"
- B) Twist ends together
- C) Solder
- D) Tape
- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit)
- **2** Re-connect the negative battery terminal and test the unit for proper operation.
- **3** Reassemble in reverse order of disassembly.



9	

NOTES

### IN5T99-8208



REV. 04-27-10 © COPYRIGHT 2004-2010 METRA ELECTRONICS CORPORATION INST99-8208

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com