



**MS9530 Series Voyager® RF**  
Radio Frequency Barcode Reader

**QUICK CONFIGURATION GUIDE**



## **1.- Steps to link MS9530 Voyager RF with Base Station.**


-Please read the following barcodes:

1°.-



ENTER/EXIT

Enter configuration

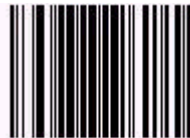

RF DEFAULTS


(\* Skip this step if you just want to change the link to another Base station.

Following parameters are set:

-Base Station serial number :999999999

-Voyager ID: 1

3°.-

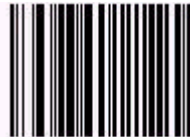

FIX SERIAL RF

Ready to read the new Serial number of Base Station to send data to.

4°.-

**Read Base Station  
serial number.**

5°.-



ENTER/EXIT


Exit Configuration

## **2.- MS9530 Voyager RF ID:**

- Up to five units can work together with same Base Station. It is requested that each of them uses a different ID. Use this section to fix the desired ID.



VOYAGER ID: 1

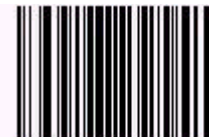

VOYAGER ID: 2



VOYAGER ID: 3



VOYAGER ID: 4



VOYAGER ID: 5

### **3.- BASE STATION (WEDGE): PC connection**

-Please read the following barcodes:



### **3.- BASE STATION (RS-232: 9600,8,N,1 + CRLF)**

-Please read the following barcodes:



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>