

 
DURABRAND

COMPACT DISC PLAYER

WITH AM/FM STEREO CASSETTE RECORDER

MODEL CD-2036

OPERATING INSTRUCTIONS

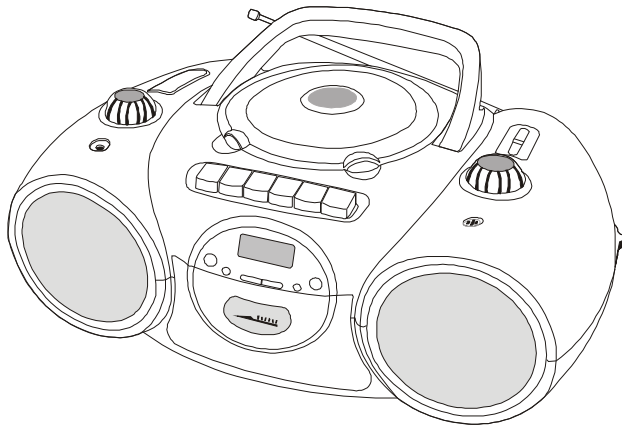

- **PLAYS ALL MUSIC COMPACT DISCS, CD-R & CD-RW**
- **FULLY PROGRAMMABLE CD PLAYER WITH REPEAT**
- **RECEIVES AM/FM STEREO BROADCASTS**
- **RECORDS FROM CD, RADIO, OR BUILT-IN MICROPHONE**
- **2 WAY POWER - AC/DC**
- **USES 6 SIZE "D" BATTERIES (not included)**



PLEASE READ CAREFULLY BEFORE USE

IB-CD2036(SY)-WM-E-010805



WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THE PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, FULLY INSERT.

	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>

SEE BOTTOM OF THE SET

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.





IMPORTANT SAFETY INSTRUCTIONS

15. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
16. Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
17. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

It is the intent of Lenoxx that this product be used in full compliance with the copyright laws of the United States and that prior permission be obtained from copyright owners whenever recording songs from the RADIO or CD's.

Do not apply oil or petroleum products or solvents to any part of this set.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
This compact disc player is classified as CLASS 1 LASER PRODUCT as stated on the bottom of the set.

Please read important information displayed on the rating plate located on the bottom enclosure before connecting to AC Mains or any operation.



BATTERY SAFETY INSTRUCTIONS

CAUTION: TO REDUCE THE RISK OF FIRE OR PERSONAL INJURY OR DAMAGE TO YOUR SET, READ AND FOLLOW THESE INSTRUCTIONS.

 
1. Use only the type and size of batteries mentioned in the operating instructions booklet (batteries are not included with this set, please buy the proper batteries).
2. Do not dispose of the batteries into a fire. The cells may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Be careful when handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may over heat and cause burns.
5. Do not attempt to recharge non-rechargeable batteries. The batteries may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the batteries identified for use with this product by heating them. Sudden release of the battery electrolyte may cause burns or irritation to eyes or skin.
7. All batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the batteries.
8. When inserting batteries into this product, the proper polarity (\oplus and \ominus) or direction must be observed. Reverse insertion of some or all of the batteries may result in battery electrolyte leakage or explosion.
9. Remove the batteries from this product if the product will not be used for a long period of time (several months or more) since during the period the batteries could leak, damaging the product.
10. Discard weak or dead batteries as soon as possible since they are more likely to leak in the product. Batteries should be replaced (depending on the product) when the display gets dim or if the Low Battery Indicator shows or if the sound gets distorted.
11. Do not store this product in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.
12. If this product does not operate normally, see TROUBLE SHOOTING in this instruction manual. If you can't resolve the problem, or if the product is damaged, refer to the LENOXX WARRANTY INFORMATION. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
13. If liquid leaks from the batteries, carefully wipe this liquid. Do not allow it to touch your skin, and discard the leaking batteries.
14. Do not mix batteries (OLD and NEW or CARBON and ALKALINE, etc.).
15. The use of rechargeable batteries is not recommended for this set because their voltage and life is lower than standard batteries.
16. Installation of batteries should be done by an adult only.

SAVE THESE INSTRUCTIONS



CHOOSING THE POWER SOURCES

You can use the AC power or batteries as a power source.

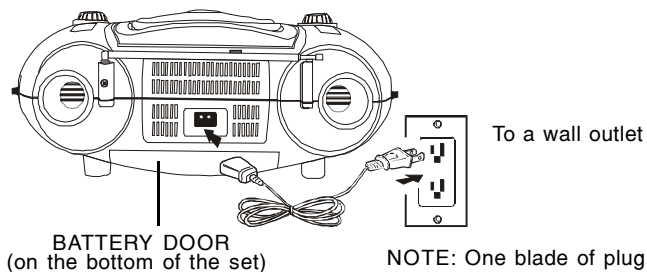

TIP

- If the plug of the AC power cord does not match your outlet, do not force it. Reverse it and try again. The plug is polarized and only fits one way into the wall outlet.
- Replace the batteries when the POWER lamp dims or when the player stops operating. Replace all the batteries with new ones. Before you replace the batteries, be sure to take out the CD from the player and remember to check the Battery Safety Instructions on Page 3.
- If the CD does not play on batteries, this means the batteries are almost used up. But the radio may continue to play on these weak batteries because it uses less power than the CD player.

 
1. Connecting the AC power

Insert one end of the supplied AC power cord into the socket located at the rear of the set, and the other end into the 120V, 60Hz standard household outlet.

2. Using the player on batteries

Insert 6 size "D" batteries (not supplied) into the battery compartment as shown, observe + and - polarities.


To use the player on batteries, disconnect the AC power cord from both the wall outlet and the back of the player.

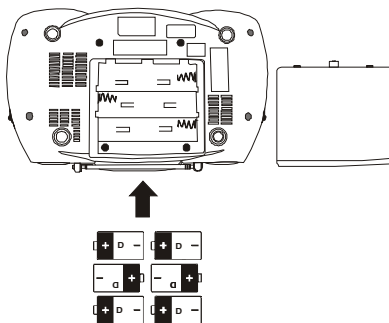

Install Batteries as illustrated




 PLAYING A CD

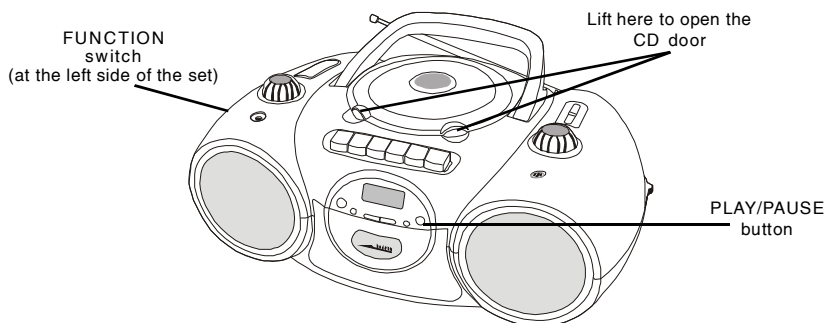

Connect the supplied AC power cord or batteries (refer to page 4).

 
1

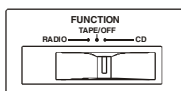


Slide the FUNCTION switch to CD position (power on), the POWER lamp will be on, the display will show 2 dashes "--" flashing, then "00".



 
2

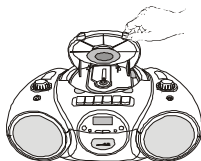

 Lift the either side of the CD DOOR to open it and place a CD in the CD compartment. The label side of the CD should face upward.

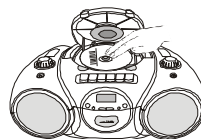

3

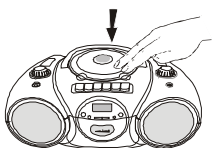 

Close the CD DOOR by pushing it down. The display will show the total tracks of that CD.



4

PLAY
PAUSE



Press the CD PLAY/PAUSE button, the PLAY/PAUSE lamp will be steadily on, the player will play all the music tracks once.

 
 


Track number

TIP: "--" will show in the display if there is no CD disc in the CD compartment or the CD disc was inserted upside down.



USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

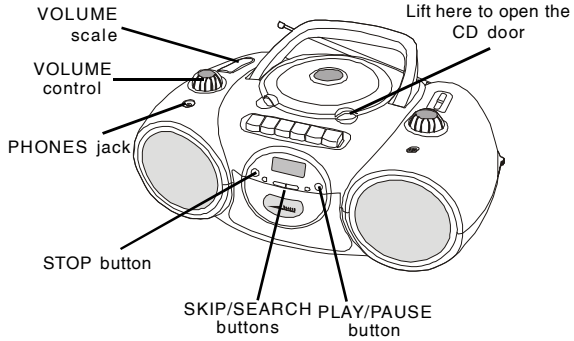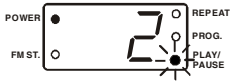

TIP


- When CD play is paused, the PLAY/PAUSE lamp will flash and no music will play.
- To resume play, press the PLAY/PAUSE button again, the PLAY/PAUSE lamp will stop flashing and music will play.
- If you bump the set during CD play, the music will stop or skip for a few seconds. This is normal for this type of player.

To	Press or Adjust
Adjust the volume	VOLUME control
Stop playback	■ STOP button
Pause playback	▶■ PLAY/PAUSE button The PLAY/PAUSE lamp will flash during pause. Press again to resume play after pause.
Go to the next track	▶▶ SKIP/SEARCH FORWARD button
Go back to the previous track	◀◀ SKIP/SEARCH BACKWARD button
Locate a point in a song	◀◀ or ▶▶ Press and hold down while playing until you find the point of the song you want.
To enjoy the music without disturbing others.	Insert your headphones (not included) plug into the PHONES jack.
Remove the CD	Press the STOP button first, then lift the CD DOOR.
Turn off the power	Slide the FUNCTION switch to TAPE/OFF position, the AC power lamp goes off.



PLAYING CD TRACKS REPEATEDLY (REPEAT PLAY)

 You can play CD tracks over and over in normal or programmed play mode (refer to page 8).

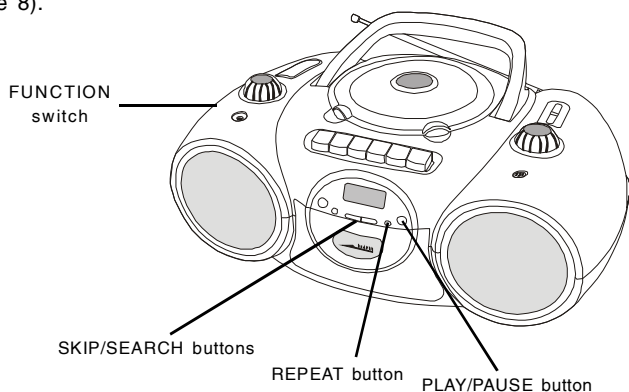

1. Slide the FUNCTION switch to CD position, the POWER lamp will be steadily on.
2. Select the track by pressing **◀◀** or **▶▶**, and then press **▶▶**.
3. Press the REPEAT button.

To repeat	Press	Display shows
A single track (song)	Press the REPEAT button once, the REPEAT lamp will flash.	<p>POWER ● FM ST. ○</p> <p>REPEAT (flashing) PROG. ○ PLAY/PAUSE ●</p>
All the tracks (all songs) on this disc	Press the REPEAT button twice, the REPEAT lamp will be steadily on.	<p>POWER ● FM ST. ○</p> <p>REPEAT ● PROG. ○ PLAY/PAUSE ●</p>
Programmed tracks	During programmed play, press the REPEAT button twice, both the REPEAT and PROG. lamps will be steadily on.	<p>POWER ● FM ST. ○</p> <p>REPEAT ● PROG. ● PLAY/PAUSE ●</p>

 
To cancel Repeat Play

Press the REPEAT button until the REPEAT lamp goes off.




PLAYING CD TRACKS IN PROGRAMMED ORDER

You can make a program of up to 20 tracks in the order you want them to be played.

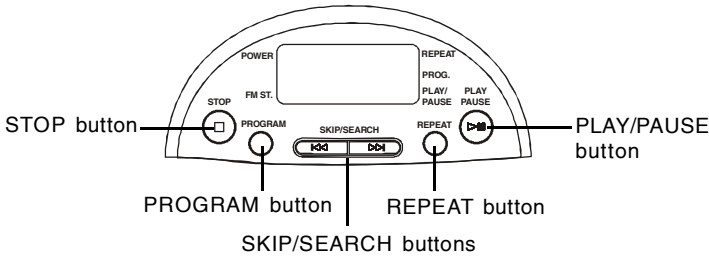

1. Slide the FUNCTION switch to CD position. Make sure the CD is stopped.
2. Press the PROGRAM button. The letters "01" and the PROG. lamp will flash.
3. Press ►► or ◀◀ to select the track you want to program in the order you want. The track number you selected will be steadily on and the PROG. lamp will flash.
4. Press the PROGRAM button to confirm. The letters "02" and the PROG. lamp will flash.
5. Repeat above steps 3 and 4. You can program up to 20 tracks, then the display will show the tracks number you programmed, and the PROG. lamp will flash.
6. Press ►► to start programmed play. The PROG. lamp will be steadily on.

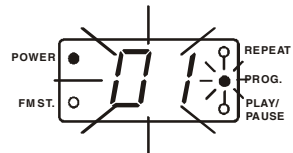 

NOTE:

1. Programming can only be done while in STOP mode.
2. The programmed memory will be lost if the STOP button is pressed twice or the power is shut off, or the CD door is opened.

 
To change the current program

Just create a new program following the programming procedure.


To cancel Programmed Play

Press the STOP button, then slide the FUNCTION switch to TAPE/OFF position.



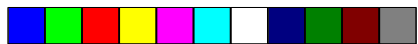


LISTENING TO THE RADIO

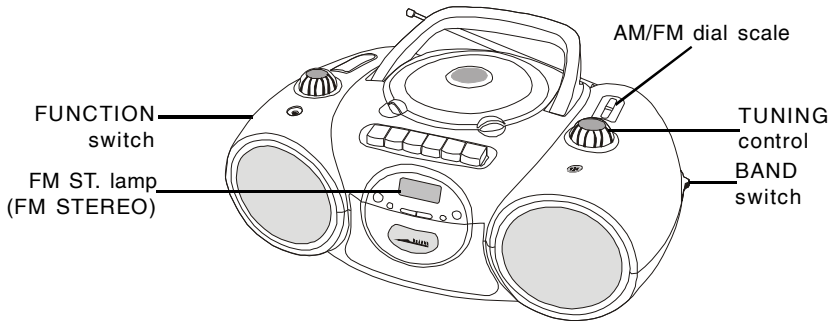 


Connect the supplied AC power cord or batteries (refer to page 4).

 1



Slide the FUNCTION switch to RADIO position, the POWER lamp will turn on.

 2



Slide the BAND switch to the proper band position (AM, FM, or FM ST.) that you want.

3



TUNING

 
Tune into the station you prefer using the TUNING control. Adjust for the clearest sound.

4



The FM stereo indicator will light up when receiving an FM Stereo broadcast.


5



To turn the set off, slide the FUNCTION switch to TAPE/OFF.



 USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

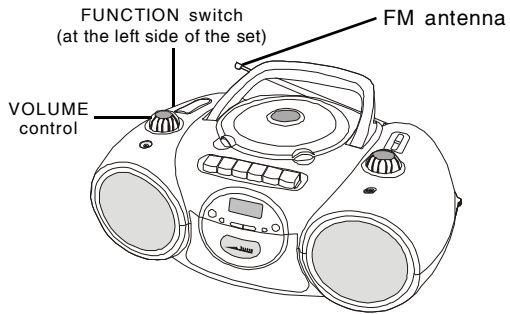



TIP

- If the FM broadcast is noisy, slide the BAND switch from FM Stereo to FM.
- Next time you want to listen to the radio, just slide the FUNCTION switch to RADIO position. The set will automatically play the previously tuned station.

To	Slide or Adjust
Adjust the volume	VOLUME control
Turn off the Radio	Slide the FUNCTION switch to TAPE/OFF position


To improve broadcast reception

  Change position of the antenna for FM or FM Stereo.
Move the set itself to improve AM reception.

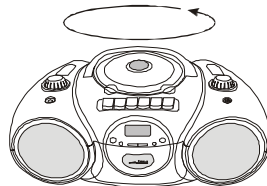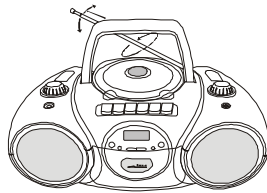




PLAYING A TAPE

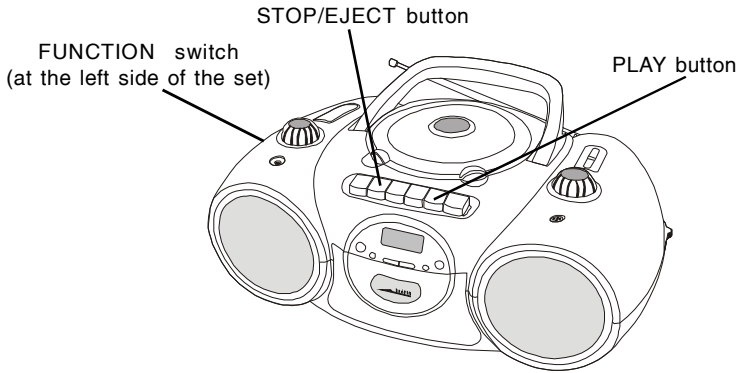 


Connect the supplied AC power cord or batteries (refer to page 4).

 1



Slide the FUNCTION switch to TAPE/OFF position.

 TAPE PLAY DIRECTION

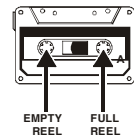

2

STOP/EJECT



Press the STOP/EJECT button to open the tape compartment and insert a recorded tape, then close the door.

INSERT TAPE THIS WAY
FULL REEL ON RIGHT



3

PLAY

 


Press the PLAY button, the player turns on and starts playing.


4

AUTO STOP

When the set finishes playing one side of the tape, the set will automatically stop. To hear the other side of the tape, flip the tape over, then insert and press PLAY.

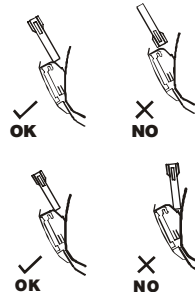

RECORDING ON A TAPE

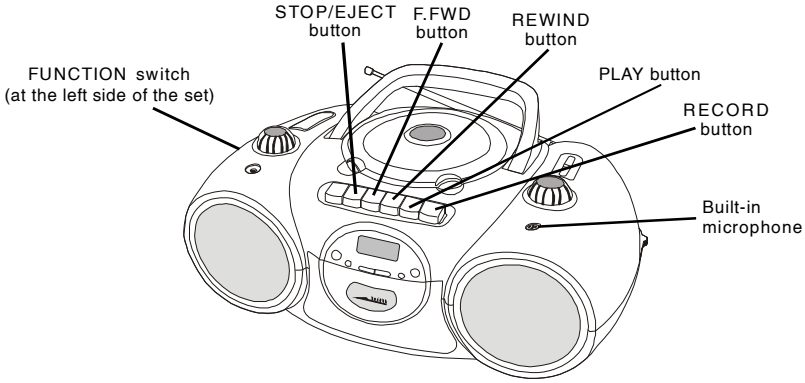 


Connect the supplied AC power cord or batteries (refer to page 4).

1 STOP/EJECT




Press the STOP/EJECT button to open the tape compartment and insert a blank tape. Select the program source (AM, FM, CD, or built-in microphone) you want to record.

 
TAPE PLAY DIRECTION

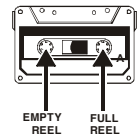


2

 

 To record from the CD player. Slide the FUNCTION switch to CD position, and insert a CD, then follow the CD playing steps to play.



 To record from a radio. Slide the FUNCTION switch to RADIO position, and tune into the station that you want.




To record from the built-in microphone, slide the FUNCTION switch to the TAPE/OFF position, and speak in front of the set.

INSERT TAPE THIS WAY
FULL REEL ON RIGHT




3

 PLAY RECORD




 Press the RECORD button to start recording. (The PLAY button is depressed automatically.)

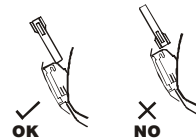


4

 REWIND PLAY




 To hear what you recorded, slide the FUNCTION switch to TAPE/OFF position, then press REWIND and PLAY buttons.

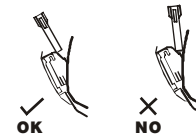



 USE THESE BUTTONS FOR ADDITIONAL OPERATIONS

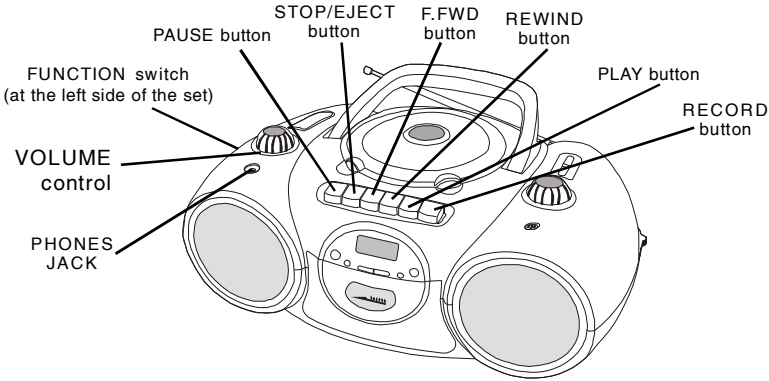

Connect the supplied AC power cord or batteries (refer to page 4).

To	Press or Adjust
Adjust the volume	VOLUME control
Stop playback or recording	STOP/EJECT button
Fast forward or rewind the tape	FAST FORWARD or REWIND button
Pause playback or recording	PAUSE button Press again to resume play or recording after pause
Eject the cassette	STOP/EJECT button
To enjoy the music without disturbing others	Insert your headphones plug into the PHONES jack (HEADPHONES not included)
To shut power off	Make sure cassette buttons are all up (stop) and the power lamp is turned off



PRECAUTIONS

On Safety

- As the laser beam used in the CD player section may be harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it any further.

On Placement

- Do not leave the player in a location near a heat source, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place the player on an inclined or unstable place.
- Do not place anything within 1 inch of the back of the cabinet. The ventilation holes must not be covered for the player to operate properly and prolong the life of its components.
- If the player is left in a car parked in the sun, be sure to choose a location in the car where the player will not be subjected to the direct rays of the sun.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or springwound watches away from the player to prevent possible damage from the magnets.

On Power Sources

- For battery operation, use 6 size "D" batteries. We recommend alkaline batteries for longer life.
- When the batteries will not be used for a few weeks or more, remove them to avoid damage that can be caused by battery leakage or corrosion.

On Operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player section. Should this occur, the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate. If the player has not been used for a long time, set it in playback mode to warm it up for a few minutes before inserting a cassette.
- This CD player is designed to be played on a stable no vibration position. If you bump the set during CD play, the music will stop or skip for a few seconds. This is normal for this type of player.

Notes on CDs

- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out.

 


- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or stickers on the CD, nor scratch the CD.
- After playing, store the CD in its case. If there is a scratch, dirt or fingerprints on the CD, it may cause a tracking error or skipping.




Notes on Cassettes

- Break off the cassette tab from side A or B to prevent accidental recording.

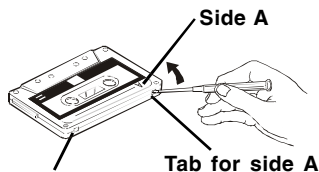


Tab for side B

 - To record on a tape with its tab broken off, cover the respective tab hole for side A or B with adhesive tape.
- **Use of a cassette with more than 90 minutes, such as C-120 (120 minutes), is not recommended. The extreme thinness of this tape may damage this set.**
- To reduce the chances of tape jamming or tangling, you should check that there are no loose layers of tape visible through the cassette center window. If any, tighten these loose layers of tape using a pencil before inserting the cassette into the set.

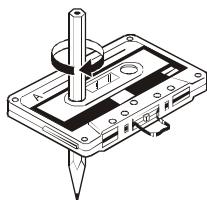


MAINTENANCE Cleaning the Lens

 If the lens becomes dirty, it may cause a skipping of sound during CD operation. Clean with a commercially available lens cleaner and blower.

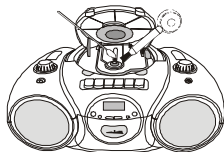

Cleaning the Tape Head

 
Wipe the tape head, the pinch roller and the capstan with a cleaning swab slightly moistened with cleaning fluid or alcohol after every 10 hours of operation for optimum playback and recording quality. After cleaning, insert a tape when the areas cleaned are completely dry.

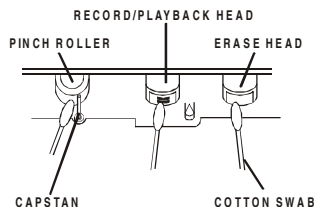

NOTE: In order to see and clean the tape head, you may have to press PLAY first.

Notes for Storing Cassette Tape

 1. Do not put a tape near a magnetic field, such as a TV, or speaker. Magnetic fields may reduce the tape sensitivity or even erase the recording.
2. Do not store tape for any length of time in a hot, moist or dusty place.

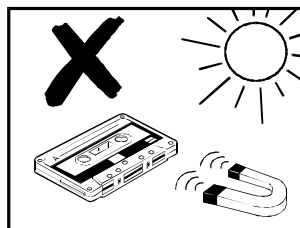

Cleaning the Cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene.



TROUBLE SHOOTING

	Problem	Remedy
General	The power is not on.	<ul style="list-style-type: none"> • Insert the AC plug into a wall outlet securely. • Make sure the batteries are installed correctly and they are fresh.
	There is no sound.	<ul style="list-style-type: none"> • Make sure the FUNCTION switch is at the right position as you want. • Adjust the volume. • Unplug the headphones when listening through speakers.
	"CD" appears in the display even when a CD is in place.	<ul style="list-style-type: none"> • Insert the CD with the label side up.
CD player	CD does not play.	<ul style="list-style-type: none"> • Make sure that the CD compartment is closed. • Clean the CD. • Replace the disc (this set will not play damaged or scratched CDs), or buy a disc repair polisher to repair it yourself. • Take out the CD and leave the CD DOOR open for about an hour to dry moisture condensation. • Make sure the FUNCTION switch is at CD position.
	The sound drops out.	<ul style="list-style-type: none"> • Clean the CD, or replace it if the CD is badly damaged. • Place the player in a location free from vibration. • Check if your batteries are fresh.
	CD does not play while radio may continue to play.	<ul style="list-style-type: none"> • It is normal since the radio uses less power than the CD player.
Radio	The sound is weak or has poor quality.	<ul style="list-style-type: none"> • Replace all the batteries with new ones if they are weak, or bring the set near a window, or rotate the set.
	The RECORD button does not function/The tape does not play.	<ul style="list-style-type: none"> • Make sure the safety tab on the cassette is in place. • Make sure the FUNCTION switch is at TAPE/OFF position.
Tape player	The tape does not erase completely.	<ul style="list-style-type: none"> • Clean the erasing head. • Replace all the batteries with new ones if they are weak.
	The tape does not record.	<ul style="list-style-type: none"> • Make sure the tape is inserted properly. • Make sure the safety tab of the cassette is in place.
	Tape jamming or tangling.	<ul style="list-style-type: none"> • Use only better quality tapes. • Do not use a cassette with more than 90 minutes. • Make sure there are no loose layers of tape visible before inserting the cassette.
	The sound is weak/The sound quality is poor.	<ul style="list-style-type: none"> • Clean the heads, pinch roller and capstan.
	Cassette PLAY button pops up.	<ul style="list-style-type: none"> • The tape has reached its end. Remove it, flip to the other side and re-insert.





SPECIFICATION

General Description

Power source: AC 120V, 60Hz,
DC 9V (6 size "D" batteries, not included)
(Alkaline batteries are recommended)

Output power: 1.5W/channel

Dimensions: Width: 15 1/2"
Depth: 9 1/8"
Height: 6 3/8"
Weight: 4.4 lbs (without batteries)

CD Section

Plays disc type: Any normal music CD used in portable players, including CD-R & CD-RW.

Laser wavelength: 760 - 800 NM

Tracking method: 3 - spot error detection 3.86 mm lens

Frequency response: 50Hz - 15kHz +1/-2dB

Tape Recorder Section

Frequency response: Standard normal bias cassette tape
70Hz - 10kHz

Radio Section

Frequency range: FM: 88 - 108 MHz
AM: 530 - 1700 kHz

Lenoxx reserves the right to make design and specification changes for product improvement.

PROTECT YOUR FINE FURNITURE!

WE RECOMMEND A CLOTH OR OTHER PROTECTIVE MATERIAL BE PLACED UNDER THE SET WHEN PLACING IT ON SURFACE WITH A NATURAL OR LACQUER FINISH.

LIMITED WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a period of 90 days after purchase and we will repair it free of charge or replace it at no charge, should it become defective under this warranty, providing you submit proof of purchase (sales slip) with the set.

During the initial 90 day period after original purchase, we will service or exchange, at no charge, the set that is returned to LENOXX ELECTRONICS CORP. After the initial 90 day period expires, and for a period of 12 months from original purchase, we will repair the unit covering any part(s) that need to be replaced at no charge, but will charge for the cost of labor, return postage paid by Lenoxx.

This warranty does not apply to any products which have been subject to misuse, neglect or accident. This warranty does not cover broken cord or cabinet. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS CORP. BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. The following charges apply to repairs beyond the warranty period: \$12.00. Be sure to pack carefully and return postage paid insured together with your money order (personal checks will not be accepted) and sales receipt to:

LENOXX ELECTRONICS CORP., 2 GERMAK DRIVE, CARTERET N.J. 07008

For customer service

Dial 1-800-315-5885 (MONDAY - THURSDAY 9:00 AM - 5:00 PM, FRIDAY 9:00 AM - 1:00 PM EST)

or Visit Our Website: <http://www.lenoxx.com>

© 2005 LENOXX ELECTRONICS CORP.

2 GERMAK DRIVE
CARTERET, N.J. 07008

MADE & PRINTED IN CHINA

— 17 —

IB-CD2036(SY)-WM-E-010805

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>