

 
**DURABRAND**

# CD PLAYER

## DUAL ALARM DIGITAL CLOCK RADIO

MODEL CDR-1902

### OPERATING INSTRUCTIONS

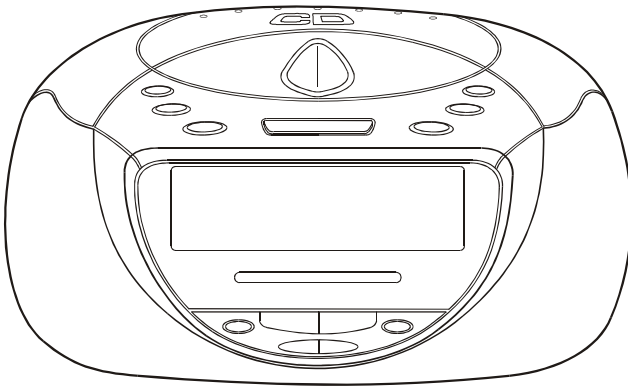

- **DUAL ALARMS - PERFECT FOR WEEKDAYS & WEEKENDS**
- **PLAYS MUSIC COMPACT DISCS**
- **FULLY PROGRAMMABLE CD PLAYER WITH REPEAT**
- **RECEIVES AM/FM BROADCASTS**
- **WAKE UP TO CD, RADIO OR BUZZER**
- **EASY TO SET CLOCK**
- **BATTERY BACK-UP** (9V BATTERY NOT INCLUDED)

---

PLEASE READ CAREFULLY BEFORE USE

## WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THE PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

### WARNING

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

**WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightening storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.

## **ADDITIONAL SAFETY INSTRUCTIONS**

1. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
2. **Wall or Ceiling Mounting** - The appliance should not be mounted to a wall or ceiling.
3. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
4. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.
5. Do not connect FM antenna wire to any outdoor antenna.

 
Do not apply oil or petroleum products or solvents to any part of this set.

### **CAUTION**


Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This compact disc player is classified as CLASS 1 LASER PRODUCT as stated on the bottom of the set.

# 1. Setting the Clock

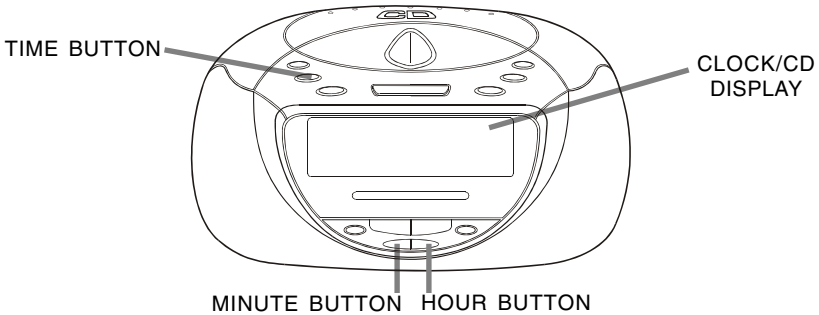

 
- 1 Connect the AC power cord into a live wall outlet.

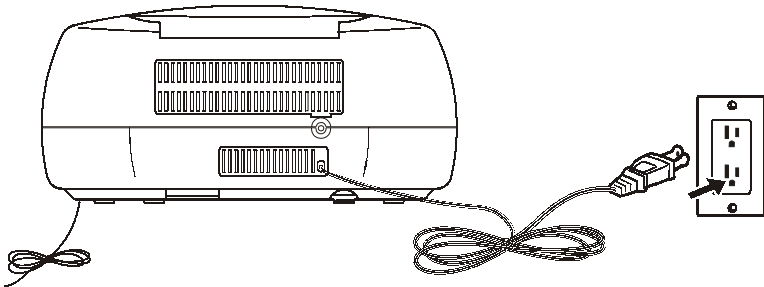

Clock display will show "12:00".



 If the plug of the AC power cord does not match your outlet, do not force it. Reverse it and try again. This plug is polarized and only fits **one way** into the wall outlet.



- 2 Hold the TIME button down, and press the HOUR button, until the right hour time shows in the display.



PM indication lights up for PM time.




- 3 Hold the TIME button down, and press the MINUTE button until the right minute time shows in the display.



Example: 10:26 p.m.


Refer to Page 10 Part 8. Setting the Alarm Times for setting alarm time.

## 2. Playing a CD

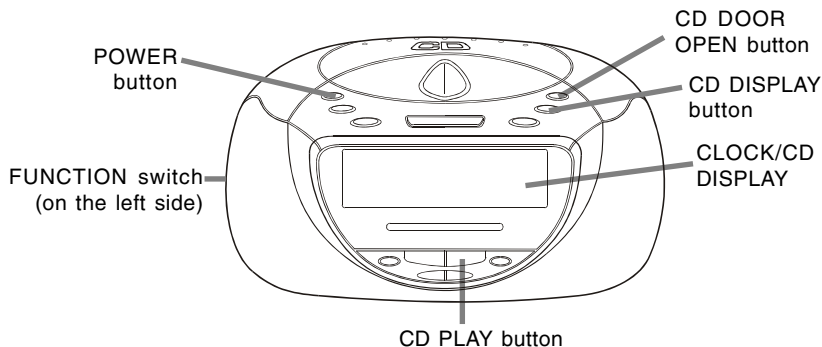 


Connect the AC power cord (see **Setting the Clock**).

- 1**




**POWER**  
ALARM OFF




**RADIO** BUZZER


Press the **POWER** button to turn on the power, make sure the **POWER** lamp is on. Slide the **FUNCTION** switch to **CD** position.
- 2**



**OPEN**

 
Press the **CD DOOR OPEN** button to open the CD Door and place the CD in the CD compartment. The label side of the CD should face upward.

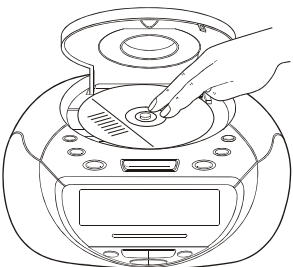
- 3**




**CD DISPLAY**

Close the **CD DOOR** by pushing it down at the right corner. The display will show the total track number of the disc for 5 seconds, then go back to clock time display.




**POWER lamp**      total track number of the disc
- 4**



**PLAY / PAUSE**

Press the **CD PLAY** button. The player plays all the tracks once. Press the **CD DISPLAY** button, the display will show the track number of current play.

 


**CD Track number**

During CD play, the display still shows **CLOCK** time, press **CD DISPLAY** button if you want CD display.

### 3. More about CD operation

Use these buttons for additional operations

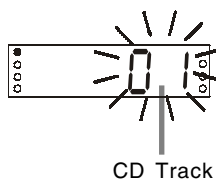


#### Tip

When CD play is paused, the CD track number will flash and no music will play.

To resume play, press the PAUSE button again, CD track number will stop flashing and music will play.

To	Press or Adjust
Adjust the volume	Volume Control
Stop playback	■ STOP
Pause playback	▶▶ PLAY/PAUSE CD track number will flash during pause. Press again to resume play after pause.
Go to the next track	▶▶ SKIP/SEARCH FORWARD
Go back to the previous track	◀◀ SKIP/SEARCH BACKWARD
Locate a point in a song	◀◀ or ▶▶ while playing, press and hold down until you find the point.
Remove the CD	CD DOOR OPEN button (press ■ first).
Turn off the CD player	Press the POWER button to turn off the power, the POWER lamp will be off.
 
## 4. Playing CD tracks repeatedly (Repeat Play)

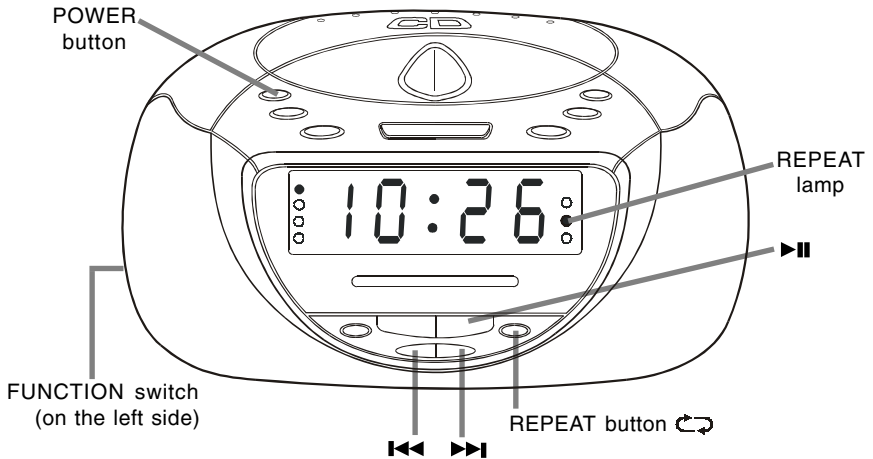

1. Press the POWER button to turn on the power and slide the FUNCTION switch to CD position.
2. Press ►► (PLAY button).
3. Press the CD REPEAT button.

To repeat	Press (during play)	Repeat Lamp
a single track (song)	Press the REPEAT button once	Flashing
all the tracks (all songs)	Press the REPEAT button twice	Steady on


4. You may select the individual track to repeat by pressing ◀◀ or ▶▶.

### To cancel Repeat Play

 
Press the REPEAT button until the REPEAT lamp is off.

## 5. Playing CD in programmed order

You can make a program of up to 20 tracks in the order you want them to be played.

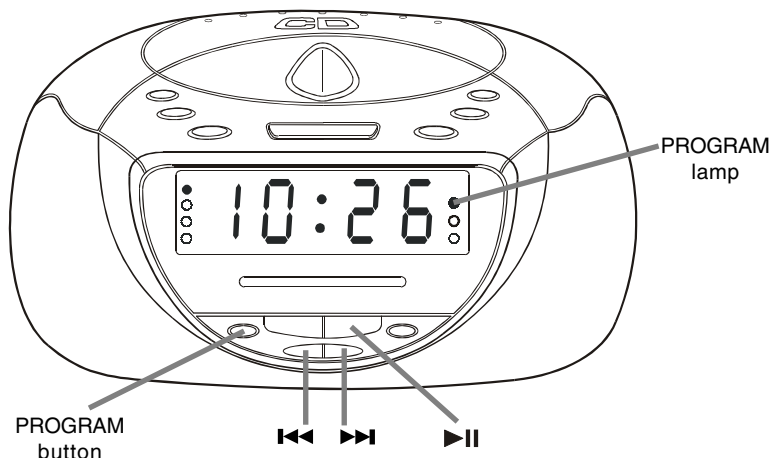

1. Press the POWER button to turn on the power and slide the FUNCTION switch to CD position. Make sure the CD is stopped.
2. Press the PROGRAM button. The letters "P01" will show and the PROGRAM lamp will flash.
3. Press **◀◀** or **▶▶** to select the tracks you want to program in the order you want.
4. Press the PROGRAM button to confirm. The letters "P02" will show.
5. Repeat steps 3 and 4. You can program up to 20 tracks.
6. Press **▶||** to start programmed play. The PROGRAM lamp will show steadily on the display.

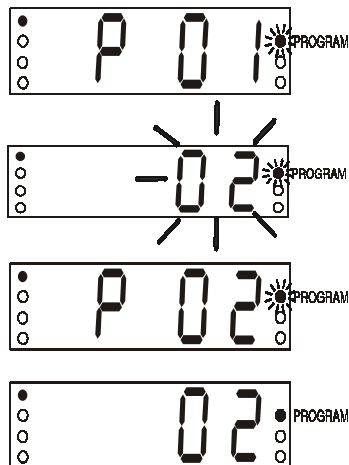 

### To change the current program

Just create a new program following the programming procedure.

 
### To cancel Programmed Play

Press the STOP button to stop programmed play. Press the STOP button again after pressing the PROGRAM button or press the CD DOOR OPEN button to open the CD door, and the PROGRAM lamp goes off.

 


## 6. Listening to the radio

 
### LEFT SIDE VIEW

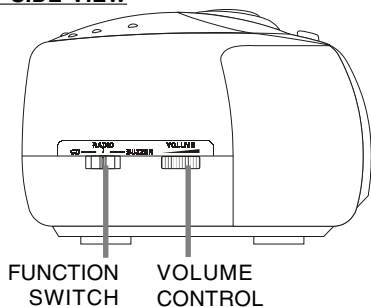
 


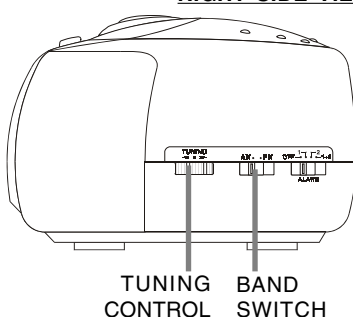


### RIGHT SIDE VIEW







Connect the supplied AC power cord (see **Setting the Clock**).


- 

1   Press the POWER button to ON and slide the FUNCTION switch to RADIO position.
- 

 
2  Slide the BAND switch to the proper band position that you want.
- 

3  Tune into the station you prefer using the TUNING CONTROL. Adjust for the clearest sound.
- 

4  Adjust the VOLUME CONTROL for desired loudness.
- 

5  Press the POWER button to turn off the power and the Radio, the POWER lamp will go off.

## 7. More about radio operation

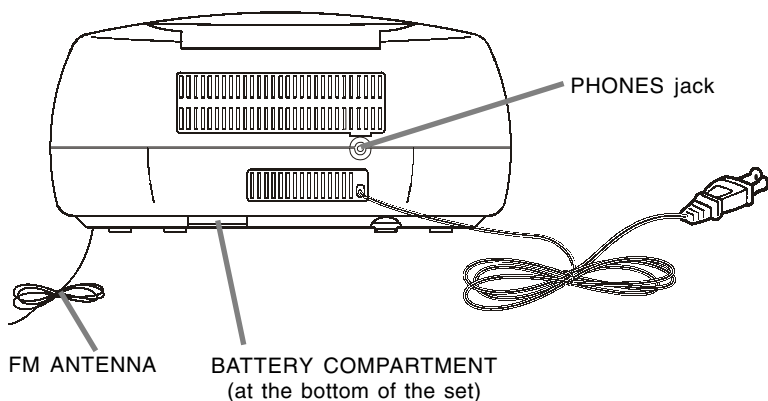

### To improve broadcast reception

Fully stretch out the FM ANTENNA for better FM reception.

Reorient the player itself for better AM reception.  
Or locate the set near a window.



### To listen without disturbing others

Connect your headphones (optional - not included) into the PHONES jack at the back of the set. The speaker will automatically be silenced. Remember to unplug the headphones if you want the set to wake you up in the morning.

### To use battery backup

Install a 9V battery for Clock backup, so that if your home power is momentarily off, you will not have to set up the time & alarm settings.

Note: The display will not show the time but the time will be kept in memory and will re-appear when power is restored.

## 8. Setting the Alarm Time

 
This set has dual alarms. You may set ALARM 1 to wake you at a certain time, or ALARM 2 to wake you at a different time, or ALARM 1+2 - both alarms will sound at the times you set.

This feature is useful for a husband & wife waking up at different times or a single person who likes to wake up at different times during weekdays or holidays.



**To set ALARM 1, slide the ALARM SET switch to position 1, the ALARM 1 lamp will turn on.**

**To set ALARM 2, slide the ALARM SET switch to position 2, the ALARM 2 lamp will turn on.**

**FRONT SIDE VIEW**

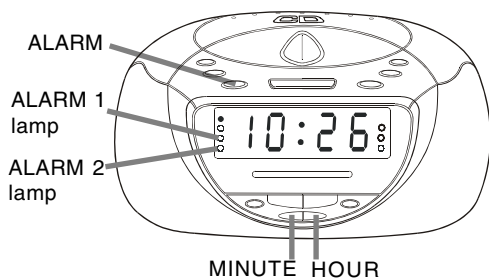

**RIGHT SIDE VIEW**

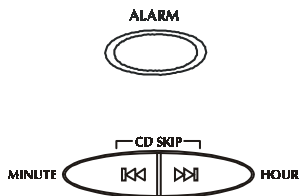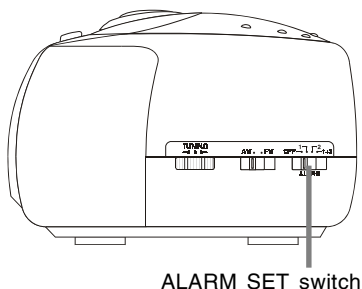  

- 1 Hold the ALARM button.
- 2 Press the HOUR button to select correct hour time. Release the HOUR button but continue to press the ALARM button.
- 3 Press the MINUTE button for correct minute.
- 4 Release the ALARM button, the clock display will show the normal time of day.


**NOTE 1:** The alarm times can not be set when the ALARM SET button is switched to OFF or ALARM 1+2 position.

**NOTE 2:** If you want to be waked up in the morning, the PM lamp should be off on alarm time (when pressing ALARM button). To change PM to AM time, advance time 12 hours.

**NOTE 3:** To wake to ALARM 1 time, slide ALARM SET switch to **position 1**. To wake to ALARM 2 time, slide ALARM SET switch to **position 2**. To wake to both times, slide ALARM SET switch to **position 1+2**.

## 9. Waking up to alarm or music

 
### 1. Waking up to alarm

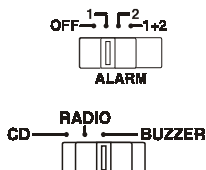

1. Set the alarm time as previously instructed and slide the ALARM SET switch to ALARM 1, ALARM 2 or ALARM 1+2, the proper ALARM lamp will be on.
2. Set the FUNCTION switch to BUZZER position.

Alarm buzzer will sound at the set alarm time.


### 2. Waking up to CD

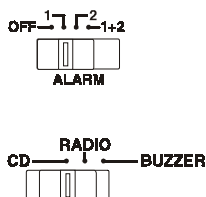 

1. Set the alarm time as previously instructed and slide the ALARM SET switch to ALARM 1, ALARM 2 or ALARM 1+2, the proper ALARM lamp will be on.
2. Set the FUNCTION switch to CD position.
3. Make sure there is a CD disc loaded in the compartment and **POWER lamp is off**.

The CD Disc will start playing from the first track at the set alarm time.

### 3. Waking up to radio

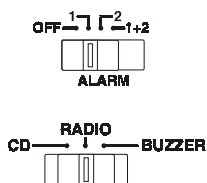 

1. Refer to **Listen to the radio** for radio operation instructions. Select the desired AM or FM band using the BAND switch and TUNING knob.
2. Set the alarm time as previously instructed and slide the ALARM SET button to ALARM 1, ALARM 2 or ALARM 1+2, the proper ALARM lamp will be on.
3. Set the FUNCTION switch to RADIO position.
4. Press the POWER button to turn off the power, make sure the POWER lamp is off.

The radio will start playing at the set alarm time.

## 10. Snooze and Sleep functions

### When alarm or music comes on



POWER  
ALARM OFF



1. To sleep extra 6 minutes

Just press the SNOOZE button, the alarm or music will stop and come on after 6 minutes.

2. To stop the alarm or music

 
Just press the ALARM OFF (POWER) button, the alarm or music will stop and come on next day.

### Going to Sleep with CD music

1. Follow steps 1-4 of **Playing a CD** on Page 4 to start the CD play.



2. Press the SLEEP button, the display will show two dashes "--", and the SLEEP lamp flashes in the display.



Press the SLEEP Button to select the desired playing time (90 minutes, 60 minutes or 30 minutes).




3. The music will play for the time you selected, and the SLEEP lamp will show on the display.

4. The CD will stop automatically after the selected playing time, and the SLEEP lamp will be off.


5. To shut off the music before the time is up, press the POWER button.

### Going to Sleep with RADIO

 1. Follow steps 1-4 of **Listening to the Radio** on Page 8 to start the RADIO play.



 2. Press the SLEEP button, the display will show two dashes "--", and the SLEEP lamp flashes in the display.



Press the SLEEP Button repeatedly to select the desired playing time (90 minutes, 60 minutes or 30 minutes).



3. The music will play for the time you selected, and the SLEEP lamp will show on the display.

4. The RADIO will stop automatically after the selected playing time, and the SLEEP lamp will be off.

5. To shut off the music before the time is up, press the POWER button.

# Precautions

## On safety

- As the laser beam used in the CD player section is harmful to the eyes, do not attempt to disassemble the casing. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it any further.

## On placement

- Do not leave the player in a location near heat source, or in a place subject to direct sunlight, excessive dust or mechanical shock or vibration.
- Do not place the player on an inclined or unstable place.
- Do not place anything within 1 inch of the back of the cabinet. The ventilation holes must be unobstructed for the player to operate properly and prolong the life of its components.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the player to prevent possible damage from the magnet.

## On power sources

- For battery backup, you may use a 9V battery (optional), so that you will not have to re-set the clock every time you disconnect the power.
- The nameplate indicating operating voltage, power consumption, etc. is located at the bottom of the set.

 
## On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player section. Should this occur, the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate.
- This CD player is designed to be played on a stable no vibration position. If you bump the set during CD play, the music will stop or skip for a few seconds. This is normal for this type of player.
- If you have any questions or problems concerning your player, please contact **our customer service department.**

## Precautions (continued)

### Notes on CDs


- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out.

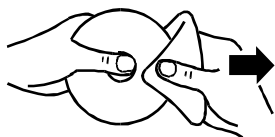

- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or sticker on the CD, nor scratch the surface of the CD.
- After playing, store the CD in its case. If there is a scratch, dirt or fingerprints on the CD, it may cause tracking error.

### Cleaning the lens

 If the lens becomes dirty, it may cause a skipping of sound during CD operation. Clean with a commercially available lens cleaner blower or a cotton swab.

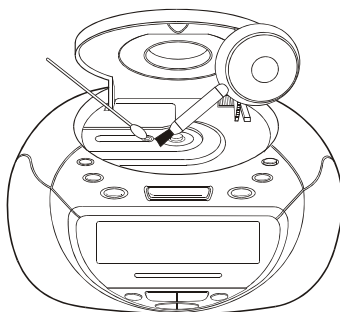

### Cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene.

# Trouble Shooting

	<b>Problem</b>	<b>Remedy</b>
<b>General</b>	The power is not on.	<ul style="list-style-type: none"> <li>• Connect the AC power cord to a wall outlet securely. Make sure that outlet has power.</li> </ul>
	There is no sound.	<ul style="list-style-type: none"> <li>• Make sure the FUNCTION switch is at the right position as you want.</li> <li>• Adjust the volume.</li> <li>• Unplug the headphones when listening through speakers.</li> </ul>
	Alarm does not come on in the morning.	<ul style="list-style-type: none"> <li>• AM or PM not set correctly. Is alarm time set in AM range (PM lamp off)?</li> <li>• ALARM SET switch is in OFF position. Are the ALARM INDICATORS off?</li> <li>• ALARM SET switch is not in the proper position.</li> </ul>
	"no" appears in the display even when a CD is in place.	<ul style="list-style-type: none"> <li>• Insert the CD with the label side up.</li> </ul>
<b>CD player</b>	CD does not play.	<ul style="list-style-type: none"> <li>• Make sure that the CD compartment is closed.</li> <li>• CD play is paused, press ►   again.</li> <li>• Take out the CD and leave the CD door open for about an hour to dry moisture condensation.</li> <li>• Make sure the FUNCTION switch is at CD position.</li> </ul>
	The sound drops out.	<ul style="list-style-type: none"> <li>• Clean the CD, or replace it if the CD is badly damaged.</li> <li>• Place the player in a location free from vibration.</li> </ul>
	CD does not play while radio may continue to play.	<ul style="list-style-type: none"> <li>• It is normal since the radio uses less power than the CD player.</li> </ul>
<b>Radio</b>	The sound is weak or has poor quality.	<ul style="list-style-type: none"> <li>• Fully stretch out the FM antenna to improve FM reception.</li> <li>• Bring the set near a window, or rotate the set for AM reception.</li> </ul>




# Specification

## GENERAL DESCRIPTION

Power source:	AC 120V, 60Hz 10Watts DC 9V (optional - for clock backup)
Speakers:	3" 8 ohm
Output power:	1.5W
Dimensions:	Width: 10" Depth: 7" Height: 4 1/2" Weight: 7 LBs (without battery)

## CD SECTION

Plays disc type:	Any compact discs bearing this logo 
Laser wavelength:	760 - 800 NM
Tracking method:	3 - spot error detection 3.86 mm lens
Frequency response:	50 Hz - 15 kHz (+1/-2dB)

**NOTE:** This CD player will only play **NORMAL** music CDs (or CD-R CDs). This set will not play **CDRW** encoded discs.

## RADIO SECTION

Frequency range:	FM: 88 - 108 MHz AM: 530 - 1700 kHz
------------------	--

LENOXX reserves the right to make design and specification changes for product improvement.

## PROTECT YOUR FINE FURNITURE!

WE RECOMMEND A CLOTH OR OTHER PROTECTIVE MATERIAL BE PLACED UNDER THE SET WHEN PLACING IT ON SURFACE WITH A NATURAL OR LACQUER FINISH.

## For customer service

**Dial 1-800-315-5885** (MONDAY - THURSDAY 9:00 AM - 5:00 PM, FRIDAY 9:00 AM - 1:00 PM EST)

**or Visit Our Website:** <http://www.lenoxx.com>

© 2002 LENOXX ELECTRONICS CORP.  
2 GERMAK DRIVE  
CARTERET, N.J. 07008  
MADE & PRINTED IN CHINA

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>