



 
**DURABRAND**

# **CD PLAYER**

## **DUAL ALARM DIGITAL CLOCK RADIO**

**MODEL CDR-1906**

**OPERATING INSTRUCTIONS**

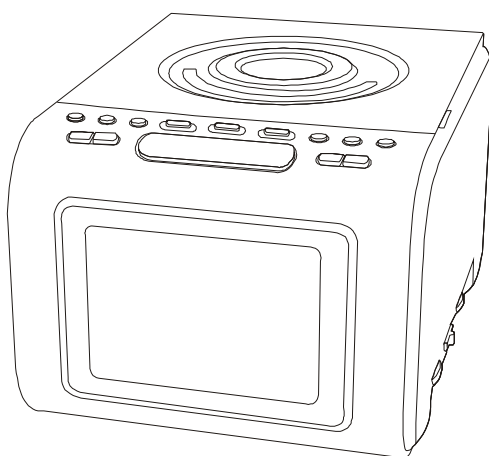

- **DUAL ALARMS - PERFECT FOR WEEKDAYS & WEEKENDS**
- **LARGE LCD DISPLAY FOR CLOCK, RADIO & CD PLAYER**
- **PLAYS ALL MUSIC COMPACT DISCS, CD-R & CD-RW**
- **FULLY PROGRAMMABLE CD PLAYER WITH REPEAT PLAY**
- **ANALOG AM/FM TUNER WITH DIGITAL DISPLAY**
- **WAKE UP TO CD, RADIO OR BUZZER ALARM**
- **EASY TO SET CLOCK & ALARM**
- **BATTERY BACK-UP** (9V BATTERY, NOT INCLUDED)

PLEASE READ CAREFULLY BEFORE USE

IB-CDR1906(AD-CL)-WM-E-012105



## WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THE PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, FULLY INSERT.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

See bottom of the set.

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.



## **IMPORTANT SAFETY INSTRUCTIONS**

15. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
16. Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
17. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

Do not apply oil or petroleum products or solvents to any part of this set.

 
### **CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. This compact disc player is classified as CLASS 1 LASER PRODUCT as stated on the bottom of the set.


Please read important information displayed on the rating plate located on the bottom enclosure before connecting to AC Mains or any operation.



# 1. Setting the Clock

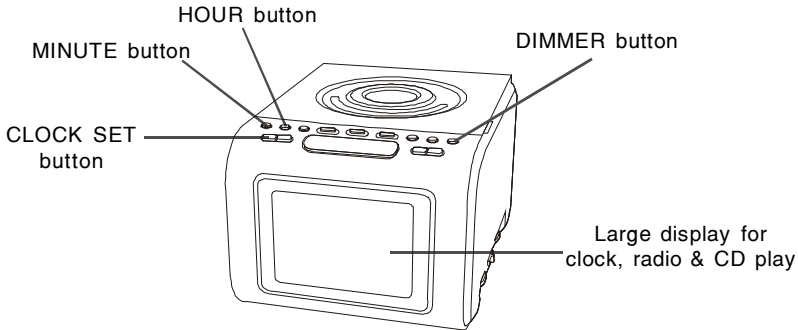

 **1** Connect the AC power cord into a live wall outlet.

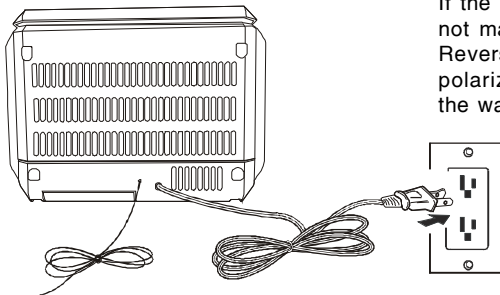


If the plug of the AC power cord does not match your outlet, do not force it. Reverse it and try again. This plug is polarized and only fits **one way** into the wall outlet.

Clock display will show "12:00" flashing.



 
In case you want to reduce the brightness of the display when you are sleeping, you can press the DIMMER button.

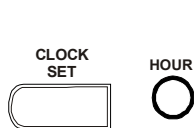


**2** Hold the CLOCK SET button down, and press the HOUR button, until the right hour time is shown in the display.



 PM will show in the display for PM time.



 **3** Hold the CLOCK SET button down, and press the MINUTE button until the right minutes time shows in the display.



Example: 10:26 P.M.

**NOTE:** To change PM to AM time, advance the clock time 12 hours.







## 2. Setting the Alarm Time

  This set has dual alarms. You may set ALARM 1 to wake you at a certain time, or ALARM 2 to wake you at a different time, or ALARM 1+2 - both alarms will sound at the time you set.



This feature is useful for a husband & wife waking up at different time or a single person who likes to wake up at different time during weekdays and weekends.

**To set ALARM 1, slide the ALARM switch to position 1, the words "ALARM 1" will show in the display.**

**To set ALARM 2, slide the ALARM switch to position 2, the words "ALARM 2" will show in the display.**

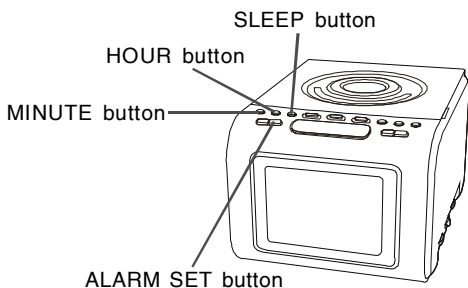

### LEFT SIDE VIEW

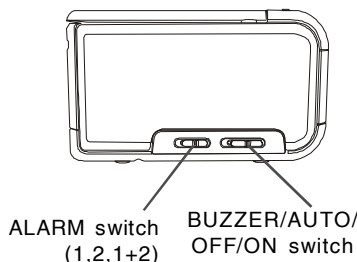  

**1** Slide the BUZZER/AUTO/OFF/ON switch to BUZZER or AUTO position. Press the ALARM SET button to check the alarm time.

- 2** Press the ALARM SET button together with the HOUR button until the display shows the desired alarm hour time.
- 3** Press the ALARM SET button together with the MINUTE button until the display shows the correct alarm minutes.
- 4** Release the ALARM SET button, the clock display will show the normal time of day.

**NOTE 1:** When the ALARM switch is in the ALARM 1+2 position, you can't set the ALARM time.


**NOTE 2:** If you want this set to wake you up in the morning, the letters "PM" should not show on alarm time (when pressing ALARM SET button), this means AM (morning time). To change PM to AM time, advance the clock time 12 hours. To have this set wake you up, slide the BUZZER/AUTO/OFF/ON switch to AUTO or BUZZER position. Auto position will wake you up to CD or RADIO. Buzzer position will have a sound buzzer to wake you up.

**NOTE 3:** To wake to ALARM 1 time, slide ALARM switch to **position 1**.  
To wake to ALARM 2 time, slide ALARM switch to **position 2**.  
To wake to both times, slide ALARM switch to **position 1+2**.


For additional clock & alarm points, see pages 11 and 12.





### 3. Playing a CD

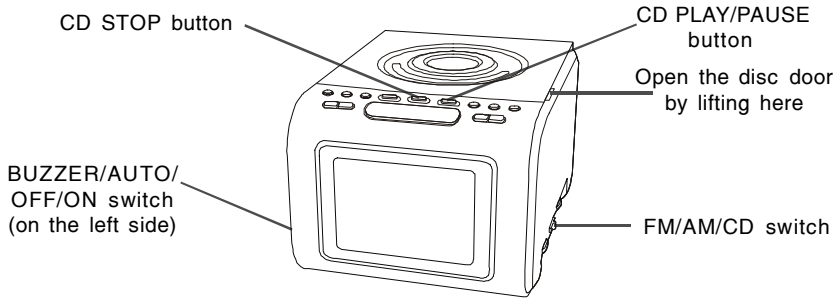 

 
Connect the AC power cord (see **Setting the Clock**).



  
Slide the FM/AM/CD FUNCTION switch to CD position and the BUZZER/AUTO/OFF/ON switch to ON position. Two flashing zeros "00" will show in the display, then "10".

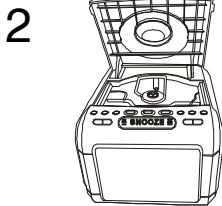

 Lift either side of the CD DOOR to open it and place a CD in the CD compartment. The label side of the CD should face upward.

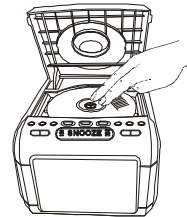

 
Close the CD DOOR by pushing it down. The CD display will show the total track numbers of the disc.



Total track numbers of the disc



 Press the CD PLAY/PAUSE button. The player will play all the tracks once. The CD display will show the track number of the song currently playing and the play symbol "▶".




CD Track number

Remember to slide the BUZZER/AUTO/OFF/ON switch to BUZZER or AUTO position after listening, so that the buzzer alarm, CD music or radio will wake you up at your preset time. Make sure the volume control is adjusted loud enough to wake you up.





## 4. More about CD operation

 

PAUSE symbol


### Tip

 When the CD play is paused, the display will show the pause symbol “” and no music will play.

To resume play, press the PLAY/PAUSE button again.

Remember to slide the BUZZER/AUTO/OFF/ON switch to BUZZER or AUTO position after listening, so that the buzzer alarm, CD music or radio will wake you up at your preset time. Make sure the volume control is adjusted loud enough to wake you up. If you want to listen to the CD for a short time, simply press the SLEEP button. See page 12 for full sleep instructions.


Use these buttons for additional operations

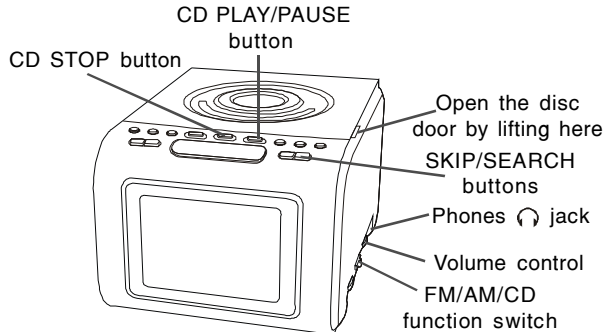

To	Press or Adjust
Adjust the volume	Volume Control
Stop playback	STOP
Pause playback	PLAY/PAUSE Display will show the pause symbol “” during pause. Press again to resume play.
Go to the next track	SKIP/SEARCH FORWARD
Go back to the previous track	SKIP/SEARCH BACKWARD
Locate a point in a song	or  while playing, press and hold down until you find the point you want in a song.
To enjoy the music without disturbing others	Insert your headphones (not included) into the PHONES  jack (at the right side of the set). Remember to unplug the headphones if you want the set to wake you up in the morning.
Remove the CD	Press the STOP button first, then lift the CD door.
Turn off the CD player	Press the CD STOP button, then slide the BUZZER/AUTO/OFF/ON switch to OFF position.



## 5. Playing CD tracks repeatedly (Repeat Play)

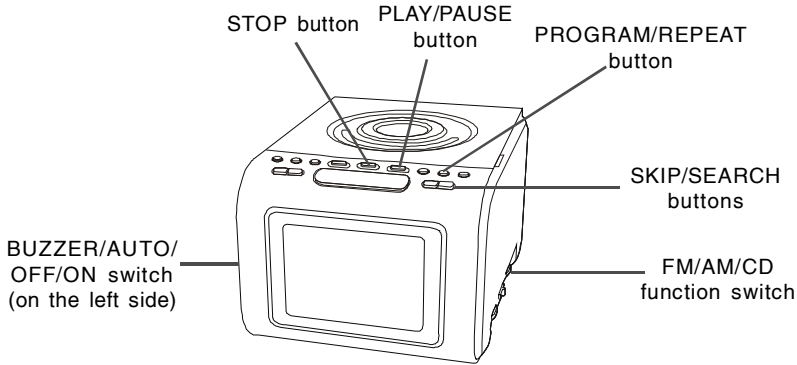 

1. Slide the FM/AM/CD FUNCTION switch to CD position and the BUZZER/AUTO/OFF/ON switch to ON position.
2. Select the track by pressing SKIP/SEARCH buttons, and then press PLAY/PAUSE button.
3. Press the CD PROGRAM/REPEAT button.

To repeat	Press (during play)	Display shows
a single track (song)	Press the PROGRAM/REPEAT button once, <b>REPEAT 1</b> will show in the display.	
all the tracks (all songs)	Press the PROGRAM/REPEAT button twice, <b>REPEAT ALL</b> will show in the display.	
all the programmed tracks	During the programmed play, press the PROGRAM/REPEAT button twice, the symbols "PROG" and "REPEAT ALL" will show in the display.	

### To cancel Repeat Play

Press the PROGRAM/REPEAT button until the words REPEAT 1 or REPEAT ALL disappear.

 




## 6. Playing CD in programmed or random order

### 1. Programmed Play

You can make a program of up to 20 tracks in the order you want them to be played.

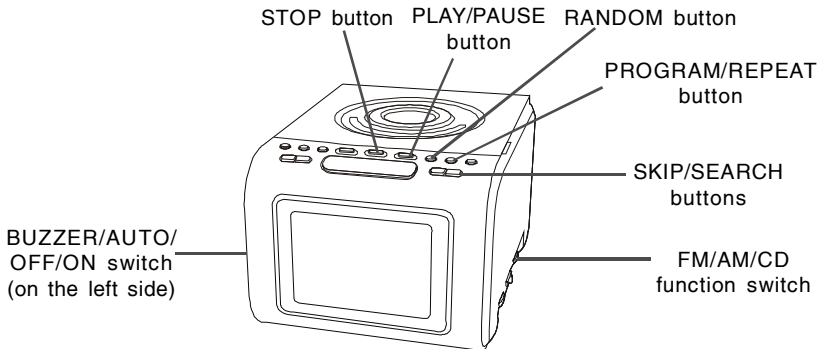

1. Slide the BUZZER/AUTO/OFF/ON switch to ON position and the FM/AM/CD FUNCTION switch to CD position. Wait until the total track number shows in the display and the CD disc is not rotating.
2. Press the PROGRAM/REPEAT button. The letters "PROG" will show and two zeros "00" will flash.
3. Press SKIP/SEARCH buttons ◀◀ or ▶▶ to select the tracks you want to program in the order you want.
4. Press the PROGRAM/REPEAT button to confirm. The two zeros "00" will flash for your next selection of the track.
5. Repeat steps 3 and 4. You can program up to 20 tracks.
6. Press ▶▶ to start programmed play. The letters "PROG" will show in the display.



#### To change the current program

Just create a new program following the programming procedure.

#### To cancel Programmed Play

Press the STOP button to stop the programmed play. The programmed memory will be lost only when the BUZZER/AUTO/OFF/ON switch is slided to OFF position or the CD door is opened.

### 2. Random Play

#### To play the songs in random order

During play or in STOP mode, press the CD RANDOM button, the letters "RAND" will show in the display, and the set will play all the tracks in random order.

Press SKIP/SEARCH ▶▶ button to skip to the next random song.



 
#### To resume normal play

Press the CD RANDOM button again, the letters "RAND" will disappear.



## 7. Listening to the radio


### LEFT SIDE VIEW

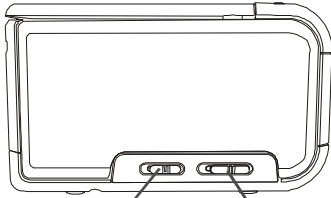

ALARM  
switch

BUZZER/AUTO/  
OFF/ON switch

### RIGHT SIDE VIEW

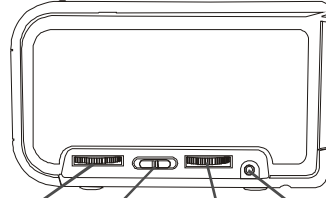 

TUNING  
control

 
FM/AM/CD  
switch

VOLUME  
control

PHONES  
jack

Connect the supplied AC power cord (see **Setting the Clock**).

1

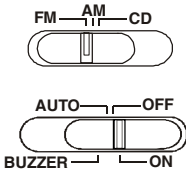

Slide the FM/AM/CD switch to AM or FM position and the BUZZER/AUTO/OFF/ON switch to ON.

2



Tune into the station you prefer using the TUNING control. Adjust for the clearest sound. The display will show you the frequency of the station tuned in. This is useful when you know the station's frequency.

 


3




Adjust the VOLUME control for desired loudness.

4



 Slide the BUZZER/AUTO/OFF/ON switch to OFF position to turn off the radio.




### NOTE:

This set uses an analog (rotary) tuner with a digital display. The digital display is very useful when locating your favorite station and also assists you to pinpoint the exact tuning frequency. This set does not have radio memory presets.

Remember to slide the BUZZER/AUTO/OFF/ON switch to BUZZER or AUTO position after listening, so that the buzzer alarm, CD music or radio will wake you up at your preset time. Make sure the volume control is adjusted loud enough to wake you up. If you want to listen to the radio for a short time, simply press the sleep button. See page 12 for full sleep instructions.



 
## 8. More about radio operation

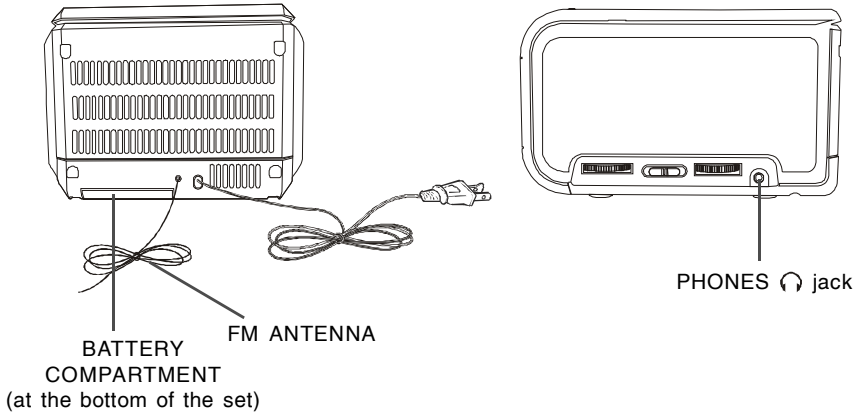


### To improve broadcast reception

Fully stretch out the FM ANTENNA for better FM reception.

 Reorient the player itself for better AM reception.  
Or locate the set near a window.

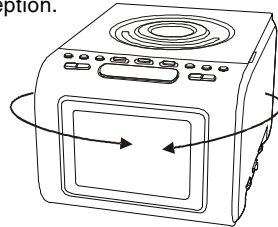

### To listen without disturbing others

Connect your headphones (optional - not included) into the PHONES  jack at the right side of the set. The speakers will automatically be silenced. Remember to unplug the headphones if you want the set to wake up in the morning.

### To use battery backup

Install a 9V battery for Clock backup, so that if your home power is momentarily off due to a power outage, you will not have to set up the time & alarm settings.

**NOTE:** During power outages the CLOCK display will not show the time but the time will be kept in memory and will reappear when power is restored.

 
 




## 9. Waking up to alarm or music

**NOTE:**When the BUZZER/AUTO/OFF/ON switch is set to ON or OFF position, the words "ALARM 1" or "ALARM 2" will not show in the display and no alarm buzzer, CD music or radio will come out at the set alarm time.



### 1. Waking up to alarm



1. Set the BUZZER/AUTO/OFF/ON switch to BUZZER position.
2. Set the alarm time as previously instructed and slide the ALARM switch to ALARM 1, ALARM 2 or ALARM 1+2, the proper ALARM status will show in the display.

Alarm buzzer will sound at the set alarm time.




### 2. Waking up to CD

  

1. Set the BUZZER/AUTO/OFF/ON switch to AUTO position.
2. Set the alarm time as previously instructed and slide the ALARM switch to ALARM 1, ALARM 2 or ALARM 1+2, the proper ALARM status will show in the display.
3. Make sure the FM/AM/CD switch is set to CD position.
4. Make sure there is a CD disc loaded in the compartment and the volume setting is loud enough to wake you up.

The CD Disc will start playing from the first track at the set alarm time.

### 3. Waking up to radio

   

1. Refer to **Listening to the radio** for radio operation instructions. Select the desired AM or FM band using the FM/AM/CD switch and TUNING control. Adjust the volume control to your preference.
2. Set the BUZZER/AUTO/OFF/ON switch to AUTO position.
3. Set the alarm time as previously instructed and slide the ALARM switch to ALARM 1, ALARM 2 or ALARM 1+2, the proper ALARM status will show in the display.
4. Set the FM/AM/CD switch to FM or AM position.

The radio will start playing at the set alarm time.



## 10. Snooze and Sleep functions

### When alarm or music comes on



 
#### 1. To sleep extra 7 minutes

Just press the SNOOZE button, the alarm or music will stop and come on after 7 minutes.



#### 2. To stop the alarm buzzer, CD music or radio

Just press the ALARM/SLEEP/OFF button, the alarm buzzer, CD music or radio will stop and come on next day.



#### 3. To off the alarm function

Just slide the BUZZER/AUTO/OFF/ON switch to OFF position.

### Going to Sleep with CD music

The SLEEP control will allow the set to play 59 minutes (or 1 hour and 59 minutes) before the set turns itself off.

- Slide the FM/AM/CD switch to CD position.
- Slide the BUZZER/AUTO/OFF/ON switch to BUZZER or AUTO position.
- Press the SLEEP button, the display will show 59 minutes and the word "SLEEP", the CD will start to play.
- Holding the SLEEP and MINUTE buttons down, the display will count down. Release the buttons when the display shows your desired amount of time you want the CD to play before shutting itself off.
- Pressing the SLEEP and HOUR buttons simultaneously down, will change the sleep time to 1 hour and 59 minutes. You may reduce the sleep time by following the above Step 4.
- To turn the CD off before the playing time has expired, simply press the ALARM/SLEEP/OFF button.

### Going to Sleep with RADIO

The SLEEP control will allow the set to play 59 minutes (or 1 hour and 59 minutes) before the set turns itself off.

- Slide the FM/AM/CD switch to AM or FM position.
- Slide the BUZZER/AUTO/OFF/ON switch to BUZZER or AUTO position.
- Press the SLEEP button, the display will show 59 minutes and the word "SLEEP", the RADIO will start to play.
- Holding the SLEEP and MINUTE buttons down, the display will count down. Release the buttons when the display shows your desired amount of time you want the RADIO to play before shutting itself off.
- Pressing the SLEEP and HOUR buttons simultaneously down, will change the sleep time to 1 hour and 59 minutes. You may reduce the sleep time by following the above Step 4.
- To turn the RADIO off before the playing time has expired, simply press the ALARM/SLEEP/OFF button.



## Precautions

### On safety

- As the laser beam used in the CD player section is harmful to the eyes, do not attempt to disassemble the casing. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the player, unplug the player, and have it checked by qualified personnel before operating it any further.

### On placement

- Do not leave the player in a location near heat source, or in a place subject to direct sunlight, excessive dust or mechanical shock or vibration.
- Do not place the player on an inclined or unstable place.
- Do not place anything within 1 inch of the back of the cabinet. The ventilation holes must be unobstructed for the player to operate properly and prolong the life of its components.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the player to prevent possible damage from the magnet.

### On power sources

- For battery backup, you may use a 9V battery (optional), so that you will not have to re-set the clock every time you disconnect the power.
- The nameplate indicating operating voltage, power consumption, etc. is located at the bottom of the set.

### On operation

 
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player section. Should this occur, the player will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate.
- This CD player is designed to be played on a stable no vibration position. If you bump the set during CD play, the music will stop or skip for a few seconds. This is normal for this type of player.
- If you have any questions or problems concerning your player, please contact **our customer service department.**



## Precautions (continued)

### Notes on CDs


- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out.

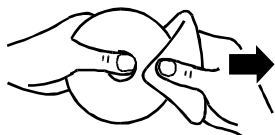

- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or sticker on the CD, nor scratch the surface of the CD.
- After playing, store the CD in its case. If there is a scratch, dirt or fingerprints on the CD, it may cause tracking error.

### Cleaning the lens

 If the lens becomes dirty, it may cause a skipping of sound during CD operation. Clean with a commercially available lens cleaner blower or a cotton swab.

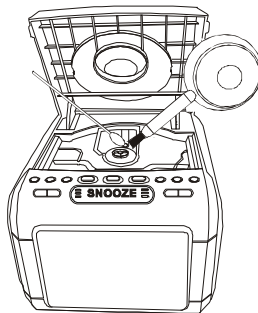

### Cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene.



## Trouble Shooting

	Problem	Remedy
<b>General</b>	The power is not on.	<ul style="list-style-type: none"> <li>Connect the AC power cord to a wall outlet securely. Make sure that outlet has power.</li> </ul>
	There is no sound.	<ul style="list-style-type: none"> <li>Make sure the FUNCTION switch is at the right position as you want.</li> <li>Adjust the volume.</li> <li>Unplug the headphones when listening through speakers.</li> </ul>
	Alarm does not come on in the morning.	<ul style="list-style-type: none"> <li>AM or PM is not set correctly. Is alarm time set in AM range ("PM" should disappear from the display)?</li> <li>BUZZER/AUTO/OFF/ON switch is not set to the proper position. Does the "ALARM" show in the display?</li> </ul>
<b>CD player</b>	"No" appears in the display even when a CD is in place.	<ul style="list-style-type: none"> <li>Insert the CD with the label side up.</li> </ul>
	CD does not play.	<ul style="list-style-type: none"> <li>Make sure that the CD compartment is closed.</li> <li>Place the CD with the label side up.</li> <li>CD play is paused, press ►   again.</li> <li>Clean the CD or try another compact CD, this set will not play MP3 or WMA discs. Replace the disc (this set will not play damaged or scratched CDs), or buy a disc repair polisher to repair it yourself.</li> <li>Take out the CD and leave the CD door open for about an hour to dry moisture condensation.</li> <li>Make sure the FM/AM/CD switch is at CD position.</li> <li>Make sure the BUZZER/AUTO/OFF/ON switch is at the proper position.</li> </ul>
	The sound drops out.	<ul style="list-style-type: none"> <li>Clean the CD, or replace it if the CD is badly damaged.</li> <li>Place the player in a location free from vibration.</li> </ul>
<b>Radio</b>	The sound is weak or has poor quality.	<ul style="list-style-type: none"> <li>Fully stretch out the FM antenna to improve FM reception.</li> <li>Bring the set near a window, or rotate the set for AM reception.</li> </ul>






# Specification

## GENERAL DESCRIPTION

Power source: AC 120V, 60Hz, DC 9V (optional - for clock backup)  
 Speakers: 3" 8 ohm  
 Output power: 1.5W/channel  
 Dimensions: Width: 6 1/2"  
 Depth: 8 1/4"  
 Height: 5"  
 Weight: 3.4 LBs (without battery)

## CD SECTION

Plays disc type: Any compact discs bearing this logo   
 Laser wavelength: 760 - 800 NM  
 Tracking method: 3 - spot error detection 3.86 mm lens  
 Frequency response: 50 Hz - 15 kHz (+1/-2dB)

**NOTE:** This CD player will play normal music CDs (or CD-R/CD-RW CDs).

## RADIO SECTION

Frequency range: FM: 88 - 108 MHz AM: 530 - 1700 kHz

LENOXX reserves the right to make design and specification changes for product improvement.

### PROTECT YOUR FINE FURNITURE!

WE RECOMMEND A CLOTH OR OTHER PROTECTIVE MATERIAL BE PLACED UNDER THE SET WHEN PLACING IT ON SURFACE WITH A NATURAL OR LACQUER FINISH.

## LIMITED WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a period of 90 days after purchase and we will repair it free of charge or replace it at no charge, should it become defective under this warranty, providing you submit proof of purchase (sales slip) with the set.

During the initial 90 day period after original purchase, we will service or exchange, at no charge, the set that is returned to LENOXX ELECTRONICS CORP. After the initial 90 day period expires, and for a period of 12 months from original purchase, we will repair the unit covering any part(s) that need to be replaced at no charge, but will charge for the cost of labor, return postage paid by Lenoxx.

This warranty does not apply to any products which have been subject to misuse, neglect or accident. This warranty does not cover broken cord or cabinet. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS CORP. BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. The following charges apply to repairs beyond the warranty period: \$12.00. Be sure to pack carefully and return postage paid insured together with your money order (personal checks will not be accepted) and sales receipt to:

LENOXX ELECTRONICS CORP., 2 GERMAK DRIVE, CARTERET N.J. 07008

## For customer service

**Dial 1-800-315-5885** (MONDAY - THURSDAY 9:00 AM - 5:00 PM, FRIDAY 9:00 AM - 1:00 PM EST)  
**or Visit Our Website:** <http://www.lenoxx.com>

© 2005 LENOXX ELECTRONICS CORP.  
 2 GERMAK DRIVE  
 CARTERET, N.J. 07008  
 MADE & PRINTED IN CHINA

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>