

Home Theater System

*Turns Your DVD Player Into
A Home Theater Surround Sound System*



The Perfect Sound System for Your DVD Player

- Just add your TV & DVD player; everything else is in the box
- Incredible surround sound, perfect for DVD viewing & enhanced TV game experience
- Also provides exceptionally great sound for your computer & MP3 player
- Front panel audio input jack for MP3 & CD players



PLEASE READ CAREFULLY BEFORE USE

IB-HT3917-WM-E-041506

SAFETY INSTRUCTIONS

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THE PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, FULLY INSERT.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

PLEASE NOTE: Caution mark is located on the bottom enclosure.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.
16. Ventilation - Slots and openings in the cabinet and in the back or bottom are provided for ventilation. To ensure reliable operation of protecting it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.



Cleaning the Cabinet

Clean the cabinet and controls with a very dry or slightly moistened soft cloth. Do not use any type of abrasive pad, scouring powder, or solvents, such as alcohol or benzene.
Do not apply oil or petroleum products or solvents to any part of this set.

Please read important information displayed on the rating plate located on the bottom enclosure before connecting this set to AC power.

FCC NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

PRECAUTIONS ON SAFETY

Should any solid object or liquid fall into the Home Theater System, unplug the player, and have it checked by qualified personnel before operating it any further.

ON PLACEMENT OF YOUR HOME THEATER SYSTEM

- Do not leave the Home Theater in a location near a heat source, or in a place subject to direct sunlight, excessively dusty rooms or rooms with very high humidity.
- Do not place the Home Theater system on an inclined or unstable place.
- Do not place anything within 1 inch of the sides or 2 inches from the back of the cabinet. The heat sink fins must not be covered for the set to operate properly and prolong the life of its components.

INTRODUCTION

Thank you for purchasing this 5.1 Channel Home Theater Surround Sound System. This deluxe audio theater system turns your home into a virtual theater.

 
Basic Features & Benefits of this Home Theater System:

1. 5.1 channel audio decoder for home theater surround sound.
2. Includes audio inputs for your DVD player and AUX (any audio device) and AUDIO INPUT jack on the front.
3. Powerful subwoofer provides real BOOM in your bass.
4. Deluxe easy-to-use remote control with batteries included.
5. Designed for easy, mistake-proof color-coded speaker setup.
6. Compatible with any computer sound system.


THIS SYSTEM CONTAINS



1 Remote Control

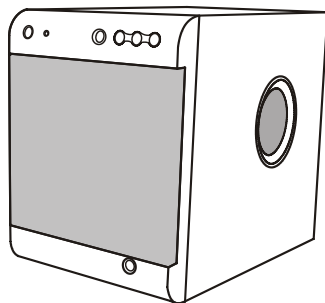

 
**1 Main Set
(with amplified Subwoofer)**

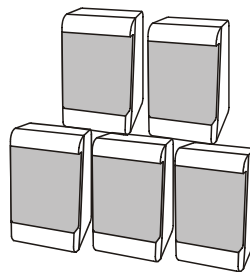


5 Satellite Speakers



 
**2 "AAA" Batteries
(for remote control)**

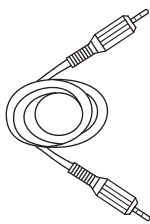

 **1 Set of Audio cables with green 3.5mm plug
for easy front panel connections to your
computer or MP3 (or any other Source
with a 3.5mm headphones Jack)**

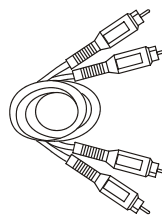

 **1 Set of Audio Cables
for DVD or AUX IN
(Red & White)**



1 Spare Fuse

TABLE OF CONTENTS

• Getting Started

Safety Instructions-----	1
Introduction-----	2
Location of Controls-----	4
Remote Control Operation-----	6

• Connections

Speaker Connections-----	7
Speaker Positioning Information-----	8
Audio Connections-----	9

• Basic Operation

General-----	11
About fuse replacement-----	12

 
• Trouble Shooting----- 13

• Specifications----- 14

LOCATION OF CONTROLS


CONTROL PANEL

(ON THE FRONT OF THE SUBWOOFER)

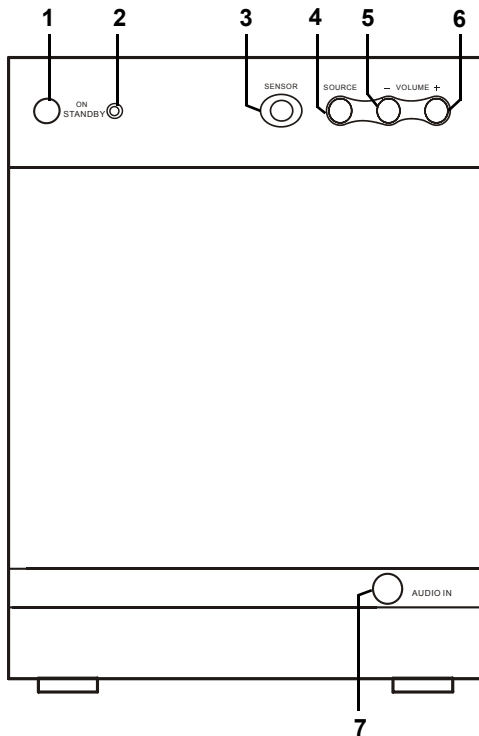

1. **ON/STANDBY button** - In POWER ON mode, press to switch the set to on or to standby mode.
2. **ON/STANDBY indicator** - This indicator flashes slowly in red when the set is in the standby mode; Flashes in green confirming you pressed any button on the main unit or on the remote control and is steadily on in green when the set is on.
3. **REMOTE SENSOR** - Receives the signal from the REMOTE CONTROL (aim the REMOTE control towards this sensor).
4. **SOURCE button** - Press repeatedly to select the sound input source: DVD IN, AUX IN or AUDIO IN.
5. **VOLUME - button** - Decreases the volume level of all speakers.
6. **VOLUME + button** - Increases the volume level of all speakers.
7. **AUDIO IN jack** - This jack is for connecting your MP3 player to the set with the included 3.5mm cable.

 BACK OF MAIN SET (SUBWOOFER)

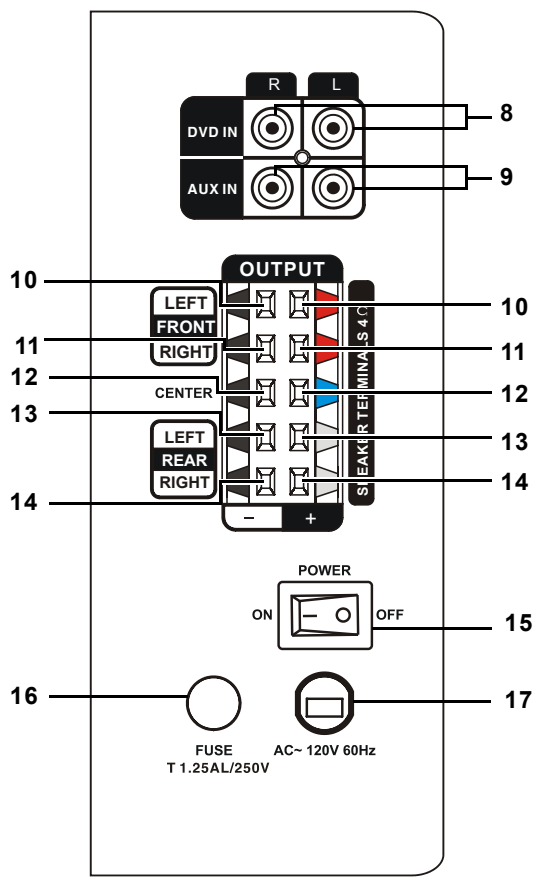


8. **DVD IN jacks** - Connect to the audio output of a DVD player for surround sound.
9. **AUX IN jacks** - Connect to the audio output of a tape deck, TV game, video camera or other component's audio output.
10. **FRONT LEFT SPEAKER jacks** - Connect the FRONT LEFT SPEAKER to the red and black terminals.
11. **FRONT RIGHT SPEAKER jacks** - Connect the FRONT RIGHT SPEAKER to the red and black terminals.
12. **CENTER SPEAKER jacks** - Connect only the CENTER SPEAKER to the blue and black terminals.
13. **REAR LEFT SPEAKER jacks** - Connect the REAR LEFT SPEAKER to the grey and black terminals.
14. **REAR RIGHT SPEAKER jacks** - Connect the REAR RIGHT SPEAKER to the grey and black terminals.
15. **POWER switch** - Press to power the set on or off.
NOTE: This switch must be **ON** in order to be able to use the ON/STANDBY button on the main set or on the REMOTE CONTROL.
16. **FUSE HOLDER** with screw cover.
17. **AC LINE CORD** - Connect to a 120V/60Hz AC standard wall outlet.

IMPORTANT:

Each speaker must be connected to 1 colored terminal AND 1 black terminal.

LOCATION OF CONTROLS

 REMOTE CONTROL

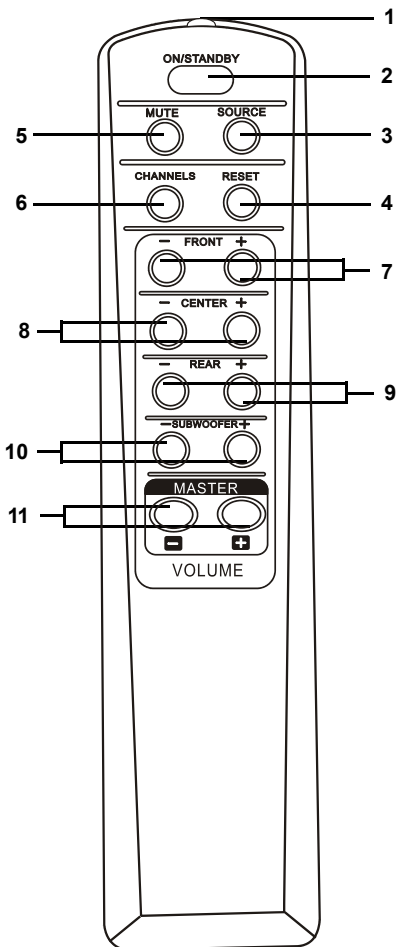


- 1. IR DIODE** - Sends the signal to the set. Do not block or cover this.
- 2. ON/STANDBY button** - Switches the player from STANDBY to ON or ON to STANDBY (if the main POWER of the set is ON).
- 3. SOURCE button** - Press to select the sound input source you want: DVD IN, AUX IN or AUDIO IN.
- 4. RESET button** - Press to adjust all speakers' output to the factory's default settings.
- 5. MUTE button** - Instantly turns off the sound. Press again to restore the sound.
- 6. CHANNELS button** - Press to select 2.1 channel or 5.1 channel listening mode.
- 7. FRONT UP & DOWN VOLUME buttons** - Press to adjust the individual FRONT LEFT/RIGHT speakers' sound level.
- 8. CENTER UP & DOWN VOLUME buttons** - Press to adjust the individual CENTER speaker's sound level.
- 9. REAR UP & DOWN VOLUME buttons** - Press to adjust the REAR LEFT/RIGHT speakers' sound level.
- 10. SUBWOOFER UP & DOWN VOLUME buttons** - Press to adjust the individual SUBWOOFER's sound level.
- 11. MASTER VOLUME UP & DOWN buttons** - Press to adjust the sound level of all speakers at the same time.

SEE NEXT PAGE FOR REMOTE CONTROL BATTERY INSTALLATION.

REMOTE CONTROL OPERATION

Battery Installation

 1. Gently push the door and slide to open the BATTERY DOOR.
2. Insert 2 size "AAA" alkaline batteries (included) into the battery compartment according to the "+" and "-" markings inside the battery compartment.

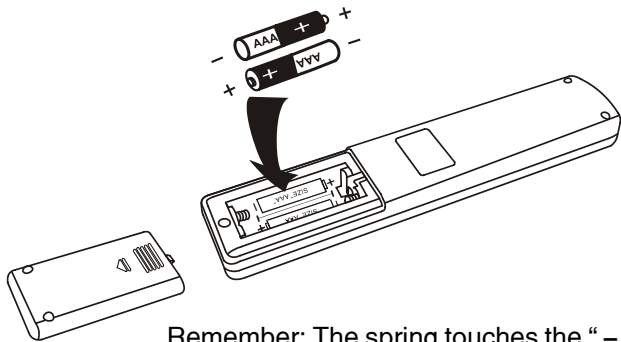

Remember: The spring touches the "-" side of each battery.

3. Replace the battery compartment door.

Tips on Battery Use

- Reversing polarities will damage the batteries and possibly your REMOTE. Be sure to follow polarity "+" and "-" as indicated.
- Do not mix different types of batteries together (Alkaline, Carbon-Zinc, Nickel-Cadmium etc.), or old batteries with new ones.
- When not in use for an extended period of time (over 30 days), remove the batteries to prevent possible acid leakage or corrosion resulting in possible damage to your REMOTE CONTROL.
- When the batteries have become discharged, they must be disposed of in a safe manner that complies with all applicable laws.
- Installation of batteries should only be done by an adult (for safety).

 
WARNING:

The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Remote Control Operating Range


Point the REMOTE CONTROL unit within 20 feet from the remote control sensor and facing the front of the HOME THEATER SYSTEM.

REMOTE CONTROL RANGE

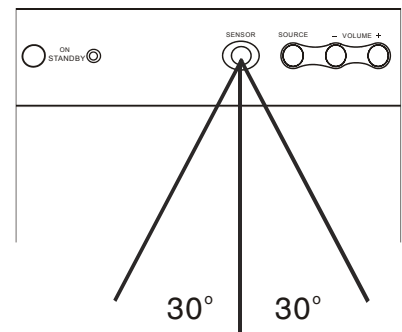

Distance within 20 feet

 Remember to point the REMOTE CONTROL in the direction of the HOME THEATER's sensor, **not the TV set or the DVD player.**



Point the REMOTE CONTROL at the Home Theater's Front

 
Make sure there is a clear path between the REMOTE CONTROL and the HOME THEATER SYSTEM so that the signal is not blocked.

Tips on REMOTE CONTROL Operation

- The REMOTE control's operating distance may vary according to the brightness of the room.
- Do not point bright lights at the REMOTE CONTROL SENSOR (like laser pointers).
- Do not place objects between the REMOTE CONTROL unit and the REMOTE SENSOR.
- Do not use this REMOTE CONTROL while simultaneously using the remote control unit of any other equipment, the signals may mix.
- Sometimes your TV's remote may cause an LED to flash, you can ignore this.

SPEAKER CONNECTIONS

Connect the supplied speaker system by matching the colors of the terminals to those of the cords. The speaker wires and connectors are color-coded for easier set up.

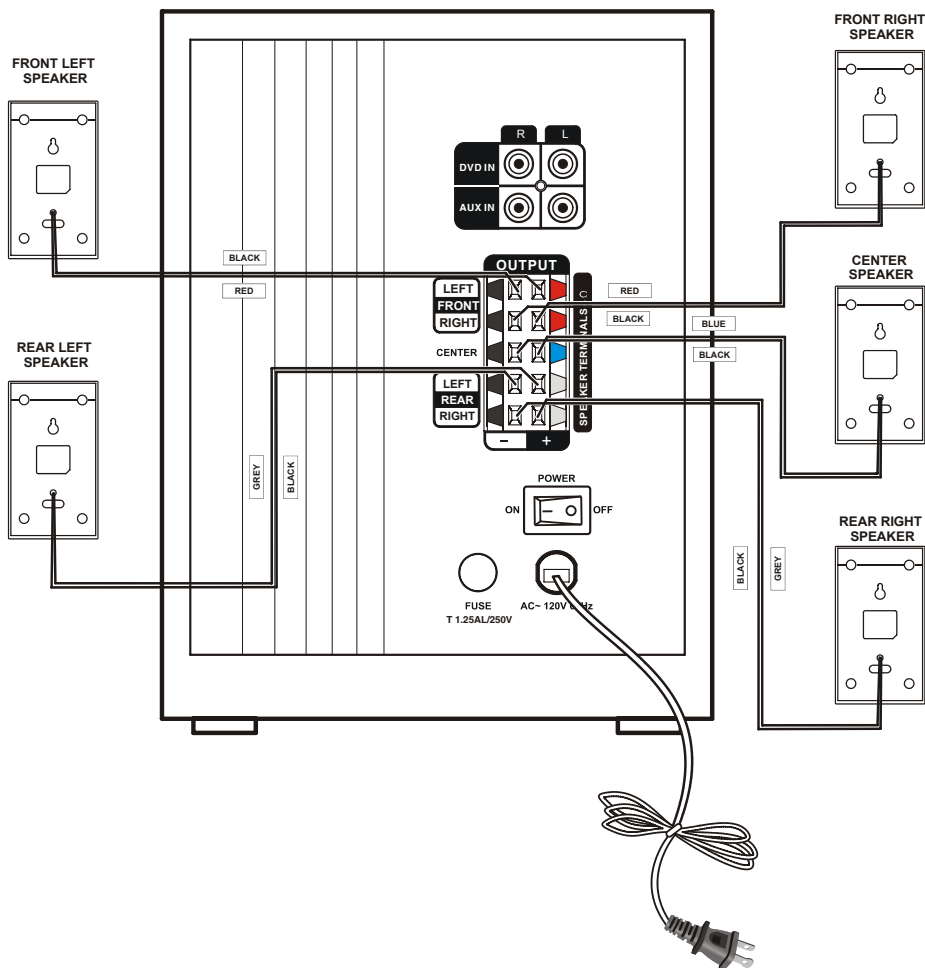

NOTE:

- Connect the Front Left speaker to the Front Left terminals (red + black).
- Connect the Front Right speaker to the Front Right terminals (red + black).
- Connect the Center speaker to the Center speaker terminals (blue + black).
- Connect the Rear Left speaker to the Rear Left terminals (grey + black).
- Connect the Rear Right speaker to the Rear Right terminals (grey + black).

IMPORTANT:

1. Before making connections, make sure the power is off.
2. Be sure you are using the correct satellite speaker in each location, front, rear and center.
3. Each speaker must be connected to 1 colored terminal AND 1 black terminal.
4. Match the colors of the wires to the colors of the terminals.

Tips for connecting the speaker wires

Unwind and stretch out the speaker wires attached with each speakers, then push and hold down the set terminal tab on the back of the main set to insert each wire. Make sure the wire is fully inserted, but the insulation is not covering the inserted part of the speaker wires.

<p>SET TERMINALS</p> <p>① PUSH AND HOLD THE TAB OF TERMINAL.</p>	<p>SET TERMINALS</p> <p>② WHILE HOLDING THE TAB OF THE TERMINAL, STICK THE EXPOSED PART OF THE WIRE INTO THE HOLE OF THE TERMINAL.</p>	<p>SET TERMINALS</p> <p>③ REMOVE YOUR FINGER FROM THE TERMINAL TO LOCK THE WIRE INSIDE THE TERMINAL.</p> <p>COLORED WIRE TO COLORED TERMINAL, BLACK WIRE TO BLACK TERMINAL.</p>
--	--	---





GO ON TO THE NEXT WIRE & REPEAT ABOVE. MAKE SURE POWER IS OFF WHEN DOING THE ABOVE.

NOTE: Be sure to match the speaker wire to the appropriate terminal on the back of the main set: (+) to (+) (color), and (-) to (-) (black). If the wires are reversed, the sound will be distorted and will lack some tones. Follow the color codes of each of the terminals.

SPEAKER CONNECTIONS

To avoid short-circuiting the speakers


Make sure the stripped end of each speaker wire does not touch another speaker terminal or the stripped end of another speaker wire.

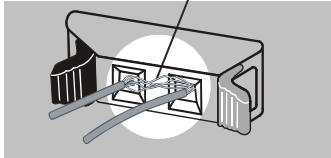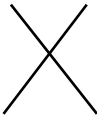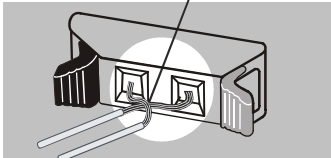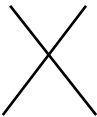Examples of poor connection of the speaker wires	
<p>LOOSE WIRE STRAND TOUCHING (This will short out the sound)</p>   <ul style="list-style-type: none">Stripped speaker wire is touching another set terminal. Make sure not even 1 strand of wire touches the other wire!	<p>WIRES SHORTED TO EACH OTHER (This will short out the sound)</p>   <ul style="list-style-type: none">Stripped wires are touching each other due to excessive removal of insulation. Do not allow the above to happen on your set.
MAKE SURE THE ABOVE DOES NOT HAPPEN	

NOTE: If longer wires are needed, you may buy any good quality speaker wire and splice the wires yourself. Please make sure the wires are not shorting to each other and observe the correct color polarity. Many speaker wires have a dotted line or solid line or raised rib on one side to identify each side. Also make sure you use electrical tape to cover your splices.

SPEAKER POSITIONING INFORMATION

 Proper positioning and placement of the speakers and the subwoofer are important to provide the best surround sound experience, for optimal listening experience, position them as below.

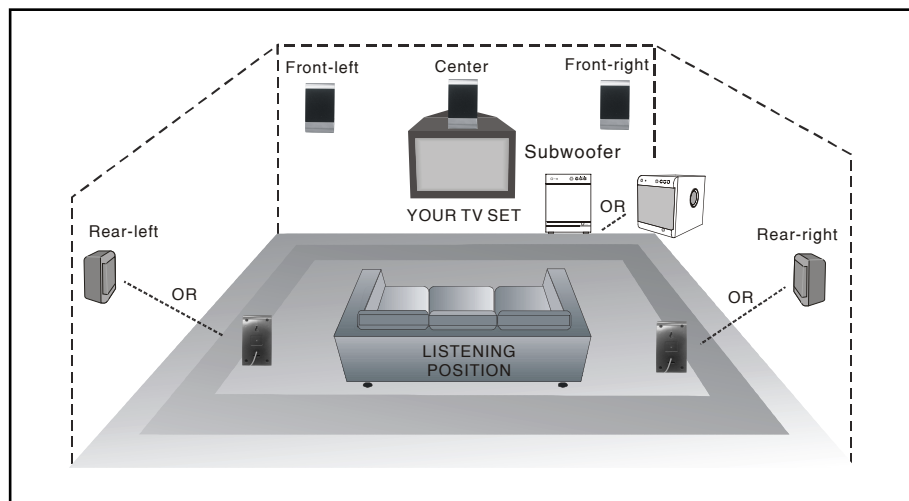


- The 4 satellite speakers and the center speaker should be placed approximately the same distance from your listening position.
- The center speaker should be placed directly above (or below) the TV set. The left and right front speakers should be approximately at the same height as the center speaker.
- The rear speakers should be either in line with, or behind your listening position, approximately at ear level, or slightly above.
- The subwoofer (main set) should be on the floor near the TV, or in any corner, but remember you need a clear path to your remote (don't block this set with a curtain).
- All speakers must be visible. Do not hide them behind curtains, furniture, etc, as this will affect the sound.
- You may only place the center speaker (blue wire) or the front speakers (red wires) near or above the TV set because these speakers are magnetically shielded.
- We have provided one keyhole opening on the backs of all the satellite speakers that allow the satellite speakers to be wall mounted in a vertical position.

NOTE: You may only place the CENTER speaker (blue wire) or the FRONT speakers (red wires) on or near your TV set or computer monitor. These speakers have magnetic shielding inside. If you put the REAR speakers near your TV set or computer monitor, the colors on your TV or computer monitor may change due to magnetism.


AUDIO CONNECTIONS

 Home Theater System + Tape Recorder/Player / AM/FM Tuner + TV

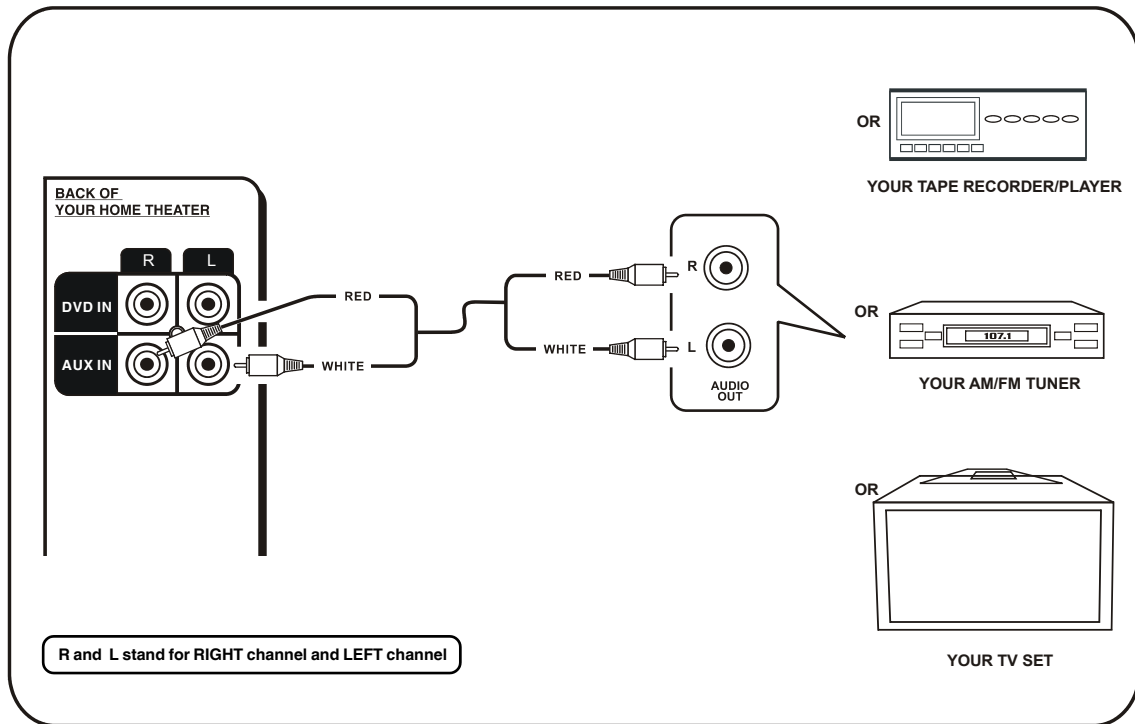

This will allow the sound of the tape recorder/player, AM/FM tuner or TV to be played through the HOME THEATER SYSTEM.

 
Home Theater System + TV + DVD Player / VCR / TV Game / Video Camera

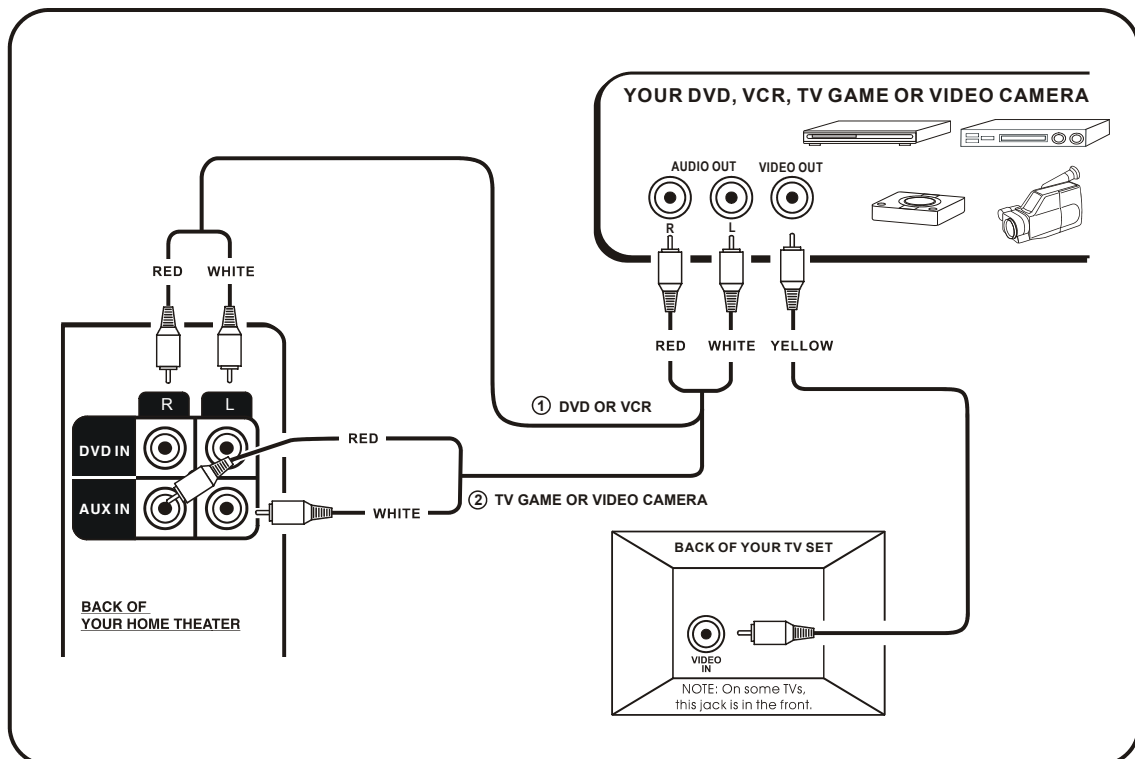

This will allow the sound of DVD, VCR, TV game, or video camera to be played through the HOME THEATER SYSTEM and the picture to be displayed through your TV.


AUDIO CONNECTIONS

 Home Theater System + TV + Satellite

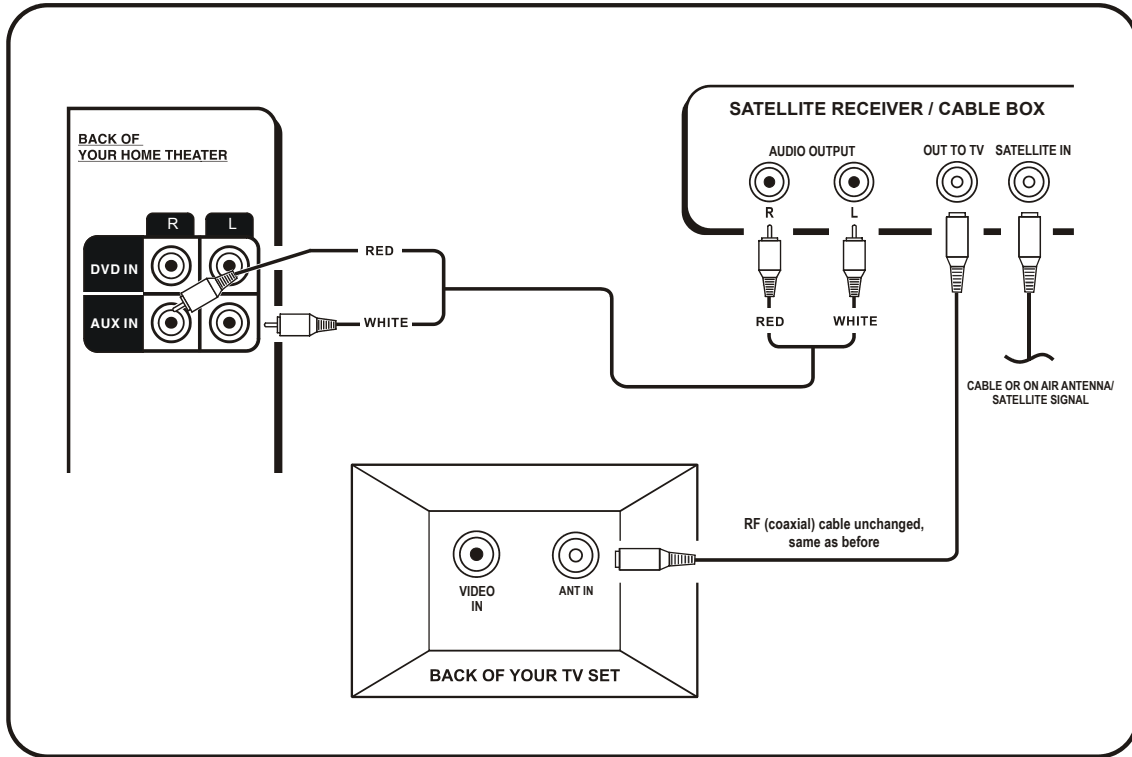


This will allow the sound of satellite to be played through the HOME THEATER SYSTEM, and you will hear the sound from both the TV and the HOME THEATER SYSTEM, this is normal.

 Home Theater System + CD / MP3 / PC / Radio or other Source with 3.5mm Stereo Jack

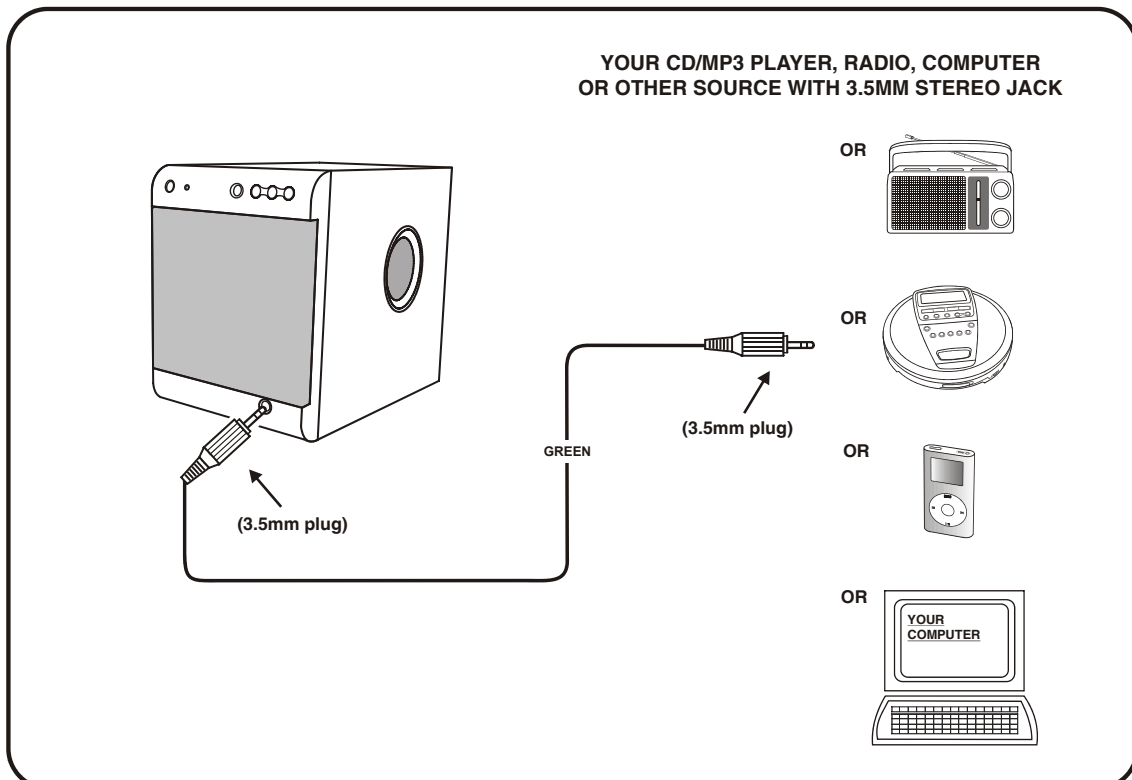

This will allow the sound of CD/MP3 player, radio, computer or other source with 3.5mm stereo jack to be played through the HOME THEATER SYSTEM.

 BASIC OPERATION

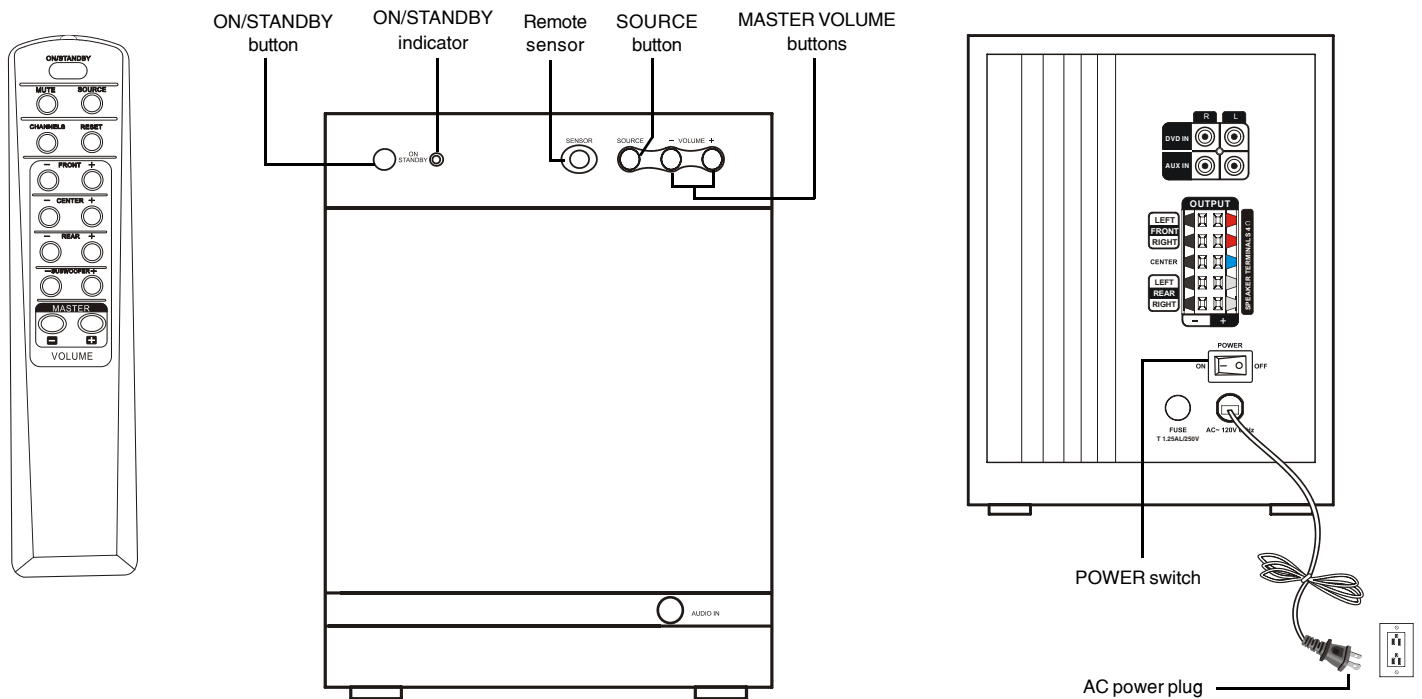

General

1 After completing all SPEAKER and AUDIO connections, plug the AC power plug into a 120V 60 Hz wall outlet and flip **POWER** switch on the back of the main set to **ON** position, the system enters **STANDBY** mode and the **ON/STANDBY** indicator will flash in red. This plug is polarized, if it does not fit your outlet, do not force it, reverse it and re-insert it.

2 Press the **ON/STANDBY** button on the front of the main set or on the **REMOTE CONTROL** to turn the system on and the **ON/STANDBY** indicator will be steadily on in green.

NOTE: The **ON/STANDBY** indicator has 3 modes: flashing in red and in green, and steadily on in green (slow flashing in red indicates the set is in standby mode; Flashing in green indicates confirming you pressed any button on the main set or on the remote control and steadily on in green indicates the set is on). When the set is on, pressing the **ON/STANDBY** button on the main set or on the **REMOTE CONTROL** will turn the set to the standby mode, the indicator will become slow flashing in red.

3 Press the **SOURCE** button on the front panel of the main set or on the **REMOTE CONTROL** repeatedly to select your desired audio input sources and the sound will be heard from the **HOME THEATER SYSTEM**.

4 For **SUBWOOFER**'s volume adjustment, press the **SUBWOOFER** volume control buttons on the **Remote control**:

- + raises the volume, and the **ON/STANDBY** indicator will flash in green, but at its maximum level, the **ON/STANDBY** indicator will stop flashing.
- lowers the volume, and the **ON/STANDBY** indicator will flash in green, but at its minimum level, the **ON/STANDBY** indicator will stop flashing.

Follow this step to adjust the **FRONT**, **CENTER** and **REAR** speakers as well.

5 For **MASTER**'s volume adjustment (change all the speaker's volume at the same time), press the **VOLUME +** or **VOLUME -** button on the main set or the **MASTER VOLUME** control **+** or **-** on the remote control.

- +** raises the volume, and the **ON/STANDBY** indicator will flash in green, but at its maximum level, the **ON/STANDBY** indicator will stop flashing.
- lowers the volume, and the **ON/STANDBY** indicator will flash in green, but at its minimum level, the **ON/STANDBY** indicator will stop flashing.

6 To adjust all speaker's volume to the factory's default settings, press the **RESET** button.

NOTE: Every time you turn the set on, the **MASTER VOLUME** will go back to the factory's default setting; and whenever you press the **SOURCE** button on the main unit or the **SOURCE** button on the **REMOTE**, the **MASTER VOLUME** will go back to the factory's default setting. This avoids sudden very loud sounds from startling you.

BASIC OPERATION

- 7** To momentarily shut off the sound, press the **MUTE** button and the **ON/STANDBY** indicator will flash in green continuously. Press the **MUTE** button again or press the **MASTER VOLUME** buttons to restore the sound and the **ON/STANDBY** indicator will stop flashing and be steadily on in green.
- 8** To select the listening mode, press the **CHANNELS** button on the REMOTE CONTROL.

NOTE: The factory's default input source is DVD with 5.1 channel sound output. When the set is turned to ON, the sound will come out of 5 speakers plus the subwoofer. To change 5.1 channel to 2.1 channel output, press the **CHANNELS** button. The sound will come out of only 2 front speakers plus the subwoofer, the center and rear speaker volume controls will, of course, not work.


NOTE 1: The system has an automatic volume protection function, for safety and reducing the distortion. When the output volume is raised too high, the system will automatically adjust the volume to the proper level, and the **ON/STANDBY** indicator will flash in green.

NOTE 2: Flip the **POWER** switch on the back of the main set to **OFF** position if the set will not be used for a long period of time (several days or more). Remember to flip it back ON again before use.


About fuse replacement.

NOTE: Before attempting to change the fuse, the system must be unplugged from the wall outlet.

 In the unusual event that nothing lights up and no sound, your fuse may have blown. To check for a blown fuse, follow the steps below.

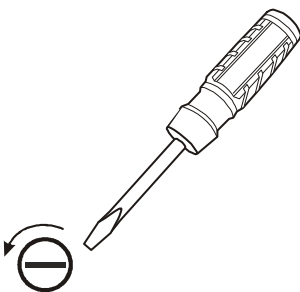


 - 1.** Open the fuse cover (on the back of the main set) by using a flat blade screwdriver to unscrew the fuse cover cap.



GOOD FUSE

 - 2.** Examine the fuse. If a wire shows, the fuse is good.



BLOWN FUSE

- 3.** If the wire is broken in the middle, replace with a 1.25AL 250V "T" type glass fuse. "T" means time delay or slow blow fuse.

TROUBLE SHOOTING

Symptom	Remedy
No power.	<ol style="list-style-type: none"> 1. Is the power cord firmly plugged into the power outlet? Insert the AC power plug securely into the power outlet. Make sure your outlet has power, you can check this by plugging a lamp into the outlet to see if it works. 2. Is the main power switched to off? Flip it to ON. 3. One of the safety mechanisms may be operating. In this event, unplug the player from the power outlet briefly and then plug it in again to reset the set. 4. Your set's fuse may have blown. 5. Unscrew the fuse cover & check the fuse. 6. Replace only with same 1.25AL slow blow 250V "T" type glass fuse. See page 12 for more information.
Your DVD player has no picture.	Make sure your DVD's video cable is plugged into your TV set. This Home Theater only improves the sound of your DVD player, it does not affect the video at all. Also select the correct VIDEO INPUT on your TV.
<ul style="list-style-type: none"> • No sound or only a very low-level sound is heard. • Distorted sound. 	<ol style="list-style-type: none"> 1. Check that the speakers and components are connected securely and correctly, make sure the stripped end of each speaker wires does not touch each other to avoid short-circuit of the speaker wires (see Pages 7 & 8). Also check speaker volume (see Pages 11 & 12). 2. Make sure your source (DVD or other) is plugged in and operating. Also check that component's booklet, maybe you need adjust that component. 3. Check and make sure your DVD's sound output is set to analog. For some DVDs, if the sound output is not set to analog, the audio cables may not be active and there will be no sound output. 4. Make sure that you have selected the correct source on the system (DVD or other source, according to which audio input jacks are connected). 5. Adjust the set's MASTER volume or the SUBWOOFER's volume settings on the front of the HOME THEATER or on the remote, also adjust the volume of the input source. 6. Ensure the MUTE button is <u>not</u> pressed on the HOME THEATER remote (If yes, press the MUTE button again). 7. The audio or speaker connecting wires are damaged. Replace them with new ones.
The REMOTE CONTROL unit does not work.	<ol style="list-style-type: none"> 1. Check if the batteries are installed with the correct polarities (+ and -). 2. If the batteries are weak or dead, replace them with new ones (size "AAA"). 3. Point the remote control unit at a distance of less than 20 feet from the main unit of the HOME THEATER system. 4. Remove any obstacles between the remote control unit and remote control sensor. 5. If the battery terminals are dirty or corroded, clean them with sandpaper.
No buttons operate (on the main set and / or the REMOTE CONTROL unit).	Press the POWER button on the back of the MAIN SET to turn the set ON. Then press the ON/STANDBY button on the main set or on the REMOTE. The HOME THEATER may not be operating properly due to lightning, static electricity, or some other external factors. Reset the player by disconnecting the power plug and then re-connecting it before calling customer service. Also check the Fuse. See page 12.
The left and right sounds are unbalanced or reversed.	Check that the speakers and components are connected correctly and securely.
Rear speakers and center speaker cannot be adjusted individually.	During 2.1 channel operation, these speakers cannot be adjusted individually, you can raise or lower the volume level of the whole set by pressing the MASTER VOLUME + or - button. To adjust these speakers individually, set to 5.1 channel sound output mode.
Loud hum or noise is heard.	<ol style="list-style-type: none"> 1. Check that the speakers and components are connected securely. 2. Insert all wires firmly, follow the pages 7 & 8. Loud hum usually means a plug is not fully seated into the jack.
No sound is heard from the center speaker.	<ol style="list-style-type: none"> 1. Make sure the Center speaker's volume is set to a normal level (see Page 11). 2. Adjust the center speaker volume by pressing the volume control buttons of the center speaker on the REMOTE (see Page 11). 3. If you are listening to 2.1 channel output mode, only 2 front speakers plus the subwoofer will have sound.
The system does not operate properly.	Double check if input & output jacks were inserted properly. Also ask a friend to help you before calling customer service.

SPECIFICATIONS

General

Power requirements ----- AC 120V, 60Hz

Power consumption -----60 Watts

Main set Dimensions ---- 6 7/8 x 9 1/4 x 11 1/2 inches / 17.4 x 23.5 x 29.2 cm

Weight -----7.7 lbs / 3.5 kg

Audio Power Output

Total output power: 40Watts (THD 10%), 60 Watts (Maximum)

Distortion

0.06% @ reference output

Remote Operating Range

Within 20 feet between the main set and the remote.

Replacement Fuse

Time delay 1.25 Amp T type (slow blow) glass fuse 250V.

Speakers

Front Left ----- Dimensions: 3 1/8 x 3 1/8 x 5 5/8 inches / 7.9 x 7.9 x 14.3 cm

Weight: 0.86 lb / 0.39 kg (Red Terminals)

Center ----- Dimensions: 3 1/8 x 3 1/8 x 5 5/8 inches /7.9 x 7.9 x 14.3 cm

Weight: 0.86 lb / 0.39 kg (Blue Terminals)

Front Right ----- Dimensions: 3 1/8 x 3 1/8 x 5 5/8 inches / 7.9 x 7.9 x 14.3 cm

Weight: 0.86 lb / 0.39 kg (Red Terminals)

Rear Left ----- Dimensions: 3 1/8 x 3 1/8 x 5 5/8 inches / 7.9 x 7.9 x 14.3 cm

Weight: 0.86 lb / 0.39 kg (Grey Terminals)

Rear Right ----- Dimensions: 3 1/8 x 3 1/8 x 5 5/8 inches / 7.9 x 7.9 x 14.3 cm

Weight: 0.86 lb / 0.39 kg (Grey Terminals)

We reserve the right to make design and specification changes for product improvement.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice. The English version serves as the final reference on all product and operation details should any discrepancies arise in other languages.

PROTECT YOUR FINE FURNITURE!

WE RECOMMEND A CLOTH OR OTHER PROTECTIVE MATERIAL BE PLACED UNDER THE SET OR SPEAKERS WHEN PLACING IT ON A SURFACE WITH A NATURAL OR LACQUER FINISH.

LIMITED WARRANTY

We warrant this product to be free from defects in material and workmanship under normal use for a period of 1 year after purchase, and we will repair it free of charge or replace it at no charge, should it become defective under this warranty, providing you submit proof of purchase (sales slip) with the set.

During the initial 1 year period after original purchase, we will service the set that is returned to LENOXX ELECTRONICS CORP., prepaid, at no charge. After the initial 1 year period expires, we will exchange, at no charge, any part that is defective, but will charge for the cost of labor, return postage paid by Lenoxx.

This warranty does not apply to any product which has been subject to misuse, neglect or accident. This warranty does not cover a broken cord or cabinet. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS CORP. BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. The following charges apply to repairs beyond the warranty period: \$ 20.00. Be sure to pack carefully and return postage paid insured together with your money order (personal checks will not be accepted) and sales receipt to:

LENOXX ELECTRONICS CORP., 35 BRUNSWICK AVENUE EDISON, N.J. 08817. USA

For Customer Service

Dial: 1-800-315-5885 (MONDAY - THURSDAY 8:00 AM - 5:00 PM, FRIDAY 8:00 AM - 1:30 PM EST)

or Visit Our Website: <http://www.lenoxx.com>

or Email: evergo@att.net

© 2006 LENOXX ELECTRONICS CORP.
35 BRUNSWICK AVENUE
EDISON, N.J. 08817. USA
MADE & PRINTED IN CHINA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>