

LDP7008D Digital Telephone User Guide



Table of Contents

Emergency Services and Safety Precautions.....	2	Last Number Redial.....	20
Getting to know your 7000 Series handset.....	3	Saved Number Redial.....	21
Familiarise yourself with its features.....	3	Messaging.....	22
Handset keys.....	4	Leaving a Message Wait Notification.....	22
		Answering a Message Wait Notification.....	23
General Functions.....	5	User Programming.....	24
Making and Answering Calls.....	6	Saving your name to your phone.....	25
Making and Answering an External Call.....	6	Storing personal speed dials.....	26
Making and Answering an Internal Call.....	7	Character Chart.....	27
Placing an external/internal call on hold.....	8	Storing information under flexible buttons.....	28
Retrieving and external/internal call on hold.....	8		
Parking a call.....	9	Menu Tree.....	29
Retrieving a parked call.....	9	[1] Ring.....	30
Call Forward.....	10	[2] COS (Class Of Service).....	35
DDI Call Waiting.....	12	[3] Authorisation Code/Mobile-Ext.....	38
Call Wait (Camp On).....	13	[4] Wake Up/Conference Room.....	41
Answering a Call Wait.....	13	[5] Message.....	44
Call Pick up (Directed).....	14	[6] Announcement.....	46
Call Pick up (Group).....	14	[7] Supplementary.....	50
Transfer (Screened).....	15	[*] System (Engineering Use Only)	
Transfer (Unscreened).....	15	User Programming Codes.....	56
Using speed dial numbers.....	16	Pre-Set Messages.....	57
Queuing for an outside line.....	17	Glossary.....	58
Making a Page.....	18	Index.....	60
Conference Call.....	19		

- Do not drop or subject the phone to physical shock
- Do not immerse in water
- Do not disassemble or attempt to modify the phone in any way
- Use a damp or anti-static cloth to clean the phone. Do not use a dry or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- Retain the cardboard packaging supplied with this handset. It should be used if the phone has to be returned for service. The packaging can be recycled when no longer required.
- Do not place the phone in direct sunlight for prolonged periods

Disclaimer

LG Electronics Inc. cannot be held responsible for any damage caused to your system through the improper installation of this phone and/or the failure to use the handset as described in this user guide.

Service

The 7008D digital telephone contains no user-serviceable parts. LG recommend that your 7008D digital telephone is serviced or repaired by an LG authorised service centre

Note: Information contained within this document is subject to change without prior notice. E&OE

Familiarise yourself with its features

Handset

Contains a microphone and speaker to allow the user to speak to another party

Dial Pad

Alpha-numeric keypad used to dial numbers and when storing speed dial numbers and names to memory

Headset Port

Used for connection of a headset that has a 2.5mm j type connector

Speed

Used when accessing or storing personal or system speed dial numbers

Speaker

Used to answer 'handsfree' and activate the speaker. Speaker is located under the handset



LCD

2 Line, 48 Characters
Displays inbound/outbound call information. Displays information based on user actions

Flexible Buttons

Used for storing speed dials and features as well as accessing lines

Transfer/Pgm

Used for performing a transfer or user programming

Microphone

For conversing with external parties when handsfree

Volume +/- - Used for adjusting speaker, ring and in-call volume

Hold/Save

For placing external callers on hold and to confirm programming changes

Your digital telephone's keys



(1) Speaker Key



This is for activating the phone's speaker whilst on hook. Useful when using a headset or if you wish to speak hands free. Red LED illuminated if off-hook without lifting the receiver.

(2) Hold/Save Key



Dual purpose key. When in a call it is used to place a caller on hold. When programming it is for permanently updating changes to the system memory

(3) Volume (+ / -) Key



Used for adjusting speaker, ringing and in-call volume

(4) Speed Key



This key is used to access System and Personal speed dial numbers and the internal directory

(5) Trans/Pgm Key



Dual purpose key. When in a call with an external party it is used to transfer. When programming features, speed dial numbers it is a programme key

(6) Flexible Keys



These keys are for use as line keys or for storing regularly used features or speed dials under

GENERAL FUNCTIONS

- Making and Answering External Calls
- Making and Answering Internal Calls
- Placing an Internal/External Call on Hold
- Retrieving an Internal/External Call on Hold
- Parking a Call
- Retrieving a Parked Call
- Call Forward
- DDI Call Wait
- Call Wait (Camp On)
- Answering a Call Wait (Camp On)
- Call Pick Up (Directed/Group)
- Transfer (Screened/Unscreened)
- Using Speed Dial Numbers
- Queuing for an Outside Line
- Making A Page
- Flexible Button Programming
- Leaving a Message Wait
- Answering a Message Wait



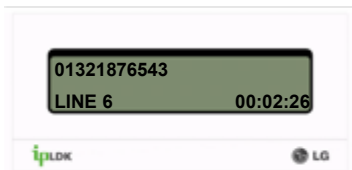


Fig.1




Fig.2

Making and Answering calls

Always ensure that external parties are informed if you intend to record a call.

Making and Answering an external call

You can make an external call in the following ways:

1. Lift the receiver and dial 9
2. Dial 9
3. Press the  button and dial 9

Once you have dialled a desired number the screen will look as in **Fig.1**

To answer a call press the  button or lift the receiver.

Fig.2 shows how your display will appear if you are receiving an inbound external call.

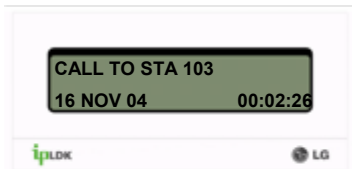


Fig.3

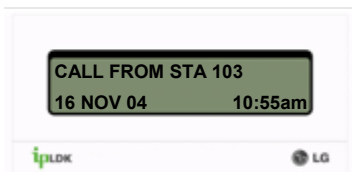



Fig.4

Making and Answering an internal call

You can make an internal call in the following ways:

1. Lift the receiver and dial an extension number.
2. Dial an extension number.
3. Press the  button an extension number.

Once you have dialled a desired number the screen will look as in **Fig.3**

To answer a call press the  button or lift the receiver.

Fig.4 shows how your display will appear if you are receiving an inbound internal call.



Fig.5

Placing and External/Internal Call on hold


Whilst connected to another party (internal or external) press the  button.

Fig.5 shows that the relevant line on your 7008D digital telephone will be flashing to indicate that a caller is on hold.

Fig.6 shows how your display will look when you have an internal caller on hold.

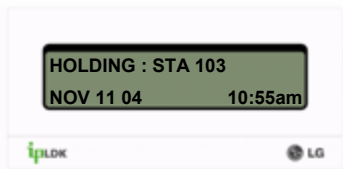



Fig.6

Retrieving an External/Internal Call on hold

If you are 'hands free' simply press the  button and the station that you placed on hold will recall to your phone.

If you are 'Off-Hook' (holding the handset) simply hang up (replace the handset) or dial the extension number of the station that you placed on hold and you will be reconnected.



NOTE: Calls will 'Recall' to your station after a pre-set time if you forget about them.

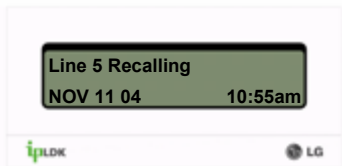


Fig.7

Parking a Call

1. Whilst connected to an external party press the **Park** button, dial a **Park Location (601-619)** or press a flexible button labelled as Park and hang up.
2. Once you have parked the caller you can contact another party to inform them that they have a caller waiting. Alternatively, make a page (See page 18 later in the user guide for information on paging).

Retrieving a Parked Call

1. If retrieving a call that you have parked, dial the relevant digits for the parking bay used (**601-619**)
2. If responding to a page, dial the relevant digits (**601-619**) from the nearest available telephone.



NOTE: Calls will recall to the original station after a pre-set timer if a call is left parked. In this circumstance the screen of your 7008D Digital Handset will appear as in Fig.7

Call Forward

It is possible to forward you phone in a number of ways. The options available are:

- 0** – Follow-Me (To forward calls from your extension to a temporary location. The forward is activated at the temporary location).
- 1** – Unconditional (This option allows you to forward all calls immediately to a Station, Hunt Group or the integral Voice Messaging card).
- 2** – Busy (Destination options are as per option 2. Calls will only forward when you are busy – on the phone).
- 3** – No Answer (Destination options as per option 1. Calls will only forward when a 'No-Answer' timer expires. The length of the time is determined by a qualified System Administrator).
- 4** – Busy/No Answer (Combines options 2 & 3. Most popular, especially where Voicemail is used).
- 5** – Off-Net (This allows you to forward your phone unconditionally to a remote location such as Mobile or home phone).
- 6** – No Answer Off-Net (As per option 6 but only after a no-answer timer)
- 7** – Access Not Permitted
- #** - Allows you to cancel any call forward.

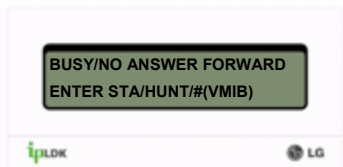


Fig.8

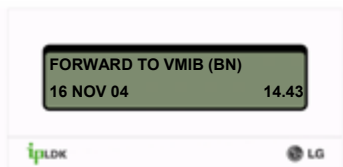






Fig.9

Call Forward

1. Press the  button and then press the  Dnd/Fwd button.
2. Alternatively dial **554** from your handset.
3. Select a forward option as per page 9. (Example: Select option 4, Busy/No Answer, and your display will look as per **Fig.8**)
4. Once you have selected an option such as # (As shown in **Fig.8**), your display will change as per **Fig.9**.
5. To cancel the call forward press the flashing  Dnd/Fwd button or dial **554**,  .

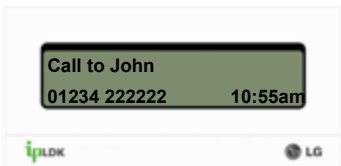



Fig.10

DDI Call Waiting

If enabled, you will be able to see if you have a DDI call waiting whilst engaged in another call.

Fig.10 shows what is displayed when a call is waiting. The top line shows current call status, the bottom line informs you that there is a waiting call.

1. To speak to the waiting caller hang up to finish your current conversation, press the  button or park the existing caller.
2. You will then be connected to the waiting party.



TIP: You can assign a flexible button to turn this feature on and off. (See user flexible key programming codes on page 56).

 


Note: This feature must be enabled for you to use it. Speak to your system administrator if you are not able to do what is described above.




Fig.11

Call Wait (Camp On)

1. Dial an internal number
2. Get busy notification (**Fig.11** shows what you will see in the display of your 7008D digital telephone).
3. From the on-screen instructions press the  button.
4. If the called party answers you can speak with them or simply transfer a call to them.

Answer a Call Wait (Camp On)

1. After hearing Call Wait (Camp On) tone press the flashing  button. (**Fig.12**)
2. Your existing caller is placed on hold.
3. When you have finished speaking you will return to the original caller when the second caller hangs up



TIP: It is possible to assign a flexible button as CAMP ON. See Page 56 for Flexible Key programming codes.



Fig.12



Fig.13

Call Pickup (Directed)

1. Dial 7 followed by the extension number of the station that is ringing
2. You will then be connected to the calling party.
3. **Fig.13** shows that the display of your 7008D Digital Telephone will display the number of the calling party and the station that the call was originally intended for

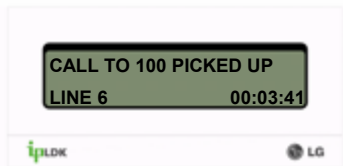
 


Fig.14

Call Pickup (Group)

1. Pick up your handset or press the  button
2. Dial **566**.
3. You will be connected to the caller
4. **Fig.14** shows what you will see on the display of your 7008D Digital Telephone



Note: You must be part of a Pickup Group to use this feature and it must be set up by you system administrator

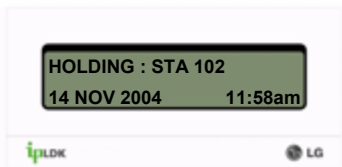


Fig.15

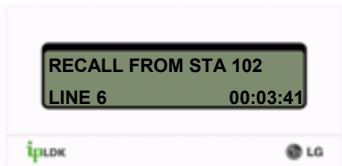



Fig.16

Transfer (Screened)

1. Whilst connected to a caller press the  button.
2. If you are transferring an internal call your display will look as in **Fig.15**
3. Dial the appropriate extension number or press a flexible button that has been assigned with a station number
4. Wait for the called party to answer, announce the call and Hang Up

Transfer (Unscreened)

1. Repeat steps 1 to 3 as described above
2. Hang up without announcing the call
3. Calls will 'recall' to your station after a pre-set timer for both types of transfer. See **Fig.16**



TIP: Pre-set timer can be determined by a system administrator. By default this timer will be 30 secs

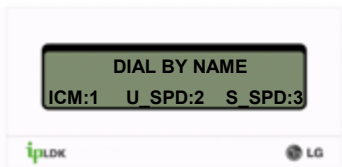


Fig.17

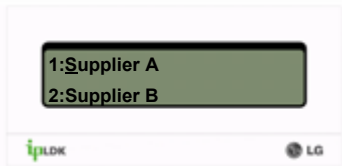





Fig.18

Using Speed Dial Numbers

1. Press the  button twice
2. Your display will appear as in **Fig.17**
3. Select the option you require:
 1. Intercom Directory
 2. User (Personal) Speed Dials
 3. System Speed Dials
4. After you have made your selection your display will appear as in **Fig.18**
5. Use your  button to scroll through the list of available numbers. A cursor '_' will highlight the current selected choice.
6. When you have found the number you want press the  button.



Tip: Use your keypad to navigate around the speed dial list more quickly. See character chart on page 27 of this guide for help on how to use the keypad.

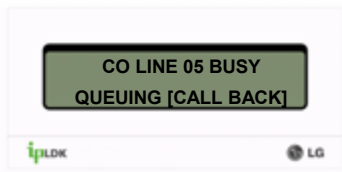


Fig.19

Queuing for an Outside Line

1. If no external lines are available when you attempt to make an outside line you will receive busy tone and your display will appear as in **Fig.19**
2. Press the pre-assigned flexible key
3. When a line becomes available your handset will recall and your display will appear as in **Fig.20**
4. At this point, lift the receiver to get an outside line

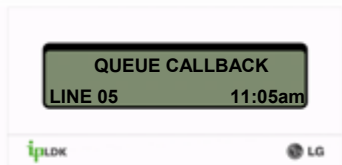


Fig.20



Fig.21

Making a Page

1. Dial the required paging code (see the list of codes on page 55)
2. Your display will look as in **Fig.21**
3. Hang up once you have finished the page.



TIP: It is possible to assign a flexible button as a **PAGE Key**.



Note: You must have permission to make a page that must be set up in programming by a qualified system administrator.

Page Codes:

- 501-535 – Internal Page Zone
- 543 – Internal All Call
- 544 – Meet Me
- 545 – External Zone 1
- 546 – External Zone 2
- 547 – External Zone 3
- 548 – External All Call
- 549 – All Call

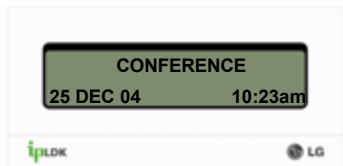


Fig.22

Conference Call

It is possible whilst on a call to set up a conference consisting of up to 6 parties. You will need a flexible button assigned as **CONFERENCE**.

1. Press the **CONFERENCE** button.
2. Your display will look as in **Fig.22**
3. Dial another extension or external number.
4. When the party answers press the **CONFERENCE** button once to enable you to add another party or twice to set up the conference and allow all parties to converse.





 
 

Note: You must have a flexible key set up as a conference button.



Fig.23

Last Number Redial/Redial

To redial the last external number you called you will need a flexible button labelled as **REDIAL**.

1. Press the **REDIAL** button.
 - a) The display of you 7008D Digital Handset will appear as in **Fig.23**
2. Use the  button to find the number you require. The first in the list is the last dialled number.
 - a) By the **REDIAL** button you can access up to 10 previously dialled numbers.
3. Press the  button and the number you selected will be dialled.
4. To access the last dialled number you can alternatively press the  button followed by the  button followed by  .

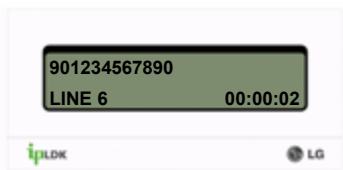


Fig.24

Saved Number Redial

It is possible to save a number that you have dialled whilst connected to the external party.


 

1. Press the Speed  button twice whilst connected to the called party.
2. To dial the number when you have hung up press the Speed  button followed by the  button.
3. Your screen will appear as in **Fig.24**



Fig.25

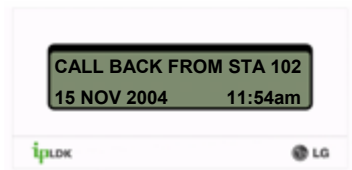




Fig.26

Messaging

Leaving a Message Wait Notification

It is possible to inform a called party (Internal) that you have tried to contact them).

Calling a Busy Station

1. Your screen will appear as in **Fig.25**.
2. Press the button.
3. When the busy part hangs up you will be notified with intermittent bursts of tone, a display as in **Fig.26** a flashing  button and  MSG light.

Calling an Unanswered Station

Simply press your button and hang up when you call a station that does not answer.

They will see from their display that you have tried to call.

Note: If voicemail is present for either scenario you will be invited to leave a message.



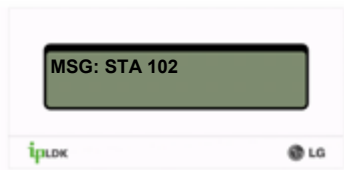



Fig.27

Answering a Message Wait Notification

When somebody has left you a notification as described on the previous page your display will appear as in **Fig.27**.

If a Voice Message has been left the display will show **VMIB** or **HUNT 620** instead.

The  **MSG** light and  **Call Back** button will also be flashing.

1. Press the  **Call Back** button or dial the extension number shown in the display.

USER PROGRAMMING

SAVING YOUR NAME TO YOU PHONE

STORING PERSONAL SPEED DIALS

CHARACTER ENTRY CHART







Fig.28




Saving your name to your phone

This enables colleagues to identify you by your name instead of you extension number (**Fig.28**). You can store your name as follows:

1. Press the  button and dial **74**.
2. You will then be prompted to enter your name. (See the character entry chart on page 27).
3. Press the  button to save your name to the system memory

Storing Personal Speed Dials

It is possible for you to store numbers that you use regularly to your personal speed dial directory.

- Press the  button.
- Press the  button.
- The screen will show the next available speed dial that can be programmed (Dial **001** for example)
- Enter the required speed dial number (You do not need to enter 9 for an outside line).
- Enter the name as per the character entry chart on page 23.
- Press the  button.

Character Entry Chart

Please follow the chart below when entering characters.

. - 13 1 - 10	A - 21 B - 22 C - 23 2 - 20	D - 31 E - 32 F - 33 3 - 30
G - 41 H - 42 I - 43 4 - 40	J - 51 K - 52 L - 53 5 - 50	M - 61 N - 62 O - 63 6 - 60
P - 71 Q - 72 R - 73 S - 74 7 - 70	T - 81 U - 82 V - 83 8 - 80	W - 91 X - 92 Y - 93 Z - 94 9 - 90
Space - *1 : - *2 , - *3	0-00	#



Fig.29







Note: Users do not have permission to over write a flexible key that is assigned as a line key.

See page 56 for details of all user programming codes.

Storing information under a flexible button

Flexible buttons can be programmed as line, extension, feature or speed dial buttons.

To assign a feature to a flexible button follow the instructions below:

1. Press the  button and select the button you wish to assign.
2. The display of you 7008D Digital Telephone will then display what is already programmed or if it is empty as per **Fig.29**
3. You may then assign the button in on of the following ways:
 - a. Press the  button followed by a user programming code
 - b. Press the  button followed a speed dial number.
 - c. Enter the relevant extension number.
4. Press the  button.

[1] RING

- 1.1 TYPE
- 1.2 ANSWER MODE
 - 1.2.1 HANDSFREE (H)
 - 1.2.2 TONE (T)
 - 1.2.3 PRIVACY (P)
- 1.3 SMS MSG DISPLAY
- 1.4 ENBLOCK MODE
- 1.5 SMS/NOTICE DISPLAY
- 1.6 SCROLL SPEED
- 1.7 EAR-MIC HEADSET
- 1.8 ICM RING
- 1.9 CO RING

[2] COS

- 2.1 COS DOWN
- 2.2 COS RESTORE
- 2.3 WALKING COS
- 2.4 COS CHANGE

[3] AUTH / MOBILE EXTN

- 3.1 AUTH REGISTER
- 3.2 AUTH CHANGE
- 3.3 REG MOBILE-EXT
- 3.4 ACTIVE MOBILE-EXT

[4] TIME / CONF-ROOM

- 4.1 SET WAKE-UP TIME
- 4.2 WAKE-UP DISABLE
- 4.3 ACTIVE CONF-ROOM
- 4.4 DEACTIVE-CONF ROOM

[5] MESSAGE

- 5.1 SET PRESELECTED MSG
- 5.2 SET CUSTOM MSG

[6] ANNOUNCEMENT

- 6.1 REC USER GREETING
- 6.2 LISTEN TIME/DATE
- 6.3 LISTEN STA NUMBER
- 6.4 LISTEN STA STATUS
- 6.5 REC PAGE MSG
- 6.6 ERASE USER GREETING
- 6.7 ERASE PAGE MESSAGE

[7] SUPPLEMENTARY

- 7.1 LCD DISPLAY LANGUAGE
- 7.2 MPB VERSION DISPLAY
- 7.3 BGM
- 7.4 REGISTER STA NAME
- 7.5 SPK/HEADSET
- 7.6 HEADSET RING MODE
- 7.7 WTU STA NUM RCVR
- 7.8 SERIAL NUMBER
- 7.9 PC-PHONE LOCK KEY

[*] SYSTEM (DO NOT USE)

1. RING



- 1.1 TYPE**
- 1.2 ANSWER MODE**
- 1.3 SMS MSG DISPLAY**
- 1.4 ENBLOCK MODE**
- 1.5 SMS/NOTICE DISPLAY**
- 1.6 SCROLL SPEED**
- 1.7 EAR-MIC HEADSET**
- 1.8 ICM RING**
- 1.9 CO RING**





Fig.30

Type

1. Press the  button and select option **[1] RING** followed by option **[1] TYPE**. (Your display should look as per **Fig.30**).
2. The screen shows the current active ring
3. Choose options **1-4** to change to general ring cadence for your 7008D Digital Telephone.
4. Press the  button to confirm the change.

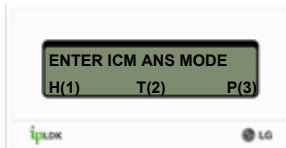



Fig.31

Answer Mode

Press the  button and select option **[1] RING** followed by option **[2] ANSWER MODE**. (See **Fig.32**)

(1) Handsfree – In this mode you will receive 3 short bursts of tone from your handset for intercom calls before being connected in a full handsfree conversation.


(2) Tone – This is the default answer mode for intercom calls to your handset. You will receive normal ringing.

(3) Privacy – In this mode you will receive 3 short bursts of tone from your handset for intercom calls. The caller will then be able to announce themselves to you but will not be able to hear anything at your end of the call



SMS MSG Display

This will display short text-based messages that have been sent from users of the EVOLUTION Call Manager Advanced and EVOLUTION Call Manager Attendant applications.

Press the  button and select option **[1] RING** followed by option **[3] SMS MSG DISPLAY**.



Note: You are not able to reply to these messages from your telephone

Enblock Mode

Reserved for future development

SMS/Notice Display

Reserved for future development



Fig.32

Ear-Mic Headset

This feature allows you to plug a standard DECT-type headset into the 2.5mm jack socket on your 7008D Digital Telephone.

1. Press the Trans./Prgm button and select option **[1] RING** followed by option **[7] EAR-MIC HEADSET**. (Your display should look as per Fig.32)
2. Select **1** for ON, **2** for OFF (Display shows current setting)



Fig.33

ICM Ring

This feature allows you to differentiate the way that your phone rings on intercom calls to the way it rings on inbound external calls.


1. Press the Trans./Prgm button and select option **[1] RING** followed by option **[8] ICM RING**. (Your display should look as per Fig.33)
2. Select options **1-15** (Display shows current setting).



Fig.34

CO Ring

This feature allows you to differentiate the way that your phone rings on intercom calls to the way it rings on inbound external calls

1. Press the  button and select option **[1] RING** followed by option **[9] CO RING**. (Your display should look as per **Fig.34**)
2. Select options **1-15** (Display shows current settings).

1.2. COS (Class Of Service)

2.1 COS DOWN

2.2 COS RESTORE

2.3 WALKING COS

2.4 COS CHANGE







Fig.35

COS Down

This option allows you to 'lock' your phone, preventing unauthorised external calls.

1. Press the  button and select option **[2] COS** followed by option **[1] COS DOWN**. (Your screen should look as per **Fig.35**)
2. Press the  button.

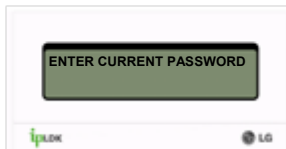




Fig.36

COS Restore

This option returns your phone to normal service, taking off the lock applied above.

1. Press the  button and select option **[2] COS** followed by option **[2] COS RESTORE**. (Your screen should look as per **Fig.36**)
2. Enter your password and the screen should change as per **Fig.37**.
3. Press the  button.

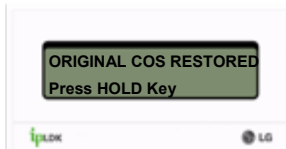



Fig.37

 **Note: You will need a valid Authorisation Code to use both of these features. Setting up your Authorisation Code is described on page 39 of this user guide.**

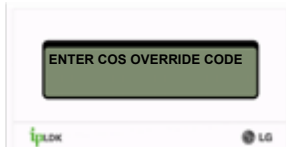




Fig.38

Walking COS

This option allows another user to override a COS that is applied to you extension. You may only be allowed to dial local and national where as they may be able to dial international numbers.

1. Press the  button and select option **[2] COS** followed by option **[3] WALKING COS**. (Your screen should look as per **Fig.38**)
2. Enter a valid authorisation code and press the  button.

COS Change

Reserved for future development.

3. AUTH CODE MOBILE EXTENSION

3.1 AUTH CODE REGISTER

3.2 AUTH CODE CHANGE

3.3 REGISTER MOBILE EXTENSION

3.4 ACTIVATE MOBILE EXTENSION



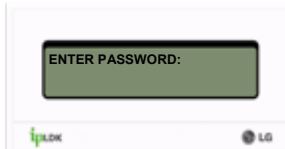

 


Fig.39

Auth Code Register

You can register a valid authorisation code with this option. A valid authorisation code is required for many features that you may wish to access.

1. Press the  button and select option **[3] AUTH/MOBILE-EXT** followed by option **[1] AUTH REGISTER**. (Your screen should look as per **Fig.39**)
2. Enter a 5 digit authorisation code and press the  button.

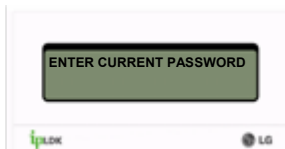


Fig.40

Auth Code Change

You can change your authorisation code with this option. A valid authorisation code is required for many features that you may wish to access.



1. Press the  button and select option **[3] AUTH/MOBILE-EXT** followed by option **[2] AUTH CHANGE**. (Your screen should look as per **Fig.40**)
2. Enter your current 5 digit authorisation code and the screen will then appear as per **Fig.39**.
3. Enter a new code and press the  button.



Fig.41

Register Mobile Extension

This feature allows to set your mobile or other valid telephone number to receive DDI calls simultaneously to your desk phone.





1. Press the  button and select option **[3] AUTH/MOBILE-EXT** followed by option **[3] REG MOBILE-EXT**. (Your screen should look as per **Fig.41**)
2. Enter your mobile number and press the  button.



Fig.42

Activate Mobile Extension

This allows you to activate the feature that you have set up above.

1. Press the  button and select option **[3] AUTH/MOBILE-EXT** followed by option **[4] ACTIVE MOBILE-EXT**. (Your screen should look as per **Fig.42**)
2. Dial 1 and press the  button.



Note: Permission to use this feature must be set up by a qualified system administrator in order for you to access this user programming.

4. WAKE UP TIME / CONFERENCE ROOM

4.1 SET WAKE UP TIME

4.2 WAKE UP DISABLE

4.3 ACTIVE CONF-ROOM

4.4 DEACTIVE CONF-ROOM



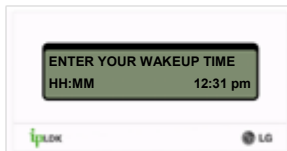
 



Fig.43

Set Wake Up Time

With this feature you can set an alarm to ensure you do not miss an important meeting.

1. Press the  button and select option **[4] TIME/CONF ROOM** followed by option **[1] SET WAKE UP TIME**. (Your screen should look as per **Fig.43**)
2. Enter the time that you wish the alarm to go off and press the  button.
3. To stop the alarm when it sounds simply go off hook and hang up.

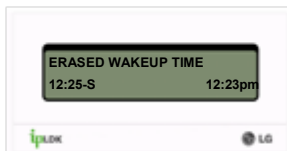
 



Fig.44

Wake Up Disable

This allows you to deactivate an alarm that has been set.

1. Press the  button and select option **[4] TIME/CONF ROOM** followed by option **[1] SET WAKE UP TIME**. (Your screen should look as per **Fig.44**)
2. Press the  button.

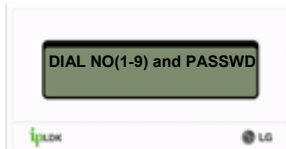




Fig.45



Activate Conference Room

Conference Room allows external callers to dial into a multi-party conference. As a user you can set up and deactivate a conference room.

1. Press the  button and select option **[4] TIME/CONF ROOM** followed by option **[3] ACTIVE CONF-ROOM**. (Your screen should look as per **Fig.45**)
2. Enter the number of the conference room you wish to activate, followed by your authorisation code and press the  button.
3. Callers can now dial into this conference (Internal or external via DDI, transfer from reception or auto-attendant).

Deactivate Conference Room

A conference room, as set up above, will stay active until you deactivate it.

1. Press the  button and select option **[4] TIME/CONF ROOM** followed by option **[4] DEACTIVATE CONF-ROOM**. (Your screen should look as per **Fig.45**)
2. Enter the relevant number and press the  button.

5. MESSAGE

5.1 SET PRE-SELECTED MESSAGE

5.2 SET CUSTOM MESSAGE







Fig.46

Set Pre-Set Message

There are 10 pre-set , 10 Custom and 1 personal text-based messages that you can chose to leave on the display of you 7008D Digital Telephone when you are away from your desk. (See page xx of this user guide for a list of the pre-set messages).

1. Press the  button and select option **[5] TIME/CONF ROOM** followed by option **[1] ACTIVE CONF-ROOM**. (Your screen should look as per **Fig.46**)
2. Enter the relevant message number and follow any on-screen prompts and press the  button.

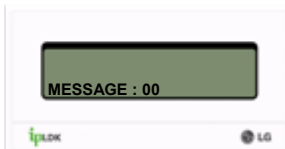




Fig.47

Set Custom Message

By selecting option 00 above you will chose your own personal message. You set you own message as below:

1. Press the  button and select option **[5] TIME/CONF ROOM** followed by option **[2] SET CUSTOM MSG**. (Your screen should look as per **Fig.47**)
2. Enter the relevant text as per the character entry chart on page 22 and press the  button.




6. ANNOUNCEMENT

- 6.1 RECORD USER GREETING**
- 6.2 LISTEN TO TIME/DATE**
- 6.3 LISTEN TO STATION NUMBER**
- 6.4 LISTEN TO STATION STATUS**
- 6.5 RECORD PAGE MESSAGE**
- 6.6 ERASE USER GREETING**
- 6.7 ERASE PAGE MESSAGE**




Record User Greeting

If you have permission you may record a greeting that users will hear based on a forward type set on your extension. (See page 9 for Call Forward Settings).

1. Press the  button and select option **[6] ANNOUNCEMENT** followed by option **[1] REC USER GREETING**.
2. You will prompted to press  to start recording.
3. When you have finished recording press .
4. Record a message appropriate to the type of forward on your Digital Telephone.


Listen to Time/Date

To check the time and date:

1. Press the  button and select option **[6] ANNOUNCEMENT** followed by option **[2] LISTEN TIME/DATE**.
2. The date and time will then be heard. (Integral messaging must be present to use this feature).


Listen to Station Number

To check your station number:

1. Press the  button and select option **[6] ANNOUNCEMENT** followed by option **[3] LISTEN STA NUMBER**.
2. You will then hear a system message telling you the number of your station.




Listen to Station Status

To listen to your current status (Station Number, COS, Call Forwards):

1. Press the  button and select option **[6] ANNOUNCEMENT** followed by option **[4] LISTEN STA STATUS**.
2. You will then hear the current status of your extension.


Record Page Message

It is possible to record a page that you may use on a regular basis. This can be stored, together with a page code, under a flexible button

1. Press the  button and select option **[6] ANNOUNCEMENT** followed by option **[5] REC PAGE MSG**.
2. You will prompted to press  to start recording.
When you have finished recording press 


Erase User Greeting

To erase your personal greeting:

1. Press the  button and select option **[6] ANNOUNCEMENT** followed by option **[6] ERASE USER GREETING**.
2. Your personal greeting will be erased.

Erase Page Message

To erase your page message:

1. Press the  button and select option **[6] ANNOUNCEMENT** followed by option **[7] ERASE PAGE MESSAGE**.
2. Your page message will be erased.

7. SUPPLEMENTARY

7.1 LCD LANGUAGE DISPLAY

7.2 MPB VERSION DISPLAY

7.3 BGM

7.4 REGISTER STATION NAME

7.5 SPEAKER/HEADSET

7.6 HEADSET RING MODE

7.7 WTU STA NUM RCVR

7.8 SERIAL NUMBER

7.9 PC-PHONE LOCK KEY



LCD Display Language

If a qualified system administrator has set this feature up you may toggle between a first and second language in your display.

1. Press the  button and select option [7]

SUPPLEMENTARY followed by option [1] **LCD DISPLAY LANGUAGE**.

2. Your LCD language will change to the second language option.



Fig.48

MPB Version Display

This allows you to the level of software that your system is running.

1. Press the  button and select option [7]

SUPPLEMENTARY followed by option [2] **MPB VERSION DISPLAY**. (Your screen should look as per **Fig.48**)

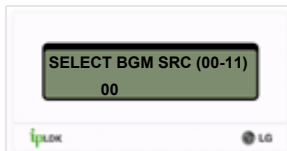




Fig.49

BGM

You can chose to listen to background music through your handset. There are 11 possible music sources. You should check with a qualified system administrator for details of which sources are active.

1. Press the  button and select option [7] **SUPPLEMENTARY** followed by option [3] **BGM**. (Your screen should appear as in **Fig.49**).
2. Select the appropriate source (**00-11**).
3. Press the  button.
4. Music will then be heard through the handset.
5. Repeat steps 1 to 4 to cancel the background music.

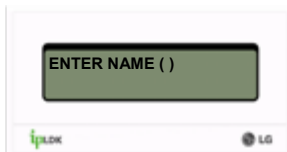


Fig.50

Register Station Name

To register your name to your station:



1. Press the  button and select option [7] **SUPPLEMENTARY** followed by option [4] **REGISTER STA NAME**. (Your screen should look as per **Fig.50**)
2. Enter your name and press the  button.



Fig.51

Speaker/Headset Mode

If you wish to connect a headset other than to the headset jack follow the instructions below:

 

 

1. Press the  button and select option [7] **SUPPLEMENTARY** followed by option [5] **SPK/HEADSET**. (Your screen should appear as in **Fig.51**).
2. Dial **1** for Speaker, **0** for Headset (Your display will show the current setting).
3. Press the  button.



Fig.52

Headset Ring Mode

To complement the above setting you can chose whether your headset, your phone or both devices ring on inbound calls.


1. Press the  button and select option [7] **SUPPLEMENTARY** followed by option [6] **HEADSET RING MODE**. (Your screen should be as per **Fig.52**)
2. Dial **1** for Speaker, **2** for Headset, **3** for Both. (Your display will show the current active setting).
3. Press the  button.

WTU Station Number RCVR

Do not use. Reserved for future development.

Serial Number

This is only required when advanced features need to be activated (VoIP, CTI, IP Phones, PC Attendant)

1. Press the  button and select option **[7] SUPPLEMENTARY** followed by option **[8] SERIAL NUMBER**. (Your screen should look as per **Fig.49**)

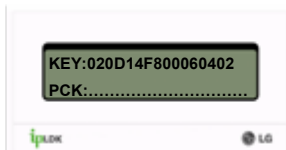


Fig.47

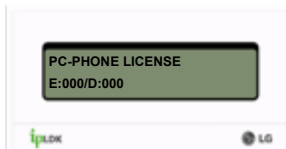



Fig.50

PC Phone Lock Key


This option is used to determine how many PC Phone licences are on the system

1. Press the  button and select option **[7] SUPPLEMENTARY** followed by option **[9] SERIAL NUMBER**. (Your screen should look as per **Fig.50**)



USER PROGRAMMING CODES
PRE SET MESSAGES
GLOSSARY
INDEX

Codes for programming Flexible Buttons

Precede all of these codes by pressing the  button.

Differential Ring: **11**

Enblock Mode: **14**

SMS Notice/Display: **15**

Headset Port On/Off: **17**

ICM Ring Tone: **18**

CO Ring Tone: **19**

COS Down: **21**

Walking COS: **23**

Authorisation Code Register: **31**

Authorisation Code Change: **32**

Set Wakeup Time: **41**

Conference Room Activate: **43**

Conference Room Deactivate: **44**

Preset Message Activation: **51**

Set Custom Message: **52**

Record User Greeting: **61**

Play Date and Time: **62**

Play Station Number: **63**

Listen to Station Status: **64**

Record Paging Message: **65**

Erase User Greeting: **66**

Erase Paging Message: **67**

LCD Language Change: **71**

BGM (Background Music): **73**

Station Name Register: **74**

Headset Setup: **75**

Headset/Telephone Ring Mode: **76**

Account Code: **80**

DDI Call Wait Activate: **81**

Intercom (ICM) Hold: **83**

Camp On: **85**

UCD (Call Centre) DND: **87**

Conference: **91**

DND: **93**

Flash: **94**

Mute: **95**

Redial: **97**

Preset Messages

Preset messages that can be left in the display of your handset are as follows:

00 **PERSONAL/CUSTOMISABLE** Message.

01 **LUNCH, RTN HH:MM** – Use this message if you are away from your desk at lunch. The internal calling party will see this message on their display when the call you.

02 **ON VACATION/RTN DATE (MM:DD)** – This message will inform internal callers that you are on holiday and your expected return date.

03 **OUT OF OFFICE/RTN TIME (HH:DD)** – If you are out of the office for a period of the day internal callers can see your expected return time.

04 **OUT OF OFFICE/RTN DATE (MM:DD)** – As per message 03 but you should use this if you are away from the office for a day or more.

05 **OUT OF OFFICE/RTN UNKNOWN** – This message should really be used in emergencies where you have been called away from the office unexpectedly.

06 **CALL: XX.....(17 DIGITS)** – If you are away from your desk/office and cannot take calls this is a way of informing internal callers that they should ring an alternative number.

07 **IN OFFICE/STA XXXX** – You may have to work at another colleagues station. This informs internal callers where to redirect their call to.

08 **IN A MEETING/RTN TIME (HH:MM)** – If you are not contactable in a meeting you should use this message.

09 **AT HOME** – If you are to be working from home for a day leave this message on you phone before leaving the office.

10 **AT BRANCH OFFICE**

11-20 – These options are available to be custom set to your organisation's requirements.

Glossary

LCD

Liquid Crystal Display

DDI

Direct Dial Inward – Allows an external callers to be routed directly to your extension, bypassing reception

Hunt Group

Feature to allow a number of extension to be group together to answer inbound calls. Used in call centres.

Handset

The part of the phone that you pick up to answer calls. Also commonly know as the receiver.

CTI

Computer Telephony Integration. This is the ability to move call handling and general telephony functions onto the PC.

ISDN

Integrated Services Digital Network. Available as ISDN2e or ISDN30. Higher Speed more flexible medium of carrying voice traffic than traditional Analogue lines.

COS

Class Of Service. Your COS determines the types of numbers you may dial such as National, Local or International.

IPLDK

IP enabled, LG Digital Keysystem

BGM

Background Music. You may select a number of different music sources to play through your handset.

MPB

Main Processor Board. The 'brains' of the phone system. MPB contains all system software and controls all system functions.

CO

Central Office. American term now widely adopted in the telecommunications industry to describe the local telephone exchange.

VMIB

Voice Mail Interface Board. Integral Voice Messaging application for the IPLDK telephone system.

Flexible Button

This is a button that can be assigned as a Line, Feature, Speed Dial or Extension button.

A		D		J	
A.....	27	D.....	27	J.....	27
Announcement.....	46	DDI.....	12, 58		
Answer Mode.....	31	Dial Pad.....	3	K	
Answering Calls.....	6,7			K.....	27
Answering Message Wait.....	23	E			
Authorisation Code.....	39	E.....	27	L	
		Ear-Mic Headset.....	33	L.....	27
		Enblock Mode.....	32	LCD.....	51, 58
B					
B.....	27	F		M	
BGM.....	52, 58	F.....	27	M.....	27
Busy Station.....	22	Flexible Button.....	3, 4, 28, 56, 59	Making Calls.....	6, 7
				Menu Tree.....	29
				Message Wait.....	22
C		G		Microphone.....	3
C.....	27	G.....	27	Mobile Extension.....	40
Call Forward.....	10, 11			MPB.....	51, 59
Call Wait (Camp On).....	13	H			
Character Entry.....	27	H.....	27	N	
CO.....	59	Handset.....	3, 58	N.....	27
CO Ring.....	34	Headset.....	33, 53		
Conference Call.....	19	Hold.....	3, 4, 8	O	
Conference Room.....	43	Hunt Group.....	58	O.....	27
COS.....	36, 37, 58				
Custom Message.....	45	I			
		I.....	27		
		ICM Ring.....	33		
		IPLDK.....	59		

P		S	
P.....	27	Station Number.....	48
Page.....	18	Station Status.....	48
Page Message.....	48, 49		
Park.....	9	T	
PC Phone.....	54	T.....	27
Pickup.....	14	Transfer.....	3, 4, 15
Preset Message.....	45, 57	Time/Date.....	47
Programme Codes.....	56		
		U	
Q		U.....	27
Q.....	27	Unanswered Station.....	22
Queuing.....	17	User Programming.....	24, 55
		User Greeting.....	47, 49
R			
R.....	27	V	
Redial.....	20, 21	V.....	27
Ring.....	30	VMIB.....	59
		Volume.....	3, 4
S			
S.....	27	W	
Serial Number.....	54	W.....	27
SMS (Short Messaging).....	32	Wakeup Time.....	42
Speaker.....	3, 4, 53	Walking COS.....	37
Speed.....	3, 4, 16, 26		
Station Name.....	25, 52		

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>