

4. View the Camera Picture

a. Turn on your TV



b. To view the picture from the camera, switch to the Video mode (i.e. AV, or AUX mode).



Refer to your VCR's (or camera's) owner's manual for instructions for connecting the VCR



This camera can also be connected to a video cassette recorder (VCR) or Digital Video Recorder (DVR) that provides RCA camera cable input jacks.

Specifications

Image Device	Color CMOS (510H x 492V)
Resolution	330 TV Lines
Shutter Control	Auto 1/60 – 1/15,000 SEC
Lens	6mm F1.8
Minimum Illumination	3.0 LUX, 0 LUX with IR LED
Power Requirement	9V DC Adapter (included)
Operating Temperature	14°F to 113°F (-10°C to 45°C)
Housings	ABS Plastic

It's all on the web



Product Information



Specification Sheets



User Manuals



Software Upgrades



Quick Start Guides



Firmware Upgrades



VISIT

www.lorexcctv.com

Strategic Vista International Inc.
Copyright © 2005 Strategic Vista International Inc
As our products are subject to continuous improvement, SVII and its subsidiaries reserve the right to modify product design, specifications and prices, without notice and without incurring any obligation. E&OE

BUSINESS & HOME

WEATHER RESISTANT COLOR
CAMERA with NIGHT VISION

Model SG6157

EASILY
CONNECTS
TO ANY TV



Quick Set-up Guide

 
1. Confirm Package Contents



SG6157 Camera with low light illumination, 6' cable and mounting bracket



100 ft extension cable



Standard AC Adapter



Camera Mounting Bracket



Warning Window Sticker

Features:

- Weather Resistant camera ideal for outdoor or indoor applications
- 12 high intensity IR LED's provide illumination in no/low light conditions
- Color video in standard lighting, automatically changes to B&W video in low light
- Easily connects to most TV's
- Mounts Easily to Walls or Ceilings

2. Mount the Video Camera

a. Install the camera bracket in the desired location.



b. Install the camera on the mounting bracket

- 1) Use the threaded holes
- 2) The 6 ft camera cable has a 6 pin DIN male connector on the end

 
The mounting bracket is designed to permanently mount the camera (i.e. to wall or ceiling)

c. Run the supplied 100 ft extension cable between the security monitor (or TV) and the camera.

The 100 ft extension cable has a 6 pin DIN female connector on one end, and an RCA and power connector on the other end.


3. Connect the Camera to the TV

a. Plug the 6 pin DIN female end of the extension cable into the camera's 6 pin DIN male connector.

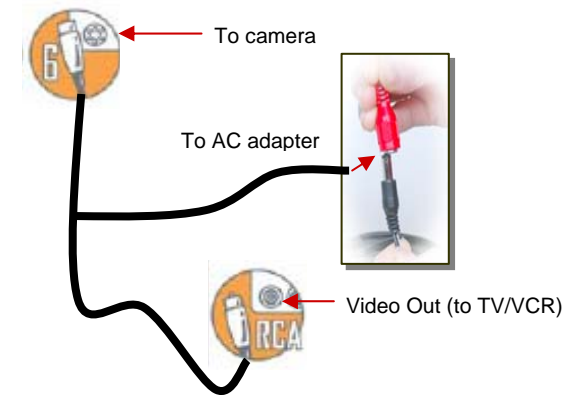

b. Connect the AC adapter to the power socket on the cable

 c. Plug the 9V DC adapter to the wall

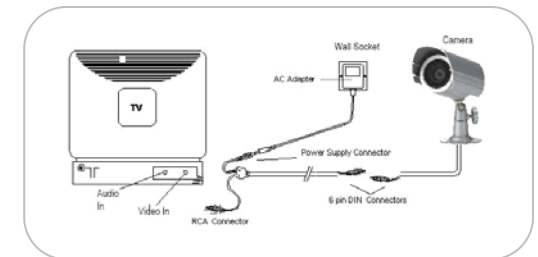

Take Sunshade Off

1. Hold body of housing (rear of camera faces you)
2. Pull sunshade backwards (towards you)

Put Sunshade On

1. Push the sunshade forward (away from you)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>