




PARTS & SERVICE DEPARTMENT
 Nashville, Tennessee
 615-889-8900 / Fax: 615-547-1000
 www.Lochinvar.com

Replacement Parts List

**Residential Gas
 Power Direct Vent
 PRN & PRL 050, 065, & 075**

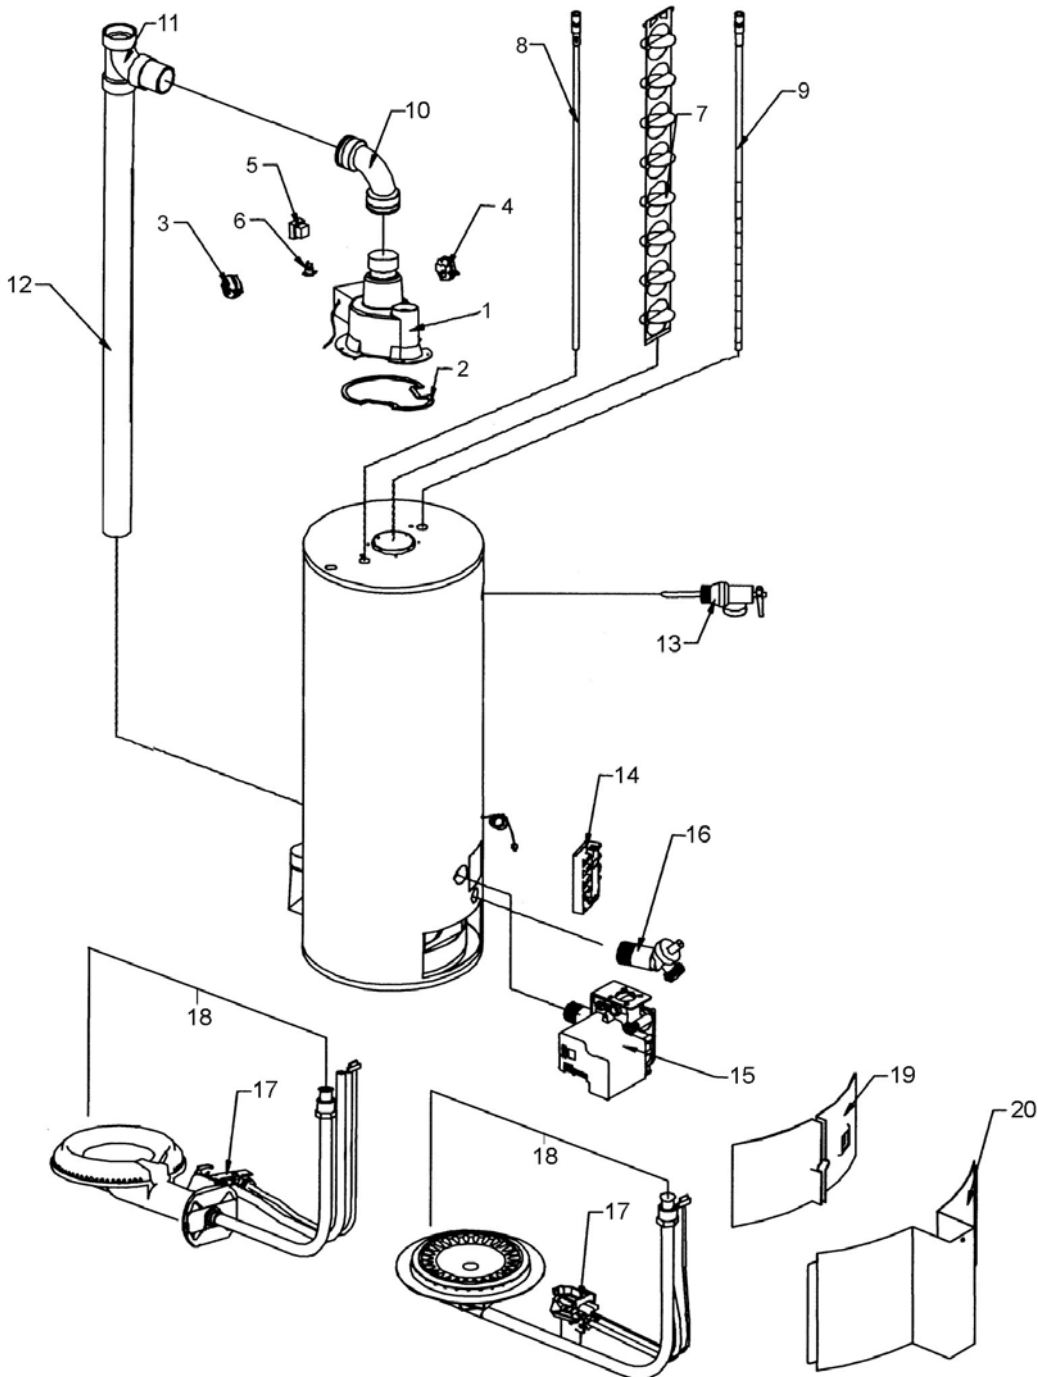

ITEM- NO.	DESCRIPTION	MODEL NUMBERS / PART NUMBERS		
		PRN(L)050	PRN(L)065	PRN(L)075
1	BLOWER	PVT1026	PVT1026	PVT1026
2	BLOWER GASKET	GKT1013	GKT1013	GKT1013
3	INTAKE PRESSURE SWITCH	PRS1020	PRS1020	PRS1020
4	EXHAUST PRESSURE SWITCH	PRS1021	PRS1021	PRS1021
5	TRANSFORMER	TRF1002	TRF1002	TRF1002
6	TEMPERATURE SWITCH	HLC1026	HLC1026	HLC1026
7	FLUE BAFFLE	JKT1004	JKT1004	JKT1004
8	ANODE, MAGNESIUM 3/4" DIA	WTR1019	WTR1019	WTR1019
8	ANODE, ALUMINUM 3/4" DIA	WTR1040	WTR1040	WTR1040
9	DIP TUBE	WTR1018	WTR1018	WTR1018
10	RUBBER TRANSITION ELBOW	MSC1011	MSC1011	MSC1011
11	HORIZONTAL INTAKE PIPE	MSC1012	MSC1012	MSC1015
12	VERTICAL INTAKE PIPE	MSC1013	MSC1013	MSC1014
13	T&P RELIEF VALVE	RLV1001	RLV1001	RLV1001
14	THERMOSTAT	TST1121	TST1121	TST1121
15	GAS VALVE NAT	VAL1170	VAL1170	VAL1170
15	GAS VALVE LPG	VAL1171	VAL1171	VAL1171
16	BRASS DRAIN VALVE	DRV1001	DRV1001	DRV1001
17	PILOT NAT	PLT1217	PLT1217	PLT1217
17	PILOT LPG	PLT1210	PLT1210	PLT1210
18	BURNER ASSEMBLY NAT	BNR1011	BNR1002	BNR1018
18	BURNER ASSEMBLY LPG	BNR1042	BNR1008	BNR1010
19	INNER DOOR WITH GASKET	JKT1102	JKT1102	JKT1102
20	OUTER DOOR	JKT1185	JKT1185	JKT1185

PLEASE PROVIDE MODEL & SERIAL NUMBER WHEN ORDERING PARTS.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>