

Model: LK7000

Programmable Matrix Keyboard

119 Keys with Built-in Scanner and MSR

USER MANUAL



NOTICE

The manufacturer of the POS programmable keyboard makes no representations or warranties, either expressed or implied, by or with respect to anything in this manual, and shall not be liable for any implied warranties of fitness for a particular purpose or for any indirect, special or consequential damages. Information in this document is subject to change without notice and does not represent a commitment on the part of the manufacturer.

FCC NOTICE

This device complies with Part 15 of FCC Rules. Operations is subject to the following two conditions: (1) this device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause undesired operation.

LOGIC CONTROLS, INC.
355 Denton Ave
New Hyde Park, NY 11040
TEL: (516) 248-0400
FAX: (516) 248-0443
Email: lci@logiccontrols.com
<http://www.logiccontrols.com>

TABLE OF CONTENTS

FEATURES	1
CARTON CONTENTS	2
HARDWARE CONNECTIONS	3
FUNCTIONAL TEST	4
UTILITY DISK CONTENTS	6
INSTALLING THE LK7000.EXE UTILITY PROGRAM	7
STARTING THE LK7000.EXE PROGRAM	7
PROGRAMMING THE LK7000 KEYBOARD	8
ADVANCED PROGRAMMING	10
SPECIAL FEATURES OF THE LK7000	11
INTER-STRING DELAY	11
MULTI-LEVEL DEFINITION	12
SPECIAL CONFIGURATIONS	14
DATA TRANSFER MENU	16
SPECIFICATIONS.....	18
ADDENUM	19

FEATURES

- Optional left or right laser bar code reader
- Optional credit card reader
- Contemporary design
- Fully programmable
- Matrix Layout
- Tactile mechanical key switches
- Keylock for multiple program layers
- Multiple shift layers
- True keyboard wedge function, operates with or without computer keyboard
- Up to 256 characters/key, include all function & control keys
- No programming accessory kit, TSR program, or battery required
- Available with RS232C output


CARTON CONTENTS

LK7000

1. Keyboard, Model LK7000
2. Computer interface cable - RJ11 6-pin Male
3. Programming Utility software and User's Manual disk
4. Legend label sheet

HARDWARE CONNECTIONS

The LK7000 can be connected to an IBM101 PC, XT, AT or clone computer, PS/2 computer, or computer terminal. The following diagram shows how the keyboard connects to the computer and standard keyboard or other keyboard peripheral (magnetic stripe reader, scanner, etc.).

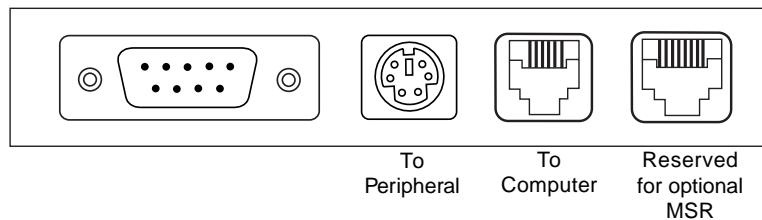

NOTE: Before making any connections it is always advisable to turn off the computer.


A. Connecting the LK7000 to an IBM101 PC, XT, AT, or clone computer's keyboard port:

1. Use the computer interface cable. Plug the AT or PS/2 Male connector plug into the computer. Connect the RJ11 connector into the "To Computer" connector on the LK7000.
2. Connect the keyboard interface cable to the standard keyboard. The PS/2 Female connector plugs into the PS/2 connector on the rear panel of the LK7000. The RJ11 connector plugs into the "To Peripheral" connector on the back of the LK7000.

FUNCTIONAL TEST

For testing purposes, your LK7000 keyboard was pre-programmed with a template called **LK7000.TPL**. The following simple steps will verify that the keyboard is in good working condition:

1. Follow the Hardware Connections procedure described earlier in this manual to connect the LK7000 to your computer.
2. Turn on your computer.
3. The keyboard may be tested under DOS or Windows.
4. If it is working under Windows, open Notepad or any text editing software. Press keys on the keyboard one by one to verify that programmed key definitions are activated.

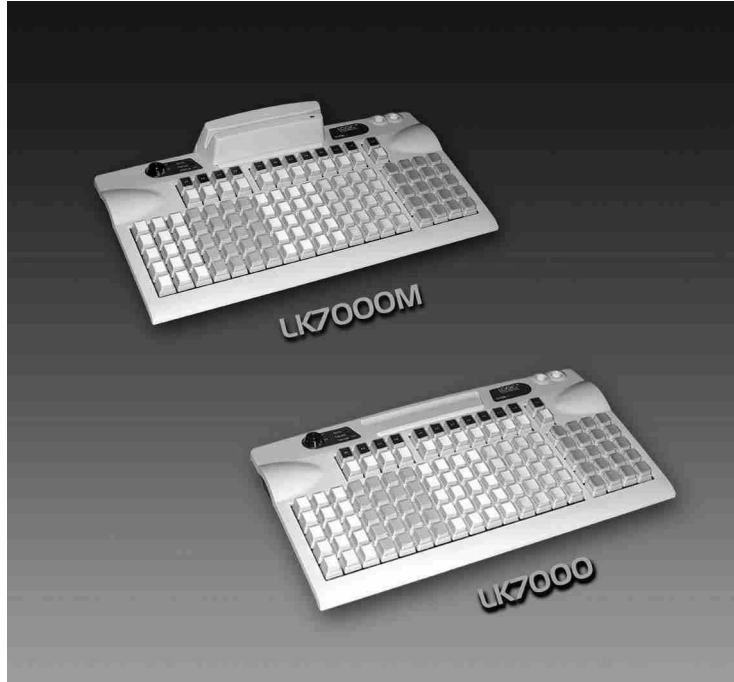

UTILITY DISK CONTENTS

All LK7000 keyboards come with a utility software disk. This disk contains several important files:

- LK7000D.EXE** - Use this utility with or without the keyboard being attached. It is used to program the keyboard. For a complete description of how this program works see the section "Programming the LK7000 keyboard".
- LK7000.TPL** - This template was pre-programmed into the keyboard and matches the legend shown on the previous page. If you have any questions on how to program a particular key you can refer back to this template to see how it was originally programmed.

INSTALLING THE LK7000D.EXE UTILITY PROGRAM


The first step in using the LK7000D.EXE utility program is to copy the program to your hard drive.

1. Insert the LK7000 utility software into drive A or B of the computer.
2. Type **MD LK7000** at the "C>" prompt to make a directory named LK7000.
3. Type **CD LK7000** to make the LK7000 directory active.
4. Type **COPY A:*.*** If the disk was inserted into drive A then all files will be copied into the hard drive's directory (LK7000). If drive B is used then you must type **COPY B:*.***

STARTING THE LK7000D.EXE PROGRAM

This program can be used with or without the keyboard being attached to the computer. Note that the PC must be booted up in DOS before starting the program. It will not run properly under Windows DOS prompt.

To start the program, type LK7000D at the LK7000 DOS prompt and press ENTER. When the program is up, it will automatically display the graphic graphics screen as below.

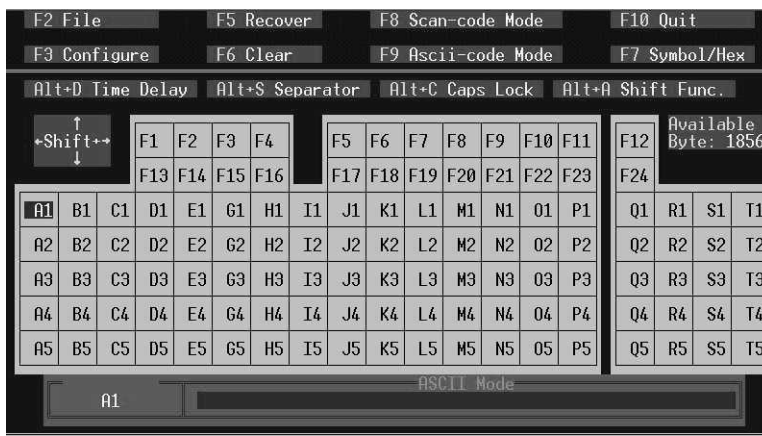


PROGRAMMING THE LK7000 KEYBOARD

The following procedure will show you how to program your LK7000 with standard (keyboard) alphanumeric characters. The keyboard can be programmed with either ASCII or Scan code information. The default mode is the ASCII code mode. The following procedure assumes both a LK7000 keyboard and a 101 keyboard are attached.

NOTE: To run this program you must exit windows completely. Do not shell out from Windows.

1. With the correct programming graphics present. Select the cell you want to program by using the arrow keys on the 101 keyboard. The Up and Down arrows will select the row while the **Shift** and either the **Right** or **Left** arrow key will select the column.
2. Enter your programming text via the 101 keyboard. Continue programming until all the keys are programmed. It is not necessary to program all the keys for the LK7000 to function properly. The maximum number of alphanumeric characters that can be programmed for any one key is 256.

NOTE: The maximum number of alphanumeric characters that can be programmed per standard keyboard is 1856.

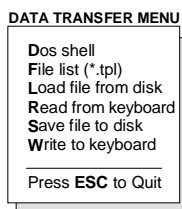

3. Press **F2** to call up the Data Transfer Menu. There will be several choices to choose from.
4. Type **W** to write the programmed data into the LK7000's non volatile memory. A "Writing Data" screen will open showing the percentage of memory written. It will take approximately 7 seconds to copy the data into the keyboard.

5. Type **S** to save the programmed data into the LK7000 directory. You can select up to an 8 character name. It will be saved with a **.TPL** extension.
6. Press **ESC** to terminate the Data Transfer Menu.
7. Press **F10** followed by **Y** to exit the utility program.
8. To verify that your program has been successfully installed, simply press any programmed key. The information stored in that key will appear on the monitor.
9. The next time you want to install the legend you just created simple press **F2** to call up the Data Transfer Menu and then press **L** to open the Load window.
10. Enter the name of the file in the legend window with its proper extension (.TPL) and press ENTER. The legend will now show on your monitor.

ADVANCED PROGRAMMING

The LK7000 POS keyboard can be programmed with all special control and function keys such as the **Shift, Ctrl, Alt, F1** through **F12**, and the **up/down/left/right** arrow keys. The procedure to program these special keys is shown below:

1. Start the LK7000 utility program.
2. Select the cell to be programmed. Press **F8** to enter the scan-code mode. The "code type" information changes from **ASCII** to **SCAN**.

NOTE: The scan-code mode will only be active for this cell. You must select F8 for each cell you want to program with scan-code information.

3. Under the scan-code mode, each alphanumeric character is enclosed in parenthesis. For special function or control keys, press **ESC** (three vertical bars will be present) followed by the special function or control key you want to program.

For example, to program the **INS** (insert) key, press **ESC** and then the **INS** key on the 101 keyboard. To program the **ESC** key, simply press the **ESC** key twice. Special function and control keys will **not** appear inside parenthesis. The three vertical bars will disappear once the special function key is depressed.

4. You may return to the start-up graphic screen (short menu) by pressing **Ctrl-Alt-F4** again.

NOTES:

- 1) Special function keys require ESC as the leading code. In the scan-code mode, you can view the symbol of the special key or the hex code equivalent of the special key. To view, simply press **F7** to toggle between symbol and hex modes.
- 2) Once a special function key (shift, ctrl, alt, etc.) is programmed it may be necessary to un-select the function. To do so, press in sequence **ESC, f** (lower case F), **0** (zero), **ESC**, followed by the special function key (shift, ctrl alt, etc.)
- 3) Any given programmable location may be toggled between scan-code mode and ASCII-code mode. Pressing the **F8** key on the keyboard will change the cell's programming mode to scan-code mode. Pressing **F9** on the keyboard will change the cell's programming mode to ASCII-code mode. Changing modes in a cell that has been previously programmed will erase all the information in that cell.
- 4) To enter hex scan-codes directly, press **ESC** followed by the 2-digit hex number. For example, to program the **CTRL** key press **ESC** followed by **1D**. The LK7000 program will add the leading zero

SPECIAL FEATURES OF THE LK7000

Besides being able to program all the keys of an IBM101 keyboard, the LK7000 has also incorporated three state-of-the-art features which will add flexibility and functionality to the keyboard.

INTER-STRING DELAY

This feature allows for a time delay(s) to be installed after a character(s) has been inserted into a cell. To use this feature follow the steps below:

1. Enter the character(s) which will precede the delay. For example, **ABC**.
2. Depress and hold the **ALT** key while pressing the letter **D**. A time delay screen will open asking for the amount of delay you require (up to 240 seconds). Select the appropriate delay and press **ENTER**. A square pixel will appear on the programming line immediately following the last character typed.
3. Type the next character(s), **DEF**. You can use more than one delay per cell and each delay time can be different.
4. Save the template and then write the template to the keyboard.
5. Exit the LK7000 program by pressing **F10** followed by the letter **Y**.
6. Press the location key where the time delay character has been stored. The monitor will display **ABC** immediately. After the delay time you entered for this key has expired, **DEF** will be displayed on the monitor and the cursor will be present at the prompt.

MULTI-LEVEL DEFINITION

This feature can increase the apparent number of programmable keys by allowing you to program different levels into any cell. For every different level you program you must select another key to be a "SHIFT LEVEL" key. Programming is accomplished in the normal manner. After programming the base level a separator bar must be entered to separate the base level from the second level. You can program more than two levels per cell. For example, if you needed to program small coffee, medium coffee, and large coffee into one cell follow the procedure outlined below:

1. Select a blank cell and enter the most common coffee first (**medium coffee**). Mark the legend sheet for this cell **COFFEE**.
2. Enter the separator bar by depressing and holding the **ALT** key and pressing the letter **S**. A solid line will appear on the programming line immediately following the last character typed.
3. Enter the second level (**small coffee**) followed by another separator.
4. Enter the third level of information (**large coffee**). The entire programming line should look like the following:

F5

MEDIUM COFFEE	SMALL COFFEE	LARGE COFFEE
---------------	--------------	--------------

5. Select a blank location to (F11) become the first level shift position. Mark the legend sheet for this location **SMALL**.
6. Change the programming mode of this cell to scan-code mode (**F8**). Depress and hold the **ALT** key while pressing the letter **A**. A triangle inside brackets (< >) will appear on the programming line. This key when depressed and held will activate all keys that have a second level.
7. Select another blank location (F12). This will become the second level shift position (will activate the third level of information). Mark the legend sheet for this position **LARGE**.

8. Change the programming mode of this cell to the scan-code mode (**F8**). Depress and hold the **ALT** key while depressing the letter **A** twice. Two triangles inside brackets will appear on the programming line.

9. To use this feature in your application is extremely simple. When medium coffee is desired just press the **F5** key (the first level of information stored in cell **F5** will be sent to the computer). When a small coffee is desired press and hold the **F11** key while pressing the **F5** key (the second level of information stored in cell **F5** will be sent to the computer). When a large coffee is desired press and hold the **F12** key while pressing the **F5** key (the third level of information stored in cell **F5** will be sent to the computer)

NOTE: There is no preset limit to the number of levels that can be programmed into a keyboard.

SPECIAL CONFIGURATIONS

The keyboard can be set up with many different programming options. To activate the configuration menu screen press F3. By depressing the highlighted letter in each option, the program will enable or disable that option. The default settings are shown in the graphic below.

Send B reak-codes for scan-codes	Yes
Enable beep while a key pressed	Yes
N o beep if a key is undefined	Yes
Translate to code-set #2 for AT	Yes
Emulating X T keyboard always	No
Use A LT+num to generate ASCII	No
Enable Typematic for scan codes	No
Enable Typematic for ASCII codes	No
Emulating Link Terminal	No
InterCharacter Delay (+/-):	<input type="text" value="2"/> mS
Enable RS232 Output	<input type="text" value="No"/>
Baud Rate:	<input type="text" value="9600"/>
Parity:	<input type="text" value="NONE"/>
Length of Data:	<input type="text" value="8"/> -bits
<input type="text" value="Press a High-light Letter to select"/>	
Esc ==> Quit from this menu	

DESCRIPTION OF SPECIAL CONFIGURATION MENU F3

Send Break-code for scan-codes - Enables or disables the transmission of break codes for each scan code programmed into the keyboard.

Enable beep while a key pressed - Enables or disables the entire keyboard from beeping when any key is depressed.

No beep if a key is undefined - If a key is not programmed it will not beep when depressed.

Translate to code set #2 for AT - Enables or disables the output of the keyboard to be translated into AT scan code.

Emulating XT keyboard always - Enables or disables the output of the keyboard to be translated into XT scan code.

Use ALT +num to generate ASCII - Enables or disables the ability to use the ALT key along with the numeric keyboard to generate ASCII codes.

Enable typematic for scan codes - Enables or disables keys programmed with scan code information to repeat the programmed characters as long as the key remains depressed.

Enable typematic for ASCII codes - Enables or disables keys programmed with ASCII code information to repeat the programmed characters as long as the key remains depressed.

Emulating Link Terminal - Enables or disables the keyboards ability to emulate a link terminal.

Intercharacter Delay (+/-) - The time delay between characters can be adjusted from 1 millisecond to 266 milliseconds. This delay is set for all characters programmed into the keyboard. Do not confuse this feature with the inter-string delay feature.

DESCRIPTION OF SPECIAL CONFIGURATION MENU F3 (CONTINUED)


Enable RS232 Output - Enables or disables the output of the keyboard to the RS232 port (DB9 connector). If this option is set to YES then the protocol settings must be set to mirror the application software.


Baud Rate - This option selects 2400, 4800, 9600 and 19,200 baud rates.

Parity - This option selects ODD, EVEN or NO parity.

Length of data - This option selects either 7 or 8 data bits.

DATA TRANSFER MENU

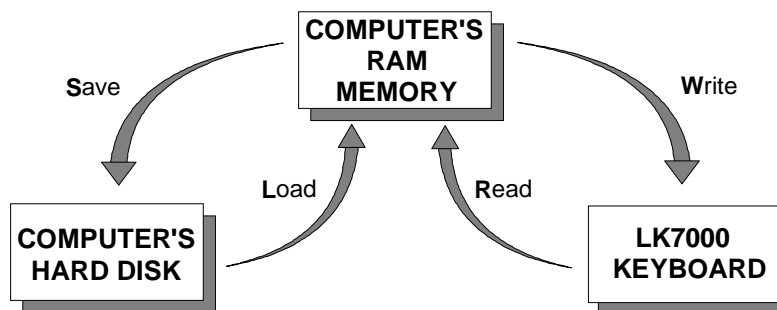

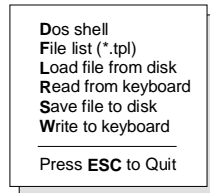

The LK7000 keyboard, working in conjunction with the LK7000.EXE utility software, can perform the following powerful functions:

- * Save programmed data as a template file (.TPL) in both the keyboard and the hard drive of the computer. To save programmed data to the keyboard use the **W** (Write to keyboard) option of the Data Transfer Menu. To save programmed data to the hard drive use the **S** (Save file to disk) option of the Data Transfer Menu.
- * Load (**L**) a previously programmed template from the hard disk into the computer's volatile RAM memory. The same template can then be written (**W**) into the non-volatile memory of the keyboard. This process, as an example, allows a restaurant to change from a breakfast menu to a lunch menu within 7 seconds.
- * Enables the computer to read (**R**) a template stored in the LK7000. That template can then be saved (**S**) to the hard disk for future use.
- * Display a list of templates that have been stored onto the hard disk within the LK7000 directory. From the Data Transfer Menu select **F** for File List. The computer's monitor will display the list of .TPL files stored in the LK7000 directory.
- * Interruption of the programming process to shell out to DOS (**D**) to perform other operations. To return to the programming process type **EXIT** at the DOS prompt.

NOTE: Never shell out of windows to work in this utility program.
Boot up computer in DOS.

LK7000 PROGRAMMABLE KEYBOARD SPECIFICATIONS

MECHANICAL

Weight	Basic Unit	2.5lbs.
	with MSR	2.7lbs.
	with Scanner	2.6lbs.
Dimension (in inches)		
	STD	w/MSR
Width	15.7	15.7
Depth	8.5	9.0
Front Height	0.5	0.5
Rear Height	1.8	3.0
w/legs ext.	2.2	3.7
Keys	Full travel mechanical	
	Life cycle >10 million tactile cycles	
MSR	2 tracks standard	
	Life Cycle 300,000 passes	
SCANNER	Laser	
	Class CDRH Class II	
	MTBF 100,000 hours	

ELECTRICAL

Input voltage (from computer)	+5VDC	
Current		
	Basic Unit	25ma
	MSR	50ma
	Scanner	
	Standby	15ua
	Scan Mode	100ma
	Surge	130ma

ENVIRONMENTAL

Operating Temp	0°C to +50°C	
Storage Temp	-20°C to +60°C	
Relative Humidity		
	Operating	85% max. non-condensing
	Non-operating	90% max. non-condensing
Vibration (10 to 55 Hz.)	4G's	
Shock	40G's	

INTERFACE

Keyboard Wedge	Standard
RS232C	Optional

GENERAL INFORMATION

Keyboard interface cable, utility software, and legend labels supplied.


PROGRAMMING THE KEYBOARD

1. Use the utility software supplied to program up to 256 alphanumeric characters per key. Utility program will **write to** and **read from** computer disk memory.
2. Keyboard supports computer control keys (Shift, CTRL, ALT, F1 through F12) and all arrow keys).

CONNECTOR PINOUTS


J1 (PS/2F) to PS/2 Keyboard

1	Keyboard Data
2	No Connection
3	Ground
4	+5VDC
5	Clock
6	Shield

 


J2 (RJ11F) to Computer

1	Clock
2	Data
3	No Connection
4	Ground
5	+5VDC
6	No Connection

 


J3 (RJ45F) to MSR

1	RDP1
2	RCP1
3	CLS1
4	RDP2
5	RCP2
6	CLS2
7	+5VDC
8	Ground

 


J4 (DB9M) RS232C to Computer

1	DCD
2	Receive Data (from computer)
3	Transmit Data (to computer)
4	DTR
5	Ground
6	DSR
7	RTS
8	CTS
9	No connection

 

Pins 1, 4, and 6 are tied together internally
Pins 7 and 8 are tied together internally

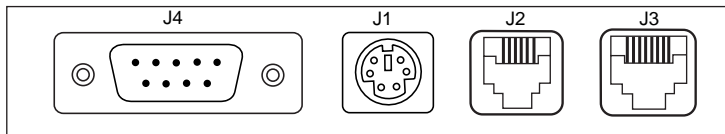

ADDENDUM

SCANNER POSITION

The LK7000, a matrix programmable keyboard with built-in scanner, was designed with the end user in mind. The scanner can be factory installed on either side of the keyboard, giving the end-user the versatility required in today's applications.

PITCH ANGLE

To accommodate different customer installations the scanner's pitch angle can be adjusted via a lever on the bottom side of the keyboard.

TO ACTIVATE THE SCANNER

The top right key on the LK7000 has been hardwired to the scanner, and serves as the scanner's trigger. This key is dedicated to activating the scanner. The scanner could also be set in an "always on" state by changing the default settings on the scanner.

SYMBOLOLOGIES

The default parameters of the scanner includes the reading of many different symbologies

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>