

Lucent Technologies
Bell Labs Innovations



MDW 9030P Wireless

Pocketphone Quick Reference

503-801-161
Comcode 107993149
Issue 2
March 1997

MDW 9030P Wireless Pocketphone Quick Reference

Handset Controls

Headset On/Off

Press to turn the headset on if the headset is plugged in.

ON appears in handset display. To turn off, press again. Turn on to make or answer a call, and turn off to "hang up."

Lanyard Loop

Attach lanyard for carrying handset.

Volume Control

Press "+" to increase or "-" to decrease volume of receiver or alerter.

On/Off

Press to turn the handset on. **ON** appears in handset display. To turn off, press again. Turn on to make or answer a call, and turn off to "hang up."

Feat/P

(Feature/Program)

Press to use dial-code features (PARTNER® systems only) or to enter programming mode.

Conf (Conference)

Press to conference in (add) another party to your call.

Trans (Transfer)

Press to transfer a call to another extension.

Hold

Press to put a call on hold.

Receiver

Receives the sound of your caller's voice, unless a headset is connected.

Antenna

Extend fully to maximize the handset range and voice quality.

Handset Display

Displays status of lines and range. Also see "Handset Display" on next page.

Column

Use, with Select button, to choose a line or programmable/intercom/drop button.

Redial

Press to dial again the last number manually dialed from the handset.

Select


Use to move the Selection rectangle, and, with Column buttons, to choose a line or programmable/intercom/drop button. Also use to wake-up the phone.

Mute


Press to turn the microphone off for privacy.

Headset Connector

Plug in the headset cord to use the headset.

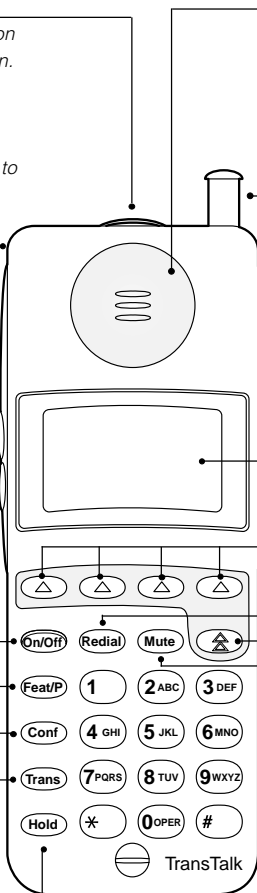

Handset Display

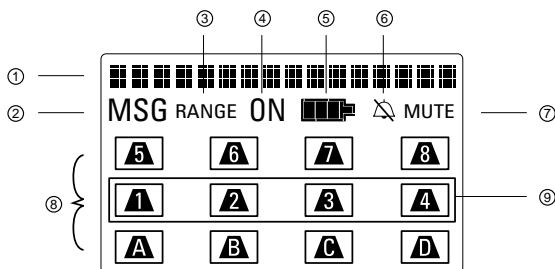

- ① Information you would see on a wired system phone's display, (except time), based on your communications system:
LCL:P, D, M1, or M2= Local Mode:communications system
WIRELESS TEST=Handset in Wireless Test Mode
VIBR=Vibrator enabled
PSEL=Line Preselection enabled
PRESELECTION:ON / OFF=Line Preselection Mode:status
CHANGE BUTTN MAP=Communications system setting is wrong
MAP:P, D, M1, M2=Button Mapping Mode: setting
NO LINK=Handset is not communicating with radio module
- ② **MSG** indicates that you have a message.
- ③ **RANGE** indicates that the handset is out of range or almost out of range. Handset also beeps.
- ④ **ON** indicates that handset was turned on by pressing **On/Off**.
- ⑤ **Battery** icon flashes to indicate a low battery condition. Handset also emits 2 beeps.
- ⑥ **No Ring** icon indicates that the alerter is disabled.
- ⑦ **MUTE** indicates that handset microphone was turned off by pressing **Mute**.
- ⑧ **Line Status Indicators** show the status of line or programmable/intercom/drop buttons. See "Line Status Indicators" below.
- ⑨ **Selection rectangle** indicates the active row for line or programmable/intercom/drop button selection.

When the display is blank, the handset is either turned off or in "sleep" mode. Activate the display by pressing **On/Off** or **▲**.

Line Status Indicators

Each line status indicator corresponds to a specific outside line or programmable/intercom/drop button:

PARTNER Systems

A **triangle** (**▲**) is the equivalent of a green LED on a wired phone.

A **rectangle** (**□**) is the equivalent of a red LED on a wired phone.


All Other Systems

A **triangle** (**▲**) is the equivalent of a red LED on a wired phone.

A **rectangle** (**□**) is the equivalent of a green LED on a wired phone.

Volume Adjustment

To increase or decrease the volume of the handset alerter or the receiver (earpiece):

- **Alerter:** Press the "+" or the "-" button while the MDW 9030P is awake but turned *off*. If the display is dark (the phone is in "sleep" mode), press  to wake it up, then press the "+" or the "-" button.
- **Receiver:** Press the "+" or the "-" button while the MDW 9030P is turned *on*.

Battery Charger LEDs

The color of the battery charger's LEDs indicates the state of the corresponding battery pack, as shown in the following table:

| Battery charger LED shows... | If it is the SPARE LED, the battery pack in the Spare battery compartment... | If it is the HANDSET LED, the battery pack in the Handset... | If it is the REFRESH LED, the Refresh button was pressed, and the Handset battery pack... |
|------------------------------|--|--|---|
| Steady orange | Is charging | Is charging | N/A |
| Steady green | Is fully charged | Is fully charged | N/A |
| Flashing red * See note. | Has one of the following problems: <ul style="list-style-type: none">• Is not seated properly in the charger• Has dirty contacts• Is defective | Has one of the following problems: <ul style="list-style-type: none">• Is not seated properly in the charger• Has dirty contacts• Is defective | N/A |
| Steady red | Is in the Discharge portion of the Refresh cycle. | Is in the Discharge portion of the Refresh cycle. | Is in the Discharge portion of the Refresh cycle. |

***Note:** If *either* the **SPARE** LED or the **HANDSET** LED is flashing red, *both* battery packs must be removed from the charger to clear the flashing-red condition. Address the possible problems for one battery pack at a time to determine whether one is bad.

Help!

If you need help when using your MDW 9030P with a PARTNER, MERLIN®, or MERLIN LEGEND® system in the continental U.S., call 1 800 628-2888. For all other systems, follow the procedure you normally use to get support for your communications system. Outside the continental U.S., contact your Lucent Technologies Representative or local Authorized Dealer.

Making a Call

1. Press **On/Off**.
2. If desired, press **▲** to move the Selection rectangle; then press **△** corresponding to the line you want.
3. Dial the call.
4. To end the call, press **On/Off**.

Answering a Call

1. Press **On/Off**.
2. Speak into the handset.
3. To end the call, press **On/Off**.

Preselecting a Line or Button

Once Line Preselection is enabled, proceed as follows:

1. If the display is blank, press **▲**.
2. If necessary, press **▲** to move the Selection rectangle.
3. Press **△** corresponding to the line or button you want.
4. Press **On/Off** to access the line or button.

Changing Settings or Performing Tests in Local Mode

1. Make sure the handset is turned off.
2. Press and hold **▲** for 3 seconds.
3. While still holding **▲**, press **On/Off**.
4. Press one of the following:
 - A** (**2**) to enable or disable the alerter.
 - P** (**7**) for 3 seconds, then **▲** to enable or disable Line Preselection.
 - V** (**8**) to enable or disable the vibrator.
 - W** (**@**) to enter Wireless Test Mode, then
 - 1** for signal strength
 - 2** for voice quality
 - 3** for matching radio module and slot number
 - #** to enter Local Test Mode.
5. Press **On/Off** to exit.



CAUTION:

The MDW 9030P handset is a radio device and, like all radio devices, should not be placed next to a pacemaker. See "Guidelines for Safe and Efficient Operation" in MDW 9030P Wireless Pocketphone Installation and Use for more information.

PARTNER, MERLIN, and MERLIN LEGEND are registered trademarks of Lucent Technologies.

Lucent Technologies 503-801-161

Comcode 107993149

Issue 2, March 1997

Copyright © 1997 Lucent Technologies

Download from www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>