




## T20-1141 DELUXE HEATING ONLY THERMOSTAT

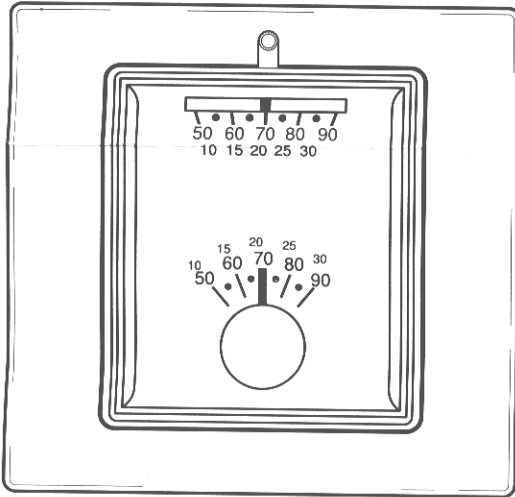

43336

### SPECIFICATIONS

ELECTRICAL RATING .....	24 Vac (30 Vac Maximum)
SWITCH ACTION .....	Sealed Mercury Switch
ANTICIPATOR RATING .....	0.15A to 1.2A
TEMPERATURE RANGE .....	50°F to 90°F

### INSTALLATION & OPERATION

#### 1). THERMOSTAT LOCATION

For accurate temperature control and comfort, correct location is very important. On new installations, the guidelines listed below should be followed as closely as possible. When replacing an old thermostat, install the new one in the same location unless these conditions suggest otherwise.

1. Locate the thermostat on an inside wall about five feet above the floor, where it is easy to install and adjust. It should be in a room that is used often, such as a family room.
2. Do not install it where there are unusual heating conditions, such as direct sunlight, close to a lamp, radio, television, radiator, register, near a fireplace, or other heat producing appliance. Also, check for hot water pipes within the wall, or a stove on the other side of the wall.
3. Do not locate in unusual cooling conditions, such as on an outside wall, or one separating an unheated room, or in drafts from stairwells, doors, or windows.
4. Do not locate in a damp or humid area. This can shorten thermostat life due to corrosion.
5. Do not locate where air circulation is poor, such as in a corner, alcove, or behind an open door.
6. Do not install until all construction work and painting have been completed.

#### 2) TOOLS REQUIRED

Wirestripper or knife, drill with  $\frac{3}{16}$ " bit, screwdriver, level and a pencil.

#### 3) REMOVING OLD THERMOSTAT

Please read all instructions carefully. As you complete each step, check the adjoining square .

- Disconnect electricity and turn off gas to the heater.
- Remove cover from old thermostat.
- Loosen all screws.
- Disconnect wires from thermostat, making sure they do not fall back inside the wall.
- Strip insulation  $\frac{3}{8}$ " from wire ends and clean off any corrosion.
- Fill wall opening with non-combustible insulation to prevent drafts from affecting thermostat.

#### 4) INSTALLING NEW THERMOSTAT

- Place new decorative wall plate (if supplied), Figure 3, over wall opening. Decorative wall plate can optionally be left off.
- Remove Front Cover of new thermostat by inserting a finger in the side of the thermostat and gently prying away each corner. Place Base, Figure 2, on wall plate over wall opening. Mark wall with pencil at mounting holes as shown in Figure 2. Now lay wall plate and base to the side.
- Drill two holes with  $\frac{3}{16}$ " bit, 1" deep.
- Insert plastic screw anchors into drilled holes, flush with wall surface.
- Bring wires through large hole in decorative wall plate and through Hole For Wires in Base.
- Fasten Base loosely to wall using two mounting screws. Place a level against the bottom of the Base, adjust until it is level and then tighten mounting screws to secure the Base.

- Attach wires to terminal screws shown in Figure 2. (Either wire to either terminal) Push excess wire back into wall opening.
- Find anticipator setting on old thermostat. Setting on new thermostat should be the same. Do this by carefully sliding the long pointer on the anticipator over the desired number. If old anticipator setting cannot be determined, look on gas control on furnace, or set it at .6. During heating season, furnace should operate about five times an hour. If adjustments are necessary, move heat anticipator pointer slightly and recheck. **NOTE: Set pointer to 1.2 for millivolt systems.**
- Attach front cover, Figure 1, to base.
- Turn electricity and gas back on and set pointer on top of thermostat to desired temperature.

*A thermostat can only control temperature near it. If you find that it is uncomfortable some distance away from the thermostat, change the setting in order to compensate for this.*

FIGURE 2  
BASE



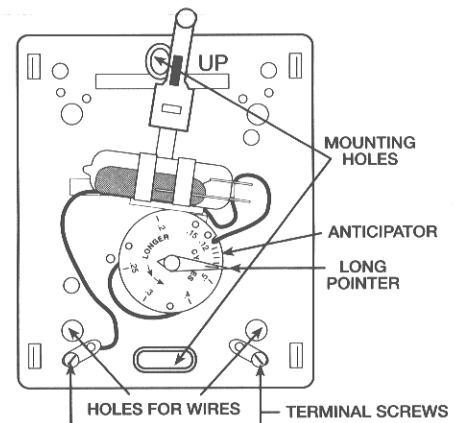


FIGURE 3  
DECORATIVE WALL PLATE

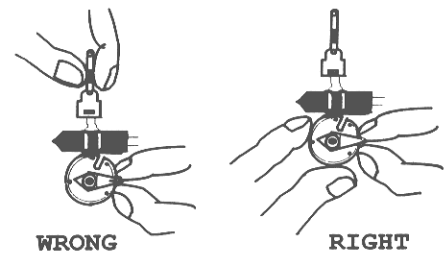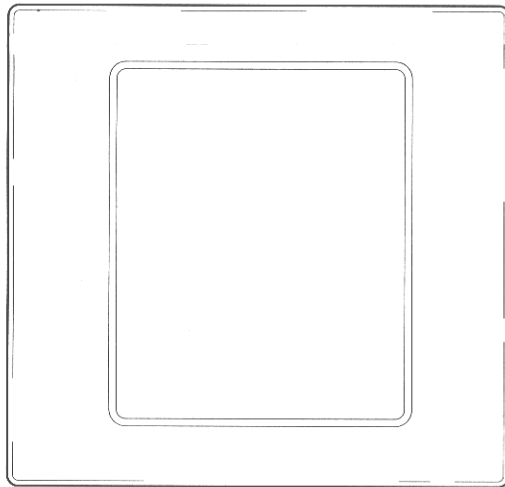

WHEN ADJUSTING THE SETTING ON THE HEAT ANTICIPATOR,  
GRASP THE ROUND BOARD (NOT THE LEVER) AND GENTLY  
ROTATE THE LONG POINTER.

## TECHNICAL SERVICE

If you have any problems installing or using this thermostat, please read the instructions carefully. Technical Service is available through our Technical Service number. If you require assistance, please call our offices between 8:00 a.m. and 4:30 p.m. Eastern Standard Time, Monday through Friday. The number is (856) 234-8803.

## WARRANTY

**Limited Warranty:** If this unit fails because of defects in materials or workmanship within one year of date of original purchase, Lux will, at its option, repair or replace it. This warranty does not cover damage by accident, misuse, or failure to follow installation instructions. Implied warranties are limited in duration to one year from date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Please return malfunctioning or defective units to the participating retailer from which purchase was made, along with proof of purchase. Please refer to Technical Service Section before returning thermostat.

Purchaser assumes all risks and liability for incidental and consequential damage resulting from installation and use of this unit. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Applicable in the U.S.A. only.

### RECYCLING NOTICE



This Thermostat contains mercury in a sealed glass vial. **Do NOT dispose of this Thermostat in the trash.** Neither this thermostat nor any existing mercury thermostat this unit replaces should be disposed of in the trash. Contact your local waste management authority for proper disposal instructions for mercury in a sealed glass tube. If you have any questions, please call (856) 234-8803.

PLEASE SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>