

Specifications

System:

Freq. Range (-10 dB):
50Hz-19kHz

Freq. Response (± 3 dB):
70Hz-17kHz

Horz. Coverage Angle (-6 dB):
90°, averaged 1kHz-10kHz

Vert. Coverage Angle (-6 dB):
70°, averaged 1kHz-10kHz

Directivity Factor Q (DI):
9.5 (9.8), averaged 1kHz-10kHz

System Sensitivity:
101 dB, 1W@1m

Rated Maximum SPL:
122 dB @ 1 m (3.3 ft) peak

HF Protection:
Dynamic

Transducers:

Low Frequency:
12" (300 mm) diameter woofer

High Frequency:
1" (25 mm) compression driver,
horn loaded

Preamp and Processor:

Input Sensitivity:
Mic In: 8mV
Line In: 125mV

Input Impedance:
Mic In: 650 Ω unbalanced
1.3k Ω balanced
Line In: 10k Ω unbalanced
19k Ω balanced

Crossover Frequency and Slope:
1.8kHz; 24 dB/octave

Time Alignment:
Analog, 0.3 ms HF delay

Speaker Protection:
Thermal, over-excursion

Music Equalization:
+4.3 dB @ 65Hz
+4.0 dB @ 12kHz

Voice Equalization:
+4.0 dB @ 3kHz
+4.0 dB @ 6kHz

Indicators:
Power ON, Limiter

Amplifiers:

LF Amplifier Power:
120 watts RMS

HF Amplifier Power:
40 watts RMS

Distortion:
< 0.1% THD at rated power

Amp Protection:
Thermal, limiter, short circuit

Power Supply:
115/230 VAC, 2A, 50/60 Hz

Physical:

Enclosure:
Asymmetrical trapezoidal,
reinforced polypropylene

Mounting:
Lockable 1-3/8" (35mm) stand
mount

Rigging Inserts:
4 points, accepts M10 threaded
hardware

Input/Output Connectors:
2 XLR balanced

Dimensions HxWxD:
24.4" x 15.4" x 12.3"
(620 mm x 390 mm x 312 mm)

Net Weight:
39.7 lb (18.0 kg)

MACKIE®
INDUSTRIAL™


industrial@mackie.com
16220 Wood-Red Road NE Woodinville, WA 98072
TEL +888.337.7404, FAX +425.487.4337
UK +44.1268.570.808, FAX +44.1268.570.809 +industrial@rcf-uk.com
ITALY +39.0522.354.111, FAX +39.0522.332.294 +industrial@rcf.it
FRANCE +33.3.8546.9160, FAX +33.3.8546.9161 +industrial@rcf.fr
GERMANY +49.2572.96042.0, FAX +49.2572.96042.10 +industrial@mackie.de

Part No. 910-161-20 Rev. A 2/00
© 2000 Mackie Industrial. All Rights Reserved. Printed in the USA.

MACKIE®
INDUSTRIAL™

ART200A
Active Speaker System

Quick-Start Guide

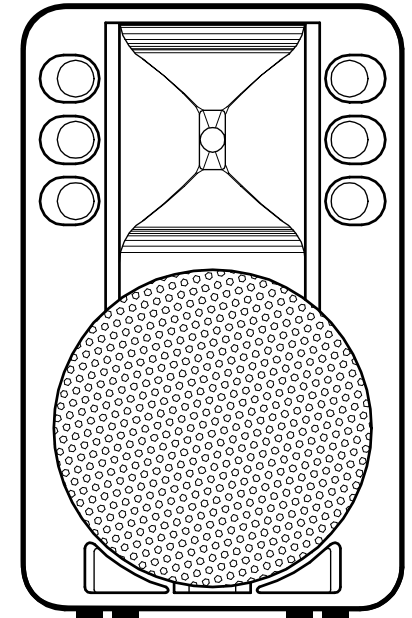

The ART200A is a full-range two-way professional active speaker system that combines high power and wide bandwidth in a light-weight enclosure for fixed-installation systems. The 12" low-frequency transducer, in combination with a 1" compression driver coupled to an integral 90° x 70° constant directivity polynomial horn, form an extremely powerful package for any small to medium-sized sound reinforcement application.

It features a balanced XLR input with a Mic/Line switch and a paralleled balanced XLR output for cascading multiple speakers. Rear panel controls also include Music and Voice equalization switches, a rotary volume control, and an input limiter.

The two built-in power amplifiers provide 120W for the LF driver and 40W for the HF driver. The enclosure is constructed of high-strength polypropylene, with M10 threaded inserts on all four sides for rigging, and an integral locking 1-3/8" socket in the bottom for mounting on a standard speaker stand.


Safety First!

Before connecting and using the equipment, please read this Quick-Start Guide carefully and keep it for future reference.

WARNING! This equipment has been designed to be installed by qualified professionals only! There are many factors to be considered when installing professional sound reinforcement systems, including mechanical and electrical considerations, as well as acoustic coverage and performance. Mackie Industrial strongly recommends that this equipment be installed only by a professional sound installer or contractor.

CAUTION: To avoid the risk of electric shock, never allow this equipment to be exposed to rain or dampness.

1. Never install, connect, or disconnect the unit with the power supply on.
2. Before powering up the speaker, make sure the voltage select switch corresponds to the AC Voltage supply.
3. Make sure the safety ground on the power cord is properly grounded.
4. To prevent the risk of electric shock, never open the unit. There are no user serviceable parts inside.
5. To ensure normal cooling of the amplifier, make sure the unit is well-ventilated. Avoid exposure to direct sunlight or proximity to any heat source, dust, or dampness.

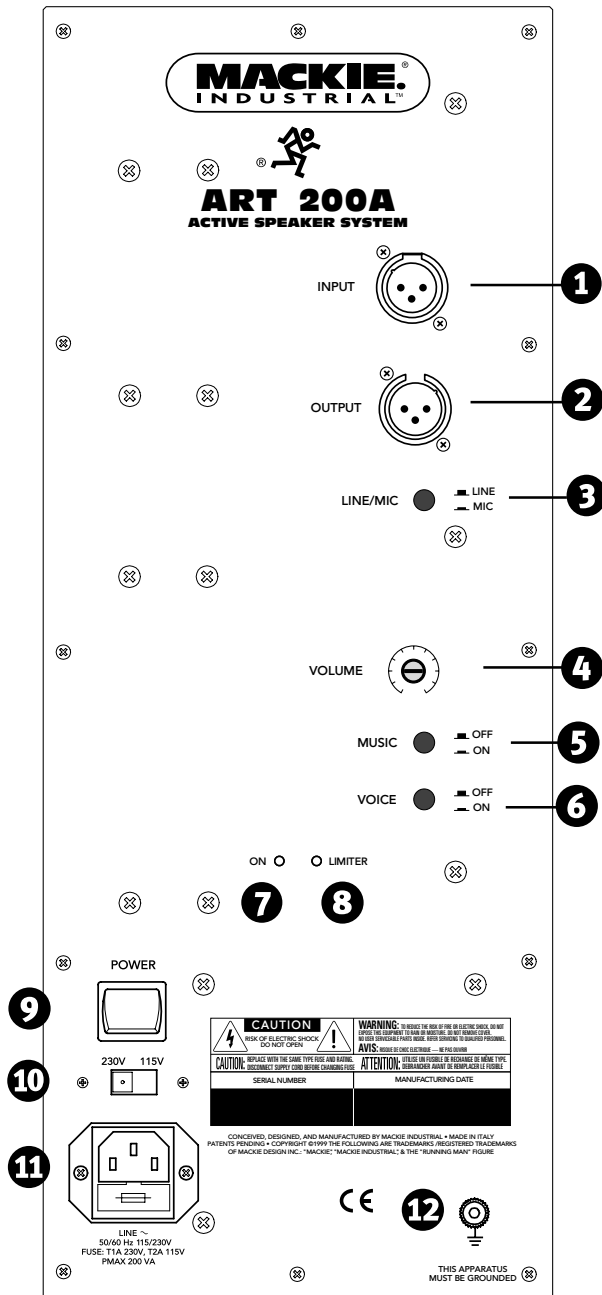


Rear Panel Features and Controls

1. INPUT is a balanced XLR input jack that accepts mic-level or line-level signals.
2. OUTPUT is a balanced XLR output jack in parallel with the INPUT jack, allowing the signal to "loop through" for daisy-chaining speakers together.
3. LINE/MIC switch for mic-level or line-level signals at the INPUT.
4. VOLUME control adjusts the input-stage gain.
5. MUSIC equalization switch ON provides a low-frequency and high-frequency boost.
6. VOICE equalization switch ON provides a gentle boost at 3kHz and 6kHz.
7. ON indicator illuminates when the POWER switch is turned on.
8. LIMITER indicator illuminates when the limiting protection circuits are activated.
9. POWER switch turns the AC power on and off.
10. Voltage Select Switch for setting the AC voltage operation for the voltage being used.
11. IEC AC Socket. Connect the detachable power cord to the socket. The protection fuse is also contained in the AC socket.
12. Grounding Terminal provides an additional safety grounding point.

CAUTION: Replace fuse only with the same type as indicated on the rear panel.

Connections

The XLR connectors use the following AES standard:
Pin 1 = Ground (Shield)
Pin 2 = Hot (+)
Pin 3 = Cold (-)

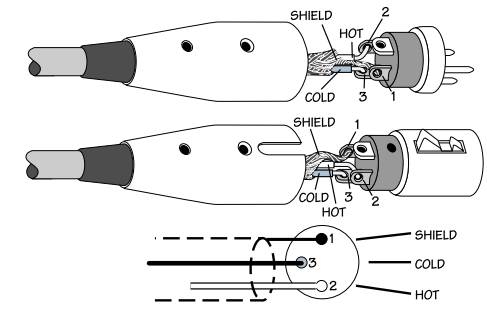

Installation

A 1-3/8" (35mm) socket is provided in the bottom of the cabinet for mounting the loudspeaker on a speaker stand.

The ART200A can be suspended with approved rigging hardware. **Always use at least two M10 threaded inserts located on opposite sides of the enclosure.** The speaker **must** be positioned so that the weight of the enclosure is equally distributed over the two inserts.

WARNING: Never attempt to suspend the ART Series loudspeakers by their handles. Consult a professional rigger or structural engineer prior to suspending loudspeakers from a structure not intended for that use. Always know the working load limit of the structure supporting the loudspeaker array. Always make sure that the rigging hardware minimum rating is at least five times the actual load.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>