 




REFRIGERATOR

INSTRUCTION MANUAL

Model No.: **MCBR415S**

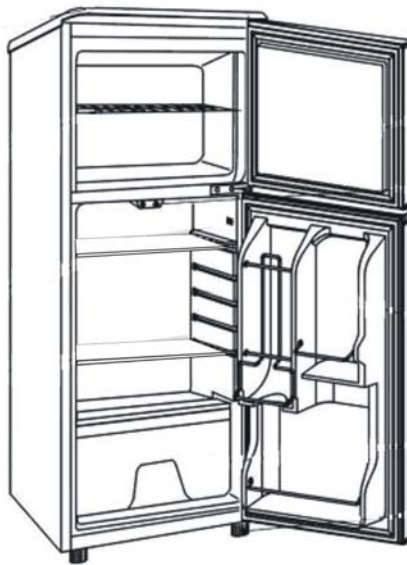

- To ensure proper use of this appliance and your safety, please read the following instructions completely before operating this appliance.

TABLE OF CONTENTS

Before Putting Into Use.....	2
Tips For Energy Saving.....	2
Important Safety Instructions.....	3
Name Of The Parts.....	4
Specifications.....	4
How To Operate:	
Starting Your New Refrigerator.....	5
Temperature Control.....	5
How To Defrost.....	5
How To Clean.....	6
How To Install.....	6
Care And Maintenance	
What To Do.....	7
Changing The Reversible Doors.....	8
Refrigerator Warranty.....	9

Before Putting Into Use

- Before connecting the appliance to the power supply, let the unit stand upright for 4 hours, which will reduce the possibility of the cooling system malfunctioning due to improper handling.
- Clean your unit thoroughly before putting into use. (See How to Clean)
- Use the parts diagram on page 3 to insure proper positioning of internal components.

Tips for Energy Savings

- Keep the refrigerator and freezer doors closed as much as possible, particularly in warm / humid conditions.
- Maintain adequate ventilation around the back and sides of the unit.
- Maintain a thermostat setting of between "3" and "5" under normal use.
- Allow warm food to cool to room temperature before placing in the refrigerator or freezer.
- Excessive ice build up will increase energy consumption. Defrost the unit when ice / frost is ¼" thick.

Important Safety Instructions

DANGER: Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside the unit.

- The appliance must be correctly connected to the power supply. (See: "HOW TO INSTALL").

- Do not use an extension cord as this can negatively affect the performance of the unit.

- Do not touch the cooled surfaces while the appliance operates, especially not with wet hands, because the skin may stick to the cold surfaces.

- Do not freeze bottled liquids such as carbonated soft drink, beer, wine, etc. Doing so can cause glass bottles and aluminum cans to rupture.

 
- If the unit fails to cool properly, dispose of spoiled food as needed.

- All repairs should be made by a qualified service technician. Repairs made by non-qualified personnel will void the warranty.

- Do not defrost the appliance with other electric devices (hair dryer etc.) and never scrape the ice or frost layer with sharp tools.

- The rating plate is inside the appliance or outside on the rear wall.

NAMES OF THE PARTS

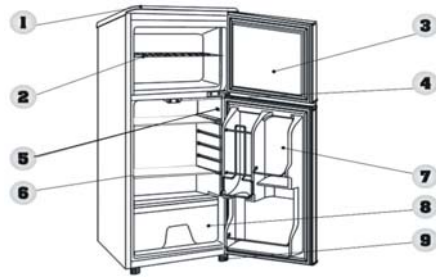

Model No.: **MCBR415S**

- Cabinet Top
- Shelf, Freezer Section
- Freezer Door
- Temperature Control Box
- Interior Light Switch
- Shelves, Refrigerator Section
- Refrigerator Door
- Crisper
- Leveling Leg

SPECIFICATIONS

Changes Made.

Product Description	Stainless Steel Looking 2 Door Refrigerator		
Model No.	MCBR415S		
Capacity	4.0 cu. ft.		
Unit Dimensions (inches)	Width	Height	Depth
	18.6	49.6	18.2
Net Weight	90.4 (lbs)		

HOW TO OPERATE

 
Starting Your New Refrigerator

1. Clean the refrigerator thoroughly. Wipe the outside with a soft dry cloth, the interior with a clean moist cloth.
2. Insert the power supply cord into the socket.
3. Turn the thermostat dial to "7". Close the doors and let the refrigerator operate for 15-20 minutes.
4. Reduce the thermostat to a mid-range setting between "3" and "5" on the thermostat control.

Temperature Control

To control the internal temperature, adjust the thermostat dial. "1" is the warmest setting. "7" is the coldest.

The Dial may be set any place on the scale. It does not have to be set exactly on a number.

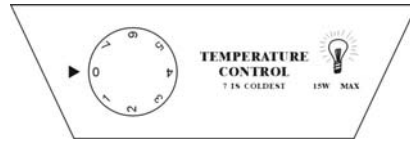

Note: Wait 3-5 minutes before restarting if you unplug the refrigerator. The unit may fail to operate properly if restarted too quickly.

How To Defrost

Defrost the freezer compartment when the ice / frost is approximately $\frac{1}{4}$ " thick. Set the thermostat dial to "0" to defrost. Remove all contents from the freezer compartment. Leave the freezer door open to allow accumulated ice / frost to melt. Remove large pieces of ice as needed. Do not use hot water or other electric heating devices to melt the accumulated ice. After defrosting, remove accumulated ice / water and wipe the freezer compartment dry with a soft cloth. Restart the unit per starting instructions.

Never use a knife or other sharp metal instrument to scrape ice / frost from the inside of the unit.

HOW TO CLEAN

Cleaners: Never use harsh, abrasive cleaners, heavy-duty cleaners, or solvents on any surface.

Exterior: Wipe with damp, sudsy cloth, rinse and dry. For stubborn stains and for periodic waxing, use silicon wax.

Freezer Section: Do not use sharp instruments to scrape off ice/frost.

 
Refrigeration Section: Wash shelves and other removable parts in warm sudsy water, rinse and dry. Wash interior with baking soda solution (3 tablespoons to 1 liter of water) or warm sudsy water, rinse and dry.

Magnetic Door Seals: Wash with warm sudsy water.

The Finishing Touch: Replace all parts and return thermostat dial to desired setting.

HOW TO INSTALL

- Install the refrigerator in a convenient location away from extreme heat and cold. Allow sufficient clearance between the refrigerator and side wall so the door(s) will open without obstruction. Refrigerator is not designed for recessed installation.
- Select a space with strong level floor.
- Allow 5 inches of space between the refrigerator's side and the wall.
- The appliance must be correctly connected to the power supply.

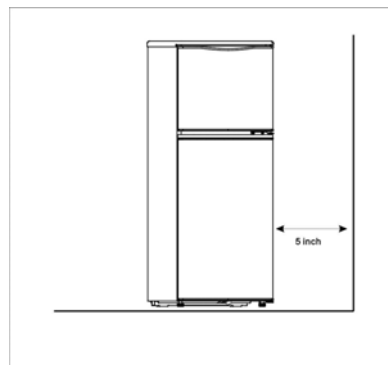

POWER CORD REPLACEMENT

If the refrigerator's power cord is damaged, have it replaced by a qualified repair agent.

Care And Maintenance

WHAT TO DO ...

When the fridge is not in use for a prolonged period:

- Remove the plug from the outlet.
- Remove all contents from the fridge.
- Dry the interior and leave the door open for a few days.

When you wish to move the fridge:

- Secure all movable parts and contents. (Package them separately if necessary.)
- Transport the fridge only in an upright position. In any other position you may damage the compressor.

Before calling service, please follow the checklist below.
This may save you an expensive service call.

If the refrigerator is not cooling properly:

- Check to see that the door is closing properly and the door seal is not damaged.
- Check that the interior circulation is not obstructed by having too many goods stored. (The fridge is overloaded)
- Did you store anything hot, without first cooling it to room temperature?
- Is there sufficient clearance around all sides and above the fridge?

If the fridge starts making any unusual noises:

 
- Is it wobbling? Re-level the unit and check if it now operates normally.
- Have any objects fallen behind the fridge? If so, remove them and check if operation is now normal.
- Are any containers inside the fridge vibrating or resonating? If so, rearrange them then check to see if operation has returned to normal.

CHANGING THE REVERSIBLE DOORS

CAUTION: To avoid personal injury to yourself and/or property, we recommend someone assist you during the door reversal process.

1. Remove the cabinet tabletop.
2. Remove the upper hinge assembly (10) and take out the freezer door.
3. Remove the mid hinge assembly (11) and take out the refrigerator door.
4. To access the lower hinge assembly, tilt back the refrigerator cabinet or lay the refrigerator on its back.
5. Remove both leveling legs located at the front of the cabinet.
6. Remove the lower hinge assembly (12).
7. Re-install the lower hinge assembly (12) and the upper hinge assembly (10) onto the opposite side of the cabinet.
8. Remove the door plugs each located on the top of the two doors and change them on the opposite side of the doors (change the door plugs from left side to right side).
9. Remove the door stoppers (13) each located on the bottom of the two doors and change them on the opposite side of the doors (change the door stoppers (13) from right side to left side).
10. With two doors on the pins of mid hinge assembly (11), re-install the mid hinge assembly (11) and two doors onto the cabinet. Do not fasten the hinge assembly (11) too tight at this step.
11. Align two doors properly on the cabinet and then fasten the mid hinge assembly (11). If necessary, loosen the lower hinge assembly (12) and the upper hinge assembly (10) when aligning and then fasten them.
12. Re-install both leveling legs to the cabinet.
13. Re-install the cabinet tabletop.

The process is now complete.

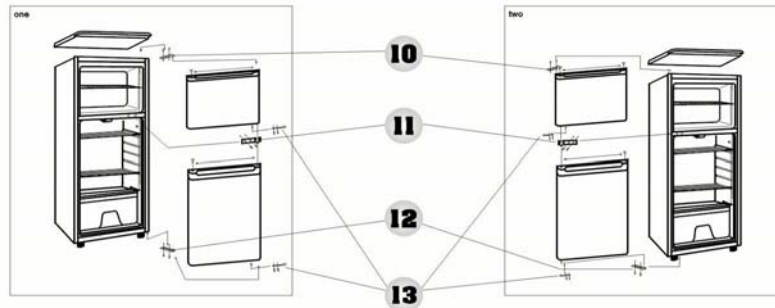



Magic Chef[™]
SO RIGHT AT HOME.[™]

Refrigerator Warranty

MC Appliance Corp. warrants each new Refrigerator to be free from defects in material and workmanship and agrees to remedy any such defect or to furnish a new part(s) (at the company's option) for any part(s) of the unit that has failed during the warranty period. Parts and labor expenses are covered on this unit for a period of one year after the date of purchase. In addition, **MC Appliance Corp.** warrants the compressor (parts only) to be free from defects in material and workmanship for a period of 5 years. The consumer is responsible for all labor and transportation expenses related to the diagnosis and replacement of the compressor after the initial one- year warranty has expired. If in the event the unit requires replacement or refund under the terms of this warranty the consumer is responsible for all transportation expenses to return the unit to our factory prior to receiving a replacement unit or refund. **A copy of the dated sales receipt / invoice is required to receive warranty service.**

This warranty covers appliances in use within the continental United States, Puerto Rico and Hawaii. The warranty does not cover the following:

- Damages due to shipping damage or improper installation.
- Damages due to misuse or abuse.
- Content losses due to failure of the unit.
- Inside components such as door panels, door shelves, racks, light bulbs etc...
- Punctures to the evaporator system due to improper defrosting of the unit.
- Repairs performed by unauthorized service agents.
- Service calls that do not involve defects in material and workmanship such as instruction on proper use of the product, door reversal or improper installation.
- Replacement or resetting of house fuses or circuit breakers.
- Failure of this product if used for other than its intended purpose.
- Disposal costs of failed units not returned to our factory.
- Any delivery costs incurred as the result of a unit that fails to perform as specified.
- The consumer is responsible for a \$35.00 delivery charge for all replacement units provided under warranty.

This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for us any other liability in connection with the sale of this product. Under no circumstances is the consumer permitted to return this unit to the factory without prior written consent from **MC Appliance Corp.**

Model	Parts	Labor	Compressor (Part Only)	Type of Service
MCBR415S	One- Year	One- Year	Five Years	Carry In

For Service or Assistance please call 888 775-0202 or visit us on the web at www.magicchef-ewave.com.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>