



# TOASTER

4 SLICE

## INSTRUCTION MANUAL

Model: MCST4ST



THANK YOU FOR PURCHASING A MAGIC CHEF PRODUCT. PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

# CONTENTS

- Safety Instructions ..... 3**
- Important Safeguards ..... 4**
- Parts and Features ..... 6**
- Before Use ..... 7**
- Operating Instructions ..... 7**
- Care and Maintenance ..... 9**
- Warranty ..... 10**

## What You Need to Know About Safety Instructions

Warning and Important Safety Instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when installing, maintaining or operating this appliance.

Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand.

### Recognize Safety Symbols, Words, Labels

#### **WARNING**

**WARNING**-Hazards or unsafe practices which **COULD** result in severe personal injury or death.

#### **CAUTION**

**CAUTION**-Hazards or unsafe practices which **COULD** result in minor personal injury.

### **IMPORTANT SAFEGUARDS**

#### **WARNING**

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

**1. READ ALL INSTRUCTIONS.**

2. This appliance is for household use only. Do not use outdoors.
3. Do not use this appliance for other than its intended use.
4. Before using for the first time, check if voltage indicated on the base of the appliance corresponds to the voltage on the electrical outlet.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return the appliance to an authorized service center for examination, repair or adjustment.
7. When not in use, or assembling and disassembling, or before cleaning, unplug the appliance from the outlet. Make sure the appliance cools down completely before assembling, disassembling and cleaning.
8. Do not immerse the appliance in water or any other liquid.
9. Do not let the cord hang over edge of table or counter, or touch hot surfaces.
10. Do not touch hot surfaces of the appliance. Use handles or knobs.
11. Do not place anything on top of this appliance.
12. Do not operate the appliance on a wall-mount, shelf or near flammable materials such as blinds, curtains, etc.
13. If the electric circuit is overloaded with other appliances, this appliance may not operate properly. This appliance should be operated on a separate electrical circuit from other operating appliances.
14. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
15. Do not place on or near a hot gas or electric burner, or in a heated oven.
16. Do not leave the appliance unattended during its use.
17. Do not insert any part of the body, oversized items, foil packages or metallic utensils in the appliance.
18. Do not operate the toaster without the crumb tray in its correct position. Always clean out accumulated crumbs in order to avoid the risk of fire or malfunction.
19. Do not toast any food that will drip when heated.
20. Do not force the food into the toasting slot.

## **WARNING:**

To protect against electric shock, fire, and injury to persons, do not immerse main cord, plug, or unit in water or any other liquid.

This product is equipped with a polarized plug (one blade is wider than the other blade) as a safety feature to reduce the risk of electrical shock. This polarized plug will fit into a polarized outlet only one way; this is a safety feature. If the plug does not fit, contact a qualified electrician.

A short power supply cord is provided to reduce the risk of personal injury resulting from entanglement or tripping over a longer cord. Use of an extension cord is not recommended with this appliance.

## **CAUTION:**

To prevent burns or other personal injuries to children, read and follow all instructions and warning.

### PRECAUTIONS FOR USE AROUND CHILDREN

- Close supervision is necessary when this appliance is used by or near children.
- Do not allow children to operate or be near this appliance.
- Do not allow the cord to hang over any edges that a child can reach. Properly arrange the cord in order to avoid pulling, tipping or entanglement.

## **WARNING:**

**OVERHEAT PROTECTION:** This toaster is equipped with an overheat protection which automatically switches off the toaster and prevents overheating from inappropriate use. If the carriage lever pops up immediately and cannot stay down while in operation:

1. **DO NOT TOUCH THE HOT SURFACE.**
2. **WAIT 3 TO 5 MINUTES FOR THE TOASTER TO COOL**

# PARTS AND FEATURES



1. Stainless Steel Housing
2. Carriage Lever
3. Cancel Button
4. Bagel Button
5. Browning Control
6. Defrost Button
7. Reheat Button
8. Power Cord Location
9. 2 Slide-out Crumb Trays



## SPECIFICATIONS

- Voltage Rating: 120V 60Hz
- Power Rating: 1500 Watts
- Maximum Capacity: 4 Slice, Wide Slots
- Electronic Browning Control
- Slide-out Crumb Tray
- Buttons: Cancel, Bagel, Defrost, Reheat
- Cool Touch Housing

# BEFORE USE

Carefully unpack the toaster and remove all packaging materials. Select a flat, heat-resistant, non-flammable surface to place the toaster. Do not immerse the toaster in water or other liquid. To remove any dust that may have accumulated on the removable parts during packaging, clean the surface with damp cloth and remove any stickers (except stickers for safety, caution, or warnings). Before toasting the first slice, the toaster should be heated once or twice in the highest heating temperature without any food in the slots.

# OPERATING INSTRUCTIONS

## CAUTION:

Toaster setting must be adjusted based on the thickness, freshness, and texture of the bread or bagel; dark coarse bread may require longer toasting than drier bread.

### TOASTING NOTES

Toasting is a combination of cooking and drying the bread; moisture levels differ from one bread to another, which can result in varying toasting times. Please reference the following guideline before using the toaster.

- For slightly dry bread, use a lower light/dark setting than normal.
- For fresh bread or whole wheat, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher light/dark setting.
- Thickly cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur.
- Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins from the surface of the bread before placing into the toaster. This will help prevent pieces from falling into the toaster or sticking on the guard wire in the slot.
- Before toasting bagels, slice each bagel into two equal halves.

**NOTE: During toasting cycle, the user may cancel the cycle by pressing the 'Cancel' button at anytime.**

## TOASTING

1. Plug the appliance into the electrical socket.
2. Insert the slice(s) of bread into the slots.
3. Select the desired degree of toasting by adjusting the browning control knob.
4. Push down the lever to start the toasting cycle.
5. When cycled ends, the toast will pop up and the unit will shut off automatically.

**NOTE:** one of the following three function buttons may be selected before toasting. The toaster can be used without selecting a preprogrammed function.

1. **DEFROST**
2. **REHEAT**
3. **BAGEL**

### DEFROST

The defrost button is designed to defrost first and then toast the bread, which slightly extends the toasting cycle.

1. Insert slices of bread into the bread slots.
2. Turn the light/dark selector onto the desired position.
3. Press the “Defrost” button.
4. Press the carriage lever down until it locks into position.
5. When the cycle is completed the high lift lever will raise the toast up. To terminate the cycle before it is completed, simply press the cancel button.

### REHEAT

The reheat button is designed to warm the bread that has already been toasted, which slightly shortens the toasting cycle.

1. Insert slices of bread into the bread slots.
2. Press the “Reheat” button.
3. Press the lever down until it locks into position.
4. When the cycle is completed the bread carriage will raise the toast up.
5. If you wish to stop the toasting before it is finished, simply press the cancel button.



## **BAGEL**

The bagel button is designed to only use one side(s) of the heating elements, which will toast the cut side of the bagel.

1. Insert sliced bagel or English muffin with the cut side facing the inside of toaster. Only the inside coils will heat up.
2. Press the “Bagel” button.
3. Press the carriage lever down until it locks into position.
4. When the cycle is completed the lever will raise the bagel up. To terminate the cycle before it is completed, simply press the cancel button.

## **CANCEL**

If the user wishes to stop the toasting cycle at any moment, this button may be pressed to stop the operation and the toast will pop up immediately.

# CARE AND MAINTENANCE

COMPLETELY CLEAN AND DRY ALL PARTS AFTER EVERY USE.

1. Turn toaster “Off” and remove the plug from the electrical outlet before cleaning it.
2. Wait for the toaster to cool down.
3. Wipe the outside of toaster with a damp cloth and dry with another cloth or paper towel. Do not use abrasive cleaners.
4. To avoid damage to toast heating elements, do not use any pointed or sharp articles for cleaning the inside of the toaster.

## **CRUMB TRAY**

Gently slide the crumb tray out to remove the crumbs. Use a damp cloth to clean the crumb tray. Always dry the crumb tray before replacing. Push firmly to close the tray and make sure the tray fits the toaster properly.

**NOTE: Clean the crumb tray regularly in order to prevent a fire hazard.**



## LIMITED WARRANTY

Unless otherwise prohibited, **MC Appliance Corporation** warrants each **4 SLICE TOASTER MCST4ST** to be free from defects in material and workmanship and agrees to remedy any such defect or to furnish a new part(s) (at the company's option) of the unit that fails during the warranty period. **A copy of the dated sales receipt or invoice is required to receive warranty service or a refund.**

**This warranty covers an appliance in use within the continental United States, Puerto Rico and Hawaii. The warranty does not cover the following:**

- Damages due to shipping or improper installation.
- Damages due to misuse or abuse.
- Content losses due to failure of the unit.
- Repairs performed by unauthorized service agents.
- Service calls that do not involve defects in material and workmanship such as instruction on proper use of the product or improper installation.
- Failure of this product if used for other than for its intended purpose.
- Disposal costs for any failed unit not returned to our factory.
- Any delivery costs incurred as the result of a unit that fails to perform as specified.

**This warranty is in lieu of any and all warranties expressed or implied and no representative or person is authorized to assume for us any other liability in connection with the sale of this product. Under no circumstances is the consumer permitted to return this unit to the factory without prior written consent from MC Appliance Corporation.**

<b>Model</b>	<b>Parts &amp; Labor</b>	<b>Type of Service</b>
<b>MCST4ST</b>	One-Year	Carry-In

**For Service or Assistance please call**

**888-775-0202.**

**Or visit us on the web at [www.magicchef.com](http://www.magicchef.com) to request warranty service.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>