

User guide

MAGNAVOX
SMART. VERY SMART.

MPC270

PORTABLE CD PLAYER

Read this manual first!
If you have any problems, do not attempt
to return this product to the store.
For fast help, call us first!
1-800-705-2000



Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Magnavox purchase is registered, you're eligible to receive all the privileges of owning a Magnavox product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once, and take advantage of these important benefits.

Warranty Verification	Owner Confirmation	Model Registration
Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Magnavox warranty.	Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.	Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN
DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use
Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____
Serial No. _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

MAGS097

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as if the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION - To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install ALL batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (OLD and NEW or CARBON and ALKALINE, etc.).
 - Remove batteries when the unit is not used for a long time.
- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus. (e.g. liquid filled objects, lighted candles).
- This product may contain lead and mercury. Disposal of these material may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance : www.eiae.org.

EL 6475-E005: 04/01


PHILIPS CONSUMER ELECTRONICS,
A Division of Philips Consumer Electronics North America
P.O. Box 671539, Marietta, GA 30006-0026
http://www.usasupport.magnavox.com

or call

1-800-705-2000




 MPC270

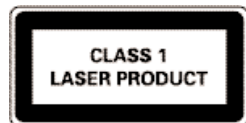


Be responsible
Respect copyrights

 Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.
©2005 © Koninklijke Philips Electronics N.V. All rights reserved.



Printed in China

 WK0549

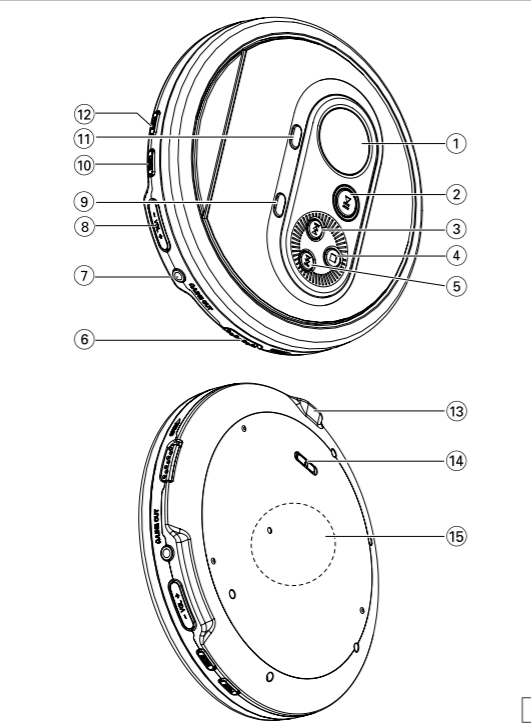

English CONTROLS

CONTROLS (see figure 1)

- display
- ▶/⏸ switches the player on, starts or pauses CD play
- ◀ skips and searches tracks backward
- ◼ stops CD play, clears a program or switches the player off
- ▶ skips and searches tracks forward
- OPEN ► opens the CD lid
- / LINE OUT ...3.5 mm headphone jack and LINE OUT jack to connect the player to another audio input of an additional appliance
- VOL + adjusts the volume
- ESP selects between the battery powersave mode and Electronic Skip Protection (ESP). ESP prevents playback interruptions caused by shocks
- MODE selects the different playing possibilities
- DBB switches the bass enhancement on and off
- PROG programs tracks and reviews the program
- 4.5V DC jack for external power supply
- OFF switches HOLD off
- RESUME stores the last position of a CD track played
- HOLD locks all buttons
- type plate

The type plate is located on the bottom of the set.
The production number is located inside the battery compartment.

POWER SUPPLY / GENERAL INFORMATION

Mains adapter (supplied or optionally available)

Use only a 4.5 V adapter (450 mA direct current, positive pole to the center pin). Any other kind of adapter may damage the player.

- Make sure the local voltage corresponds to the power adapter's voltage.
 - Connect the power adapter to the 4.5V DC jack of the player and to the wall outlet.
- Note: Always disconnect the adapter when you are not using it.

Environmental information

- All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into two materials: cardboard (box) and polyethylene (bags, protective foam sheet).
- Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, dead batteries and old equipment.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.

MAGNAVOX LIMITED WARRANTY

Ninety (90) Days Free Product Exchange

MAGNAVOX warrants this product against defect in material or workmanship, subject to any conditions set forth as follows:

PROOF OF PURCHASE: You must have proof of the date of purchase to exchange the product. A sales receipt or other document showing the product and the date that you purchased the product as well as the authorized retailer included, is considered such proof.

COVERAGE: Warranty coverage begins the day you buy the product. For a period of ninety (90) days from the date of purchase, if the product is determined to be defective, Magnavox will exchange the defective product with a new or renewed product, at its option, at no charge. The replacement product is covered only for the warranty period of the original product. When the warranty on the original product expires, the warranty on all replaced products also expires. When it is necessary for you to ship the product to Magnavox for exchange, you will pay the shipping cost for shipment to Magnavox. Magnavox will pay the shipping costs when returning a product to you.

Note: The exchange model supplied will be the most comparable one in Magnavox current inventory. Shipping of your product to Magnavox implies intent to follow the specified requirements of the warranty and exchange program. Product received by Magnavox cannot be returned. Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay of exchange process.

EXCLUDED FROM WARRANTY COVERAGE

- Your warranty does not cover:
 - Shipping charges to return defective product.
 - Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
 - Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Magnavox.
 - A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Magnavox, P.O. Box 671539, Marietta, GA. 30006-0026

(Warranty: 4835 710 27750)

QUICK START



BATTERIES

Batteries (supplied or optionally available)

 
You can use the following batteries with this CD-player:

- normal batteries type LR6, UM3 or AA (preferably Philips), or
- alkaline batteries type LR6, UM3 or AA (preferably Philips).

Notes: - Old and new or different types of batteries should not be combined.
- Remove batteries if they are empty or if the player is not going to be used for a long time.

Inserting batteries

- Push OPEN ► to open the CD lid.
- Open the battery compartment and insert either 2 normal or alkaline batteries.

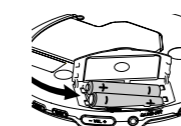

Battery indication

The approximate power level of your batteries is shown in the display.

Ⓚ Battery full

Ⓛ Battery low. The symbol flashes.

Batteries contain chemical substances, so they should be disposed of properly.

CD PLAY

In-car use (connections supplied or optionally available)

Only use a 4.5 V DC car voltage converter (positive pole to the center pin) and cassette car adapter. Any other converter may damage the set.

- Put the set on a horizontal, vibration-free and stable surface. Make sure it is in a safe place, where the set is neither a danger nor an obstacle to the driver and the passengers.
 - Plug the voltage converter into the cigarette lighter socket (only for 12 V car battery, negative grounding), then connect the wired end with 4.5V DC input socket on the set.
 - If necessary, clean the cigarette lighter socket to obtain a good electrical contact.
 - Turn down the volume and connect the cassette adapter plug to ◦/LINE OUT on the set.
 - Carefully insert the cassette adapter into the car radio's cassette compartment.
 - Make sure the cord does not hinder your driving.
 - Decrease the volume on the set, if necessary. Start playback on the set and adjust the sound with the car radio controls.
- Always remove the voltage converter from the cigarette lighter socket when the set is not in use.

Note: If your car radio has a LINE IN socket, it is better to use it for the car radio connection instead of the cassette adapter. Connect the signal lead to this LINE IN socket and to ◦/LINE OUT on the set.

CD PLAY

CD player and CD handling

- Do not touch the lens (A) of the CD player.
- Do not expose the unit, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).
- You can clean the CD player with a soft, slightly dampened, lint-free cloth. Do not use any cleaning agents as they may have a corrosive effect.
- To clean the CD, wipe it in a straight line from the center toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc! Never write on a CD or attach a sticker to it.
- The lens may cloud over when the unit is moved suddenly from cold to warm surroundings. Playing a CD is not possible then. Leave the CD player in a warm environment until the moisture has evaporated.
- Active mobile phones in the vicinity of the CD player may cause malfunctions.
- Avoid dropping the unit as this may cause damage.

Headphones AY 3806

Connect the supplied headphones to the ◦/LINE OUT jack of the player.

Note: ◦/LINE OUT can also be used for connecting this set to your HiFi system. To adjust the sound and volume, use the controls on the connected audio equipment and on the CD player.

IMPORTANT!

Hearing safety: Do not play your headphones at a high volume. Hearing experts advise that continuous use at high volume can permanently damage your hearing. Traffic safety: Do not use headphones while driving a vehicle. It may create a hazard and it is illegal in many countries. Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you cannot hear what is going on around you.

TROUBLESHOOTING

WARNING: Under no circumstances should you try to repair the set yourself as this will invalidate the warranty. If a fault occurs, first check the points listed, before taking the unit for repair. If you are unable to solve a problem by following these hints, consult your dealer or service center.

The CD player has no power, or playback does not start

- Check that your batteries are not dead or empty, that they are inserted correctly, that the contact pins are clean.
- Your adapter connection may be loose. Connect it securely.
- For in-car use, check that the car ignition is on. Also check player's batteries.

The indication 15°C is displayed

- Check that the CD is clean and correctly inserted (label-side upward).
- If your lens has steamed up, wait a few minutes for this to clear.
- CD-RW (CD-R) was not recorded properly. Use FINALIZE on your CD-recorder.

The indication HOLD is on and/or there is no reaction to controls

- If HOLD is activated, then deactivate it.
- Electrostatic discharge. Disconnect power or remove batteries for a few seconds.

The CD skips tracks

- The CD is damaged or dirty. Replace or clean the CD.
- RESUME, SHUFFLE or PROGRAM is active. Switch off whichever is on.

No sound or bad sound quality.

- PAUSE might be active. Press ▶/⏸.
- Loose, wrong or dirty connections. Check and clean connections.
- Volume might not be appropriately adjusted. Adjust the volume.
- Strong magnetic fields. Check player's position and connections. Also keep away from active mobile phones.

 
For in-car use, check that the cassette adapter is inserted correctly, that the car cassette player's playback direction is correct (press autoreverse to change), and that the cigarette lighter jack is clean. Allow time for temperature change.

Note: If you deactivate HOLD by switching the slider to RESUME, you will be activating the RESUME function.

CD PLAY

Playing a CD

This CD-player can play all kinds of Audio Discs such as CD-Recordables and CD-Rewritables. Do not try to play a CD-ROM, CDi, VCD, DVD or computer CD.

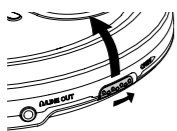

- Push the OPEN ► slider to open the player.

- Insert an audio CD, printed side up, by pressing the CD onto the hub.

- Close the player by pressing the lid down.

- Press ▶/⏸ to switch the player on and start playback.
▶ The current track number and elapsed playing time are displayed.

- You can pause playback by pressing ▶/⏸.
▶ The time at which playback was paused starts flashing.

- You can continue playback by pressing ▶/⏸ again.

- Press ◼ to stop playback.
▶ The total number of tracks and the total playing time of the CD are displayed.

- Press ▶/⏸ again to switch the player off.
- To remove the CD, hold it by its edge and press the hub gently while lifting the CD.

Note: If there is no activity, the set will automatically switch off after 20 seconds.

 
FEATURES

Playback information

- If a CD-Recordable (CD-R) or a CD-Rewritable (CD-RW) is not recorded properly, 15°C is displayed, indicating that the CD has not been finalized. In that case, use FINALIZE on your CD recorder to complete the recording.
- When playing a CD-Rewritable (CD-RW), please note that it takes 3-15 seconds after pressing ▶/⏸ for sound reproduction to start.
- Playback will stop if you open the CD lid.
- While the CD is read, 1 --- flashes in the display.

Volume and bass

- Adjust the volume by using - VOL + on the cd player.



Bass adjustment

- Press DBB to switch the bass enhancement on or off.
▶ DBB appears if the bass enhancement is activated.

 


FEATURES

Selecting a track and searching

Selecting a track during playback

- Briefly press ◀ or ▶ once or several times to skip to the current, previous or next track.
▶ Playback continues with the selected track, and the track's number is displayed.

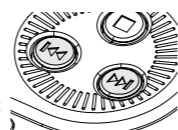

Selecting a track when playback is stopped

- Briefly press ◀ or ▶ once or several times to select the desired track. The track number is displayed.
- Press ▶/⏸ to start CD play.
▶ Playback starts with the selected track.

Searching for a passage during playback

- Keep ◀ or ▶ pressed to find a particular passage in a backward or forward direction.
▶ Searching starts while playback continues at low volume. After 2 seconds the search speeds up.
- Release the button when you reach the desired passage.
▶ Playback continues from this position.

Notes: - If the player is in SCAN mode (see MODE chapter), searching is not possible.
- In shuffle, shuffle repeat all or repeat mode (see MODE chapter), or while playing a program, searching is only possible within the particular track.

FEATURES

Programming track numbers

You can store up to 30 tracks to play in a program. A single track may be stored more than once in the program.

- While playback is stopped, select a track with ◀ or ▶.
- Press PROG to store the track.
▶ PROG lights up; the track number programmed and P with the total number of stored tracks are displayed.
- Select and store all desired tracks in this way.
- Press ▶/⏸ to start playback of your selected tracks.
▶ PROG is shown and playback starts.

- You can review the program by pressing PROG for more than 2 seconds.
▶ The display shows all the stored tracks in sequence.

Notes: - If you press PROG and there is no track selected, SEL is displayed.
- If you try to store more than 30 tracks, FULL is displayed.

Clearing the program

- While playback is stopped, press ◼ to clear program.
▶ CLF is displayed once, PROG goes off, and the program is cleared.

Note: The program will also be cleared if the power supply is interrupted, or if the CD-player lid is opened, or if the set switches off automatically.

Envíe hoy su Tarjeta de Registro de la Garantía para recibir todas las ventajas correspondientes.

Una vez que se registre la compra de su aparato Magnavox Ud. tiene derecho a todas las ventajas correspondientes al dueño de un producto Magnavox.

Verificación de la garantía del modelo, Confirmación del dueño de la Tarjeta de Registro de la Garantía, Registro de la devolución inmediata de la Tarjeta de Registro de la Garantía.

Para uso del cliente: Escriba abajo el número de serie que se encuentra en el panel posterior. Guarde esta información para el futuro.

Advertencia: Evitar el riesgo de sacudida eléctrica. No exponga este equipo a lluvia ni a humedad. Precaución: Para evitar sacudida eléctrica, introduzca la pata ancha del enchufe al fondo de la ranura ancha.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

- 1. Lea estas instrucciones.
2. Conserve estas instrucciones.
3. Lea todos los avisos.
4. Siga todas las instrucciones.
5. No utilice este aparato cerca del agua.
6. Para limpiar el aparato utilice sólo un trapo seco.
7. No tape las aperturas de ventilación.
8. No instale el equipo cerca de fuentes de calor.
9. Utilice exclusivamente aquellos dispositivos/accesorios recomendados por el fabricante.
10. Coloque el equipo exclusivamente sobre aquellos carros, bases, tripodes, soportes o mesas especificados por el comerciante o vendidos con el equipo.
11. Confíe el mantenimiento y las reparaciones a personal técnico especializado.

GARANTÍA LIMITADA MAGNAVOX

Cambio gratuito del producto hasta noventa (90) días. MAGNAVOX garantiza este producto contra defectos en el material o en la mano de obra. Sujeto a las condiciones que se establecen a continuación.
COMPROBANTE DE COMPRA: Para cambiar el producto, debe presentar un comprobante de la fecha de su compra.
COBERTURA: La cobertura de la garantía comienza el día en que usted compra el producto.
PARA REALIZAR CAMBIOS EN EE.UU., PUERTO RICO O EN LAS ISLAS VIRGENES DE EE.UU.
PARA REALIZAR CAMBIOS EN CANADÁ...
EL REEMPLAZO SEGÚN LO DISPONE ESTA GARANTÍA ES LA SOLUCIÓN EXCLUSIVA PARA EL CLIENTE MAGNAVOX.
Esta garantía le otorga derechos legales específicos. Usted puede tener otros derechos que varían entre los diferentes estados y provincias.

Diagramas de la unidad y controles, Encendido rápido, Información acerca de las reproducciones, Volumen y graves, Ajuste del volumen, Ajuste de graves.

CONTRÓLES (Véanse las figuras 1-15). 1 pantalla, 2 II (pausa), 3 << (retroceso), 4 (borra programas), 5 >> (avance), 6 OPEN (tapa), 7 LINE OUT (conexión), 8 VOL (volumen), 9 ESP (protección electrónica), 10 MODE (selección de modos), 11 DRG (intensificación), 12 PDB (programa), 13 4.5V DC (conector), 14 OFF (desactiva HOLD), 15 RESUMÉ (última posición), 16 HOLD (bloquea botones), 17 placa de características.

ALIMENTACIÓN ELÉCTRICA / INFORMACIÓN GENERAL. Adaptador de red (incluido u opcional). Información medioambiental. Desecho del producto antiguo. ATENCIÓN: El uso de mandos o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.

PILAS. Pilas (incluidas o disponibles de forma opcional). Instalación de las pilas. Indicación de las pilas. Al deshacerse de las pilas, hágalo con precaución, ya que éstas contienen sustancias químicas peligrosas.

REPRODUCCIÓN DE UN CD. Utilización en el automóvil (conexiones incluidas u opcionales). Manejo del reproductor de CD y de los CDs. Auriculares AY 3806.

SOLUCIÓN DE PROBLEMAS. Advertencia: Bajo ninguna circunstancia intente reparar el equipo Ud. mismo, anularía la garantía. El reproductor de CD no tiene corriente o la reproducción no se inicia. Aparece la indicación 206. El CD salta pistas.

SOLUCIÓN DE PROBLEMAS. No hay sonido o éste es de mala calidad. Conexiones flojas, incorrectas o sucias. Quizás el volumen no está ajustado correctamente. Campos magnéticos potentes.

Canada. English: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. Français: Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Bruitage Radioélectrique édicté par le Ministère des Communications du Canada.

CARACTERÍSTICAS. Selección de una pista y búsqueda. Selección de una pista durante la reproducción. Selección de una pista cuando se ha detenido la reproducción. Búsqueda de un pasaje durante la reproducción.

CARACTERÍSTICAS. Programación de números de pista. Se pueden guardar hasta 30 pistas para reproducirlas en un programa.

CARACTERÍSTICAS. Selección de las distintas posibilidades de reproducción - MODE. Se pueden reproducir pistas en orden aleatorio, repetir una pista o todo el CD y reproducir los primeros segundos de cada pista.

CARACTERÍSTICAS. RESUME y HOLD. Se puede interrumpir la reproducción y continuarla después de un tiempo. Se puede bloquear todos los botones de modo que no se ejecute ninguna acción.

SOLUCIÓN DE PROBLEMAS. Advertencia: Bajo ninguna circunstancia intente reparar el equipo Ud. mismo, anularía la garantía. El reproductor de CD no tiene corriente o la reproducción no se inicia. Aparece la indicación 206. El CD salta pistas.

SOLUCIÓN DE PROBLEMAS. No hay sonido o éste es de mala calidad. Conexiones flojas, incorrectas o sucias. Quizás el volumen no está ajustado correctamente. Campos magnéticos potentes.

Canada. English: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. Français: Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le Règlement sur le Bruitage Radioélectrique édicté par le Ministère des Communications du Canada.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>