

MULTI-CARD READER/WRITER USER MANUAL

MODELS 100786 & 175883



 **MANHATTAN**

Download from www.Somanuals.com. All Manuals Search And Download.

MAN100786/175883-UM-0408-01


Thank you for purchasing the MANHATTAN® Multi-Card Reader/Writer, Model 100786 (black) or Model 175883 (blue).

Convert any unused PC bay into a digital content management center that lets you access picture files from memory cards without directly connecting a camera or other media device to the computer. Follow the simple instructions in this user manual and enjoy the benefits of these convenient features:

- Easily access media and manage content almost anywhere
- Includes slot-to-slot read/write/copy and USB mass-storage capabilities
- Compatible with CompactFlash, Microdrive, Memory Stick, MagicGate, SecureDigital and Multimedia
- Supports automatic card detection and data transfer speeds up to 480 Mbps
- Eliminates need for direct connection of media device to save battery power
- Windows and Mac compatible — hot swappable, Plug and Play
- Lifetime Warranty

INSTALLATION

1. Using the included USB cable, connect the Multi-Card Reader/Writer to a USB port on your computer. Double-click on "My Computer" to confirm that the four removable disk icons appear: CompactFlash, Memory Stick (MS), MultiMedia Card / SecureDigital (MMC/SD) and SmartMedia. **NOTE:** Screen images vary depending on the operating system being used.
2. Check that the green Power LED lights to confirm a proper connection.
3. Insert your storage card in the appropriate reader slot to use the card reader function.
4. Check that the Power LED changes to red to indicate the device is ready for operation.
5. Double-click on the corresponding icon to read or write desired files to or from your computer or storage card.
6. Check that the Power LED flashes to indicate the operation is in progress.

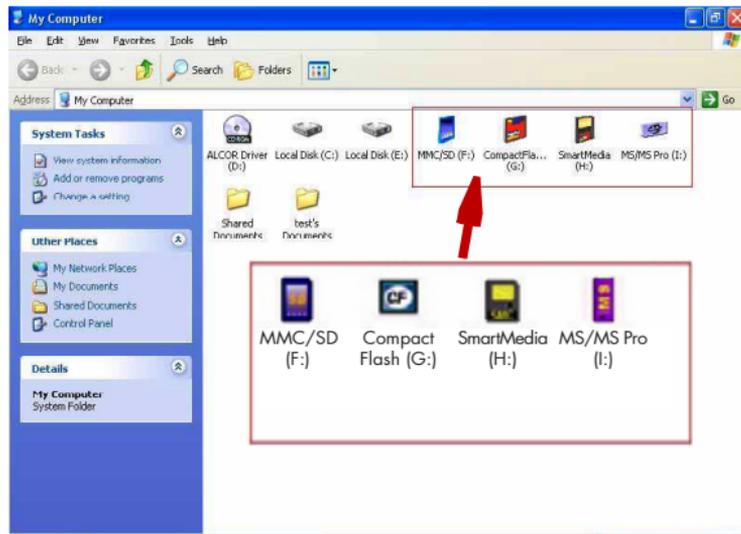

Memory Card Formatting:

SM (SMC) and XD users may need to format the memory card prior to use, indicated by a "write protection" or "read/write error" message. If this is the case, follow the steps below to use the Flash Ranger tool for formatting the memory card.

1. Go to "Start" → "Programs" → "Multimedia Card Reader" → "Flash Ranger."
2. Select the SMC/XD icon, then click "Low Level Format."
3. When prompted with "Low level format is completed. Please remove the card," click "OK" and remove the memory card.
4. Re-insert the memory card and continue using the Multi-Card Reader/Writer.



SPECIFICATIONS

Standards and Certifications

- Hi-Speed USB 2.0, USB 1.1, CE, FCC, WEEE

Connections

- Hi-Speed USB 2.0 Mini-B

General

- Chipset: Alcor 6368
- LED: Power/activity
- Transfer rates: 480 Mbps / 12 Mbps / 1.5 Mbps
- Material: plastic

Physical

- Textured matte finish
- USB type A male to mini B male cable, 0.6 m (2 ft.)
- Dimensions: 10.5 x 18 x 6 cm (4.1 x 7 x 2.4 in.)
- Weight: 62.4 g (2.2 oz.)

System Requirements

- USB port
- Compatible with Windows 2000/XP/Vista, Mac 9.2 and 10.1.2.3 or higher

- Supports CompactFlash Type I / II, CF Elite Pro, CF High Speed, CF Picture, CF PRO I/II, Ultra-X CF*, CF Wa, Extreme CF, Extreme III CF, Ultra II CF, XS-XS CF, IBM and Hitachi Microdrive, MagicStor, Memory Stick, Memory Stick Duo*, Memory Stick Extreme III PRO, Memory Stick Extreme PRO, Memory Stick PRO, Memory Stick PRO Duo*, Memory Stick ROM, Memory Stick Select, Memory Stick Ultra II PRO, High Speed Memory Stick PRO, High Speed Memory Stick PRO Duo*, MagicGate, MagicGate Duo*, MagicGate PRO, MagicGate PRO Duo*, High Speed MagicGate PRO, High Speed MagicGate PRO Duo*, SecureDigital (SD), Elite Pro SD, Extreme III SD, Extreme SD*, High Speed miniSD*, High Speed SD, microSD / TransFlash*, miniSD*, miniSDHC*, Pro SD, SDHC, Ultra II SD, Ultra Speed SD , Ultra-X SD, MMC / MMC II, RS-MMC*, DV-RS MMC*, High Speed MMC, MMCmobile*, MMCplus/100x/200x, Ultra RS-MMC*, SmartMedia, SmartMedia ROM and XD/Type M/Type H

* Adapter required

Package Contents

- Multi-Card Reader/Writer
- USB cable
- User manual





MANHATTAN® offers a complete line of PC Components, Peripherals, Cables and Accessories. Ask your local computer dealer for more information or visit us online at

www.manhattan-products.com

Copyright © MANHATTAN

All products mentioned are trademarks or registered trademarks of their respective owners.

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>