

Quick Start Guide

For detailed instructions and descriptions please refer to the User's Manual on CD-ROM

MAX P-X PHOTO WMA-MP3-JPG-PLAYER 6GB

www.maxfield.de

© Maxfield GmbH · Kaistraße 2 · 40221 Düsseldorf · Germany

PACKAGE CONTENT

1

MAX P-X PHOTO 6GB	CARRYING STRAP	RUBBER CASE	POWER ADAPTOR
		DRIVER/MANUAL CD-ROM	QUICK START GUIDE
	HITACHI 1" Mini-HDD LI VARTA Powered by VARTA MAGIX Movies on CD		
	STEREO EARPHONES	LINE-IN CABLE	USB CABLE

Additionally: Guarantee Card

2 INSTALLING SOFTWARE

- Users of **Windows Me/2000/XP** or **Mac OS X** do not need to install any driver, as the operating system automatically recognizes the player as a "Removable Disk".
- Users of **Windows 98/98SE** have to install the driver (provided on the bundled CD) onto the computer before connecting the player to the PC.

- 1 Inserting the MAX P-X PHOTO installation CD-ROM to the CD-ROM drive will display an installation screen.
- 2 Follow the on-screen instructions. - Choose the options that match the operating system of your PC.
- 3 If the instructions do not pop up after a few moments, run the Windows Explorer and double click the CD-ROM drive start the menu program manually.

System Requirements


- IBM compatible
- Intel Pentium (or higher) based with USB port support
- Memory: 64 MB of RAM or above
- OS: Windows 98/98SE/Me/2000/XP or MAC OS X
- Hard Disk: 100 MB minimum free space
- USB port
- for using DRM 10: Windows XP and Windows Media Player 10

3 CHARGING THE BATTERY

The internal Li-Ion battery can be charged via **power adaptor** (see figure).

The charging status is shown by the battery symbol in the top right corner of the display.

Make sure that the battery is fully charged before first use.

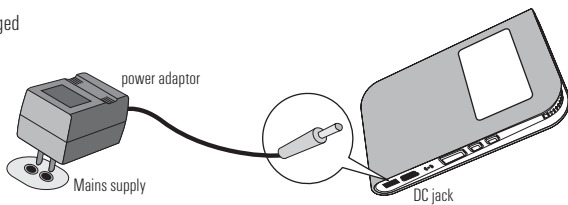

When charging for the first time the battery should remain connected to the power supply for 8 hours. In further charging processes, 1.5 hours will do for charging 80 % of the battery, and 2.5 hours for a full battery charge.

5 LOADING MUSIC ON THE PLAYER

First connect the MAX P-X PHOTO Player to the PC by using the included USB cable. The display will display the connection status.

There are two methods to transfer your songs onto your player depending on your preferences and the kind of music codec.

- 1 **Loading DRM protected WMA audio tracks with Windows Media® Player 10**
For the transfer of WMA-DRM files to the player, the device must be set into "DRM Music" mode via "Setup > USB" before being connected to the PC. - Start the Windows Media® Player, and select the music library to manage your songs. In Windows Media® Player 10 choose the function "Sync". For further advice please refer to the Windows Media® Player FAQs regarding Microsoft® Windows Media® DRM (Digital Rights Management).
- 2 **Copying files with Windows Explorer via Drag and Drop**
The player can be used as a mobile data storage device. Just use the Copy, Paste, Delete and etc. commands of your operating system such as Windows or Mac OS X. Before, the player must be set into "USB Disc" mode via "Setup> USB".

Step 1 Select the music you want to download to the player by clicking on the file/folder icon.
(If you want to choose more than one music file/folder, press and hold the Ctrl or Shift key when clicking.)
Step 2 Right-click on the file(s)/folder(s) - a menu appears. Click Copy.
Step 3 Double-click on the Removable Disk to open the drive. The Removable Disk window appears.
Step 4 Right-click on the Removable Disk window and click Paste in the menu.
Step 5 The files/folders are now copied into the player memory.

Please note: If you want to load WMA-DRM files from music download services to your device, you have to use the **Microsoft® Windows Media® Player 10**. - Otherwise, you would lose your acquired rights to play these songs, and your player would **not** be able to play them.

CAUTION: Disconnecting the MAX P-X PHOTO from the PC during data transfer will damage the player! Before disconnecting the player, please make sure that the transfer is complete. If you are using Windows Me, 2000 or XP, please follow the "Safely Remove" instructions to disconnect the player. Use the "Unplug or Eject hardware" icon located in the toolbar.


4 CONNECTING TO THE PC

4

Connecting to the PC

- 1 Connect the MAX P-X PHOTO via USB cable to the USB terminal of a PC. It will turn on automatically.

According to the USB setting ("DRM-Audio" or "USB Disc"), a respective Removable Disk is created in "My Computer": HDD USB Device "Portable Media Player" (in case Media Player 10 is installed).

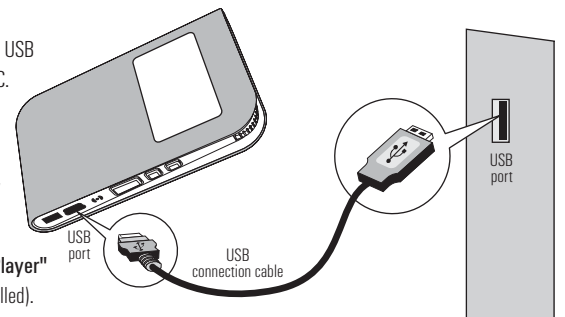

Note: Users of Windows 98/98SE have to install the driver (provided on the bundled CD-ROM) onto the computer before connecting the MAX P-X PHOTO HD-Music-Player to the PC.

- 2 Now, you can copy and load files or even complete folders from the hard drive, and paste them into the Removable Disk, respectively synchronize them with the Windows Media® Player 10. (For further information see No. 5 "LOADING MUSIC ON THE PLAYER".)


Disconnecting from the PC

If you are using Windows Me/2000/XP, click "Unplug or Remove Hardware" on the bottom right of the monitor to stop the connection before removing.

CAUTION! Disconnecting the MAX P-X PHOTO from the PC during file transfer will damage the player. Please do **not** disconnect the MAX P-X PHOTO before the data transfer is complete.

PLAYER OVERVIEW

6

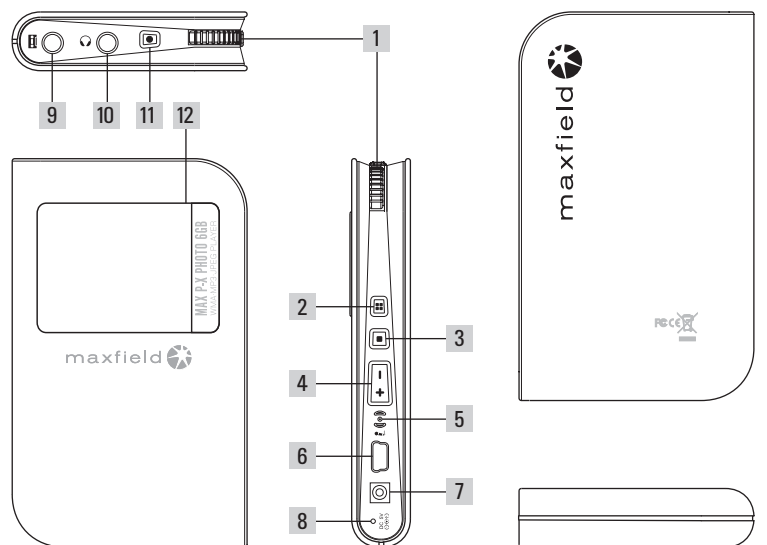

- 1 MULTIFUNCTION key
- 2 MODE | EQ key
- 3 HOLD | STOP | EXIT key
- 4 VOLUME +/- key

- 5 Microphone
- 6 USB port
- 7 DC jack
- 8 Reset hole

- 9 Line-In
- 10 Earphones
- 11 REC | A-B LOOP key
- 12 Display


Disconnect the player from the PC.

Function	Key	Operation
Power On/Off	MULTIFUNCTION	- Press and hold the MULTIFUNCTION key for about two seconds to switch the player on or off.
Select Mode / Menu	MULTIFUNCTION HOLD STOP EXIT	- Click up/down the screen to choose a mode/menu (selecting status). The following modes are available: Audio / Photo / Movie / Record / Radio / Setup. - Confirm/set the desired mode by pressing the MULTIFUNCTION key. - Return to previous screen by pressing the HOLD STOP EXIT key. - Exit current option by pressing the HOLD STOP EXIT key.
Play Audio / Photo / Movie	MULTIFUNCTION	- In the main menu press the MULTIFUNCTION key to choose Audio, Photo, Movie, or Radio. - In either menu click the MULTIFUNCTION key up/down to choose, where applicable, the desired folder and then the file to be played. - Play/pause the chosen file by pressing the MULTIFUNCTION key. - Fast-Forward/Rewind within a music track by pushing and holding the MULTIFUNCTION key up/down.
Set FM station	MULTIFUNCTION	- Set radio station (Preset list opens up) by pressing the MULTIFUNCTION key (Radio mode).
Adjust Volume	VOLUME +/-	- Increase respectively decrease volume by pressing the VOLUME key (playing status).
Record	REC A-B LOOP and HOLD STOP EXIT	- Press and hold the REC A-B LOOP key for about two seconds to record. Recording can be done in the following modes: Audio / Photo / Movie / Record / Setup. You have to preselect recording source "Microphone" or "Line-In" in the Record menu. - To stop recording, press the HOLD STOP EXIT key. - Press the REC A-B LOOP key shortly while playing to start/stop A-B Loop.
Start/stop A-B Loop	REC A-B LOOP	- Press and hold the MODE EQ key to enter Audio settings during playback.
Set Play Mode/ EQ (equalizer) and Play Radio	MODE EQ and MULTIFUNCTION	- Select and confirm Play Mode and EQ with the MULTIFUNCTION key. - In Radio mode press the MODE EQ key to turn into either Manual Search, Auto Search, or Preset mode. - In any of these Radio modes - Manual Search or Auto Search or Preset - click the MULTIFUNCTION key up/down to tune into an FM radio station. - Press MODE EQ key (Audio/Photo/Record mode) to remove/add tracks from/to playlist. - Select and confirm with MULTIFUNCTION key.
Delete/add playlist content	MULTIFUNCTION	- Press shortly the HOLD STOP EXIT key to stop audio playback.
Stop audio play	HOLD STOP EXIT	- Press and keep pressing the HOLD STOP EXIT key to activate Hold function (all keys are locked) and redo to cancel the key lock again.
Lock/release keys (hold function)	HOLD STOP EXIT	
Reset	RESET hole	- To reset the player, push a thin metal pin (e.g. needle or end of paper-clip) into the RESET hole.

You can either record through the built-in microphone or via Line-In from an external device.

1 Recording voice

- Before you start recording, face the built-in microphone towards the sound source.
- Press the REC key to start recording.
 - Please preselect "Microphone" as recording source in the Record menu.
 - The recorded file will be created under "Folder/File" in the folder "Record".
- Pressing the STOP/EXIT key will stop recording and pressing the REC key again will start a new recording as a new file.

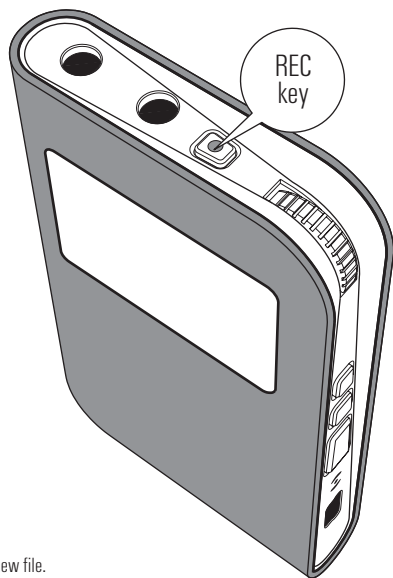


2 Recording from an external device

- Connect the Line-In cable to the Line-In terminals of both the external device and the player.
- Start playing the external device and press the REC key to start recording.
 - Please preselect "Line In" as recording source in the Record menu.
 - The recorded file will be created under "Folder/File" in the folder "Record".
- Pressing the STOP/EXIT key will stop recording and pressing the REC key again will start a new recording as a new file.

Please refer to manual on CD-ROM for detailed descriptions.

MENU STRUCTURE		
Audio	Play All	
	Playlist	
	Artist	
	Title	
	Album	
	Genre	
	Folder / File	
	Play Mode	Normal Repeat One Repeat Repeat All Shuffle Shuffle All
	EQ	Normal DDB Classic Rock Jazz Pop
	License	
Photo	Show All	
	Playlist	
	Folder / File	
	Show Style	Show by Keys Autoshow (5s) Autoshow (10s) Autoshow (15s)
Movie	folders and files	
Record	Folder/File	
	Line In	
	Microphone	
Radio	tune in Manual Search / Auto Search / Preset	
Setup	Audio	Play Mode: Normal Repeat One Repeat Repeat All Shuffle Shuffle All EQ: Normal DDB Classic Rock Jazz Pop
	Photo	Show Style: Show by Keys Autoshow (5s) Autoshow (10s) Autoshow (15s)
	Radio	US EU CN
	USB	USB Disc DRM Audio
	Back Light	10 S 20 S 40 S 60 S
	Sleep Timer	Disable 10 Mins 20 Mins 30 Mins 60 Mins
	Language	English Chinese Simp German
	Setup Reset	
	Info	firmware and memory

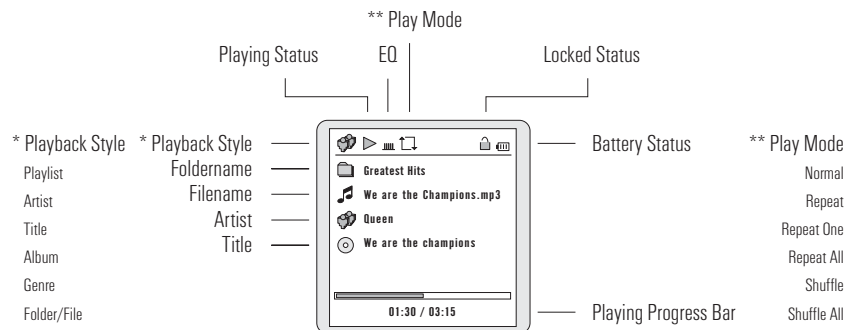 

In the Main Menu select and enter Radio mode by using the MULTIFUNCTION key.

Automatic tuning

- Press the MODE/EQ key to enter 'Auto Search' mode.
- Push the MULTIFUNCTION key up or down to run automatic radio scan. When tuned into a station, the scan stops. Now you have the options to listen, to save the station, or to continue searching.

Manual tuning

- Press the MODE/EQ key to enter 'Manual Search' mode.
- Push the MULTIFUNCTION key up or down to manually scan the frequency range step by step, until tuning into a radio station.


Save a radio station

When tuned into a desired station in either 'Auto Search' or 'Manual Search' mode:

- Press the MULTIFUNCTION key to enter the list of preset stations.
- Push the MULTIFUNCTION key up or down to select one of the numbers P01 - P30.
- Press the MULTIFUNCTION key to set and save the station with the selected number.

Preset tuning

- Press the MODE/EQ key to enter 'Preset' mode.
- Push the MULTIFUNCTION key up or down to tune into a preset radio station. The respective preset number is indicated.

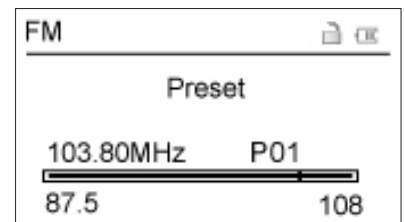

Taking care of the player

- Keep the product and all its parts and accessories out of the reach of small children.
- Do not use or store the player in dusty or dirty environments as this may damage the components.
- This product is not waterproof or water resistant. Keep the player away from water.
- Keep the player away from heat, humidity, and magnetic interferences.
- Do not try to alter or remodel the product as all warranties will otherwise be void.
- Normal vibration will not affect the operation of this product, but dropping or excessive shock may cause damage.
- Do not leave the unit exposed to direct sunlight for long periods of time, and do not leave it close to a heat source.
- Do not clean the player with abrasive chemicals that may harm the surface such as thinners, benzene or alcohol.
- Do not apply heavy force to the Display, as it may cause breakage or abnormal display functions.
- Do not leave the unit exposed to direct sunlight for a long period of time.
- Avoid keeping the unit in places with high humidity, strong magnetic fields, or near high-heat sources.

Formatting your Player

You can format the internal micro drive of the MAX P-X PHOTO Player via your PC in USB:"USB" mode with file system FAT 32 (Windows: "My Computer", right mouse-click, "Format" / Mac: "Disk Utility").

WARNING! - Take special care when formatting because all data will be erased and cannot be restored.

Upgrading the Firmware

You can upgrade the built-in programs (firmware) if necessary. Updates on: www.maxfield.de - Support - Downloads - Music-Player 1 GB/above - MAX P-X PHOTO

To download the firmware update provided on our website please do the following:

- Unpack the ZIP file into a folder. (In case you don't use the Windows specific program for unpacking, please make sure that the directory structure in the ZIP file remains as it is.)
- Save the firmware upgrade file(s) into the SYSTEM directory of the player.
- Disconnect the player from the PC. The Player will update firmware automatically now, maybe afterwards you have to turn on the player again.

Taking care of your sense of hearing

Please be aware of the fact that using earphones at a high volume for an extended time might cause hearing damage!

Please backup your files!

IMPORTANT! - Maxfield GmbH will not be liable for the loss of data caused by damaged products or damaged respectively unreadable memories or drives.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>