

USER'S GUIDE

Welcome 1

Safety Instructions..... 2

Loading 3-5

Dishwashing Essentials (Hot water, Detergent, Rinse Aid)..... 6-7

Cycles at a Glance..... 8

Operating Tips 9




Water Conditions 10

Special Care Items 11

Maintaining the Dishwasher 12

Before You Call..... 13-14

Warranty Back Cover

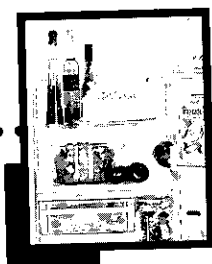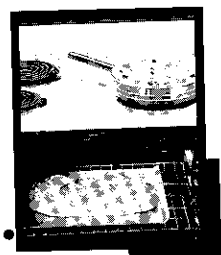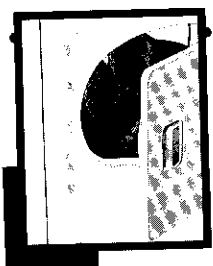

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Search And Download.



Models: 9922, 9902

Welcome.....



Congratulations on your choice of a Maytag Jetclean® dishwasher! As you use your new appliance you will appreciate the many features that have made it the Consumer Rated No. 1 Dishwasher.

Your satisfaction is very important to us, so please read this guide carefully. You will find instructions on the proper operation and maintenance of your new appliance.

Enjoy your new dishwasher and thank you for choosing Maytag!



Save time and money. If something should go wrong, we suggest consulting the "Before You Call" section in the back of this book. It is designed to help you solve basic problems before consulting a servicer.

However, should you need assistance, it is helpful to:

- 1) Have complete model and serial number identification of your dishwasher. This is located on the upper left of the tub opening.


Record these numbers below for easy access.

Model Number

Serial Number

- 2) Have proof of original date of purchase.

Please attach your sales receipt here.

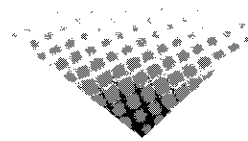


For additional questions, please contact us:


Maytag Consumer Information
One Dependability Square
Newton, Iowa 50208
(515) 791-8911
(Mon.-Fri., 8am-5pm Central Time)
Internet: <http://www.maytag.com>

⚠ WARNING: Check with the installer to make sure the appliance has been properly grounded to avoid possible electrical shock. Be sure you read the Important Personal Safety Instructions on page 2 before you use this dishwasher.

NOTE: In our continuing effort to improve the quality of our dishwashers, it may be necessary to make changes to the appliance without revising this guide.

Important Safety Instructions

Products with a  label have been listed with Underwriter's Laboratories, Inc. – those with a CSA tag have been listed with Canadian Standards Association. Nevertheless, as with any other equipment using electricity and moving parts, there is a potential hazard.

 **WARNING** – When using your dishwasher, follow basic precautions, including the following:

1. Read all instructions before using the dishwasher.
2. Use the dishwasher only for its intended function.
3. Disconnect electrical power to dishwasher before attempting to service.
4. To avoid electrical shock hazard, the sides and back must be enclosed and the front panels must be attached before electrical power is applied to the dishwasher. Refer to the installation instructions for proper grounding procedures.
5. Connect to a properly rated, protected and sized power supply circuit to avoid electrical overload.
6. Children should never be permitted to operate, or play in, with, or around this dishwasher.
7. To reduce the risk of injury when loading items to be washed, sharp or pointed items should be located with the handles up. Also, load sharp items so they are not likely to damage the door seal.
8. Be careful not to touch the heating element on the bottom of the tub during or at the completion of a cycle. It may be hot.
9. Use only detergents and rinse additives designed for an automatic dishwasher. Never use soap, laundry detergent, or hand washing detergent in your dishwasher. Keep these products out of reach of children.
10. Do not sit, stand on or abuse the door or dish racks of the dishwasher.
11. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. **Hydrogen gas is explosive.** If the hot water system has not been used for such a period, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this process.
12. Do not wash plastic items unless marked “dishwasher safe” or the equivalent. For plastic items not so marked, check the manufacturer’s recommendations.
13. Do not tamper with controls.
14. Always remove the door to the washing compartment when removing an old dishwasher from service or discarding it.
15. Use caution when unloading the dishwasher. Dishes will be hot if unloaded shortly after a cycle has completed.

Save These Instructions



Loading

Before You Start

- **Don't Prerinse.** Simply scrape off any bones or large food particles. The disposer in your dishwasher will handle the occasional pits, fruit seeds and popcorn. These items will be chopped into small pieces during the drain and removed with the drain water. You may hear a chopping noise during the drain. This is normal.
- If connected to a food waste disposer, **make certain the disposer is empty before starting the dishwasher.** This allows proper draining.
- **Remove certain foods** (such as mustard, mayonnaise, lemon juice, vinegar, salt or dressings) **from stainless steel flatware as soon as possible.** These foods may cause rusting and pitting if allowed to remain in contact with the surface for an extended period of time.
- **Scrape or soak items with burnt on foods** as they require more energy than the rest of the load to clean satisfactorily.
- **Soak or wipe a starchy film from utensils** used to cook foods such as potatoes, pasta, rice, oatmeal, etc., as they require more energy than the rest of the load to clean satisfactorily.


General Recommendations

- Place all items in the racks so they are separated and facing center. This ensures the water spray can reach soiled surfaces for good washing and rinsing results.
- Wedge flat, lightweight items (such as plastic lids) next to the silverware basket or along the sides and back of the racks.
- Items can be centered behind a single tine or loaded at an angle to maximize space.
- Load items so they do not rest over the top of the wash tower. This water spray is needed to properly clean items in the upper rack.
- Avoid blocking the upper and lower spray arms by not allowing items to extend beyond the racks.
- Caution: Dishes will be hot if unloaded shortly after cycle is completed.


Your new Maytag® dishwasher is designed to accommodate a variety of dishes, glasses, stemware, utensils and pots and pans. It also has the capacity to accommodate 10 to 12 place settings, with certain models able to accommodate up to 13 place settings. The following illustrations and information will help you become more familiar with your dishwasher racking system. After a few dishloads, you will be able to determine the best arrangement for your items.

How to Load 10 Place Settings

Upper Rack

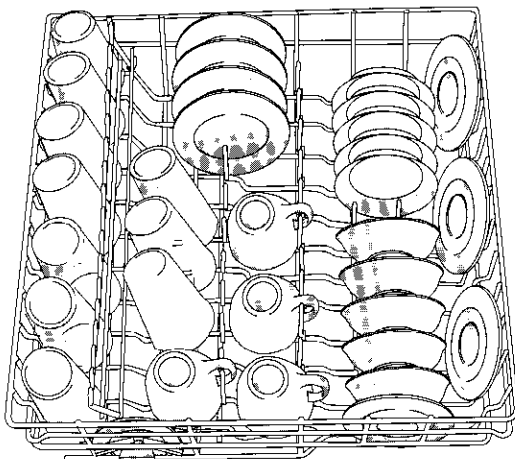

Lower Rack

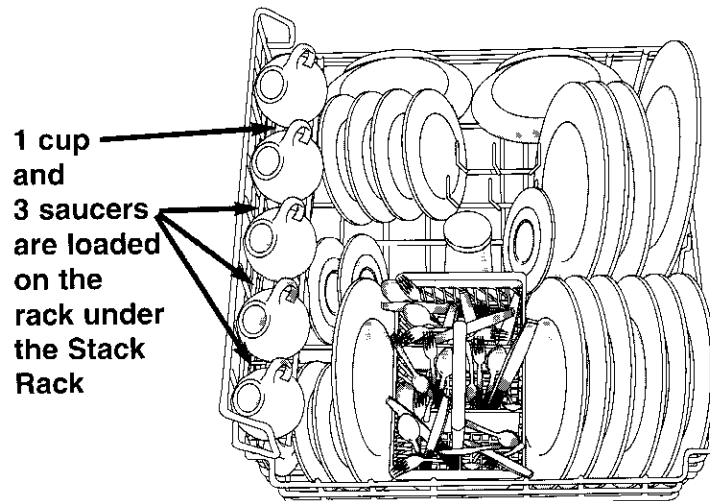





Upper Rack

(Features vary depending on model)

The upper rack is designed with flexibility and versatility. Glasses, cups, stemware, light-weight plastics, small plates, bowls, pans, long-handled utensils etc. can be loaded in this rack. **Do not load glasses over the tines.**

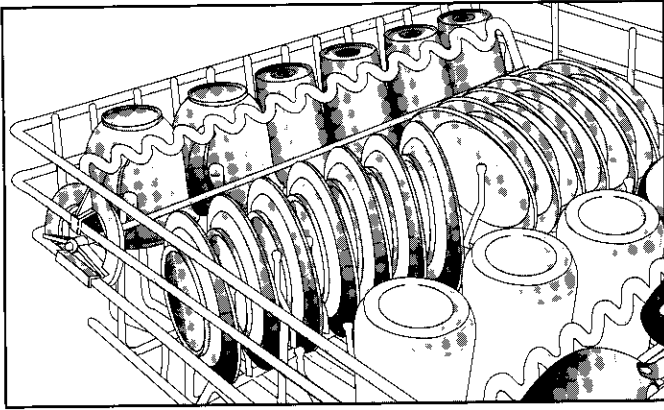

The Vari-Lock™ Snugger on the left (select models) secures lightweight items in place. It can be adjusted by grasping the curved wire and rotating it left to snug items against the outer rack or to the right to rest on top of light items. **Do not load items on top of the wire.**

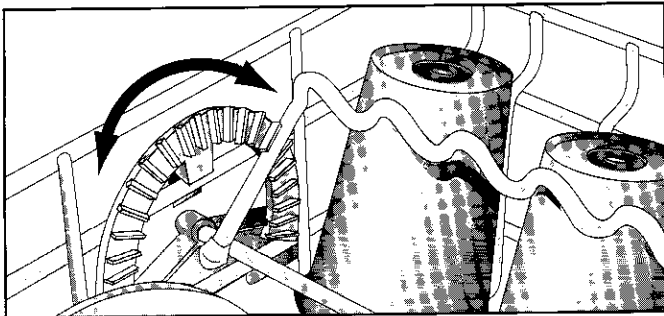


The curved wire on the Vari-Lock™ Snugger (left) and the Stack-Rack (right) is designed to hold stemware in place. Taller stemware will fit better on the right side as the upper rack is deeper on this side.

Correct





Tine out

Incorrect

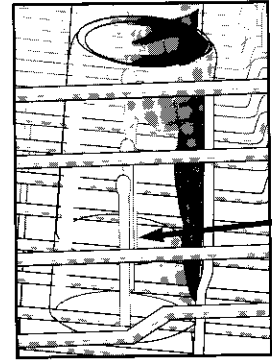

Tine in

The Stack-Rack (select models) design on the right side of the upper rack folds up or down for loading flexibility of a variety of items. Fold it down to hold long-handled knives, spatulas and spoons or short items like cups or juice glasses. Fold it up for taller items like glasses, bowls, plates, etc.

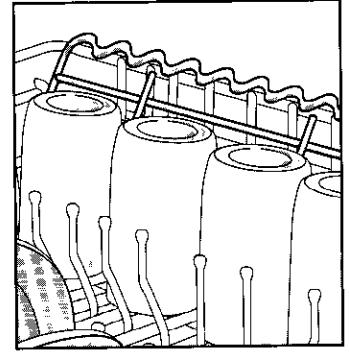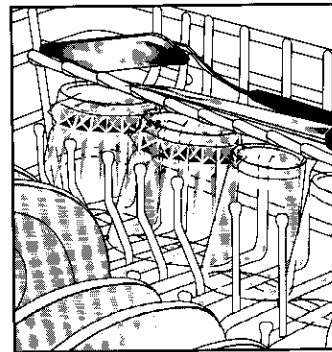


Lower Rack

Removable Utensil Basket

(Design varies depending on model)

The basket can be removed for ease in loading and unloading items. Place items in the basket with some handles up and some down. This prevents them from nesting together and improves cleaning results. (Knives or sharp, pointed items should be placed in the basket with the handles up. Be sure thin, finely pointed items do not extend through the basket and block the lower wash arm.)

Use the covered section of the basket for small, light-weight items like baby spoons, plastic measuring spoons, small plastic items, etc. Close the cover.

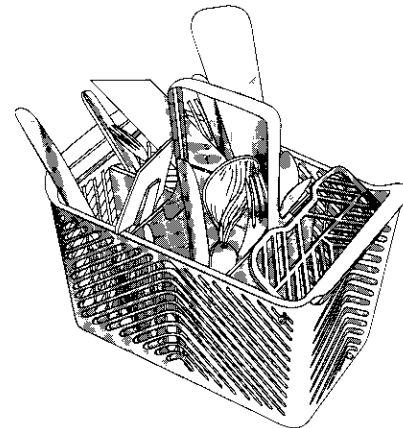





Lower Rack

(Features vary depending on model)

The lower rack is designed to accommodate a variety of large items such as dinner plates, mixing bowls, pots and pans, baking dishes, etc.

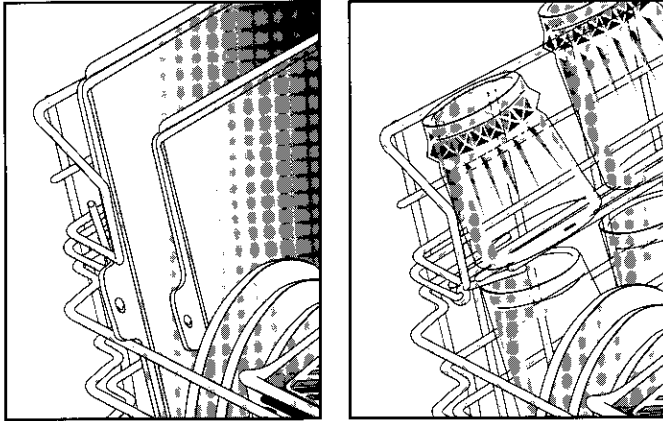


Tall items such as bakeware and large platters can be placed on the left side or across the back of this rack.

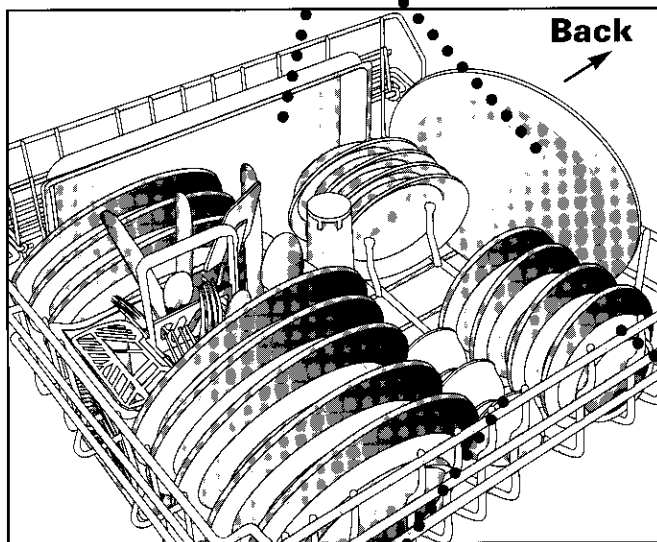

Create-A-Space™ tines are located across the center of the lower rack to the left and right of the center spray nozzle. These allow small saucers and bowls to be loaded between rows of plates.

With the **Stack-Rack shelf** (select models) raised, thin items like cookie sheets or pizza pans may be placed along the left side. With the shelf down, two levels of glasses and cups can also be loaded.

Positioning the **Fold-Away™** tines flat in the back corner provides convenient loading space for large bulky items like pots and pans or mixing bowls.

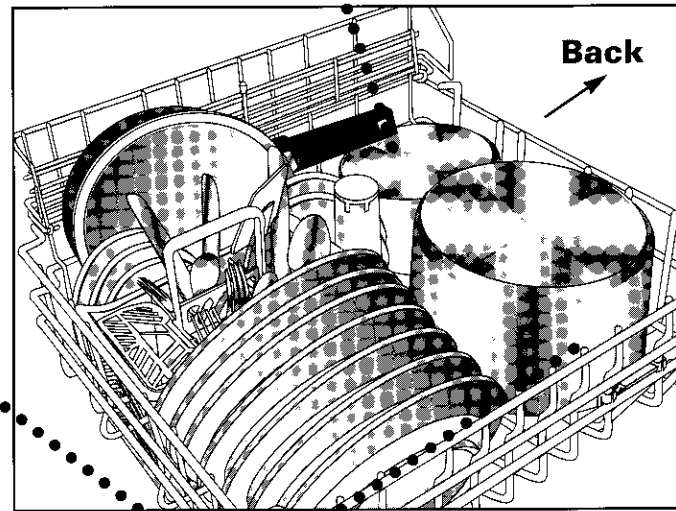

Convertible tines in the back-right corner can be adjusted to provide narrow spacing for loading plates or wide spacing for loading deep bowls, pots or pans.



Dishwashing Essentials

HOT Water

For optimal cleaning and drying results, hot water is necessary. The incoming water temperature should be 120–140°F to properly activate the detergent and melt greasy food soils.

If for any reason (such as laundering, showers, etc.) the incoming water temperature is below 120°F (49°C), select the **Temp Sense** option to have the dishwasher thermostatically heat the water to proper temperature.

Detergent

Use a detergent designed specifically for use in an automatic dishwasher. Be sure it is fresh and stored in a cool, dry place (not under the sink).

Recommended Amount

The amount of detergent to use depends on the water hardness (measured in grains per gallon — gpg) and the amount of soil on the dishes. Too little detergent results in poor cleaning, hard water filming/spotting and poor drying. Too much detergent can cause permanent etching/cloudiness.

As a rule, use 1 teaspoon of detergent per grain of water hardness, using a minimum of 3 teaspoons in soft water situations. Place the recommended amount of detergent in both cups for Normal and longer cycles. **Do not divide the recommended amount between the cups.**

The following chart includes specific recommendations. (Refer to the package directions on concentrated detergents.)

Water Hardness*	Detergent Use
Soft (0–3 gpg)	3 teaspoons
Medium (4–9 gpg)	4–9 teaspoons
Hard (10–12 gpg)	10–12 teaspoons

**Your local water utility or state university extension service can tell you the degree of water hardness in your area.*

For water hardness of 13–14 gpg add more detergent (1 teaspoon for each gpg) to the beginning of the main wash portion of the cycle. Unlatch the door, open it slowly and add detergent to the bottom of the tub. After relatching the door, the dishwasher will continue through the cycle.

If water hardness is 15 gpg or harder, it is virtually impossible to achieve good results with *any* dishwasher. The only solution is a mechanical water softener to improve water quality and detergent effectiveness.


To check the incoming water temperature, turn on the hot water faucet nearest the dishwasher and let it run into a glass in the sink. Place a candy thermometer in the glass and check the temperature once it has stopped rising. If the temperature is below 120°F (49°C), have a qualified person raise the water heater thermostat setting.

Before starting the dishwasher, turn on the hot water faucet and let it run until the water is hot.

Never use laundry detergent or hand dishwashing detergent in your dishwasher as it will cause severe oversudsing and possible leaks.

Detergent Placement

Add detergent to dispenser cup just before you select the cycle and options.

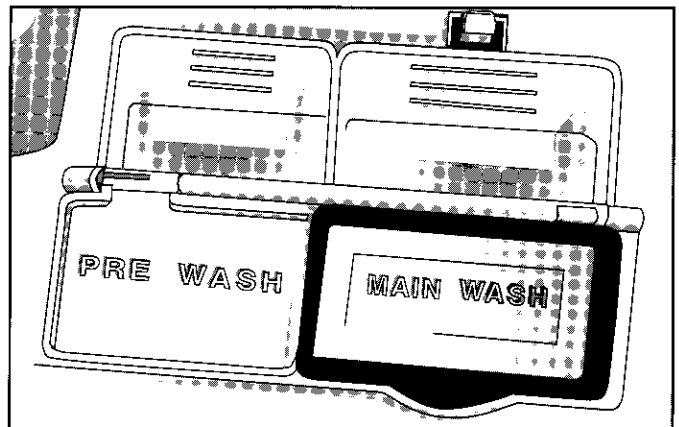

For **Normal or Power Scrub** cycles place the recommended amount of detergent in both the PRE WASH and MAIN WASH cups. Close the cover. The dishwasher automatically releases detergent.

A **Light/China** cycle requires detergent in the MAIN WASH cup only. Close the cover after adding detergent. The detergent will automatically be dispensed.

The **Quick Wash/Rinse** cycle needs detergent in the PRE WASH cup only. Close the cover after adding detergent. The detergent will automatically be dispensed.

Rinse & Hold does not use detergent. Leave the detergent cup lid open when running Rinse & Hold.




Rinse Aid


Regular use of a rinse aid improves drying, reduces spotting and filming, and reduces moisture left on the dishwasher interior.

Your Maytag Jetclean® dishwasher features an automatic rinse aid dispenser located near the detergent cups in the door.

The clear window in the center of the dispenser cap allows you to see if there is rinse aid in the reservoir. When it is time to refill the dispenser, the words "LOW RINSE AID" will light in the control panel display.

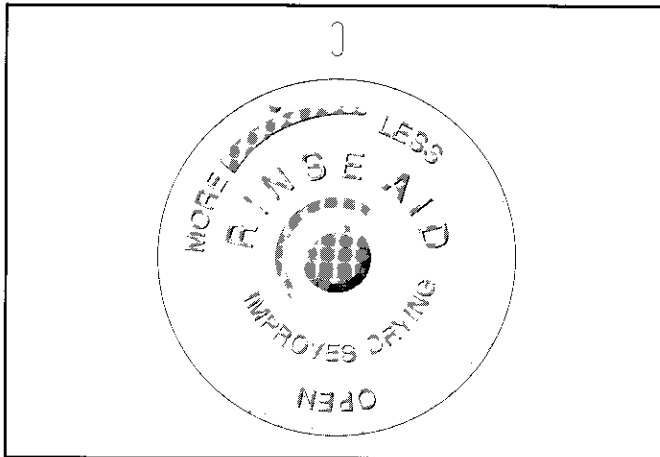

To add rinse aid to the dispenser, turn the cap counter-clockwise to open. Remove the cap and pour liquid rinse aid into the opening. Replace the cap and turn it clockwise.

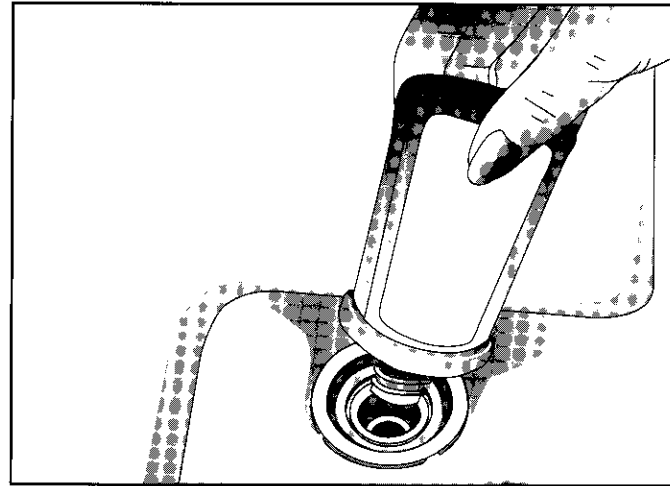

An adjustable cap found on some models allows you to adjust the amount of rinse aid dispensed. A raised dot on the cap indicates the recommended initial setting. Typically, use the LESS setting for soft water and the MORE setting for hard water. Set the cap anywhere between these amounts as needed. To improve drying, turn the cap towards the MORE setting. When adjusting or replacing the cap, be sure it is securely in place before closing the dishwasher door.

Usage TIPS

• Use HOT Water

Hot water dissolves and activates the detergent, dissolves grease from the load and improves drying results. Refer to page 6 for more information.

• Use the Proper Amount of Detergent

For best soil removal, good drying results and prevention of filming, etching and spotting, the proper amount of detergent must be used. Refer to page 6 for recommended amounts.

• Use a Rinse Aid

Regular use of a rinse aid improves drying results and reduces spotting and filming. See above for more information.

• Load the Dishwasher Properly

To ensure soiled surfaces get adequate wash action, carefully follow the loading instructions on pages 3-5.

• Select the Proper Cycle

The cycle selection depend on the amount of food soil on the load. See page 8 for cycle descriptions.

• Select Heated Dry


For improved drying select Heated Dry.



Cycles at a Glance

Your dishwasher features several cycles and options to clean and dry a variety of loads. The following information will help you select the appropriate cycle and options for each situation.

Cycles

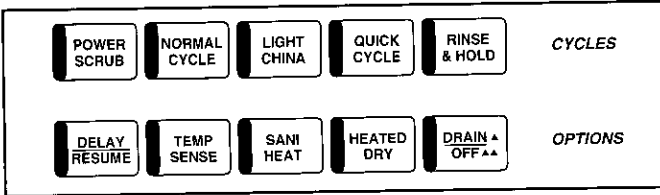

CYCLE OPTIONS	SEQUENCE	WATER USAGE
POWER SCRUB provides a longer cycle for items with heavy food soils.	PreWash Prerinse Main Wash Hi-Temp Rinse Dry	8.4 Gal.
NORMAL WASH is designed to wash loads containing dishes with normal amounts of food soils.	PreWash Main Wash Hi-Temp Rinse Dry	6.3 Gal.
LIGHT/CHINA is designed for washing lightly soiled loads or china and crystal items.	Main Wash Hi-Temp Rinse Dry	4.2 Gal.
QUICK CYCLE designed for use when lightly soiled dishes are needed in a hurry.	Wash 2 Rinses Dry	5.8 Gal.
RINSE & HOLD rinses dishes being held until the dishwasher is full. Reduces potential food odor in the dishwasher.	Rinse OFF	2.0 Gal.

An option recall feature memorizes the options selected with a cycle. For example, if TEMP SENSE, SANI HEAT or HEATED DRY is selected with a cycle, it will be automatically recalled the next time that cycle is selected.

Options

DELAY/RESUME can delay or interrupt any wash cycle from 10 minutes to 12 hours on some models and on others from 1 hour to 9 hours. (Note: Extended interruption of the wash cycle can degrade wash results.)

TEMP SENSE ensures proper water temperature when using the Power Scrub, Normal, or Light/China cycles. If needed, the wash or rinse portions of the cycle are extended until a proper water temperature is reached (20 minute maximum heating delay for each temperature check). When the wash or rinse portions of the cycle are being extended, the **HEATING DELAY** light is illuminated. Press the pad again to cancel the option. *Use this option if the incoming water temperature is below 120°F due to other household demands such as showers and laundry.*

SANI HEAT checks the main wash and final rinse temperature of Power Scrub, Normal and Light/China cycles. The **HEATING DELAY** light illuminates when the cycle is interrupted to heat water to the proper temperature. When the Sani Heat option is selected with the Quick Cycle, heat is *automatically* added to the wash and first rinse. Sani Heat also provides additional heated dry time. Press the pad again to cancel the option. *(This option does not sanitize the dishes.) Use Sani Heat to aid in the removal of tough, more difficult to remove food soils (such as starches and fats) and to boost drying results.*

HEATED DRY improves drying results by turning the heating element on during dry. Cancel Heated Dry by pressing the pad again. This turns the heating element off during the dry portion of the cycle. Towel drying of some items may be necessary and more moisture may be noticed on the dishwasher interior.

NOTE: With either dry option, it is normal to notice vapor coming out of the vent area.

DRAIN/OFF. Pressing the pad once will drain the dishwasher and then turn it off. Pressing the pad twice will turn it off without draining.



Operating Tips

Starting The Dishwasher

- 1** After loading the dishwasher and adding detergent, close the dishwasher by pressing the door until the latch clicks.
- 2** If the water heater is located a long distance from the dishwasher, run the water from the hot water tap to clear the line of cold water.
- 3** Firmly press the desired cycle and OPTIONS pads to start the dishwasher (fill will begin).
- 4** The indicator light for the selected cycle will glow.

Note: Water heating and dry options can be used separately or together.

Adding a Forgotten Item

For best cleaning, the forgotten item should be added early in the cycle.

- 1** Unlatch the door.
- 2** Wait for the water circulation to stop.
- 3** Open the door and add the item.
- 4** Close and latch the door.
- 5** The cycle resumes automatically.

To Set Up a Delay:

- 1** Select the appropriate cycle and options for the load.
- 2** Then quickly press and hold the Delay/Resume pad until the desired amount of delay time is displayed.
- 3** The DELAY indicator will remain lit until the clock has counted down.
- 4** The cycle will automatically start as soon as the delay time expires.

Note: If delay is chosen without first selecting a cycle and/or options, the dishwasher will select the last wash cycle used in the delay mode.

To Cancel a Delay:

Press the Delay/Resume pad again. The indicator light will go out and the cycle will start immediately.

To Temporarily Interrupt a Cycle:

- 1** Press the Delay/Resume pad.
- 2** The cycle will stop.
- 3** The cycle will resume from the point of interruption when the delay time expires or when the Delay/Resume pad is pressed again.

Display Window

WASH light glows during all wash portions.

RINSE light glows during all rinse portions.

DRY light glows during the entire dry period and goes out when the cycle is completed.

CLEAN glows at the end of the dry cycle and remains lit until the door has been open for 30 seconds continuously.

DELAY glows when this option is selected. The light stays on until the start of the cycle.

HEATING DELAY glows to indicate that the cycle is being extended to heat the water to proper temperature.

RINSED ONLY (certain models) appears after a **RINSE & HOLD** cycle.

PF appears when there has been a power failure. Press any option pad (Temp Sense, Heated Dry or Sani Heat) one time to clear the display.



Water Conditions

Hard Water contains minerals that can cause a film or deposit on the dishwasher tub and dishes. You may first notice this as “cloudy” glasses.

To confirm if the film is due to hard water, soak a glass for approximately 5 minutes in undiluted white vinegar. Rinse and dry. If the film is removed, it is due to hard water (if not removed, see Soft Water).

To correct:

1. Adjust the detergent amount to the degree of water hardness. (See pg. 6)
2. Check the water temperature. (See pg. 6)
3. Use a rinse aid to improve the sheeting action of the water. (See pg. 7)

To remove film from the dishwasher:

*(Try **one** of the following.)*

1. A damp cloth and mild scouring powder.
2. A half-cup white vinegar in a Normal cycle with detergent in the MAIN WASH cup only.

Soft Water can promote etching if too much detergent is used, items are prerinsed or the water temperature is too high. Etching is a permanent pitting or eroding of the surface of the glassware.

The beginning stages can be identified by a “rainbow” effect— shades of blue, purple, brown or pink when the glass is held at an angle to the light. In advanced stages the surface appears frosted, spotted or cloudy.

Etching can happen in any dishwasher and there is no relationship to the cost or quality of the glass.

To prevent:

1. Adjust the detergent amount to water hardness. (See pg. 6)
2. Adjust the water temperature. (See pg. 6)
3. Do not prerinse. This aggravates etching.

Rust Minerals (iron and manganese) can turn dishes or the tub interior a brown, red or black color.

To prevent:

1. Drain your home’s water heater once a year to flush away any mineral deposits.
2. Check with a water treatment company like Culligan or Kinetico to see if a filter is needed in the home.

To remove:

(Do not use this method on metal items.)

1. Use a rust removing compound like RoVer Rust Remover* (available from an authorized Maytag Parts Retailer by using Part No. 57961). **Do not** use RoVer with dishwashing detergent.
2. Fill both detergent cups with RoVer. Complete a Normal wash cycle. Follow with a short wash cycle using dishwasher detergent.
3. The only permanent solution is to install special filters which can remove iron and manganese from the water.



Special Care Items

Knowing what can and cannot be washed in your dishwasher is important. Most tableware, cookware and silverware can be washed safely in your dishwasher. If you have any doubts about an item, check with the manufacturer. If you cannot reach the manufacturer, simply test-

wash one small item for several washes before attempting to wash an entire set.

NOTE: It is the user's responsibility to determine if dishware should be washed in a dishwasher.

Material	Dishwasher Safe?	Special Information
Aluminum	Yes, except anodized aluminum and some cookware.	High water temperature and detergents may affect finish. Check cleaning instructions.
Cast Iron	No	Seasoning will be removed, and iron will rust.
China/ Stoneware	No, if antique or hand-painted china. Otherwise, check with manufacturer.	Always check manufacturer's recommendation before washing. Antique hand-painted or over-the-glaze patterns may fade. Gold leaf may discolor. If in doubt, test wash a small item for several weeks before washing entire set.
Crystal	No, if antique or light-weight delicate crystal. Otherwise, check with manufacturer.	Always check manufacturer's recommendation before washing. Some types of leaded crystal may etch with repeated washings. If in doubt, test wash a small item for several weeks before washing an entire set.
Glass	Yes, except milkglass.	Milkglass will yellow with repeated dishwasher washing.
Gold-Plated Flatware	No	Will discolor.
Pewter	No	High water temperature and detergents may discolor or pit finish.
Disposable Plastics	No	Cannot withstand high water temperatures and detergents.
Plastics	Yes (If labeled "dishwasher safe")	Always check manufacturer's recommendation before washing. Plastics vary in their capacity to withstand high water temperatures and detergents.
Stainless Steel	Yes	Run a Rinse & Hold Cycle (select models) if not washing immediately. Prolonged contact with foods containing salt, vinegar, milk products or fruit juice could damage finish.
Sterling Silver or Silverplate	No, if has commercial "darkening". Otherwise, check with manufacturer.	Always check manufacturer's recommendation before washing. Run a Rinse & Hold Cycle (select models) if not washing immediately. Prolonged contact with food containing salt, acid or sulfide (eggs, mayonnaise and seafood) could damage finish. Commercial "darkening" may be removed by detergent.
Tin	No	
Wooden Items	No	Always check manufacturer's recommendation before washing. Wood may warp, crack or discolor.



Maintaining the Dishwasher.....

Your new Maytag Jetclean® dishwasher requires little maintenance attention. However, if you are going on vacation, leaving a summer home or storing the dishwasher for an extended period of time, you may want to review the following information.

Dishwasher Interior

Cleaning

The inside design is normally self-cleaning. However, you may want to periodically check the bottom of the dishwasher tub to see if any large particles have not gone through the strainer portion of the module.

You may also want to wipe the edge of the inner door liner to remove any food soil splashes which occurred during loading.

Odors

Any odor inside the dishwasher is likely related to a chemical (chlorine) odor from the detergent or a food odor from soiled items sitting in the dishwasher. Try using a different detergent, especially a lemon-scented one, or purchase a fresh package and see if the odor decreases.

It is recommended that the Rinse & Hold feature be used if dishes are to be held for a couple of days before washing. This will remove most food soils that may develop an odor.

For a strong odor, try **one** of the following:

1. Place baking soda in both sides of the detergent cup. Select Light/China and let the water circulate for about 10 minutes. Stop the dishwasher by unlatching the door and let stand overnight. Restart the dishwasher by latching the door and let it complete the cycle.
2. Select the Light/China cycle and let the dishwasher fill with water. Open the door and pour 1/4 cup of chlorine bleach into the bottom of the dishwasher. Latch the door and let the dishwasher complete the cycle.

Storage/Moving

Fill both detergent cups with a fresh-scented dishwasher detergent or baking soda and select a Normal cycle. Allow the dishwasher to complete the cycle. Then turn the water supply off and set the dishwasher to drain. Operate the drain twice to ensure most of the water is removed. Last, disconnect the electrical supply and prop open the door.

Dishwasher Exterior

The front of the dishwasher can be cleaned with a soft damp cloth and liquid spray cleaner. Do not use any abrasive powders or cleaning pads.



Maintaining the Dishwasher.....

Your new Maytag Jetclean® dishwasher requires little maintenance attention. However, if you are going on vacation, leaving a summer home or storing the dishwasher for an extended period of time, you may want to review the following information.

Dishwasher Interior

Cleaning

The inside design is normally self-cleaning. However, you may want to periodically check the bottom of the dishwasher tub to see if any large particles have not gone through the strainer portion of the module.

You may also want to wipe the edge of the inner door liner to remove any food soil splashes which occurred during loading.

Odors

Any odor inside the dishwasher is likely related to a chemical (chlorine) odor from the detergent or a food odor from soiled items sitting in the dishwasher. Try using a different detergent, especially a lemon-scented one, or purchase a fresh package and see if the odor decreases.

It is recommended that the Rinse & Hold feature be used if dishes are to be held for a couple of days before washing. This will remove most food soils that may develop an odor.

For a strong odor, try **one** of the following:

1. Place baking soda in both sides of the detergent cup. Select Light/China and let the water circulate for about 10 minutes. Stop the dishwasher by unlatching the door and let stand overnight. Restart the dishwasher by latching the door and let it complete the cycle.
2. Select the Light/China cycle and let the dishwasher fill with water. Open the door and pour 1/4 cup of chlorine bleach into the bottom of the dishwasher. Latch the door and let the dishwasher complete the cycle.

Storage/Moving

Fill both detergent cups with a fresh-scented dishwasher detergent or baking soda and select a Normal cycle. Allow the dishwasher to complete the cycle. Then turn the water supply off and set the dishwasher to drain. Operate the drain twice to ensure most of the water is removed. Last, disconnect the electrical supply and prop open the door.

Dishwasher Exterior

The front of the dishwasher can be cleaned with a soft damp cloth and liquid spray cleaner. Do not use any abrasive powders or cleaning pads.



Dishwasher Warranty.....

Full One Year Warranty

For ONE (1) year from the date of original retail purchase, any part which fails in normal home use will be repaired or replaced free of charge.

Limited Second Year Warranty

After the first year from the date of original retail purchase, through the second year, parts which fail in normal home use will be repaired or replaced free of charge for the part itself, with the owner paying all other costs, including labor, mileage and transportation.

Limited Third Through Fifth Year Warranty

After the second year from the date of original retail purchase, through the fifth year, all of the following components which fail in normal home use will be repaired or replaced free of charge for the part itself, with the owner paying all other costs, including labor, mileage and transportation. These components include:

Any parts of the Jetclean® system for all models, including the complete power module assembly, sensor, center spray nozzle, spray arms, top wash arm hose, and motor.

Computer Touch Control models only – any microprocessor and touch pad assemblies.

All models against rust, including exterior cabinet and front panels of convertible models, the exterior front panels and accessory side panels of built-in models, and nylon coated racks (available on selected models).

Full Twenty-Year Warranty

First through the twentieth year

From the date of original purchase through the twentieth year, should the tub develop a water leak in normal home use, the dishwasher itself will be replaced **FREE OF CHARGE**.

First through the twentieth year

From the date of original purchase through the twentieth year, should the door liner develop a water leak in normal home use, repair or replacement of the door liner will be made **FREE OF CHARGE**.

PLEASE NOTE: These full warranties apply only when the dishwasher is located in the United States or Canada. Dishwashers located elsewhere are covered by the limited warranties only, including a limited warranty for parts which fail during the first year.

Canadian Residents

These warranties cover only those dishwashers installed in Canada that have been listed with Canadian Standards Association unless the dishwashers are brought into Canada due to transfer of residence from the United States to Canada.

The specific warranties expressed above are the **ONLY** warranties provided by the manufacturer. These warranties give you specific legal rights, and you may also have other rights that vary from state to state.

To Receive Warranty Service

To locate an authorized service company in your area contact the Maytag dealer from whom your appliance was purchased; or call Maytag Customer Service at the number listed below. Should you not receive satisfactory warranty service, please call or write:

Maytag Customer Assistance
c/o Maytag Customer Service
P.O. Box 2370

Cleveland, TN 37320-2370
U.S. 1-800-688-9900
CANADA 1-800-688-2002

U.S. customers using TTY for deaf, hearing impaired or speech impaired, call 1-800-688-2080.

When contacting Maytag Customer Service be sure to provide the complete model and serial number of your appliance, the name and address of the dealer from whom you purchased the appliance and the date of purchase.

Should you still have a problem, write to: Major Appliance Consumer Action Program, 20 North Wacker Drive, Chicago, Illinois 60606. MACAP is an industry sponsored but independent group of consumer experts who receive and act on complaints from appliance owners.

NOTE: When writing about an unsolved service problem, please include the following information:

- Your name, address and telephone number;
- Model number and serial number (found on the upper left corner of the tub opening) of your appliance;
- Name and address of your dealer and the date the appliance was purchased;
- A clear description of the problem you are having.
- Water hardness, detergent brand and amount, water temperature, and cycle used.

MAYTAG • One Dependability Square • Newton, Iowa 50208

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>