



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for MAYTAG MSE 760 FARS. You'll find the answers to all your questions on the MAYTAG MSE 760 FARS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MAYTAG MSE 760 FARS
User guide MAYTAG MSE 760 FARS
Operating instructions MAYTAG MSE 760 FARS
Instructions for use MAYTAG MSE 760 FARS
Instruction manual MAYTAG MSE 760 FARS

Use & Care Guide
Dishwasher
MAYTAG
MSE 760 FARS



[Your user manual](#)
[MAYTAG MSE 760 FARS](#)

Manual abstract:

Check the door Check that the door of the dishwasher fits properly: open the door a little and let it go. Does it stay exactly where you released it? If not, you should check the installation instructions or consult the installer. **5 Safety General** Winter storage/Transport · Read and keep the directions for use! · Installation of water, drainage and electricity must be carried out by a qualified professional. · Do not use the dishwasher for any purposes other than those stated in these directions for use. · Do not load the dishwasher door or the dishwasher baskets with anything other than dishes. · Only use dishwasher detergent! · Place knives and other sharp objects so that they cannot cause injury to people or damage the dishwasher. Never put dishes containing solvent residue in the machine due to risk of explosion. Neither may dishes containing ashes, wax or lubricating grease be washed in the dishwasher. **Cleaning** Only use a slightly damp cloth for cleaning around the edge of the door. Do not use a spray bottle! Water can penetrate into the lock and come into contact with the electrical components.

Packaging materials Sort at source in accordance with the recommendations of your local authority. **Scrapping** When the time comes for the machine to be scrapped, it should immediately be rendered unusable. Remove the plug and cut off the lead as short as possible. Contact your refuse collection department or your local authority for information on the correct way to dispose of the machine! The machine is manufactured and labelled for recycling. **Winter storage/Transport** Store the machine away from frost.

Avoid long journeys in extreme cold. Transport the machine in an upright position or lying on its back. **Overfill protection** The overfill protector starts pumping out water and closes off the water intake if the machine's water level exceeds the normal level. If the overfill protector starts up, shut off the water supply and phone for service. See 'Troubleshooting' on pages 26-28.

6 Child Safety! **Child-safe button lock** To prevent children starting the machine, you can activate a button lock. Proceed as follows: 1. Switch off the dishwasher with the main switch. 2. Hold in the Temperature and Drying buttons, and at the same time switch on the main switch. The temperature, drying and start symbols will then flash. Release the Temperature and Drying buttons. 4. Press the Program selection button. Once the symbol for Intensive wash lights up, the button lock has been activated.

5. Press the Start/Stop button to store the setting. Once the button lock has been activated, the Temperature and Drying symbols will flash when any of the buttons are pressed. To deactivate the button lock temporarily when you want to start the machine, press the Temperature and Drying buttons simultaneously. The button lock will then automatically switch on again after 3 minutes. To deactivate the button lock altogether, use the same procedure as for activation. When the symbol for Intensive wash goes out, the button lock has been deactivated. **Child-safe dishwashing** · Use the knife basket, or knife holder, for all long/sharp items. · Always close the door and start the program immediately once dishwasher detergent has been added. · Keep children away from the dishwasher when it is open.

There might be remains of dishwasher detergent present! · Do not allow children to use or play with the dishwasher. Always take particular care when the door is open. **Protect your children!** - Dishwasher detergent is corrosive! Store dishwasher detergent and rinse aid out of the reach of children! Should dishwasher detergent be swallowed, immediately drink one or two glasses of milk or water. Do not attempt to induce vomiting. Contact a doctor! Should dishwasher detergent come into contact with the eyes, rinse (for at least 15 minutes) with copious amounts of water.

Advice! You can read more about this in the Settings chapter. **7 Parts of the dishwasher*** 1. Knife basket 2. Upper basket 3. Lamp 4. Spray arms 5. Lower basket 6. Cutlery basket 7. Rinse Aid Filling 8. Dishwasher detergent compartment 9. Main switch 10. Program panel 11. Filter 12..



[Your user manual](#)
[MAYTAG MSE 760 FARS](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>