

WK-2 Keypad



 
Introduction

The McIntosh Model WK-2 Keypad is designed to remotely operate McIntosh A/V Control Centers, Preamplifiers and Multizone Controllers. The WK-2 also includes an IR Sensor which allows the IR Signal Commands from a Remote Control to be passed onto the McIntosh A/V Control Centers, Preamplifiers and Multizone Controllers. The Keypad allows Input Selection, Transport Functions, Tuner Functions, and Volume Level Adjustments.

Installation and Connection

The WK-2 Keypad mounts in a standard two-gang wall outlet box and connections are made using a RG59U or RG6 Coax Cable (300ft max.) with "F" Connectors at both ends. Connect the Coax Cable between the WK-2 and the "F" Connector on a McIntosh A/V Control Center, Preamplifier, Multizone Controller or Integrated Amplifier. Up to four keypads can be connected in parallel on the same coaxial line. When the WK-2 is to be connected to a McIntosh A/V Control Center that uses a Five Pin Terminal Connector instead of the "F" Coax Connector, connect the Center Conductor to Pin 4 and the Shield Conductor to Pin 5. Refer to figure 1.

Note: Before connecting the WK-2 Keypad to a McIntosh A/V Control Center, Preamplifier, Multizone Controller or Integrated Amplifier, make sure that the Main AC POWER Switch is in the Off Position (or remove the unit's AC Plug from the AC Wall Outlet).

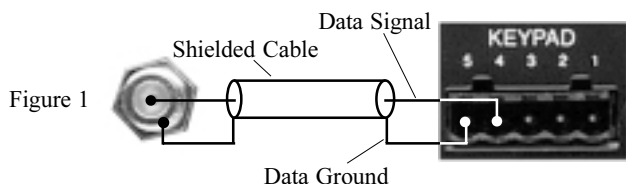

Operation

Power

Press the POWER Push-button to switch the Local Zone On or Off.

Note: When a zone is muted the Mute LED blinks On and Off to indicate muting is active.

Input Push-buttons

Press the Push-button of the desired signal source.

Mute Push-button

Press the MUTE Push-button to mute audio in the local zone. The Mute LED will blink On and Off to indicate muting is active. Press again to unmute.

0-9 Numbered Push-buttons

Press a Numbered Push-button to operate the optional McIntosh HC-1 Home Controller, select tracks on a CD or Laser Video Disc, Tuner Presets or any numbered operation.

Tuner Functions

Press AM or FM to select the desired broadcast band. Press Seek Up or Down to tune up or down the broadcast band.

Transport Operations

Press Stop, Back (back track), Next (next track) or Play to operate a CD player, Video Disc Player or Tape Recorder.

System Off

Press the Sys Off Push-button to turn Off the entire system including the Local Zone.

Part No. 040015

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>