

mellerware®

TRENDS FOR LIFE

MADAM STEAM / DRY IRON



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

 
 
 
 
m
1200W

2 YEAR
GUARANTEE

Model:
23002

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee

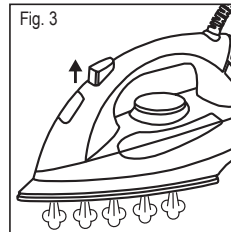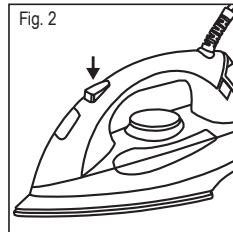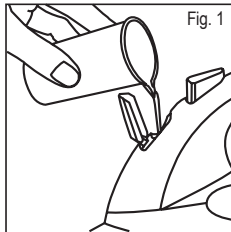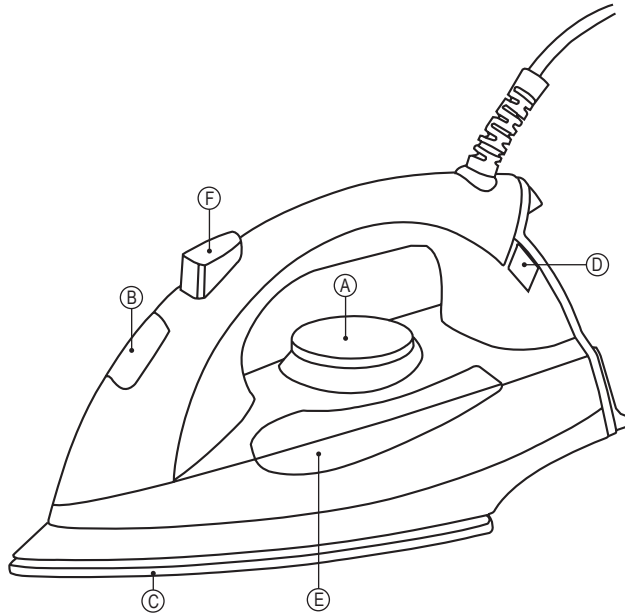

Description

- A Temperature gauge
- B Filling hole
- C Base
- D Pilot light
- E Reservoir water level visor
- F Dry / steam ironing button





Madam Steam / Dry Iron

Dear customer,
 Many thanks for choosing to purchase a Mellerware brand product. Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

Safety advice and CAUTIONS

- Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident.

Electrical safety:

- Do not use the appliance if the cable or plug is damaged.
- Ensure that the voltage indicated on the nameplate matches the mains voltage before plugging in the appliance.
- Connect the appliance to a base with an earth socket withstanding a minimum of 10 amperes.
- The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.
- Do not force the electrical connection wire. Never use the electric wire to lift up, carry or unplug the appliance.
- Do not wrap the power cord around the appliance.
- Do not allow the connection cable to come into contact with the appliance's hot surfaces.
- Check the state of the electrical connection cable. Damaged or tangled cables increase the risk of electric shock.
- Do not touch the plug with wet hands

Personal safety:

- Do not touch metal parts when it is operating, as it may cause serious burns.

Use and care:

- Fully unroll the appliance's power cable before each use.
- Do not adjust temperature dial past maximum

position.

- Disconnect the appliance from the mains when not in use and before undertaking any cleaning task.
- This appliance is for household use only, not professional or industrial use.
- This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people not use to its handling.
- This appliance should be stored out of reach of children and/or the disabled.
- Do not put the appliance away if it is still hot.
- Only use water with the appliance.
- It is advisable to use distilled water, especially if the water in your area contains clay or if it is "hard" (containing lime or magnesium).
- The minimum (MIN) setting does not mean that the iron is switched off.
- Do not use the appliance on any body part of a person or animal.
- Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

Instructions for use

Before use:

- Make sure that all the product's packaging has been removed.

Fill with water (Fig 1):

- It is essential to have filled the deposit with water to be able to work with steam.
- Open the lid of the filling mouth.
- Fill the compartment with cold water taking care to observe the MAX level.
- Close the lid of the mouth.

Use:

- Unroll the cable completely before plugging it in.
- Connect the appliance to the mains.
- The pilot light (D) will come on.
- Turn the thermostat control to the desired temperature position.
- Do not use temperatures higher than those indicated on the garments to be treated.

- * Temperature for synthetic fibres.
- ** Temperature for silk and wool.
- *** Temperature for cotton (minimum temperature for ironing with steam).
- Max Temperature for linen.

- Wait until the pilot light (D) has gone out which will indicate that the appliance has reached an





adequate temperature.

- During use the pilot light (D) will go on and off automatically, which indicates that the elements are working and that the desired temperature is being maintained.

Dry ironing:

- Put the dry / steam ironing button (F) into the dry position (Fig. 2).
- This position is for dry ironing (without steam).

Steam Ironing:

- Put the dry / steam ironing button (F) into the steam position (Fig. 3).
- It is only possible to iron with steam when the water compartment has water inside and the correct temperature setting is selected.

Once you have finished using the appliance:

- Select the minimum position (MIN) using the thermostat control.
- Unplug the appliance from the mains.
- Empty the water container.
- Clean the appliance.

Practical recommendations:

- Classify the garments into groups by ironing temperature. The appliance heats up more quickly than it cools down. Therefore, to avoid accidents, minimise energy consumption and optimise time. It is advisable to start off ironing items that require lower temperatures and progress to those that need higher temperatures.
- Pure wool fabrics (100%) can be ironed with the iron set to steam. Select a high steam temperature and place a cotton cloth between the iron's metal surface and the garment.

Cleaning

- Disconnect the appliance from the mains and allow it to cool before undertaking any cleaning task.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Never submerge the appliance in water or any other liquid or place it under running water.

How to deal with lime scale incrustations:

- For the appliance to work correctly it should be kept free of lime scale or magnesium incrustations caused by the use of hard water.
- To avoid this kind of problem it is advisable to use distilled water.
- However, if it is not possible to use the kind of water recommended above, you should periodically remove the lime scale from the appliance:
 - Every 6 weeks if the water is "very hard".
 - Every 12 weeks if the water is "hard".
- Homemade solutions are not recommended in the descaling of this appliance, such as the use of vinegar.





creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>