

mellerware®
makes life easier

EASY DRY
**electric
clothes dryer**

Reduces drying time

Automatic timer

10kg Capacity

Easy to store

 


complies with
INTERNATIONAL
IEC60355
SAFETY SPECIFICATIONS

m
1000W

2 YEAR
GUARANTEE

Model:
23700

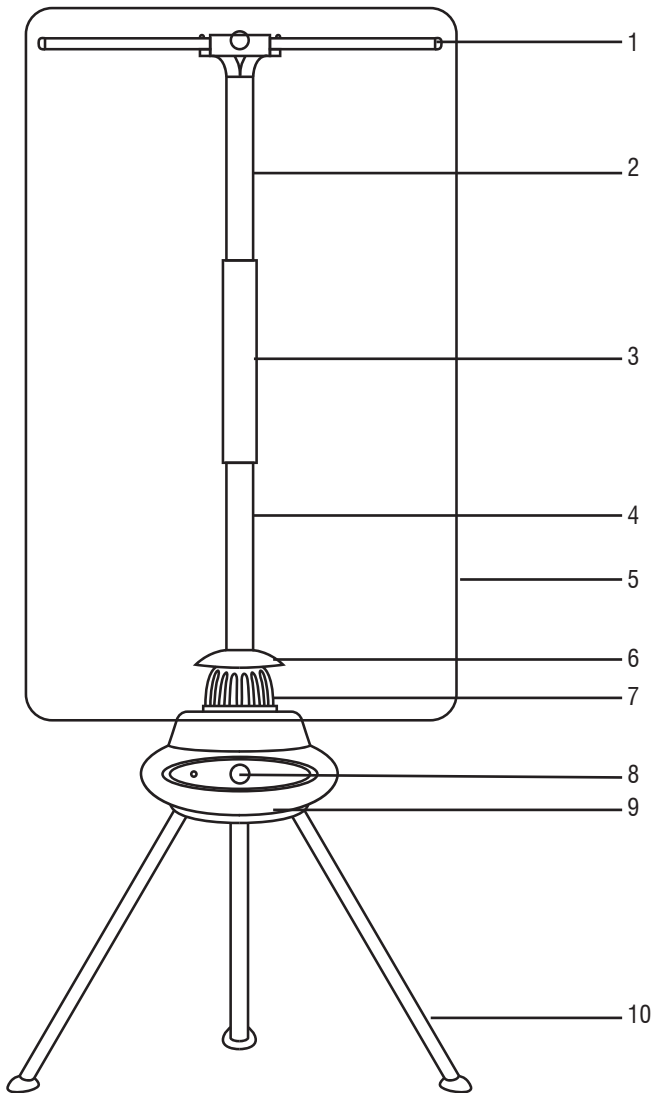

Description:

1. Clothes rack
2. Upper supporting tube
3. Connector
4. Lower support tube
5. Cover
6. Water proof plate
7. Air outlet
8. Timer control dial
9. Air inlet
10. Legs



Safety Instructions:

1. Always keep the appliance away from water and heat sources.
2. This appliance is for adult use only.
3. Children are to be supervised at all times to ensure that they do not play with the appliance.
4. To protect against electric shock, never immerse the appliance, its power cord or plug in water or any other liquid.
5. Never reach for any appliance that has fallen into water. Switch off the power at the wall socket immediately and then remove the plug. Do not re-use.
6. Ensure your hands are dry before operating the appliance.
7. Ensure the appliance is switched off before inserting the plug into the wall socket.
8. Do not touch the hot surfaces of the appliance while it is in use, wait for the appliance to cool down completely before touching the motor body or packing the appliance away.
9. Do not carry the appliance by the power cord or pull the power cord to remove the plug from the wall socket.
10. Do not operate the appliance with a damaged power cord or plug. Take it to your nearest authorized service centre for repair.
11. If the appliance stops unexpectedly or appears to malfunction, unplug it from the wall socket and discontinue use immediately.
12. Never leave the appliance unattended while it is connected to the wall socket.
13. Keep the appliance and power cord away from sources of heat, sharp objects or anything that may damage it.
14. Keep all ventilation slots clear of debris and do not cover.
15. Do not use the appliance outdoors.
16. Only use the appliance as described in this instruction manual.
17. Before use, please make sure clothes have already been spin-dried in a washing machine to ensure that the clothes are not dripping wet and to shorten the clothes drying period. This will also save energy.
18. Never touch the metal parts of the appliance while it is in use.
19. The clothes you plan to dry should be able to endure 70°C heat and above.
20. Total drying weight is a maximum of 10kgs.
21. The air-outlet and entry should be kept clear at all times to ensure good ventilation.
22. Never touch the appliance with wet hands.
23. The appliance must always be placed on a flat and stable surface.
24. Switch the appliance off and unplug it from the wall socket before undertaking any cleaning task.
25. Do not use the appliance near bath-tubs, showers, wash-basins or swimming pools.
26. Do not wrap the cable around the appliance while it is still hot.
27. Never operate the appliance directly below any air vents.
28. Do not connect the appliance to a device that will switch the appliance on automatically.
29. Do not cover the appliance while it is in use.
30. Do not connect the appliance to an extension cord.
31. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 
Features:

1. The appliance uses the static clothes drying method which is preferable to the traditional friction method as this method can damage clothes.
2. Clothes are protected against the elements unlike traditional clothes drying.
3. The high temperatures of the appliance kill bacteria on clothes.
4. In addition to drying clothes the appliance also heats the room.
5. The appliance is efficient, it takes 1-3 hours to dry clothes completely.
6. The appliance can be easily disassembled and takes up minimal storage space.




Assembly:


1. Insert the 3 legs into the corresponding holes on the bottom of the motor unit as per the below diagram.

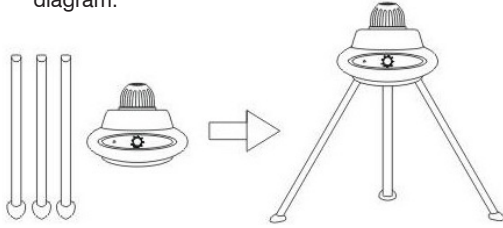

 
2. Connect the three tubes that form the support arm by screwing them in to each other

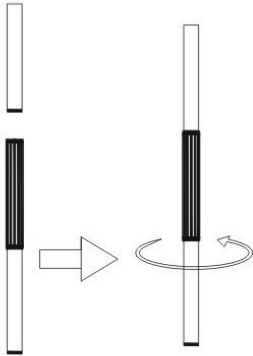

 
3. Fit the water-proof plate onto the lower supporting tube and then attach the lower supporting tube onto the motor body by screwing it in a clockwise direction.

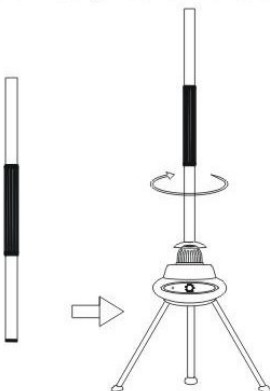

 4. Insert the hanger into the upper supporting tube and then pull the aluminum hangers down into the level position.

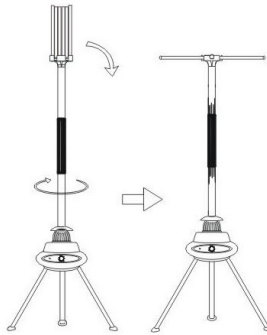


 5. Hang your clothes on the clothes racks, then put on the cover over the unit and zip it closed.

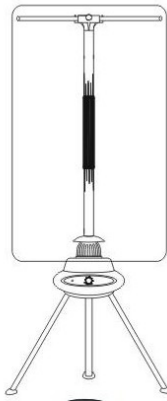

Operation instructions:

 1. Insert the plug into power socket; make sure the voltage on the rating label corresponds to the voltage of the mains socket. Ensure the mains power is off when plugging the appliance in and unplugging it.
2. Once you have plugged the appliance in switch on the power at the wall socket.

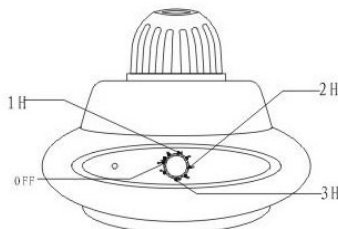



3. Rotate the "Timer Control Dial" to the "On" position and set the drying time.
4. You can set the drying time to a maximum of three hours, remember never to leave the appliance unattended when it is connected to the power socket.
5. To switch the power off, rotate the dial to the "Off" position.
6. Rotate the "Timer Control Dial" anti-clockwise to set it to work without the timer, the unit will continue working until manually switched off.

Cleaning:

1. Ensure the appliance is unplugged from the mains outlet before undertaking any cleaning task.
2. Once the appliance has cooled you can clean it with a damp cloth.
3. Never use solvents with an acid or base Ph to clean the appliance.
4. Use a soft cloth and avoid using any detergents.
5. Wipe the appliance dry after cleaning.

Number	Problem	Possible cause
1.	Clothes are taking too long to dry (180min)	1. Clothes are too thick. 2. Clothes were not spin-dried by the washing machine. 3. The cover isn't closed properly and air is leaking.
2.	The appliance suddenly stops working	1. The air-entry or outlet is blocked by clothes or other objects and the overheat protection has switched the appliance off. 2. The timer has completed the set time and switched the appliance off.
3.	Power indicator light doesn't illuminate and the appliance is not working.	1. There has been a power failure. 2. The power socket's fuse has melted or broken. 3. The appliance's fuse has melted or broken.



creative housewares

🏠 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

✉ P.O. Box 6156 Parow East, 7501, South Africa

☎ +27 21 931 8117 📠 +27 21 931 4058

Service Centre Helpline: 086 111 5006

🌐 www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>