

mellerware®

TRENDS FOR LIFE



oscillating fan heater



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
2000W

CE
2 YEAR
GUARANTEE


Model:
3 5 2 2 0

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year
guarantee

KEY AND CHARACTERISTICS:

1. Pilot Lamp
2. ON/OFF Selector Switch
3. Thermostat
4. ON/OFF Oscillating Switch

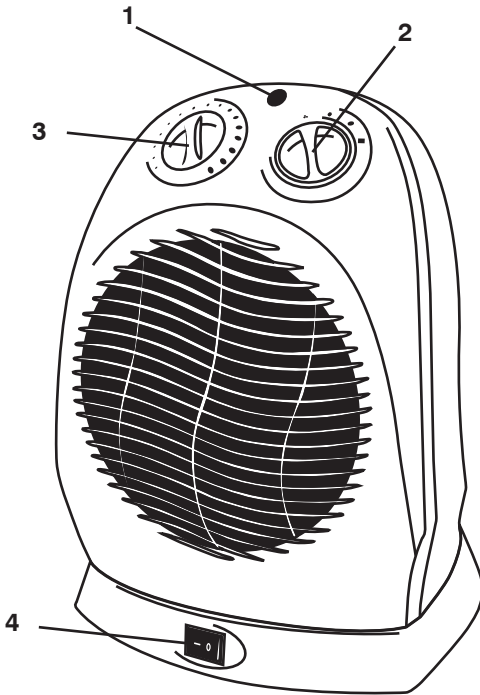

IMPORTANT SAFEGUARDS:

- Check that the mains voltage corresponds with the rating of the appliance.
- Do not touch any hot surfaces - use handles or knobs.
- To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
- Do not leave any appliance unattended while it is in operation.
- Close supervision is necessary when the appliance is used near children or disabled persons.
- Unplug from power outlet when not in use or before cleaning. Allow it to cool sufficiently before packing away or cleaning.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner. If the power supply cord or appliance is damaged, it must be repaired or replaced by the manufacturer or an authorised service agent.
- The use of accessory attachments is not recommended.
- Do not use outdoors.
- Do not let the power supply cord hang over the edge of a table or counter and do not let the cord come into direct contact with any hot surfaces.
- To disconnect, remove the plug from the power outlet. Do not pull the plug out via the power supply cord.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
- Never use this appliance near a bath, shower or swimming pool.
- Never place flammable objects or clothing on top of the heater.
- Allow a 50cm safe area around the heater on top and sides with a 120cm safe area in front.
- Never use a heater in a room with explosive gas such as petrol or while using any kind of flammable glues, sprays or solvents.
- Prevent overheating of the appliance by keeping the air inlets and outlets clean and free of anything that may cause blockage. Check all inlets and outlets from time to time for accumulated dust. **DO NOT COVER.**
- If overheating should occur, the built-in overheating safety device will shut the appliance off.
- Do not insert any foreign objects into the grill.
- Keep the rear grill clear of any draped fabric or curtains.



OPERATION OF YOUR HEATER:

- **NEVER COVER THE HEATER**
1. Remove the heater from all packaging and place it in a desired location.
 2. Ensure that there is a safe area between the heater and furniture, curtains etc.
 - 50cm safe area top and sides
 - 120cm safe area in front
 3. Unwind the power cord and plug it into the power outlet.
 4. To activate the heater, turn the knob clockwise to the “*” position for cool air.
 - I is for low power
 - II is for maximum power

AUTO SAFETY SHUT-OFF:

- The heater has a built-in safety device which will switch the heater OFF in case of accidental overheating.
 - To reset the heater, follow these steps;
1. Turn the control setting to the “O” position.
 2. Unplug the heater and wait 5-10 minutes for the unit to cool down.
 3. After the unit has cooled down, plug it in and operate normally.
 4. Turn the selector switch into desired position (Fan, Low or High).
 5. Turn the thermostat switch to the desired temperature position.
 6. When you feel the room temperature is sufficient, turn the thermostat anti-clockwise slowly to the minimum direction until the appliance switches off.
 7. The thermostat switch will keep the desired room temperature automatically.
 8. You can also turn the thermostat switch anti-clockwise to the minimum position or turn it clockwise to the maximum position to decrease or increase the temperature.

CLEANING AND MAINTENANCE:

- **DO NOT IMMERSE IN WATER OR ANY LIQUID**
- Be sure to switch off the power supply and remove the plug from the power outlet before cleaning.
- Wait for the heater to cool down sufficiently.
- Clean the body of the heater with a damp cloth. **DO NOT ALLOW WATER INTO THE APPLIANCE.**
- **DO NOT** use soap or chemicals which may damage the housing of the heater.
- Allow sufficient drying time before operating again.
- Clean the air inlets and outlets regularly with a vacuum cleaner.
- When the unit is not in use, we recommend that the heater is repacked into it's original packaging and stored in a cool, dry place.



creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>