




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE KM 342G MASTERCHEF GAS COOKTOP. You'll find the answers to all your questions on the MIELE KM 342G MASTERCHEF GAS COOKTOP in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MIELE KM 342G MASTERCHEF GAS COOKTOP
User guide MIELE KM 342G MASTERCHEF GAS COOKTOP
Operating instructions MIELE KM 342G MASTERCHEF GAS COOKTOP
Instructions for use MIELE KM 342G MASTERCHEF GAS COOKTOP
Instruction manual MIELE KM 342G MASTERCHEF GAS COOKTOP

Miele

Operating Instructions

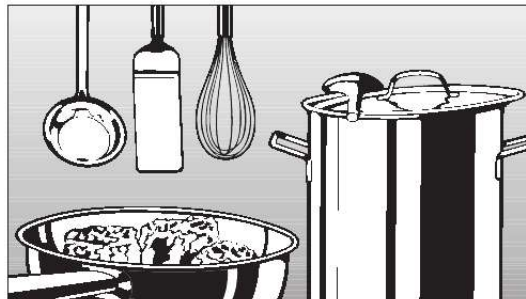

Gas Cooktop
KM 342
KM 344



To prevent accidents and machine damage, read the instructions **before** installation or use.

USA CDN

M.-Nr. 05 649 300



[Your user manual](#)
[MIELE KM 342G MASTERCHEF GAS COOKTOP](#)

Manual abstract:

For safety reasons never use the cooktop to warm the room. Install the cooktop in a room that has sufficient ventilation. This appliance must not be operated outdoors. Do not use aluminum foil to line any part of the cooktop. For proper lighting and performance of the burners, keep the igniters clean and dry. Make sure all components of the gas burners are assembled correctly before using the cooktop. Ensure that any burners in use are always covered with a pan. Do not use pans that extend past the burner grate. Using larger pans may cause the flames to spread out and damage the surrounding countertop or other countertop appliances. For safety and stability, do not use pans with a bottom diameter smaller than the burner grate.

Only certain types of glass, ceramic or other glazed cookware are suitable for use on a cooktop without breaking due to a sudden temperature change. Do not store aerosols, gasoline, combustibles or any other flammable materials underneath or adjacent to the cooktop. Protection from damage Do not use a steam cleaner to clean the appliance. Steam could penetrate electrical components and cause a short circuit. Spills containing salt or sugar should be removed immediately.

Do not drop anything on the ceramic surface of the appliance. Although the ceramic glass is shock and scratch resistant, it is not shock or scratch proof. 5 IMPORTANT SAFETY INSTRUCTIONS Personal safety The burners become very hot when in use. Make sure that no one comes in contact with them. Do not leave children unattended in an area where the appliance is in use.

Do not store toys or items of interest to children in cabinets above or behind the cooktop. Children climbing onto the cooktop to reach these items may become seriously injured. Do not allow children to operate or play with the cooktop. Keep all pans out of the reach of children. Use only dry, heat resistant potholders. Moist or damp potholders used on hot surfaces can result in steam burns. Do not let the potholder touch the hot burners. Do not use towels or other bulky items near the appliance. Be aware of loose fitting or hanging garments when operating the cooktop, they may present a fire hazard. Do not heat unopened food containers.

Built-up pressure may cause the container to burst and result in injury. Do not store items on the cooktop when not in use. Do not let cooking grease or other flammable materials accumulate on the appliance. Do not leave the cooktop unattended while in use. Boil-overs cause smoking, and greasy spill-overs may ignite. Do not use water on grease fires. Smother any fire or flame, or use a dry chemical or foam-type extinguisher. Do not flambé under an exhaust hood. Flames could be drawn up into the hood by the suction or the grease filters may ignite. For safety reasons the flame should be adjusted to be the same size as the bottom of the pan or smaller.

Do not use small pans with high flame settings as the flames can climb the sides of the pan. Only use cooking utensils suitable for cooktop use. Always position pan handles and utensils inward so they do not extend over adjacent work areas, burners, or the edge of the cooktop. If there is a drawer directly underneath the appliance without any wooden base in between, ensure that no aerosols, combustible liquids or other easily flammable materials are kept in it. If cutlery inserts are to be placed in the drawer, these must be made of heat-resistant material.

6 IMPORTANT SAFETY INSTRUCTIONS Damage to the appliance In the event of damage or a defect, turn off the appliance immediately. Turn off the gas shut off valve and disconnect completely from the electricity supply. Contact the Miele Technical Service Department. Do not use the appliance until it has been repaired. Ensure power is not supplied to the appliance while repair work is carried out.

Any breakages or cracks in the ceramic surface of the appliance are defects and must be treated as such. Do not use the appliance until it has been repaired. Repairs should only be performed by qualified technicians to ensure safety. Repairs and other work by unqualified persons could be dangerous. Under no circumstance open the outer casing of the appliance. While the appliance is under warranty repairs should only be performed by a Miele authorized service technician..



[Your user manual](#)

[MIELE KM 342G MASTERCHEF GAS COOKTOP](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>