




# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for MIELE KM 443 ELECTRIC COOKTOP. You'll find the answers to all your questions on the MIELE KM 443 ELECTRIC COOKTOP in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual MIELE KM 443 ELECTRIC COOKTOP**  
**User guide MIELE KM 443 ELECTRIC COOKTOP**  
**Operating instructions MIELE KM 443 ELECTRIC COOKTOP**  
**Instructions for use MIELE KM 443 ELECTRIC COOKTOP**  
**Instruction manual MIELE KM 443 ELECTRIC COOKTOP**

**Miele**

## Operating Instructions

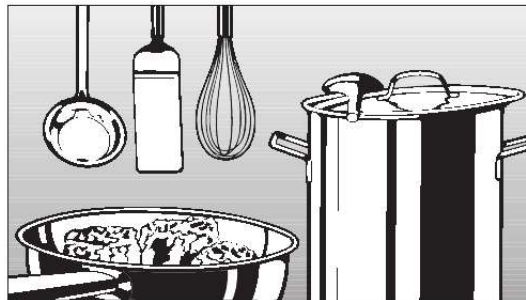

Ceramic Cooktop  
KM 443

To prevent accidents and  
appliance damage,  
read these instructions  
**before** installation or use.

USA CDN

M.-Nr. 04 776 091



[Your user manual](#)  
[MIELE KM 443 ELECTRIC COOKTOP](#)

**Manual abstract:**

Steam could penetrate electrical components and cause a short circuit. Never place hot pots or pans over the touch controls, as the electronics may be damaged. Use Do not use the appliance until it is properly installed in the countertop. This appliance is equipped with an overheating protection. For more information, see "Overheating protection". Never use the appliance to warm or heat the room. Due to the high temperatures radiated objects left near the appliance could catch fire. **4 IMPORTANT SAFETY INSTRUCTIONS Injury prevention** Do not touch the cooktop or the area surrounding it during or immediately after use. The cooktop may be hot even though it is dark in color. Areas near it may become hot enough to cause burns.

During or after use, do not touch, or let clothing or other flammable materials touch the cooktop or surface areas near it until they have cooled. Wait for the residual heat indicator lights go out. **CAUTION:** Do not store toys or items of interest to children in cabinets above or behind the appliance. Children climbing onto the cooktop to reach these items may be injured. Children should not be left alone in the area where the appliance is in use. They should never be allowed to sit or stand on any part of the appliance. Protect your hands with insulated gloves or potholders when using the appliance. Only use dry, heat resistant potholders. Moist or damp potholders used on hot surfaces can result in steam burns. Do not let the potholder touch the heating element.

Do not use towels or other bulky items near the appliance. Clean the cook top with caution If a wet sponge or cloth is used to wipe spills off a hot cooking area, be careful to avoid steam burns. Also, some cleaners can produce harmful fumes if applied to a hot surface. Keep all pans out of reach of children.

**Danger of burns!** Pan handles should be turned in and not extend over the area of a burner to reduce risk of burns, ignition of flammable materials, and spills due to unintentional contact with the pan. **5 IMPORTANT SAFETY INSTRUCTIONS** Use the proper pan size. Select pans having flat bottoms large enough to cover the surface unit heating element. The use of undersized pans will expose a portion of the heating element to direct contact and may result in ignition of clothing. Proper relationship to burner will also improve efficiency. Only certain types of glass, glass/ceramic, ceramic earthenware, or other glazed pots and pans are suitable for range-top service without breaking due to sudden change in temperature.

Do not heat unopened food containers. Built-up pressure may cause the container to burst and result in injury. Never leave surface units unattended at high heat settings. Boil overs cause smoking and greasy spillovers may ignite. Before removing pots and pans, be sure to turn off the burners. Do not store items on the appliance when not in use. Items could melt or catch fire from residual heat or if the cooktop is turned on inadvertently. Never cover the cooktop with a cloth. A fire could result. Never leave the cooktop unattended when cooking with oil or fat.

Overheated fat could ignite. Always heat oil slowly, monitoring it as it heats. Do not use water on grease fires. Smother any fire or flame, or use a dry chemical or foam-type extinguisher. When frying food, make sure that the food is as dry as possible before placing it in the oil.

Moisture can cause hot oil to splatter and boil over. Do not flambé under an exhaust hood. Flames could be drawn up into the hood by the suction and possibly cause the grease filters to ignite. Do not let cooking grease or other flammable materials accumulate on the appliance. Be aware of loose fitting or hanging garments when operating the cooktop, they may present a fire hazard.

Flammable materials should not be stored in a oven or near surface units. If there is a drawer directly underneath the appliance without any wooden base in between, ensure that no aerosols, combustible liquids or other easily flammable materials are kept in it. If cutlery inserts are to be placed in the drawer, they must be made of heat-resistant material..



[Your user manual](#)

[MIELE KM 443 ELECTRIC COOKTOP](#)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>