


# Miele

## Operating and installation instructions

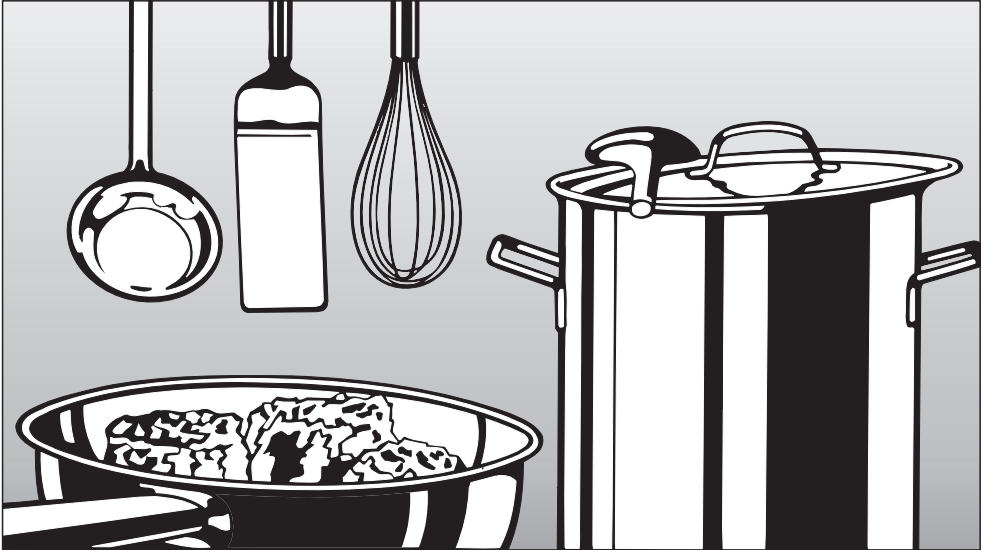

### Ceramic hobs with induction

KM 6113 / KM 6112 / KM 6115

KM 6116 / KM 6117 / KM 6118

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 07 798 970

# Contents

---

<b>Guide to the appliance</b> .....	4
Models .....	4
KM 6113 .....	4
KM 6112 / KM 6115 / KM 6116 .....	5
KM 6117 .....	6
KM 6118 .....	7
Control panel .....	8
Cooking zones .....	10
<b>Warning and Safety instructions</b> .....	12
<b>Caring for the environment</b> .....	18
<b>Before using for the first time</b> .....	19
Cleaning for the first time .....	19
Before using for the first time .....	19
<b>Induction</b> .....	20
The induction principle .....	20
Noises .....	21
Pans .....	22
<b>Operation</b> .....	23
How the hob is operated .....	23
Switching on .....	24
Settings .....	25
Auto heat-up .....	26
Booster function .....	28
Keeping warm function .....	30
Switching off and residual heat indicators .....	31
<b>Tips on saving energy</b> .....	32
<b>Timer</b> .....	33
Minute minder .....	33
To switch a cooking zone off automatically .....	34
To use both timer functions at the same time .....	35


<b>Safety features</b> . . . . .	36
Safety lock / System lock . . . . .	36
Safety switch-off. . . . .	38
Overheating protection . . . . .	39
<b>Cleaning and care</b> . . . . .	41
<b>Additional functions</b> . . . . .	43
Reset . . . . .	43
Programming . . . . .	44
<b>Problem solving guide</b> . . . . .	47
<b>Optional accessories</b> . . . . .	51
<b>Safety instructions for installation</b> . . . . .	52
<b>Building-in dimensions</b> . . . . .	58
KM 6112. . . . .	58
KM 6113. . . . .	59
KM 6115. . . . .	60
KM 6116. . . . .	61
KM 6117. . . . .	62
KM 6118. . . . .	63
<b>Installing the hob</b> . . . . .	64
<b>Electrical connection</b> . . . . .	65
Wiring diagram . . . . .	66
<b>After sales service, data plate</b> . . . . .	67

# Guide to the appliance

---


## Models

**KM 6113**

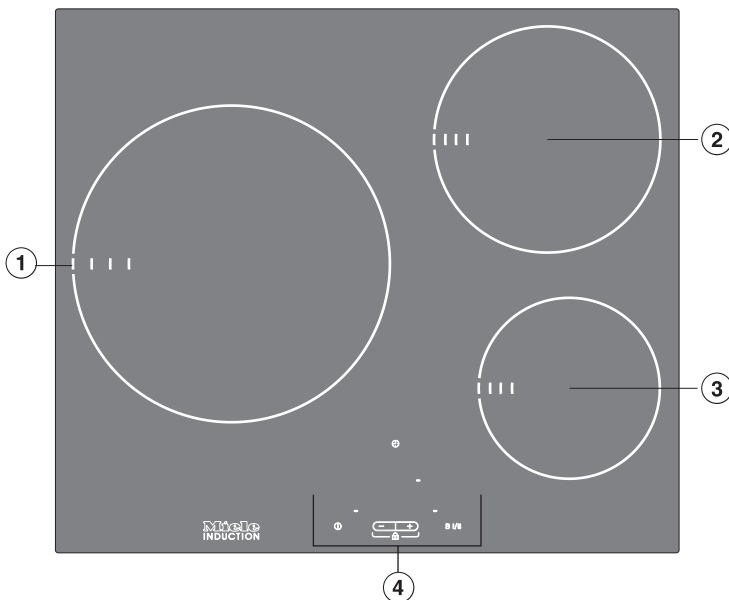

- ① Cooking zone with TwinBooster
- ②③ Cooking zones with Booster
- ④ Control panel

KM 6112 / KM 6115 / KM 6116

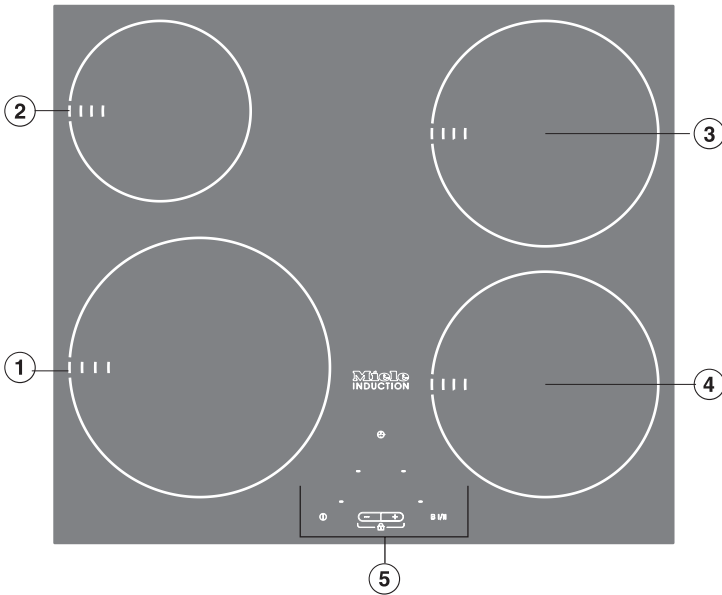


- ① Cooking zone with TwinBooster
- ②③④ Cooking zones with Booster
- ⑤ Control panel

# Guide to the appliance

---

KM 6117

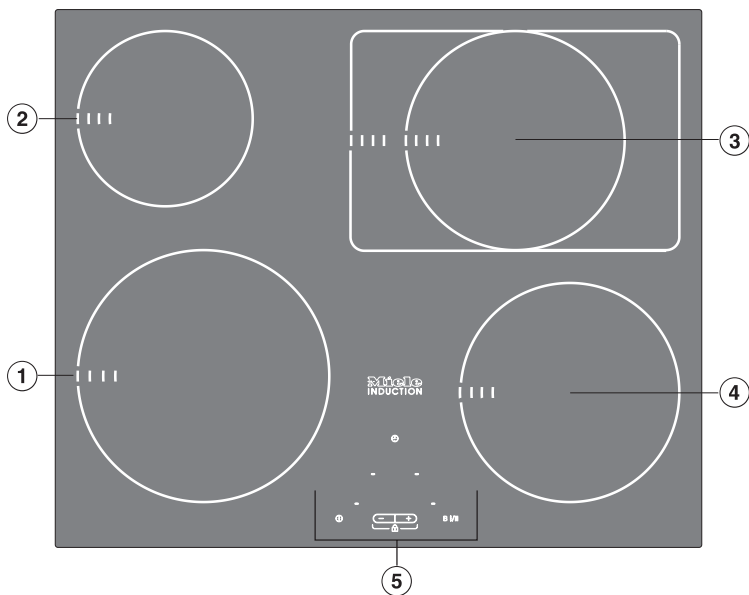


①③ Cooking zone with TwinBooster

②④ Cooking zones with Booster

⑤ Control panel

KM 6118

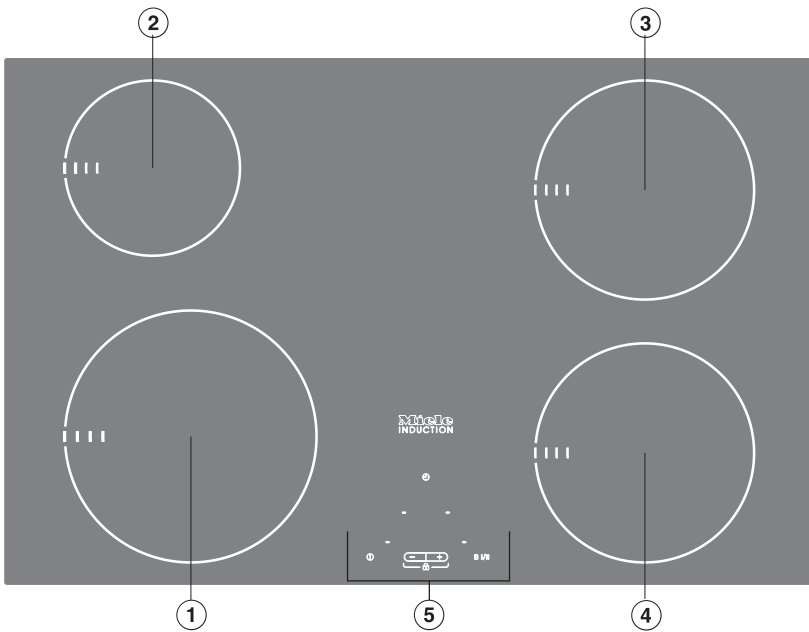


- ① Cooking zone with TwinBooster
- ②③④ Cooking zones with Booster
- ⑤ Control panel

# Guide to the appliance

---

## Control panel

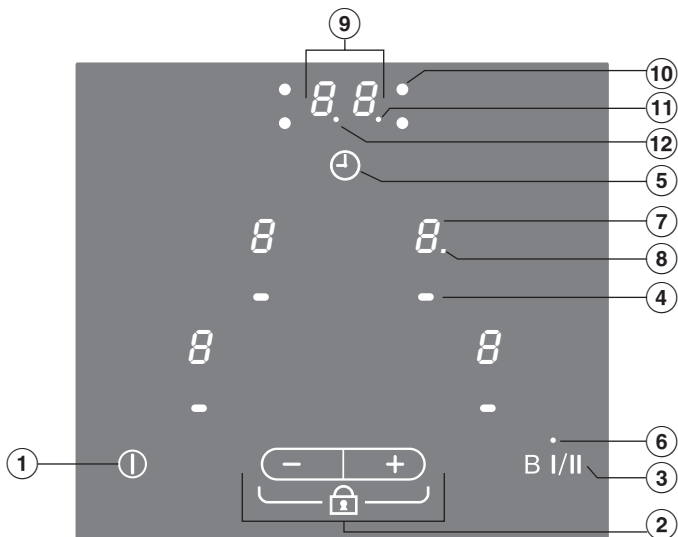



## Sensor controls

- ① For switching the hob on and off
- ② - For setting the power level
  - For activating the lock
  - For setting the time
- ③ Booster/TwinBooster
- ④ For selecting the cooking zone
- ⑤ - For selecting the timer
  - For switching between the timer functions
  - For selecting the switch-off time (see "Switching off a cooking zone automatically")

## Indicator lamps

- ⑥ Booster/TwinBooster

## Cooking zone displays

- ⑦
  - 0* = Cooking zone ready for use
  - h* = Keeping warm function
  - 1 to 9* = Power levels
  - ,* = TwinBooster level 1
  - ,,* = Booster/TwinBooster level 2
  - ⏟* = No pan on cooking zone or pan unsuitable (see "Induction")
  - ≡* = Residual heat
  - F* = Fault (see "Safety switch-off")
  - R* = Auto heat-up when the power level range has been extended




- ⑧ Indicator lamp for Auto heat-up or extended power setting (see "Programming"), e.g. the back right-hand cooking zone

 



## Timer display

- ⑨
  - 00 to 99* = Time in minutes
  - 0.h to 9.h* = Time in hours
- ⑩ Indicator lamp for relevant zone, e.g. back right-hand cooking zone
- ⑪ Indicator lamp for minute minder
- ⑫ Indicator light for half hours with a minute minder time of more than 99 minutes





# Guide to the appliance
 
## Cooking zones

Cooking zone	KM 6113	
	Minimum to maximum Ø in cm*	Rating in watts for 230 V**
	18 - 28	Normal 2600 TwinBooster level 1 3000 TwinBooster level 2 3700
	14 - 20	Normal 1850 Booster 3000
	10 - 16	Normal 1400 Booster 2200
		Total: 7400

Cooking zone	KM 6112 / KM 6115 / KM 6116 / KM 6118	
	Minimum to maximum Ø in cm*	Rating in watts for 230 V**
	16 - 23	Normal 2300 TwinBooster level 1 3000 TwinBooster level 2 3700
	10 - 16	Normal 1400 Booster 2200
	14 - 20	Normal 1850 Booster 3000
	14 - 20	Normal 1850 Booster 3000
		Total: 7400

## Guide to the appliance

Cooking zone	KM 6117	
	Minimum to maximum Ø in cm*	Rating in watts for 230 V**
	16 - 23	Normal 2300 TwinBooster level 1 3000 TwinBooster level 2 3700
	10 - 16	Normal 1400 Booster 2200
	14 - 20 /  20 x 30	Normal 1850 TwinBooster level 1 2500 TwinBooster level 2 3000 Normal 2300 TwinBooster level 1 3000 TwinBooster level 2 3700
	14 - 20	Normal 1850 Booster 3000
		Total: 7400

\* Pans of any diameter within the given range may be used.

\*\* The wattage quoted may vary depending on the size and material of the pans used.

# Warning and Safety instructions

---

This appliance complies with all relevant local and national safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before installation and before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

## Correct application

► This hob is not designed for commercial use. It is intended for use in domestic households and in similar working and residential environments such as:

- Shops
- Offices and showrooms

and by residents in establishments such as:

- Hostels and guest houses.

► The appliance is intended for domestic use only to cook food and keep it warm.

Any other use is not supported by the manufacturer and could be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

► This hob is not intended for outdoor use.

► This appliance is not intended for use by people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised whilst using it, or have been shown how to use it by a person responsible for their safety.

## Safety with children

▶ Use the safety lock to prevent children operating the appliance or altering the settings.

▶ Keep children away from the appliance at all times. It is not a toy! To avoid the risk of injury, do not allow them to play with it or use the controls. They will not understand the potential dangers posed by it. They should be supervised whenever you are working in the kitchen.

▶ Older children may use the appliance only when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

▶ The appliance gets hot when in use and remains hot for quite a while after being switched off. To safeguard against burning, keep children well away from the appliance at all times.

▶ Do not store anything which might arouse a child's interest in storage areas above or next to the hob. Otherwise they could be tempted into climbing onto the appliance with the risk of burning themselves.

▶ Keep all pans out of reach of children. Turn pan handles inwards away from the edge of the hob. Danger of burning or scalding. Special hob guards are available from good retail outlets.

▶ Packaging, e.g. cling film, polystyrene and plastic wrappings, must be kept out of the reach of babies and young children. Danger of suffocation. Dispose of or recycle all packaging safely as soon as possible.

# Warning and Safety instructions

---

## Technical safety

► Before installation, check the appliance for visible signs of damage. Do not install and use a damaged appliance. It could be dangerous.

► The electrical safety of this appliance can only be guaranteed if correctly earthed. It is most important that this basic safety requirement is observed and regularly tested, and where there is any doubt, the electrical system in the house should be inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

► Before connecting the appliance, make sure that the connection data on the data plate (voltage and frequency) match the mains electricity supply. This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.

► For safety reasons, this appliance may only be used after it has been built in.

► Do not open the casing of the appliance. Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.

► Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. Miele cannot be held liable for unauthorised work.

► During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. Ensure that power is not supplied to the appliance until after it has been installed or until after any maintenance or repair work has been carried out.

► If the hob is fitted with a communication module, in addition to disconnecting the hob, this module must also be disconnected from the mains electricity during installation and maintenance of the hob as well as while any repair work is being carried out. Ensure that power is not supplied to the hob or the communication module until the hob has been installed or until after any maintenance or repair work has been carried out.

► While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by Miele. Otherwise the guarantee is invalidated.

# Warning and Safety instructions

---

▶ Faulty components must only be replaced by genuine Miele original spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

▶ If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a specialist connection cable of type H 05 V V-F (pvc insulated), available from Miele.

▶ Do not connect the appliance to the mains electricity supply by a multi-socket adapter or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

▶ Do not use the hob if it is faulty, or if the ceramic surface is cracked, chipped or damaged in any way. Switch it off immediately, and disconnect it from the mains electricity supply. Danger of electric shock.

▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage caused by cockroaches or other vermin will not be covered by the guarantee.

## Correct use

▶ For people fitted with a heart pacemaker:

Please note that the area immediately surrounding the hob is electromagnetically charged. It is unlikely to affect a pacemaker. However, if in any doubt, consult the manufacturer of the pacemaker or your doctor.

▶ To prevent damage to items which are susceptible to magnetic fields, e.g. credit cards, diskettes, pocket calculators etc, do not leave them in the immediate vicinity of the hob.

▶ The appliance gets hot when in use and remains hot for quite a while after being switched off. There is a danger of burning until the residual heat indicators go out.

▶ Do not leave the appliance unattended whilst it is in use. Pans that have boiled dry can cause damage to the ceramic surface for which Miele cannot be held liable. Boiling fat or oil could ignite and cause a fire.

▶ If oil or fat does catch fire, do not attempt to put out the flames with water. Use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.

▶ Use heat-resistant pot holders or gloves when using the appliance. Do not let them get damp or wet, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.

# Warning and Safety instructions

---

▶ Do not flambé under a cooker hood. The flames could set the cooker hood on fire.

▶ Do not use the appliance as a resting place for anything else. Take particular care never to place cutlery or other metal objects on the appliance. When the appliance is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of metal objects heating up, with a danger of burning.

Depending on the material, other objects left on the hob could also melt or catch fire.

Damp pan lids might adhere to the ceramic surface and be difficult to dislodge.

Switch the cooking zones off after use.

▶ Do not cover the appliance, e.g. with a cloth, kitchen foil, etc. This could be a fire hazard if the appliance is switched on by mistake.

▶ Do not use plastic or aluminium foil containers. These melt at high temperatures and could catch fire.

▶ Do not heat up unopened tins of food on the hob, as pressure will build up in the tin, causing it to explode. This could result in injury and scalding or damage.

▶ Do not use pots and pans on the ceramic hob with bases with pronounced edges or ridges, e.g. cast iron pans. These could scratch or scour the hob surface permanently.

▶ Never heat an empty pan unless the manufacturer of the pan expressly states that you can do so. Because induction heating works extremely quickly the base of the pan could heat up to the temperature at which oil or fat self-ignites within a very short time.

▶ Keep the hob clean. Grains of salt, sugar and sand (e.g. from cleaning vegetables) can cause scratches.

▶ Never place hot pans on the area around the controls. The electronic unit underneath could get damaged.

▶ Do not drop anything on the ceramic surface. Even a light object could cause damage in certain circumstances.

▶ Do not allow either solid or liquid sugar, or pieces of plastic or aluminium foil to get onto the cooking zones when they are hot. If this should occur, switch off the appliance, and carefully scrape off all the sugar, plastic or aluminium residues from the hob whilst they are still hot, using a shielded scraper blade.

Take care not to burn yourself.

If residues are allowed to cool before being removed, the ceramic surface would be susceptible to pitting or even cracking.

Clean the appliance once it has cooled down.



# Warning and Safety instructions

---

▶ When using an electrical appliance, e.g. a hand-held food blender, near the appliance, ensure that the cable of the electrical appliance cannot come into contact with the hot appliance. The insulation on the cable could become damaged, giving rise to an electric shock hazard.

▶ This appliance is fitted with a cooling fan. If a drawer is fitted directly underneath the hob, ensure that there is sufficient space between the drawer and its contents and the underside of the appliance in order to ensure sufficient ventilation for the hob. Do not store pointed or small items or paper in the drawer. They could get in through the ventilation slots or be sucked into the housing by the fan and damage the fan or impair cooling.

▶ Spray canisters, aerosols and other inflammable substances should not be stored in a drawer under the hob. Cutlery inserts must be heat-resistant.

▶ Metal utensils stored in a drawer under the hob can become hot if the induction hob is used intensively for a long time.

▶ Always ensure that food is sufficiently cooked or reheated. Some foods may contain micro-organisms which are only destroyed by thorough cooking at a sufficiently high temperature for long enough. Therefore, when cooking or reheating food such as poultry, it is particularly important that the food is completely cooked through. If in doubt, select a longer cooking or reheating time.

▶ Do not use two pans on a cooking/extended zone at the same time.

▶ If the appliance is installed behind a kitchen furniture door, it may only be used with the furniture door open. Do not close the door whilst the hob is in use or whilst there is any residual heat left in the appliance.

▶ If the appliance is installed behind a kitchen furniture door, it may only be used with the furniture door open. Only close the door when the appliance is switched off and the residual heat indicators have gone out.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

# Caring for the environment

---


## Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and should be recycled.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

## Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

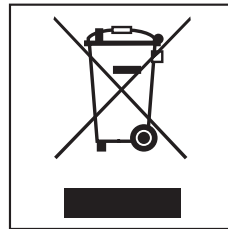

Please dispose of it at your local community waste collection/recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

## Before using for the first time

---

Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service, data plate" section of this booklet.

### Cleaning for the first time

- Remove any protective wrapping and adhesive labels.
- Before using for the first time, clean the appliance with a damp cloth only and then wipe dry.

### Before using for the first time

On hobs with bevelled glass edges, a small gap may be visible between the hob and the worktop during the first few days after installation. This gap will reduce with time as the appliance is used and will not affect the electrical safety of your appliance.

When the appliance is used for the first time, it may give off a slight smell and some vapours. This smell will be less noticeable with each subsequent use before dissipating completely.

The smell and any vapours given off do not indicate a faulty connection or appliance and they are not hazardous to health.

Please note that the heating up time on induction hobs is very much shorter than on conventional hobs.

# Induction

---

## The induction principle

An induction coil is located under each cooking zone. When a cooking zone is switched on, this coil creates a magnetic field which impacts directly on the base of the pan and heats it up. The cooking zone itself is heated up indirectly by the heat given off by the pan.

An induction cooking zone only works when a ferromagnetic pan is placed on it (see "Pans").

Induction automatically recognises the size of the pan, i.e. heat is only generated in the area covered by the base of the pan.

The cooking zone **will not work:**

- if it is switched on without a pan in place, or if the pan is unsuitable (non-magnetic base).
- if the diameter of the base of the pan is too small.
- if the pan is taken off the cooking zone when it is switched on.

If this happens,  $\mathcal{U}$  will flash in the relevant cooking zone display alternating with the power setting selected. After a while, the  $\mathcal{U}$  will light up continuously on its own.

If a suitable pan is placed on the cooking zone within 3 minutes, the  $\mathcal{U}$  will go out and you can continue as normal.

If no pan or an unsuitable pan is placed on the cooking zone, the cooking zone and the hob will switch off automatically after 3 minutes.

Take particular care never to place cutlery or other metal objects on the hob. When the appliance is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of metal items heating up with the danger of burning.  
Switch the cooking zones off after use.

## Noises

When using an induction cooking zone, the following noises can occur in the pan, depending on what it is made of and how it has been constructed.

- On the higher power settings, it might buzz. This will decrease or cease altogether when the power setting is reduced.
- If the pan base is made of layers of different materials (e.g. in a sandwiched base), it might emit a cracking sound.
- Whistling might occur if linked zones (see "Booster function") are being used at the same time, and the pans also have bases made of layers of different materials.
- You might hear a clicking sound from the electronic switches, especially on lower settings.

The appliance has a cooling fan to help extend the life of the electronics. When the hob is being used intensively, this will come on and you will hear a whirring sound. The fan may continue to run after the appliance has been switched off.

# Induction

---

## Pans

### **Suitable pans include:**

- stainless steel pans with a magnetic base
- enamelled steel pans
- cast iron pans

### **Unsuitable pans:**

- stainless steel pans without a magnetic base
- aluminium and copper pans
- glass, ceramic or earthenware pots and pans

To test whether a pot or pan is suitable for use on an induction hob, hold a magnet to the base of the pan. If the magnet sticks, the pan is suitable.

Please be aware that the properties of the pan base can affect the evenness with which food heats up in the pan.

To make optimum use of the cooking zones, choose pans with diameters larger than the innermost markings but smaller than the outermost markings. If the diameter of the pan is smaller than the innermost marking, the induction heating will not work. The zone will behave as if it had no pan on it.

Please note that the maximum diameter quoted by manufacturers often refers to the diameter of the top rim of the pot or pan. The diameter of the base (generally smaller) is more important.

Make sure that pans are placed centrally on the cooking zone.

If a pan is placed only partially on a zone, there is a risk that the handle could get very hot.

## How the hob is operated

The hob is equipped with electronic sensor controls which react to finger contact.

To operate the hob, touch the relevant sensor. Each time you touch a sensor, an audible tone sounds.

In order to set or alter a power level or the time, the cooking zones and the timer must be "active".

To activate a cooking zone or the timer, touch the sensor for selecting the relevant cooking zone or the timer. After you have touched the sensor, the relevant cooking zone or timer display will start to flash. The cooking zone or the timer is "active" whilst the display is flashing and you can set a power level or time.

**Exception:**

If only one of the cooking zones is in operation, you can alter the power level without activating the cooking zone.

Take care to keep the control panel clean and do not place anything on top of it. The sensors may fail to react or they could mistake the article or any dirt for a fingertip contact, thereby activating a function or even causing the hob to switch off automatically (see "Safety switch-off".)

Never place hot pans on the sensors. The electronic unit underneath could get damaged.

# Operation

---



## Switching on

The hob must be switched on before any of the zones can be used.

Do not leave the appliance unattended whilst it is being used.

### To switch the hob on


- Touch the  sensor.

 will appear in each of the cooking zone displays.  will appear in the timer display. If no further entry is made, the hob will switch itself off after a few seconds for safety reasons.

### Switching on a cooking zone, setting a power level

- Touch the sensor for selecting the cooking zone you want.

A  will flash in the cooking zone display.

- Whilst the  is flashing, select a power level of between **1** and **9** by touching the - or + sensor.



To select cooking **with** Auto heat-up, press the - sensor first (see "Auto heat-up"). To select cooking **without** Auto heat-up, press the + sensor first.

The power level selected flashes in the display for a few seconds to start with and then lights up constantly.

### Altering the power level

- Touch the sensor for selecting the cooking zone you want.

The power level will flash.

- Touch the + or - sensor to set the power level you want.





## Settings

The appliance is delivered with 9 power levels programmed in. If you wish to fine-tune a setting, you can extend the power level range (see "Programming"). The intermediate setting will be represented by an illuminated dot next to the number.

	Settings	
	Standard factory settings (9 power levels)	Extended settings (17 power levels)
Keeping warm	h	h
Melting butter Dissolving gelatine	1 - 2	1 - 2.
Making milk puddings	2	2 - 2.
Warming small quantities of liquid Cooking rice	3	3 - 3.
Defrosting frozen vegetables	3	2. - 3
Making porridge	3	2. - 3.
Warming liquid and semi-solid foods Making omelettes and lightly frying eggs Steaming fruit	4	4 - 4.
Cooking dumplings	4	4 - 5.
Steaming vegetables and fish	5	5
Defrosting and heating frozen food	5	5 - 5.
Bringing large quantities of food to the boil, e.g. casseroles Thickening custard and sauces, e.g. hollandaise	6	5. - 6
Gently frying eggs (without overheating the fat)	6	5. - 6.
Gently braising meat, fish and sausages (without overheating the fat)	7	6. - 7.
Frying pancakes etc.	7	6. - 7
Cooking stew	8	8 - 8.
Boiling large quantities of water Bringing to the boil	9	9

These settings should only be taken as a guide.

The power of the induction coils will vary depending on the size and material of the pan. For this reason it is possible that the settings will need to be adjusted slightly to suit your pans. As you use the hob, you will get to know which settings suit your pans best.

# Operation

---

## Auto heat-up

When Auto heat-up has been activated, the cooking zone switches on automatically at the highest power level/setting and then switches to the continued cooking setting selected. The heat-up time depends on which continued cooking setting has been chosen (see chart).

### To activate Auto heat-up

- Touch the sensor for selecting the cooking zone you want.

The cooking zone display will flash.



- Press the - sensor until the required continued cooking setting appears, e.g. 5.

During the heat-up time an indicator lamp to the right of the continued cooking setting will light up, and go out at the end of it.

In the **extended** range of power settings (see "Programming"), *H* flashes alternately with the continued cooking setting during the heat-up time.

Altering the continued cooking setting will deactivate auto heat-up.

### To deactivate Auto heat-up

You can switch off Auto heat-up before the Auto heat-up time has finished.

- Touch the sensor for selecting the cooking zone you want.

The power level will flash.

- Select a different power level.

<b>Continued cooking setting*</b>	<b>Heat-up time in minutes and seconds (approx.)</b>
1	0 : 15
1.	0 : 15
2	0 : 15
2.	0 : 15
3	0 : 25
3.	0 : 25
4	0 : 50
4.	0 : 50
5	2 : 00
5.	5 : 50
6	5 : 50
6.	2 : 50
7	2 : 50
7.	2 : 50
8	2 : 50
8.	2 : 50
9	-

\* The continued cooking settings with a dot after the number are only available if the power level range has been extended (see "Programming").

# Operation

---

## Booster function

The cooking zones are equipped with a Booster or TwinBooster (see "Guide to the appliance").

When activated, the power is boosted for 15 minutes so that large quantities can be heated quickly, e.g. when boiling water for cooking pasta.

The Booster function can only be used on two cooking zones at the same time, one on the left and one on the right.


If the Booster function is switched on when

- no setting has been selected, the cooking zone will revert automatically to setting 9 at the end of the Booster time or if the Booster function is switched off before this.
- a setting has been selected, the cooking zone will revert automatically to the setting selected at the end of the Booster time or if the Booster function is switched off before this.

Taking a pan off the zone whilst the Booster is in operation interrupts the Booster function. It will resume if a pan is placed back on the zone within 3 minutes.

The extra boost of energy is only available by taking a proportion of energy away from another cooking zone. For this reason, the cooking zones are networked in pairs.

Example:

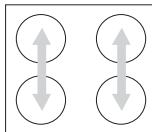

When selecting the Booster/TwinBooster level 1 for a zone, the following happens within the pairs:

- If Auto heat-up is activated on the other zone within the pair, this will be switched off.
- If the other zone within the pair is set at power level 9, the power level on that zone will be reduced.

If TwinBooster level 2 is selected, the other zone within the networked pair will be switched off.

## To switch on the **Booster**

- Touch the sensor for selecting the cooking zone you want.
- Select a power level if you wish.
- Touch the **B /II** sensor.

The indicator lamp for the Booster lights up, and ,, starts to flash in the cooking zone display.

After a few seconds, ,, will light up constantly and the indicator lamp will go out.

## To switch on the **TwinBooster**

### **Level 1**

- Touch the sensor for selecting the cooking zone you want.
- Select a power level if you wish.
- Touch the **B /II** sensor.

The indicator lamp for the Booster lights up, and , starts to flash in the cooking zone display. After a few seconds, , will light up constantly and the indicator lamp will go out.

### **Level 2**

- Touch the sensor for selecting the cooking zone you want.
- Select a power level if you wish.
- Touch the **B /II** sensor twice.

The indicator lamp for the Booster lights up, and ,, starts to flash in the cooking zone display. After a few seconds, ,, will light up constantly and the indicator lamp will go out.

## To switch off the **Booster/TwinBooster**

- Touch the sensor for selecting the cooking zone you want.
- Touch the **B /II** sensor repeatedly until the indicator lamp for the Booster goes out and the cooking zone setting shows in the display.

or

- Touch the sensor for selecting the cooking zone you want.
- Select a different power level.

# Operation

---

## Keeping warm function

Each cooking zone has a keeping warm function ("h"). The "h" function is in between the "0" setting and the "1" setting .

If the keeping warm function has been activated, the cooking zone will switch off automatically after a maximum of 2 hours.

This function is for keeping food that has just been cooked warm, i.e. food that is still hot. It is not for reheating food that has gone cold.


## Useful tips

- Only use pans for keeping food warm. Cover the pan with a lid.
- You do not have to stir food while it is being kept warm.
- Nutrients are lost when food is cooked, and this continues when food is kept warm. The longer food is kept warm for, the greater the loss of nutrients. Try to ensure that food is kept warm for as short a time as possible.

## Switching off and residual heat indicators

### Switching off a cooking zone

- Touch the sensor for selecting the cooking zone you want twice.

A  will flash in the cooking zone display for a few seconds. If the cooking zone is still hot, the residual heat indicator will then appear in the display.

### Switching off the hob

- Touch the  sensor.

This switches off all cooking zones. The residual heat indicator will appear in the display of any cooking zone which is still hot.

### Residual heat indicators


The lines of the residual heat indicator go out one after another as the cooking zone cools down. The last horizontal line only goes out when the cooking zone is safe to touch.

Do not touch or place any heat-sensitive objects on the cooking zones while the residual heat indicators are on. Danger of burning and fire hazard.

## Tips on saving energy

---

- Use a pan lid whenever possible to minimise heat loss.

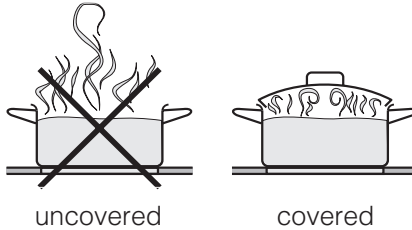

- Select a smaller pan when cooking small quantities. A smaller pan uses less energy than a larger pan with very little in it.
- Cook with as little water as possible.
- Once food has come to the boil or the pan is hot for frying, reduce the heat to a lower setting.
- Cooking times are greatly reduced when using a pressure cooker.



The hob must be switched on to use the timer.

The timer can be used for two different functions:

- to set the minute minder
- to set a cooking zone to switch off automatically.

You can select a time from 1 minute (01) to 9<sup>1</sup>/<sub>2</sub> hours (9.h). If a time of more than 99 minutes (99) is set, the time is set in half-hour steps. The half hour is indicated by a dot after the number.

Use the - sensor to reduce the time from 9.h to 00, and the + sensor to increase the time from 00 to 9.h. The display stops at 2h and at 99. To continue entering the setting, briefly remove your finger from the sensor, and then touch it again.

When the set time has elapsed, 00 will appear in the timer display for a few seconds. An audible tone will sound at the same time for a few seconds. To turn the audible tone off before this, touch the ⊖ sensor.

## Minute minder

### To set the minute minder time

- Touch the ⊖ sensor.

00 and the minute minder indicator lamp will flash in the timer display.

- Touch the - or + sensor until the time you require appears in the display, e.g. 15 minutes.

The time set will then count down in minutes. The time remaining will be shown in the timer display.

### To change the minute minder time

- Touch the ⊖ sensor.
- Touch the - or + sensor to set the time you want.

### To delete the minute minder time

- Touch the ⊖ sensor.
- Touch the - and + sensors at the same time.

# Timer

---

## To switch a cooking zone off automatically

You can set a time at the end of which a cooking zone will switch off automatically.

All the cooking zones can be programmed at the same time.

If the time programmed is longer than the maximum operational time allowed, the cooking zone will switch off after the maximum time allowed (see "Safety switch-off").

- Select a power level for the cooking zone you require.
- Touch the ⊖ sensor.


00 and the minute minder indicator lamp will flash in the timer display.

- Touch the ⊖ sensor again.

The minute minder indicator lamp in the timer display will go out and one of the cooking zone indicator lamps will flash.

- If several cooking zones are switched on, touch the ⊖ sensor repeatedly until the indicator lamp for the cooking zone you wish to use this function for, e.g. back right, flashes.

The indicator lamps for the cooking zones which are switched on light up clockwise, starting with the front left.

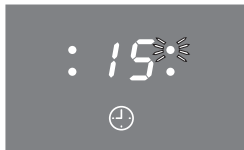

- Touch the - or + sensor until the time you require appears in the display, e.g. 15 minutes.

The time set will then count down in minutes. The time remaining will be shown in the timer display.

If you want to set another cooking zone to switch off automatically, follow the same steps as described above.

If more than one switch-off time is programmed, the shortest time remaining will show in the display, and the indicator lamp for that particular cooking zone will flash. All the other indicator lamps will light up constantly. If you want to check on the time remaining for another zone, touch the ⊖ sensor repeatedly until the indicator lamp for the zone you require flashes.

## To change the automatic switch-off time

- Touch the ⊖ sensor repeatedly until the indicator lamp you require flashes.
- Touch the - or + sensor to set the time you want.

## To use both timer functions at the same time

The minute minder and automatic switch-off functions can be used at the same time.

If you have programmed in one or more switch-off times, and would like to use the **minute minder as well**:

Touch the ⊖ sensor repeatedly until the minute minder indicator lamp flashes.

If you are using the minute minder, and would like to programme in one or more **switch-off times as well**:

Touch the ⊖ sensor repeatedly until the indicator lamp for the cooking zone you require flashes.

Shortly after the last entry, the timer display will switch to showing the shortest time remaining.

If you want to see the time remaining for other cooking zones, touch the ⊖ repeatedly until the relevant indicator lamp flashes.

Starting with the shortest time remaining which is shown in the display, all cooking zones which are switched on and the minute minder are selected clockwise.

# Safety features

---

## Safety lock / System lock

Keep children away from the hob for their own safety. Your appliance is equipped with a safety lock and a system lock to prevent the hob and the cooking zones being switched on or any settings being altered.

The **safety lock** is set with the hob switched on. When activated:

- The cooking zone power levels and the timer settings cannot be changed.
- The cooking zones, the hob and the timer can be switched off, but once switched off cannot be switched on again.

The **system lock** is set with the hob switched off. When activated, the hob cannot be switched on and the timer cannot be used.

The default setting for activating the system lock is manual. The system lock can also be set for manual and automatic activation, in which case it will be activated automatically five minutes after the hob has been switched off, unless you set it manually (see "Programming").

If an unavailable sensor is touched whilst the safety lock or system lock is activated, **L** will appear in the front left and **E** in the front right of the cooking zone display for approximately 3 seconds.

If there is an interruption to the power supply, the safety lock and the system lock will be deactivated.

### To activate the locks

- Touch the - and + sensors **at the same time** until a long tone sounds.

### To deactivate the locks

- Touch the - and + sensors **at the same time** until a tone sounds.

# Safety features

---

## Safety switch-off

### Safety switch-off with an over-long cooking time

If one of the cooking zones is heated for an unusually long period of time (see chart) and the power level is not altered, the hob will switch itself off automatically and the relevant residual heat indicator will light up.

To use the cooking zone again, switch it back on in the usual way.

Power level*	Maximum operating time in hours
h	2
1 / 1.	10
2 / 2.	5
3 / 3.	5
4 / 4.	4
5 / 5.	3
6 / 6.	2
7 / 7.	2
8 / 8.	2
9	1

\* The power levels with a dot after the number are only available if the power level range has been extended (see "Programming").

### Safety switch-off if the sensors are covered

Your hob will switch off automatically if one or several of the sensors remain covered for more than about 13 seconds, for example by finger contact, food boiling over, or by an object such as an oven glove or a tea towel.

An **F** will flash in each of the cooking zone displays.

■ Clean the control panel or remove the obstruction.

**F** will go out. You can now use the hob again.

## Overheating protection

### Induction coils/Cooling elements

All the induction coils and the cooling elements for the electronics are fitted with an overheating protection mechanism. Before the induction coils or cooling elements get too hot, the overheating protection mechanism cuts in in one of the following ways:

#### Induction coils

- If the booster function is being used, this will be switched off.
- The power level will be reduced.
- The cooking zone will switch off automatically. The fault message "**FE44**" is displayed.

You will be able to use the cooking zones again as usual when the fault message has gone out.

#### Cooling elements

- If the booster function is being used, this will be switched off.
- The power level will be reduced.
- The cooking zones switch off automatically.

The affected cooking zones can only be used again as usual once the cooling element has cooled down to a safe level.

Overheating can be caused by:

- heating up an empty pan.
- Fats or oils being heated up on the highest power setting.
- There being insufficient ventilation to the underside of the appliance.
- a hot cooking zone being switched on after a power cut.

If the overheating protection mechanism triggers again, contact the Service department.

# Safety features

---

## Control panel

The control panel electronic unit is equipped with overheating protection. This switches off the hob automatically before the electronic unit overheats.


The fault code *FE37* will appear.

Once the electronic unit has cooled down sufficiently, the fault code will go out and you can use the hob again.

Overheating can occur if several cooking zones are heated at a high power level for a long period of time.



For Miele branded cleaning and conditioning products see "Optional accessories".

 Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.

The appliance should be cleaned after each use. Let it cool down to room temperature before cleaning. To avoid water marks and limescale deposits, use a soft cloth to dry surfaces that have been cleaned with water.

**To avoid damaging the surface of your appliance, do not use:**

- washing-up liquid,
- cleaning agents containing soda, alkalines, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- stain or rust removers,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- dishwasher cleaner,
- grill and oven cleaners,
- glass cleaning agents,
- hard, abrasive brushes or sponges, e.g. pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents,
- melamine eraser blocks,
- sharp, pointed objects which could damage the seal between the ceramic surface and the surrounding frame, and between the frame and the worktop.

## Cleaning and care

---

Do not use washing-up liquid to clean the ceramic surface. Washing-up liquid will not remove all soiling and deposits. It will form an invisible coating which will cause permanent discolouration of the ceramic surface. Clean the hob regularly with a suitable ceramic hob cleaner.

Wipe all coarse soiling off using a damp cloth. Stubborn soiling may need to be removed with a shielded scraper blade.

Then clean the hob with Miele ceramic and stainless steel hob cleaner (see "Optional accessories") applied with kitchen paper or a clean cloth. Do not apply cleaner whilst the hob is still hot, as this could result in marking. Please follow the manufacturer's instructions.

Finally, wipe the hob with a damp cloth, then polish with a soft, dry cloth. Ensure that all cleaner residues are removed. Residues can burn onto the hob the next time it is used, and cause damage to the ceramic surface.

**Spots** caused by limescale, water and aluminium residues (spots with a metallic appearance) can be removed using Miele's ceramic and stainless steel hob cleaner.

Should any **sugar, plastic or aluminium foil** spill or fall onto a hot cooking zone while it is in use, first switch off the appliance. Then carefully scrape off all the sugar, plastic or aluminium residues from the hob whilst they are still hot, using a shielded scraper blade. Take care not to burn yourself.

Allow the appliance to cool down, and then clean as described above.

### Reset

The hob has a reset function. This allows you to restore all settings changed using the programming function to their original factory default settings.

#### To activate the reset function

- Switch the hob on.
- Touch and keep your fingers on the sensors for the front left-hand and front right-hand cooking zones at the same time until the indicators for these cooking zones have gone out (approx. 10 seconds).

It takes approx. 1 minute to reset your hob to the original settings. The process is completed when the booster indicator lights up briefly.

Do not switch the hob on again until the reset process is completed.

# Additional functions

---

## Programming

You can change the default settings of the programme options (see chart). Several settings can be altered in succession.

After the programming mode has been called up, **P** (Programme), **5** (Status) and numbers will appear in the cooking zone displays. These show the current settings.

Once you have left the programming mode, the hob will be reset automatically. The process is completed when the booster indicator lights up briefly.

Do not switch the hob on again until the reset process is completed.

### To call up the programming mode

- With the hob switched off, touch the **Ⓢ** and **B I/II** sensors at the same time until the relevant indicator lamp flashes.

### To set a programme / status setting

- Hobs with 4 or more cooking zones  
Touch the sensor for selecting the **front left** cooking zone.
- Hobs with 3 cooking zones  
Touch the sensor for selecting the **left** cooking zone.
- Touch the **+** or **-** sensor to set the required **Programme**.
- Touch the sensor for the **front right** cooking zone.
- Touch the **+** or **-** sensor to set the required **Status** setting (see chart).

### To save settings

- Touch the **Ⓢ** sensor until all the displays go out.

### To not save settings

- Touch the **B I/II** sensor until all the displays go out.

## Additional functions

Programme*	Status**	Setting
<b>P 0</b> Demonstration mode and factory default settings	S 0	Demonstration mode on (after the hob is switched on, "d" will appear in the front left cooking zone display and "E" in the front right cooking display for a few seconds).
	<b>S 1</b>	Demonstration mode off
	S 9	Factory default settings reinstated
<b>P 2</b> Power level range	<b>S 0</b>	9 power settings (1, 2, 3 ... to 9)
	S 1	17 power settings (1, 1., 2, 2., 3 ... to 9) If the Auto heat-up setting is selected, an H will flash alternately with the continued cooking setting in the display.
<b>P 3</b> Induction warning tone when there is no pan or the pan is unsuitable	<b>S 0</b>	Off
	S 1	Quiet
	S 2	Medium
	S 3	Loud
<b>P 4</b> Keypad tone when a sensor is touched	S 0	Off
	S 1	Quiet
	<b>S 2</b>	Medium
	S 3	Loud
<b>P 5</b> Audible tone for the timer	S 0	Off
	S 1	Quiet audible tone on for 10 seconds
	<b>S 2</b>	Medium audible tone on for 10 seconds
	S 3	Loud audible tone on for 10 seconds

\* Programmes not shown here have no allocation.

\*\* The factory default settings are shown in bold.

## Additional functions


Programme*	Status**	Setting
<b>P 7</b> System lock	<b>S 0</b>	Manual activation of the system lock only
	S 1	Manual and automatic activation of the System lock
<b>P 5.</b> Audible tone if a sensor is covered.	<b>S 0</b>	Off
	S 1	On
<b>P 6.</b> Sensor reaction speed	S 0	Slow
	<b>S 1</b>	Normal
	S 2	Rapid

\* Programmes not shown here have no allocation.

\*\* The factory default settings are shown in bold.

## Problem solving guide

With the help of the following notes, minor faults in the performance of the appliance, some of which may result from incorrect operation can be put right without contacting the Service Department.

 Installation work and repairs to electrical appliances should only be carried out by a suitably qualified person in strict accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Problem	Possible cause	Remedy
<b>The hob or cooking zones cannot be switched on.</b>	The mains fuse has tripped.	Reset the trip switch in the mains fuse box (minimum fuse rating - see data plate).
	There may be a technical fault.	Disconnect the appliance from the electricity supply for approx. 1 minute. – Switch off at the wall socket and withdraw the plug, or switch off at the isolator.  or – Disconnect the mains fuse.  Reset the trip switch in the mains fuse box, and switch the appliance back on. If it still will not switch on, contact a qualified electrician or the Miele Service Department.

# Problem solving guide

Problem	Possible cause	Remedy
<b>There is a strange smell or vapours when a new appliance is being used.</b>		The smell and any vapours will dissipate after a short time. They are not harmful and do not indicate a faulty connection or appliance.
<b>The <math>\cup</math> symbol lights up in the display of one of the cooking zones.</b>	There is no pan on the cooking zone, or the pan is unsuitable.	Use a suitable pan (see "Pans").
<b>After the hob is switched on, "L" appears in the front left cooking zone display and "E" in the front right cooking display for a few seconds.</b>	The system lock is activated.	Deactivate the system lock (see "Safety lock / System lock").
<b>After the hob is switched on "d" appears in the front left cooking zone display and "E" appears in the front right cooking zone display for a few seconds. The cooking zones do not heat up.</b>	The appliance is in demonstration mode.	Deactivate demonstration mode (see "Programming").
<b>A cooking zone or the whole hob switches off automatically.</b>	A cooking zone has been in use for too long.	You can use the cooking zone again by switching it back on (see "Safety switch-off").
	The overheating protection mechanism has triggered.	See "Overheating protection".



## Problem solving guide

Problem	Possible cause	Remedy
<b>The Booster has deactivated early automatically.</b>	The overheating protection mechanism has triggered.	See "Overheating protection".
<b>The cooking zone is not working in the usual way at the power level set.</b>		
<b>Power level 9 is automatically reduced if you select power level 9 on two linked cooking zones or extended zones at the same time.</b>	Operating both zones at power level 9 would exceed the permitted maximum power level for the two zones.	
<b>The hob switches off while it is in use, an <i>F</i> appears in every cooking zone display and a tone sounds.</b>	One or more of the sensors have been covered, e.g. by finger contact, food boiling over or by an object such as an oven glove.	Clean the control panel or remove the obstruction (see "Safety switch-off").
<b>The food in the pan hardly heats up or does not heat up at all when the Auto heat-up function is switched on.</b>	There is too much food in the pan.	Start cooking at the highest power level and then turn down to a lower one manually later on.
	The pan is not conducting heat properly.	
<b>The cooling fan continues to run even after the appliance has been switched off.</b>	The fan will continue running until the appliance has cooled down. It will then switch itself off automatically.	

# Problem solving guide

Problem	Possible cause	Remedy	
<b>The sensors are over-sensitive or do not react at all.</b>	The sensitivity level of the sensors has changed.	Make sure that there is no direct light (from the sun or from an artificial source) falling onto the hob and that the surrounding area is not too dark.	
<b>An <i>F</i> lights up in the rear left cooking zone display and an <i>E</i> lights up in the rear right cooking zone display and numbers appear in the displays at the front.</b>		Make sure that there is nothing covering the sensors or the hob. Take any pans off the hob and wipe away any food deposits.	
<b>left</b>	<b>right</b>	Interrupt the power supply to the hob for approx. 1 minute.	
<i>9</i>	<i>0</i>	A calibration fault has occurred after the reset function has been activated or after an interruption to the power supply. If the displays do not go out after 5 minutes, proceed as described under "Remedy" on the right.	
<i>9</i>	<i>1</i>		
<i>9</i>	<i>2</i>		
<i>9</i>	<i>3</i>		
<i>3</i>	<i>7</i>	The overheating protection mechanism has triggered.	You can use the hob again as soon as the fault code goes out (see "Overheating protection").
<i>4</i>	<i>7</i>	The fan is either blocked or faulty.	Make sure it has not been blocked by something like a fork. Remove the cause of the blockage. If the fault message appears again, call the Miele Service Department.
<i>4</i>	<i>8</i>		
<b>All other fault codes</b>	There is an electronic fault.	Interrupt the power supply to the hob for approx. 1 minute. If the problem persists after reconnecting the appliance to the power supply, please contact the Miele Service department.	

Miele offer a comprehensive range of useful accessories as well as cleaning and conditioning products for your appliance.

These products can be ordered online:



or from Miele (see back cover for contact details)

### Saucepans and frying pans

Miele offer a wide range of saucepans and frying pans which are perfect for Miele hobs. Please refer to the Miele website for more details on individual products.

Pans in various sizes

Frying pan with lid

Anti-stick pans

Wok

Gourmet oven dish

### Cleaning products

 
#### Ceramic and stainless steel hob cleaner

250 ml



Removes heavy soiling, limescale deposits and aluminium residues.

#### E-cloth (microfibre cloth)



Removes finger marks and light soiling.

# Safety instructions for installation

---

The appliance must only be installed and connected to the electricity supply by a suitably qualified and competent person in strict accordance with current national and local safety regulations.

Fit the wall units and extractor hood before fitting the hob to avoid damaging the appliance.

► The veneer or laminate coatings of worktops (or adjacent kitchen units) must be treated with 100 °C heat-resistant adhesive which will not dissolve or distort.

Any backmoulds must be of heat-resistant material.

► This appliance must not be used in a non-stationary location (e.g. on a ship).

► The hob may not be built in over a fridge, fridge-freezer, freezer, dishwasher, washing machine or tumble dryer.

► This hob must not be installed above ovens or cookers unless these have a built-in cooling down fan.


► After installing the hob, ensure that the connection cable cannot come into contact with the underside of the appliance. Make sure that there is no mechanical obstruction, such as a drawer, which could damage it.

► Observe carefully the safety distances given on the following pages.

All dimensions in this instruction booklet are given in mm.

# Safety instructions for installation

## Safety distance above the appliance

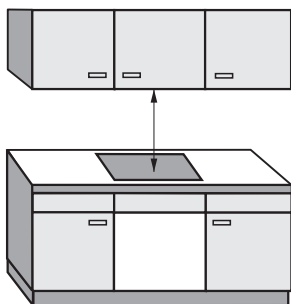

When two or more appliances are installed together below a cooker hood, e.g. a gas wok and a ceramic hob, which have different safety distances given in the installation instructions, you should select the greater distance of the two.

A minimum safety distance must be maintained between the appliance and the cooker hood above it. See the cooker hood manufacturer's operating and installation instructions for details.


If the manufacturer's instructions are not available for the cooker hood, a minimum safety distance of at least 760 mm must be maintained. For any flammable objects, e.g. utensil rails, wall units etc. a minimum distance of at least 760 mm must be maintained between them and the appliance below.

# Safety instructions for installation


## Safety distances to the sides and back of the hob

Ideally the hob should be installed with plenty of space on either side. There may be a wall at the rear and a tall unit or wall on one side (right **or** left) (see illustrations).


- ① Minimum distance of 50 mm between the **back** of the worktop cut-out and the rear edge of the worktop.
- ② Minimum distance of 50 mm between the **right** of the worktop cut-out and the nearest piece of furniture (e.g. tall unit) or a wall.
- ③ Minimum distance of 50 mm between the **left** of the worktop cut-out and the nearest piece of furniture (e.g. tall unit) or a wall.

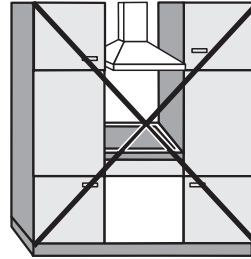


Not allowed

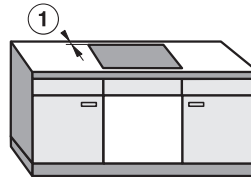

Recommended

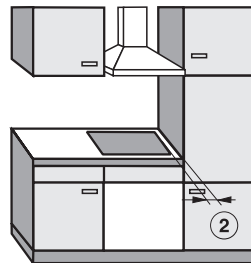

Not recommended

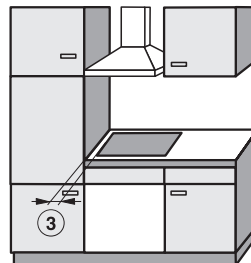

Not recommended

# Safety instructions for installation

---

## Safety distances underneath the hob

To ensure sufficient ventilation to the hob, a minimum gap must be left between the underside of the hob and any oven, interim shelf or drawer.

The minimum gap between the underside of the hob and

- the top of an **oven** is **15 mm**.
- the top of an **interim shelf** is **15 mm**.
- the base of a **drawer** must be **75 mm**.

## Interim shelf

It is not necessary to fit an interim shelf underneath the hob, but one may be fitted if you wish.

A ventilation gap of 10 mm at the back of the hob is necessary to accommodate the cabling.

We recommend a ventilation gap at the front of the hob of 20 mm to ensure good ventilation.

# Safety instructions for installation

## Safety distance when installing the appliance near a wall with additional niche cladding

A minimum safety distance must be maintained between the worktop cut-out and any niche cladding to protect it from heat damage.


If the niche cladding is made from a **combustible material** (e. g. wood) a minimum safety distance ⑤ of 50 mm must be maintained between the cut-out and the cladding.

If the niche cladding is made from a **non-combustible material** (e. g. metal, natural stone, ceramic tiles) a minimum safety distance ⑤ of 50 mm less the thickness of the cladding must be maintained between the cut-out and the cladding.


Example: 15 mm niche cladding

50 mm - 15 mm = minimum safety distance of 35 mm

### Flush-fitted hobs

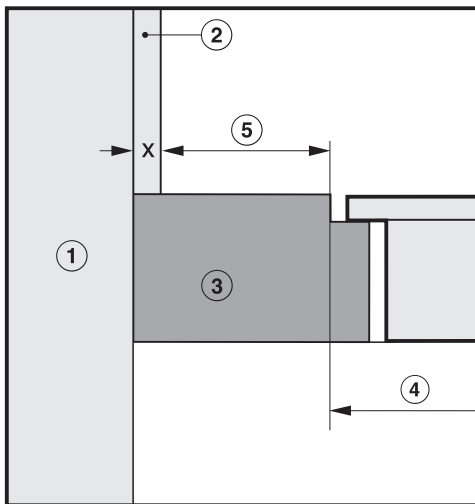

### Hob with frame or bevelled edges

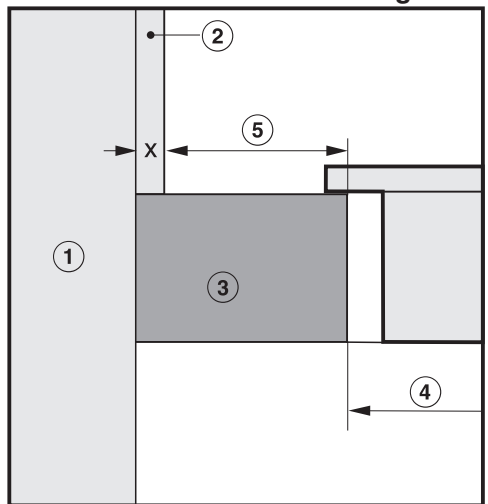

① Masonry

② Niche cladding

Dimension x = thickness of niche cladding material

③ Worktop

④ Worktop cut-out

⑤ Minimum safety distance


for **combustible** materials is 50 mm

for **non-combustible** materials is 50 mm less dimension x



## Hob with frame or bevelled edges


### Seal between the hob and the worktop

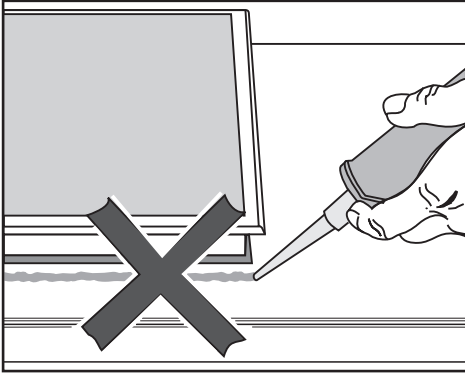

The sealing strip under the edge of the top part of the appliance provides a sufficient seal for the worktop.

The hob must not be sealed with sealant (e.g. silicone). This could result in damage to the hob or the worktop if the hob ever needs to be removed for servicing.


## Tiled worktop

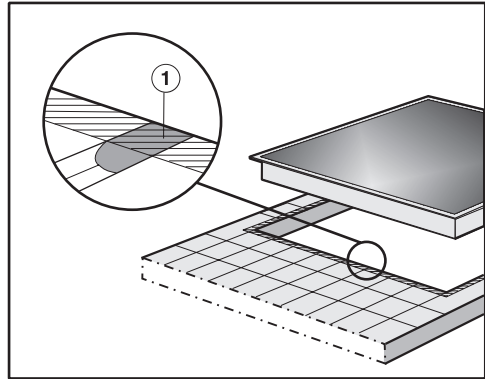

Grout lines ① and the hatched area underneath the hob frame must be smooth and even. If they are not the hob will not sit flush with the worktop and the sealing strip underneath the hob will not provide a good seal between the hob and the worktop.

# Building-in dimensions


## KM 6112

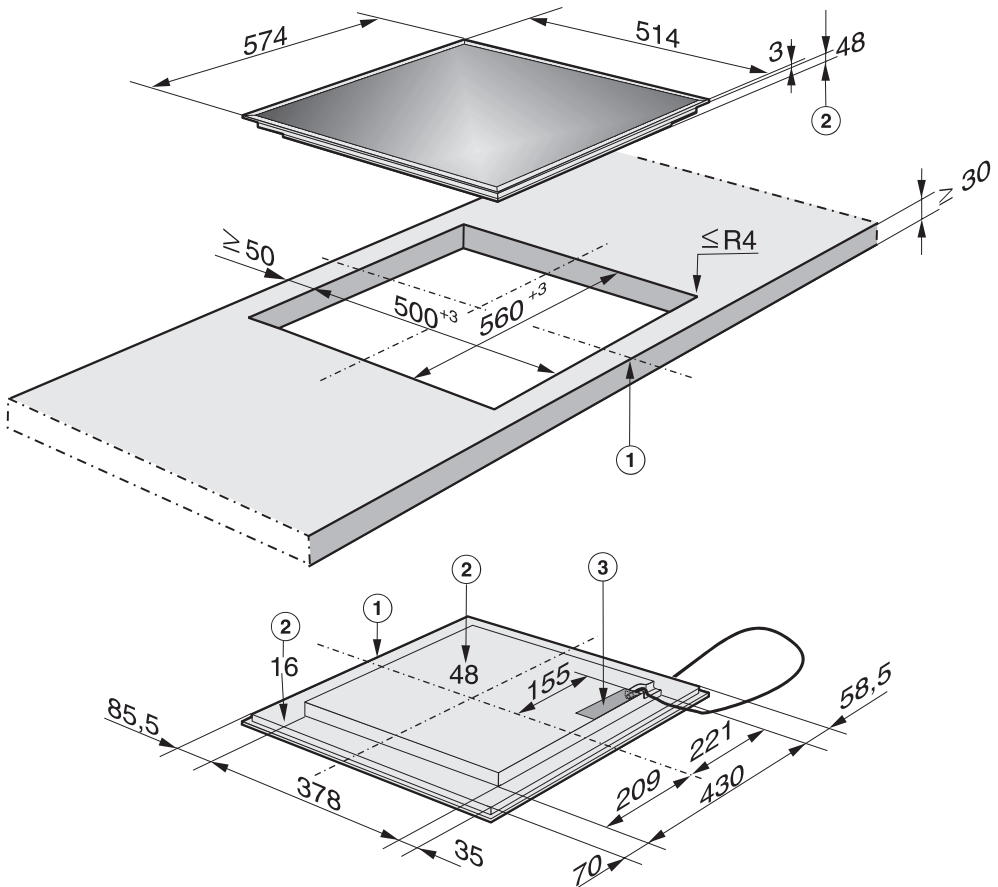

- ① Front
- ② Casing depth
- ③ Mains connection box

The mains connection cable (1440 mm long) is supplied separately.

## KM 6113

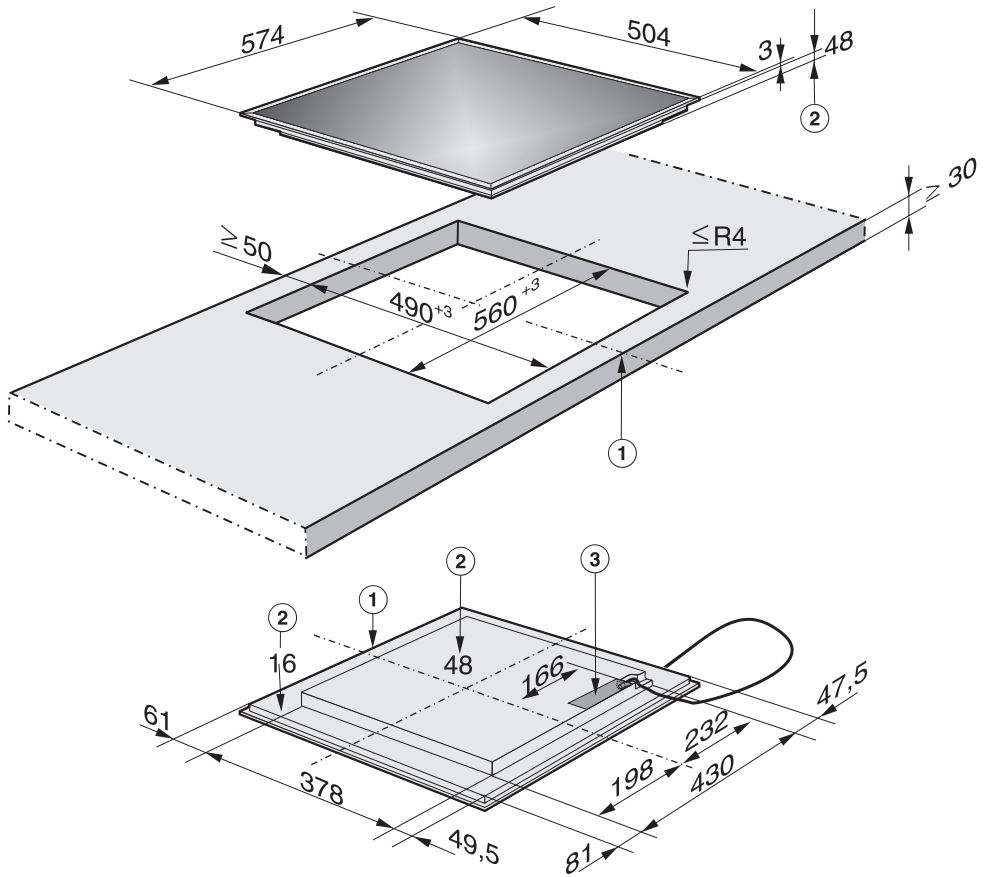


- ① Front
- ② Casing depth
- ③ Mains connection box

The mains connection cable (1440 mm long) is supplied separately.

# Building-in dimensions

## KM 6115

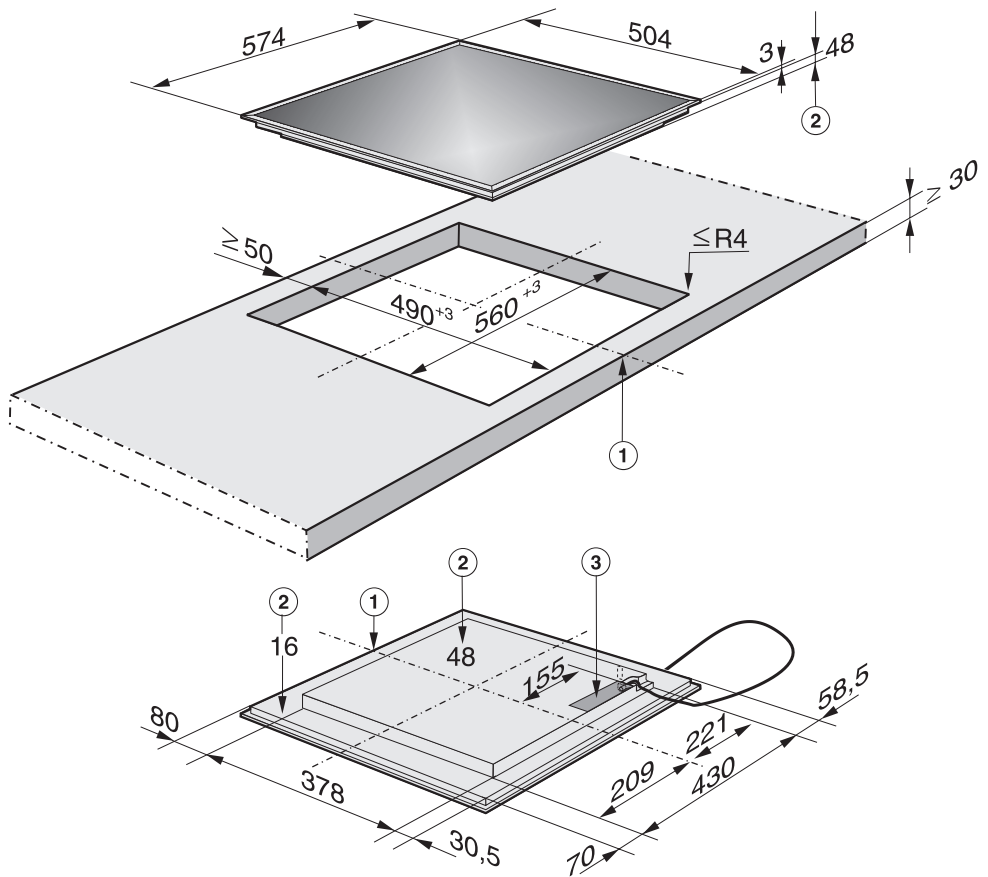


① Front

② Casing depth

③ Mains connection box

The mains connection cable (1440 mm long) is supplied separately.

## KM 6116

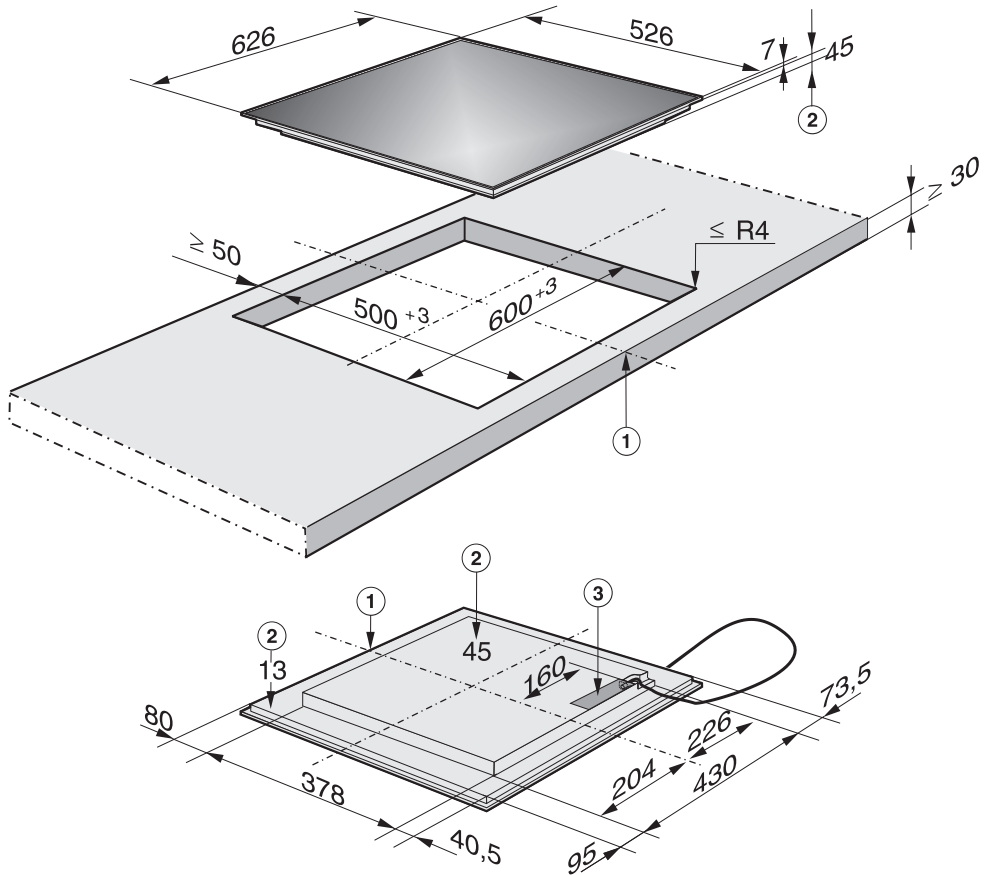


- ① Front
- ② Casing depth
- ③ Mains connection box

The mains connection cable (1440 mm long) is supplied separately.

# Building-in dimensions

## KM 6117

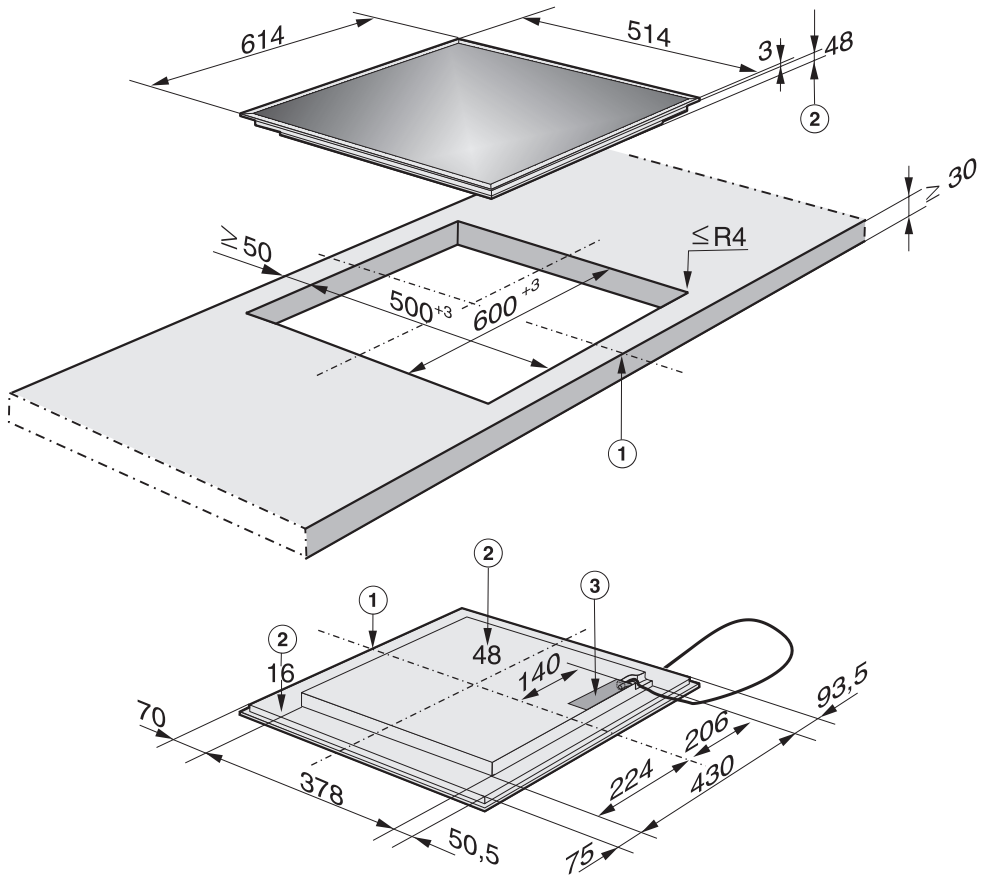


① Front

② Casing depth

③ Mains connection box

The mains connection cable (1440 mm long) is supplied separately.

## KM 6118

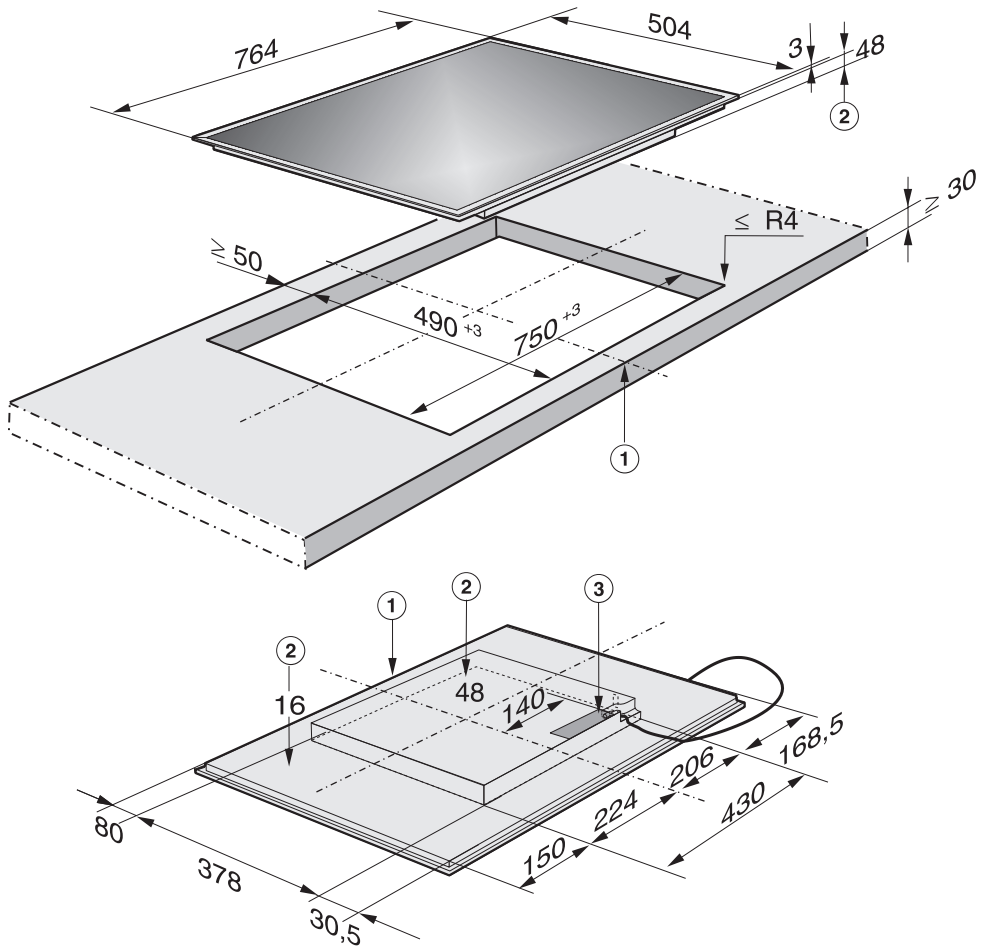

- ① Front
- ② Casing depth
- ③ Mains connection box

The mains connection cable (1440 mm long) is supplied separately.

# Installing the hob

---

## Preparing the worktop

- Make the worktop cut-out according to the dimensions given in the building-in diagram. Remember to maintain the **minimum safety distances** (see "Safety instructions for installation").
- Seal the cut surfaces on wood/laminated worktops with a suitable heat-resistant sealant to avoid swelling caused by moisture.

Make sure that the sealant does not come into contact with the top of the worktop.

No spring clamps are needed to install the hob. The sealing strip underneath the hob positions it securely in the cut-out. Any gap between the frame and worktop will reduce with time.

## Connecting the mains cable to the appliance

The mains cable must only be connected to the appliance by a qualified and competent electrician in strict accordance with current local and national safety regulations (BS 7671 in the UK).

- Follow the instructions in the wiring diagram (see "Electrical connection - Wiring diagram").

## Installing the hob

- Feed the mains connection cable down through the cut-out.
- Place the hob centrally in the cut-out. When doing this, make sure that the seal under the hob sits flush with the worktop on all sides. This is important to ensure an effective seal all round. Do not use sealant (e.g. silicone).

If the corners of the frame are not flush with the worktop surface, the corner radius ( $\leq R4$ ) can be carefully scribed to fit.

- Connect the hob to the mains.
- Check that the hob works.



All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current local and national safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

A damaged cable must be replaced by a suitably qualified electrician with a special connection cable of type H 05 VV-F, available from Miele.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

The appliance must only be operated when built-in. This is to ensure that all electrical parts are shielded. Live parts must not be exposed.

Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.

Connection should be made via a suitable isolator which complies with national and local safety regulations, and the On/Off switch should be easily accessible after the appliance has been built in.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to protect the appliance with a residual current device (RCD). Please contact a qualified electrician for advice.

When switched off there must be an all-pole contact gap of at least 3 mm in the isolator switch (including switch, fuses and relays).

### Important U.K.

The appliance is supplied for connection to a 230-240 V, 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live

**WARNING**  
**THIS APPLIANCE MUST BE**  
**EARTHED**

Please make sure that the connection data quoted on the data plate match the household mains supply.


# Electrical connection

The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system, which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested and where there is any doubt, the electrical wiring in the home should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system such as an electric shock.

The manufacturer cannot be held liable for damage which is the direct or indirect result of incorrect installation or connection.

## Wiring diagram

**N.B. This appliance is supplied single phase only in the U.K. / AUS / NZ**

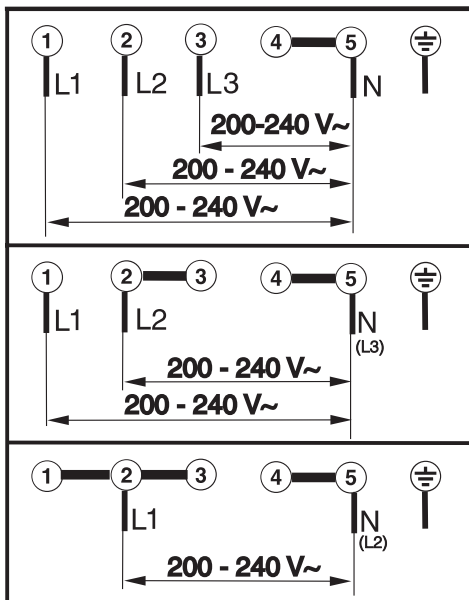

## After sales service, data plate

---

In the event of any faults which you cannot remedy yourself, or if the appliance is under guarantee, please contact:

 
- Your Miele dealer, or
- the Miele Service Department (see back cover for address).

Please note that telephone calls may be monitored and recorded to improve our service.

When contacting Miele, please quote the model and serial number of your appliance. These are given on the data plate.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the front of these instructions.



## United Kingdom

Miele Co. Ltd.  
Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
Tel: 0845 365 0555  
Fax: 0845 365 0777  
Customer Contact Centre Tel: 0845 365 6600  
E-mail: [info@miele.co.uk](mailto:info@miele.co.uk)  
Internet: [www.miele.co.uk](http://www.miele.co.uk)

## Australia

Miele Australia Pty. Ltd.  
ABN 96 005 635 398  
1 Gilbert Park Drive, Knoxfield, VIC 3180  
Tel: (03) 9764 7130, Fax: (03) 9764 7149  
Internet: [www.miele.com.au](http://www.miele.com.au)

## China

Miele (Shanghai) Trading Ltd.  
1-3 Floor, No. 82 Shi Men Yi Road  
Jing' an District  
200040 Shanghai, PRC  
Tel: +86 21 6157 3500  
Fax: +86 21 6157 3511  
E-mail: [mieleshanghai@cn.miele.com](mailto:mieleshanghai@cn.miele.com)  
Internet: [www.miele.cn](http://www.miele.cn)

## Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place  
23 Wang Tai Road  
Kowloon Bay  
Hong Kong  
Tel: (852) 2610 1331  
Fax: (852) 2610 1013  
Email: [mielehk@miele.com.hk](mailto:mielehk@miele.com.hk)

## India

Miele India Pvt. Ltd.  
Ground Floor, Copia Corporate Suites  
Plot No. 9, Jasola  
New Delhi - 110025  
Tel: 011-46 900 000, Fax: 011-46 900 001  
E-mail: [customercare@miele.in](mailto:customercare@miele.in)  
Internet: [www.miele.in](http://www.miele.in)

**Manufacturer:** Germany - Miele & Cie. KG  
Carl-Miele-Straße 29, 33332 Gütersloh



## Ireland

Miele Ireland Ltd.  
2024 Bianconi Avenue  
Citywest Business Campus, Dublin 24  
Tel: (01) 461 07 10, Fax: (01) 461 07 97  
E-Mail: [info@miele.ie](mailto:info@miele.ie), Internet: [www.miele.ie](http://www.miele.ie)

## New Zealand

Miele New Zealand Limited  
Unit L, 10-20 Sylvia Park Road  
Mt. Wellington, 1060, Auckland, NZ  
Tel: 0800 264 353, Fax: 0800 463 453  
Internet: [www.miele.co.nz](http://www.miele.co.nz)

## Singapore

Miele Southeast Asia  
Miele Pte. Ltd.  
163 Penang Road  
# 04 - 02/03 Winsland House II  
Singapore 238463  
Tel: +65 6735 1191, Fax: +65 6735 1161  
E-Mail: [infosea@miele.com.sg](mailto:infosea@miele.com.sg)  
Internet: [www.miele.sg](http://www.miele.sg)

## South Africa

Miele (Pty) Ltd  
63 Peter Place, Bryanston 2194  
P.O. Box 69434, Bryanston 2021  
Tel: +27 (0) 11 548-1900  
Fax: +27 (0) 11 548-1935  
E-mail: [info@miele.co.za](mailto:info@miele.co.za)  
Internet: [www.miele.co.za](http://www.miele.co.za)

## United Arab Emirates

Miele Appliances Ltd.  
P.O. Box 11 47 82  
Gold & Diamond Park  
Sheikh Zayed Road  
Building 6 / Offices Nos. 6-214 to 6-220  
Dubai  
Tel: +971-4-341 84 44  
Fax: +971-4-341 88 52  
E-Mail: [info@miele.ae](mailto:info@miele.ae)  
Internet: [www.miele.ae](http://www.miele.ae)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>