

# Panasonic

Cordless Phone

Model No. **KX-T4026NZ**

## Operating Instructions



**D**  **DYNAMIC  
SOUND FOCUS  
PLUS**

### Contents by Section

 
- 1 Getting Started
- 2 Making/Answering Calls
- 3 Automatic Dialing
- 4 Special Features
- 5 Things You Should Know

**PLEASE READ BEFORE USE  
AND SAVE.**


**Charge the battery for about  
10 hours before initial use.**

## 1-A Accessories


- AC Adaptor: KX-A10BA .....one

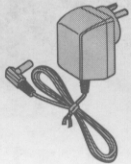

- Telephone Line Cord .....one

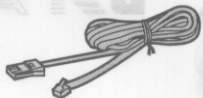 

- Wall Mounting Adaptor .....one

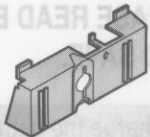 

## 1-B Location of Controls

### Handset

TALK Button and Indicator (2-A)

RECALL Button (4-B)

AUTO Button (3-A)

PAUSE Button (4-C)

BATT (Battery) LOW/PROG (Program) Indicator (3-A, 5-A)

Antenna

PROGRAM Button (3-A)

REDIAL Button (2-A)

VOLUME/RINGER Button (2-A, B)

CH (Channel) Button (2-A)

### Base Unit

 
Antenna (1-C)

IN USE/CHARGE Indicator (1-C, 4-D)

Charge Contacts (5-A)

HANDSET LOCATOR Button (4-D)

## 1-C Setting Up

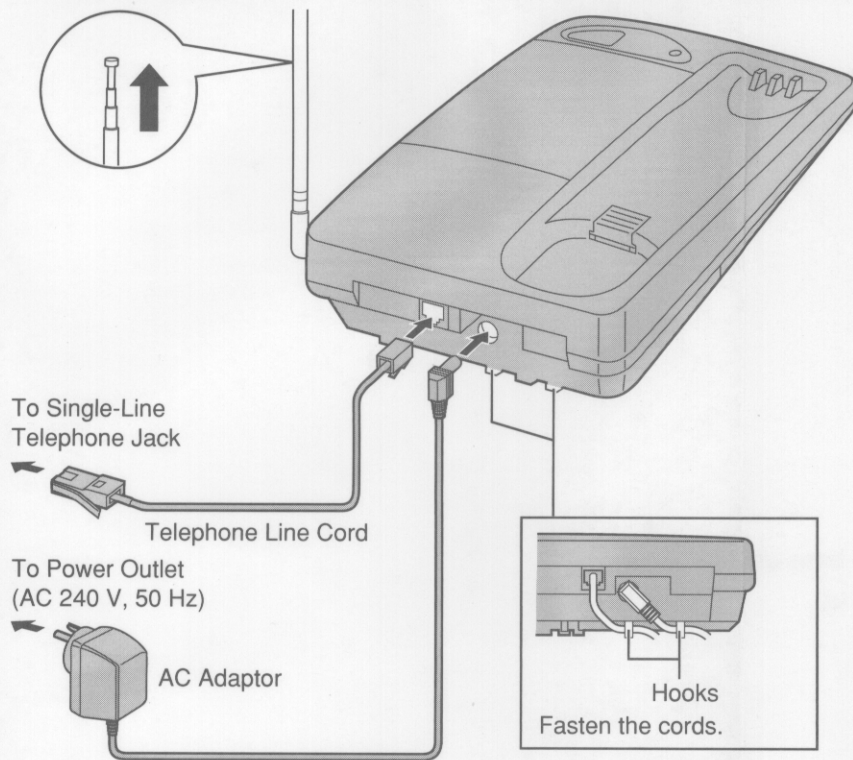

- USE ONLY Panasonic AC ADAPTOR KX-A10BA.
- The AC adaptor must remain connected at all times. (It may feel warm during use. This is normal.)
- KX-T4026NZ is not designed to be used with rotary (pulse dialing) services.

(found on the bottom of the unit)

Name and address of dealer

 
**1** Connect as shown.

**2** Extend the antenna fully.



**3** Charge the battery for about 10 hours.

- See section 5-A for more details.
- The IN USE/CHARGE indicator lights.

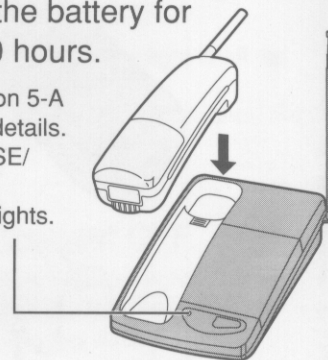

## 2-A Making Calls

- 1 Press **TALK**.
  - The indicator lights.
  - If an alarm tone sounds, see 5-F.

- 2 Dial a telephone number.

- 3 To hang up, press **TALK** or place the handset on the base unit.
  - The indicator light goes out.



### OPERATING DISTANCE

To maximize the distance of the handset from the base unit, see section 5-B.

### To redial the last number

Press **TALK** → **REDIAL**.

 
### To select the receiver volume HIGH or NORMAL (preset)

Press **VOLUME/RINGER** while talking.

- Each time you press, the volume level will change.

### If noise interferes with the conversation


Press **CH** to select a clear channel or move closer to the base unit.

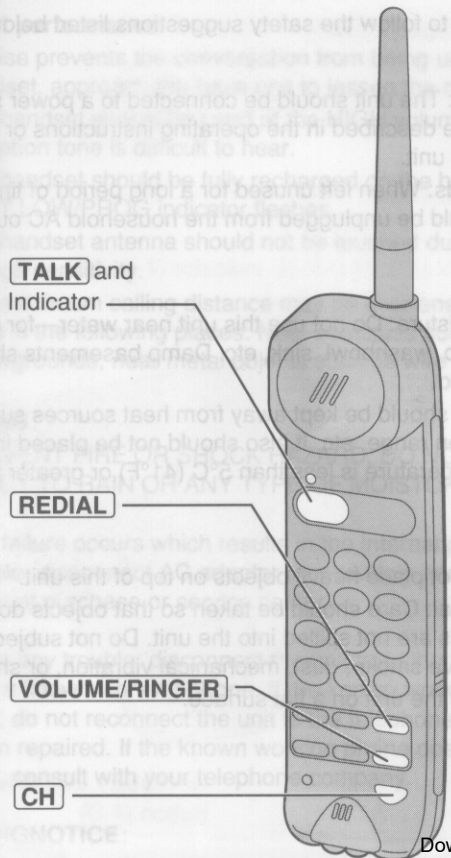

## 2-B Answering Calls

**TALK** and  
Indicator

 
**VOLUME/RINGER**

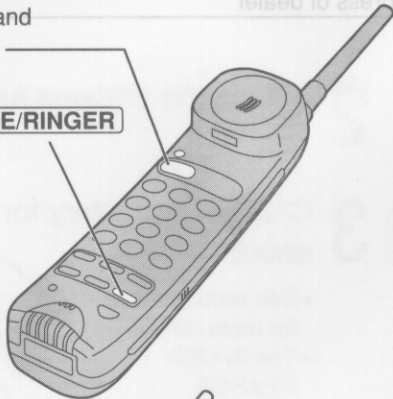

If the handset is off the base unit,  
press **TALK** .

OR

 If on the base unit,  
just lift up.

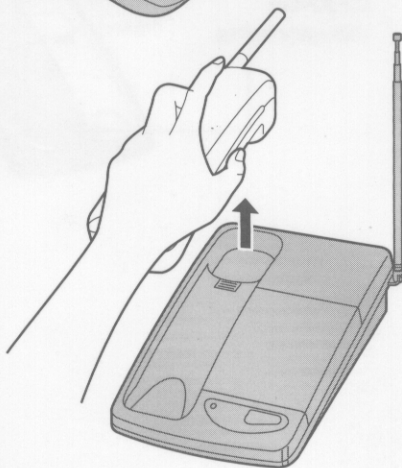

### Any Key Talk

You can also answer a call by pressing any dialing button (0 to 9, \*, #).

### To select the ringer volume HIGH (preset) or LOW

Be sure the TALK indicator light is off. ➔

Press **VOLUME/RINGER** .

- Each time you press, the bell sounds and the ringer volume will change.

### To turn the ringer OFF

Be sure the TALK indicator light is off. ➔

While pressing **VOLUME/RINGER** ,  
press **0** until 2 beeps sound.

### To change the ringer to ON from OFF

Be sure the TALK indicator light is off. ➔

Press **VOLUME/RINGER** .

- The ringer sounds at the HIGH level.



# Automatic Dialing



## 3-A Storing Phone Numbers in Memory

The dialing buttons (0 to 9) function as memory stations.  
The TALK indicator light must be off.



- 1 Press **PROGRAM**.
  - The BATT LOW/PROG indicator lights.
- 2 Enter a phone number up to 16 digits.
- 3 Press **AUTO**.
- 4 Press a memory station number (0 to 9).
  - A confirmation tone sounds. (See right side.)
  - To store other numbers, repeat steps 1 through 4.

### If you misdial

Press **PROGRAM** to end storing.

➔ Restart from step 1.

### To erase a stored number

Press **PROGRAM** ➔ **AUTO** ➔ the memory station number (for the phone number to be erased).

### What the confirmation tone means

 
- 1 beep: The new number is stored.
- 2 beeps: The number is the same as a previously stored one.

### Memory sticker

You may use the included memory sticker as a memorandum for automatic dialing. Write down the names or phone numbers, then attach it to the unit or at a convenient place.

10-STATION AUTOMATIC DIALER	
1	6
2	7
3	8
4	9
5	0
TEL. NO.	

# Special Features

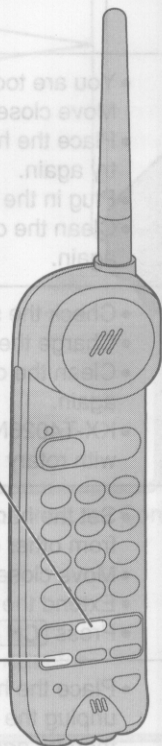

## 4-A Automatic Security Code Setting

Whenever you place the handset on the base unit, the unit automatically selects one of 65,000 security codes. These codes help to avoid unauthorized use of your telephone line by another cordless telephone.

## 4-B For Call Waiting Service Users

Press **RECALL** if you hear a call-waiting tone while talking.

- The first call is put on hold and you can answer the second call.
- To return to the first caller, press **RECALL** again.

## 4-C If Your Unit is Connected to a PBX

We recommend you press **PAUSE** between the access number for an outside line and the phone number.

- Pressing **PAUSE** once creates a 3.5 second pause. This prevents misdialing when you redial or dial a stored number. (**PAUSE** counts as one digit.)

4E. Recall setting (Flash time) adjustment.  
\* This is adjustable on later models only.

To adjust: Press PROGRAM, then N<sup>o</sup> 4, AUTO, RECALL.

[Is preset @ 600ms in early models.] [1, 2, 3 or 4 available]

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>