

# Panasonic

Proprietary Telephone  
for Electronic Modular Switching System

MODEL NO. **KX-T7130**

## Reference Manual




KX-T7130 is compatible with the Panasonic Electronic Modular Switching Systems and can perform most functions within each system.

Please read before use.

# Connection



Connect as shown.

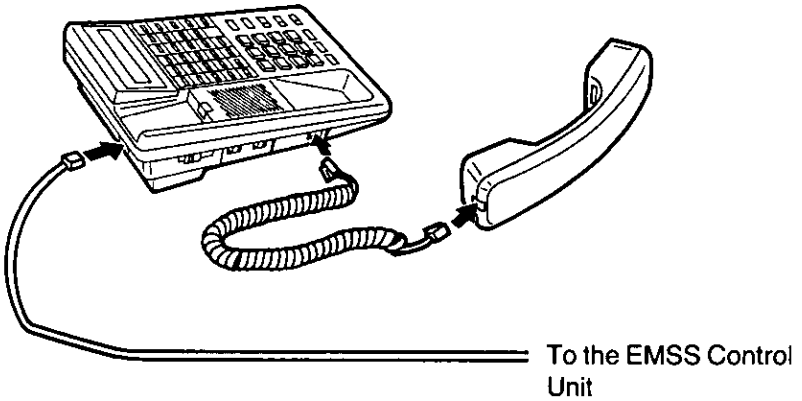

## Included accessories



Handset ..... one

Card holder with memory station card ..... one

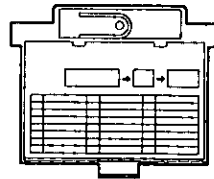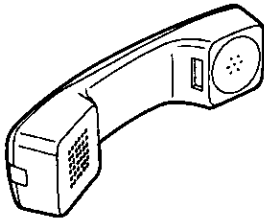


Telephone line cord ..... one


Handset cord ..... one

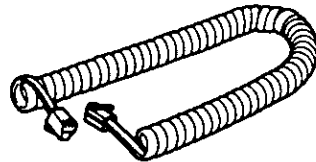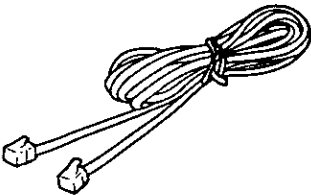

Overlay ..... one

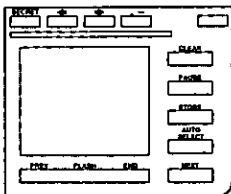


# Initial setting

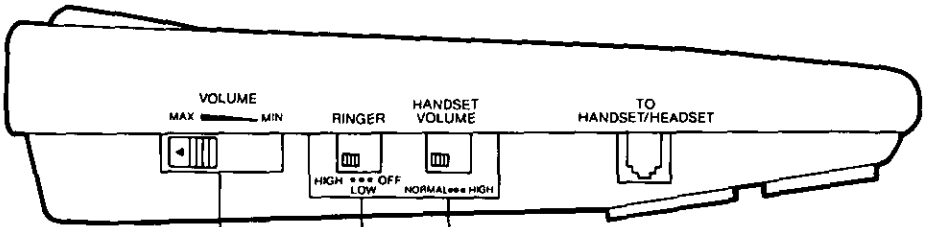

**HANDSET VOLUME Selector:**  
NORMAL: The handset volume will be soft.  
HIGH: The handset volume will be loud.

**RINGER VOLUME Selector:**  
HIGH: The ringing sound will be loud.  
LOW: The ringing sound will be soft.  
OFF: The telephone will not ring.

**VOLUME Control:**  
MAX: The volume will be loud.  
MIN: The volume will be soft.

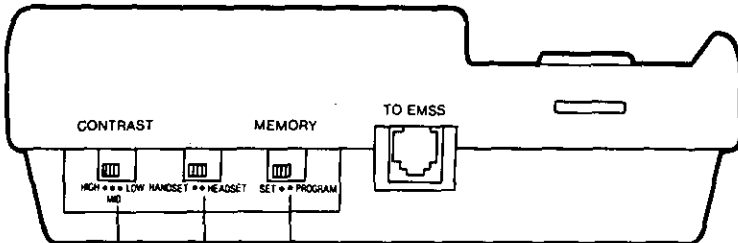


**MEMORY Switch:**  
Set to "SET".  
For station programming, set to "PROGRAM".

**HANDSET/HEADSET Selector:**  
Set to "HANDSET".

**CONTRAST Selector:**  
Set to "LOW", "MID" or "HIGH" to choose the best display intensity.

# Location of controls

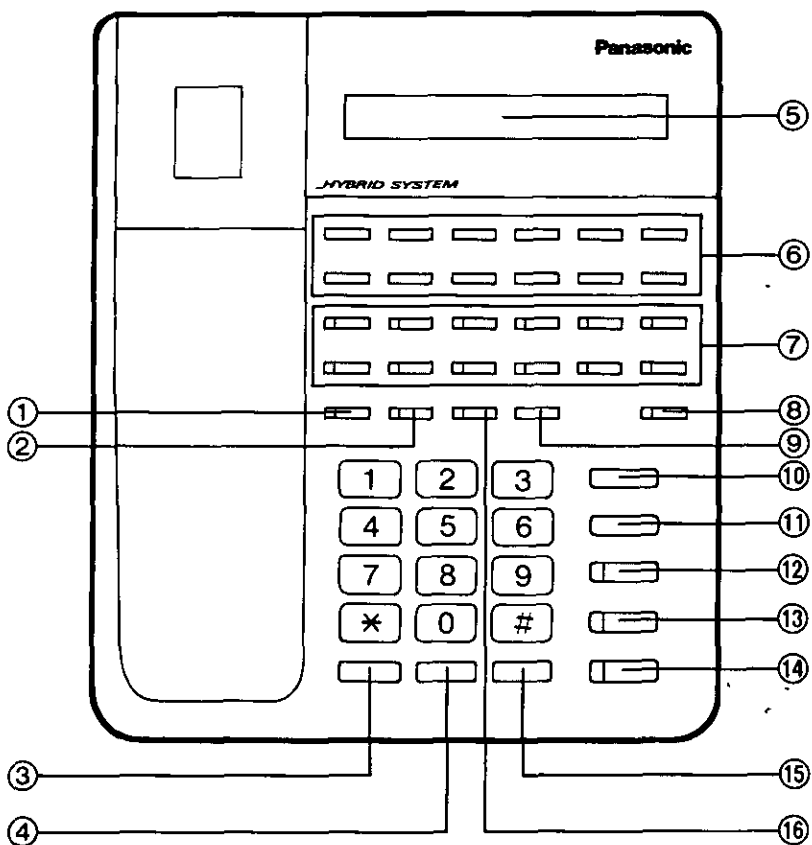


KX-T7130 is compatible with the Panasonic Electronic Modular Switching Systems and can perform most functions within each system

- ① **INTERCOM Button and Indicator:**  
Used to make or receive an intercom call.
- ② **CONFERENCE Button and Indicator:**  
For talking among three parties.
- ③ **REDIAL Button:**  
For redialing the last dialed number.
- ④ **FLASH Button:**  
For sending the hooking signal to the CO line.
- ⑤ **LCD (Liquid Crystal Display)**
- ⑥ **Programmable Feature Buttons:**  
For dialing or system feature access with one touch.
- ⑦ **Flexible CO-Line Buttons and Indicator:**  
Used for CO line, Direct Station Selection, or Programmable Feature buttons.  
This function requires upgraded versions in case of KX-T30810B and KX-T61610B systems.
- ⑧ **Flexible Message Waiting Button and Indicator:**  
Used for Message Waiting, Direct Station Selection, or Programmable Feature button.  
This function requires upgraded versions in case of KX-T30810B, KX-T61610B and KX-T123210DB systems.
- ⑨ **SAVE Button:**  
Used to temporarily store the number in the redial memory.
- ⑩ **TRANSFER Button:**  
Used to transfer an outside or an intercom call to any extension.
- ⑪ **PAUSE Button:**  
For pausing during a dialing operation.
- ⑫ **AUTO DIAL/STORE Button and Indicator:**  
For dialing the system speed dialing/For storing an operating procedure into memory.
- ⑬ **AUTO ANSWER/MUTE Button and Indicator:**  
For answering an intercom call automatically/For suspending your voice in hands-free mode.
- ⑭ **SP-PHONE Button and Indicator:**  
Used to make or receive a phone call without using the handset.
- ⑮ **HOLD Button:**  
For placing a call on hold during a conversation.
- ⑯ **FWD/DND Button and Indicator:**  
For setting or canceling the CALL FORWARDING/DO NOT DISTURB feature.


# Using overlay

When the System Program Switch on the EMSS Control Unit is set to the position for programming, the function of the KX-T7130 connected to your EMSS Control Unit will change as follows.

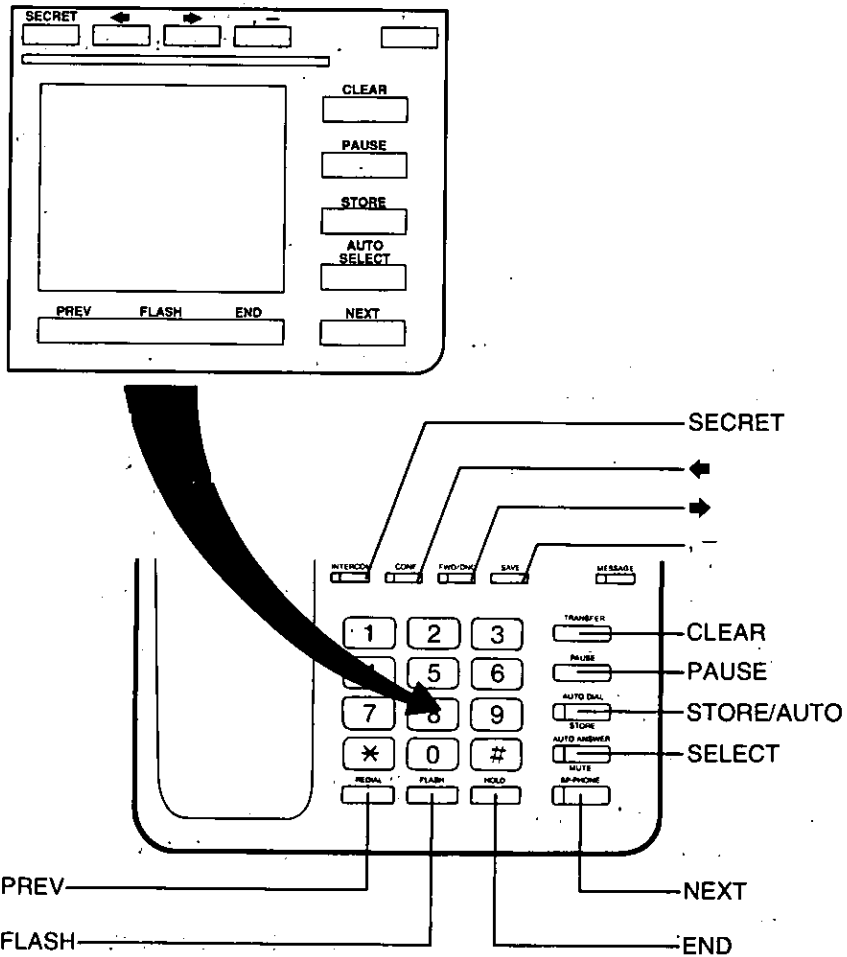


# Installing the card holder

- 1 Match the marks (▶) on the card holder and on the slide rails on the unit.

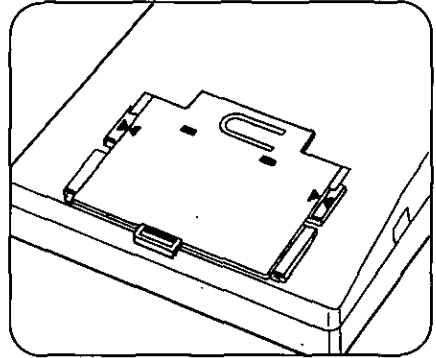


- 2 Push two shaded portions slightly and insert the edges of the holder under the slide rails and then slide down in direction of arrow "A".

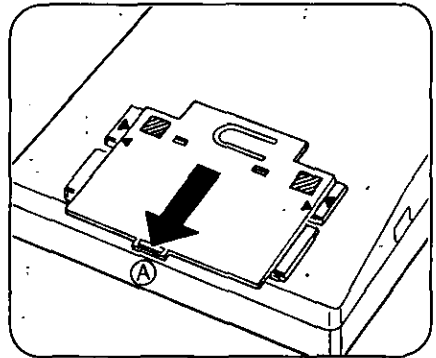

## Removing the card holder:


Push the card holder in the direction of arrow "B" while keeping the tip of the holder pulled in the direction of arrow "C", to take off the holder.

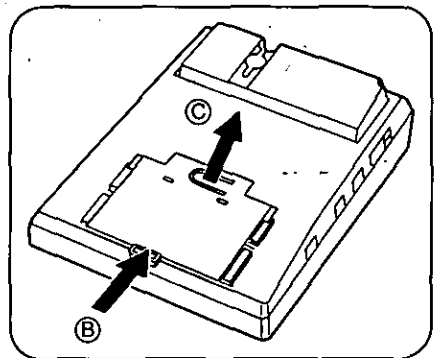


# Wall mounting

This unit can be mounted on the wall phone plate.


- 1** Turn around the handset hook.

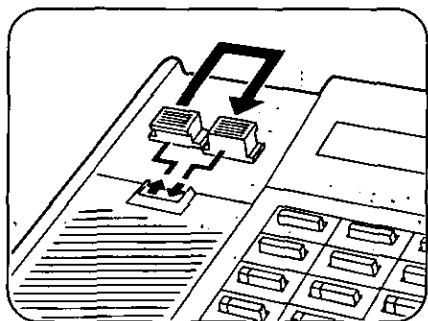


- 4** Place the stand.

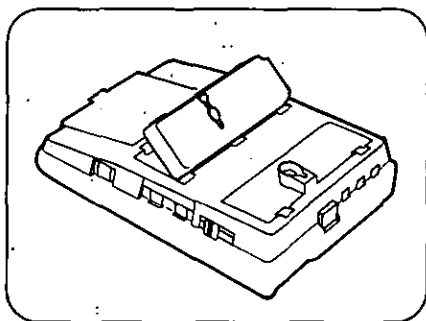


- 2** Remove the attaching stand.

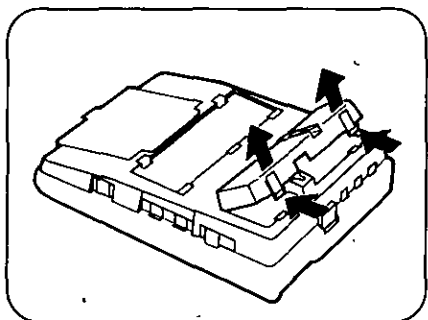


- 5** Mount the unit on the wall phone plate.

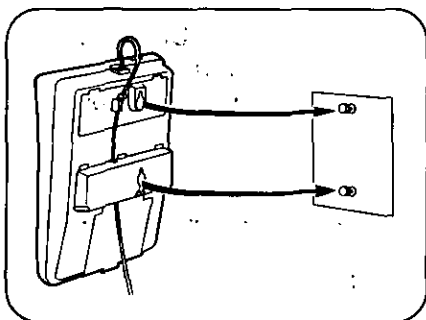

- 3** Rotate the stand in the direction of the arrow.

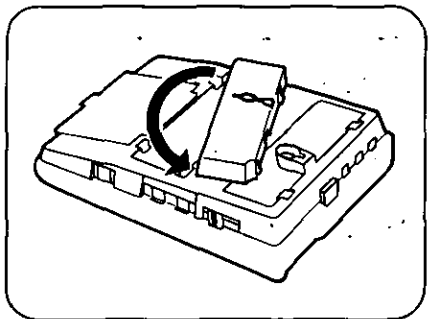

To temporarily place the handset down during a conversation, hook as shown.

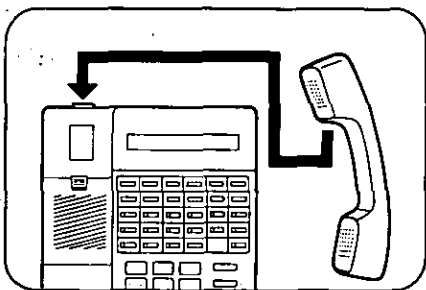

**Matsushita Electric Industrial Co., Ltd.**

Central P.O.Box 288, Osaka 530-91, Japan



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>